


How to Firmware update


DSL-504T F/W-V1.00B02T02.UK.20040427

Please Unplug your ADSL cable from the router before upgrading the firmware.

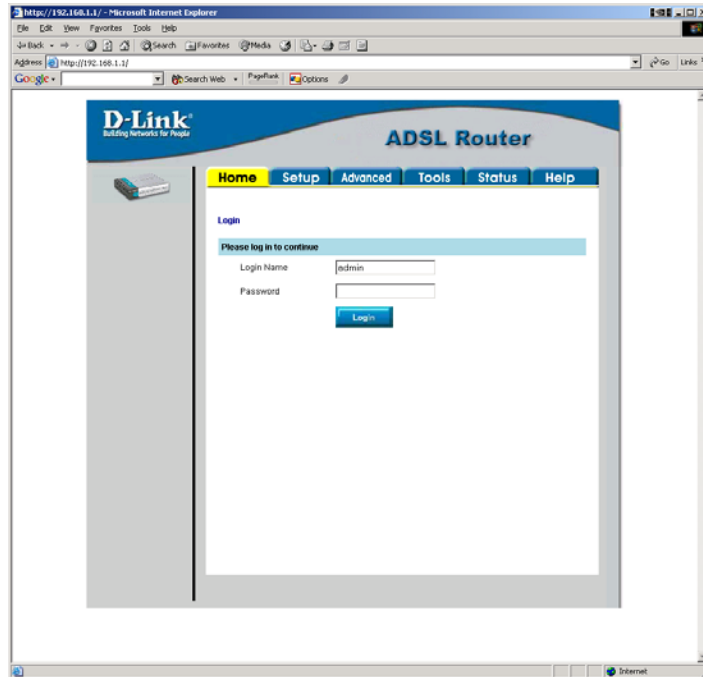


Login into the unit using the Default Username and password of admin and admin respectively
Click On Login


The below screen will be displayed.

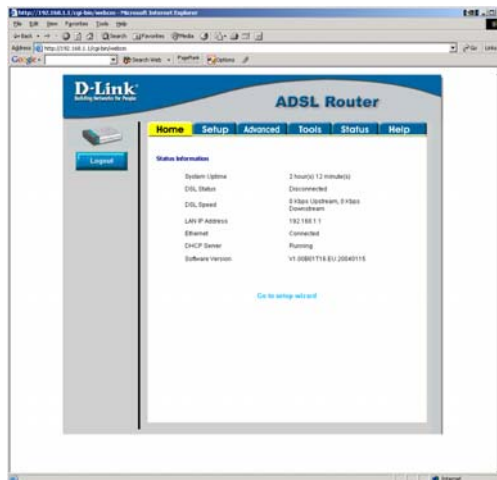

Click on tools

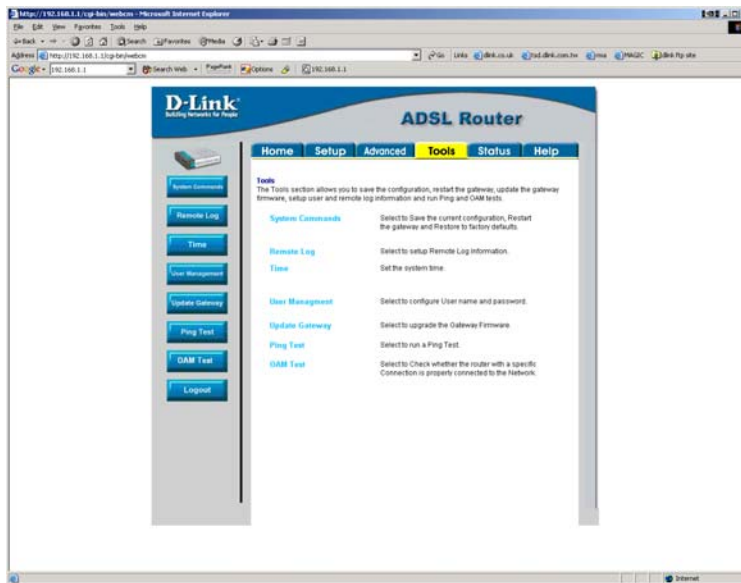

Then select Update gateway. And you will get the below screen

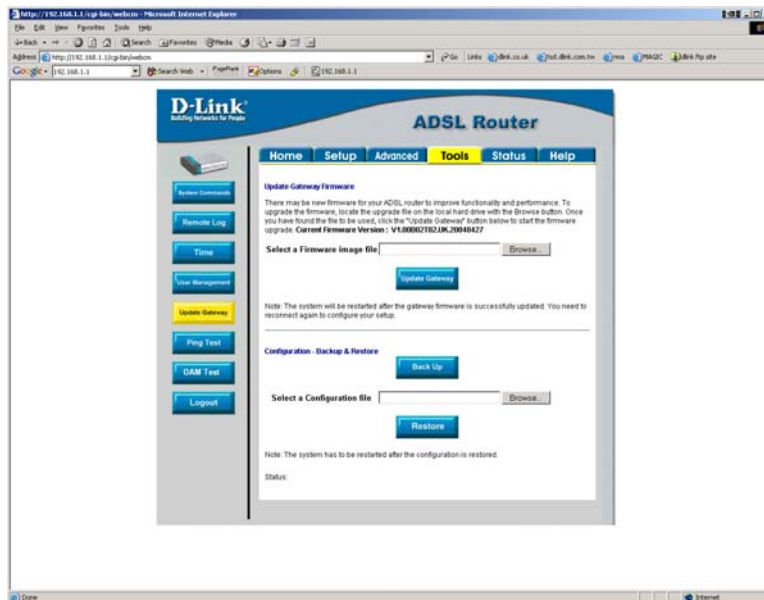


Click on browse under the update gateway firmware.

In the folder where the zip file is expanded you will get option for 2 files

- 1) Fs file
- 2) Kernel File


Select The FS file then click on update gateway. It will start copying the files across. Once the file has gone through and the unit has rebooted login again. You now need to send the kernel file through. Once the upgrade has finished the unit will reboot.

Once the unit has been rebooted and you are logged in go to Tools and update gateway.

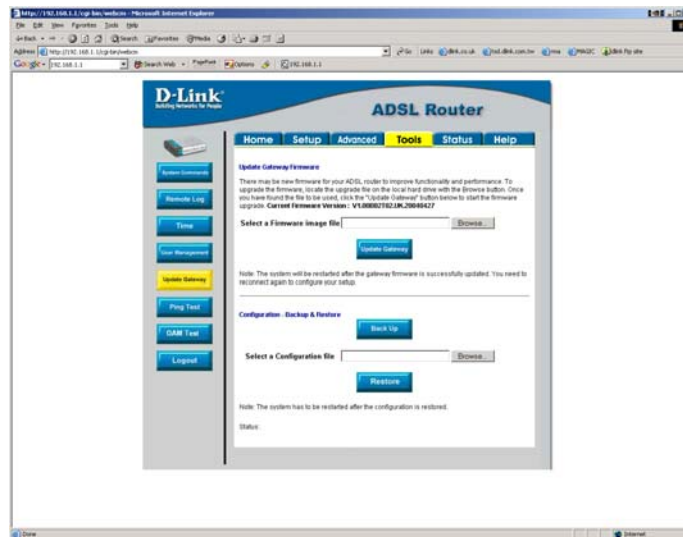

The current firmware version should now show the new version of the firmware.

The router will need to be factory reset before use.

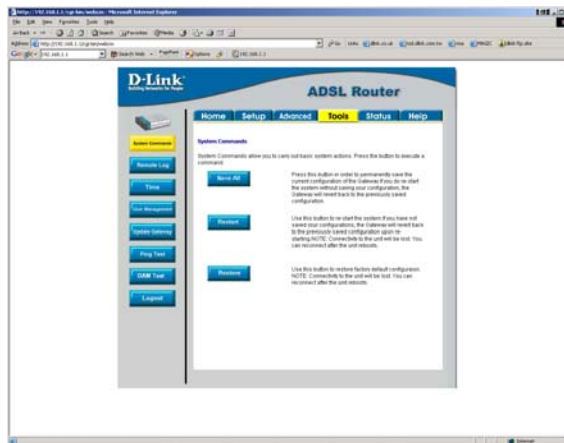

Then go to tools and system commands and perform a restore.

Then you can configure the router as per your requirements. Once everything is configured plug in the adsl line.