



User Manual

ShareCenter™ + 2-Bay Cloud Network Storage Enclosure

Table of Contents

Product Overview	1	Web UI Login	97
Before you Begin.....	2	Web UI General Layout	98
System Requirements	2	Home.....	98
Package Contents.....	2	Applications.....	99
Features.....	3	Management.....	100
Checking the Hardware Requirements	7	Management.....	101
Hardware Overview	8	Setup Wizard (Web UI)	101
Front Panel	8	Disk Management	106
LED Description.....	9	Hard Drive Configuration.....	106
Rear Panel (Connections).....	10	Hard Drive Configuration Wizard	107
Bottom Panel.....	11	JBOD	115
Getting Started	12	RAID 0.....	121
Hardware Setup	12	RAID 1	128
Zero Configuration Setup.....	15	Upgrade from Standard Mode to RAID 1	136
mydlink on the DNS-327L.....	22	S.M.A.R.T. Test	142
Windows Installation.....	23	Creating a Schedule	144
Setup Wizard	23	Scan Disk.....	145
Mapping a Drive.....	62	Volume Encryption.....	147
Alternative methods to Mapping a Drive	65	Account Management	151
Mac - Setup Wizard Installation.....	66	Users / Groups.....	151
Configuration.....	87	Creating a Single User	151
Managing your DNS-327L	87	Creating Multiple Users	156
D-Link Storage Utility	88	Modify Users	160
D-Link Storage Utility - For Mac	90	Deleting Users.....	164
		Importing Users.....	165
		Creating a Group	168

Modifying a Group.....	173	NFS Service.....	231
Deleting a Group.....	179	Multimedia Services.....	232
Quotas.....	180	UPnP AV Server	236
Network Shares.....	185	iTunes Server	237
Add/Modify Network Shares Wizard	186	System Management	238
Deleting a Network Share.....	193	Language	238
Resetting the Network Shares.....	195	Time and Date.....	239
ISO Shares Setup Wizard.....	196	Device	240
Creating an ISO Image	200	System Settings	241
ISO image Creation Wizard	201	Power Management	242
ISO Name and File Path Settings	202	Notifications.....	244
ISO Tree Editing.....	205	Email Settings.....	244
Verifying the ISO image	206	SMS Settings	245
Admin Password.....	207	Adding an SMS Service Provider	246
Network Management.....	208	Event Settings	247
LAN Setup.....	208	Logs.....	248
IPv6 Settings	211	Firmware Upgrade.....	249
IPv6 Setup.....	212	USB Devices	250
Link Speed and LLTD Settings	214	UPS Settings.....	250
DDNS	215	USB Storage Information.....	250
Port Forwarding.....	216	Printer Information.....	251
Application Management.....	220	System Status	252
FTP server	220	System Info.....	252
Block IP List.....	221	Home.....	254
Add-ons	225	My Photos.....	255
Add-Ons	226	Creating an Album	257
Installing Add-Ons from the Setup Wizard..	226	Photo Album Wizard.....	258
Installing Add-ons from the Web UI.....	229	Editing Photos in an Album	262
AFP Service.....	231	Select a Photo as a Cover image.....	265

Select a Photo to Move	267	My Music	321
Delete a Photo	269	My Music - The Interface	323
Share a Photo to Picasa.....	270	My Music - The Categories.....	324
Share a Photo to Facebook.....	273	My Music - The Categories.....	325
Share a Photo to Flickr	276	My Music - Music on your DNS-327L	326
Deleting an Album	279	My Music - Playback Music on an Apple device.....	328
Refreshing the Album Database	281	My Music - The Player	329
Managing Photos	282	My Music - Create a Playlist.....	330
Slideshow Toolbar.....	283	My Surveillance	332
Beam a Slideshow to your TV	292	My Surveillance	341
Photo Gallery.....	293	My Surveillance - Live View	342
My Files	295	My Surveillance - Live View	343
My Files - Icons.....	296	My Surveillance - Live View	344
Upload	297	My Surveillance - Live Camera Panel Explained	
Download	299	II.....	345
Copy.....	301	My Surveillance - Single Camera Live Video	
Move	304	Mode	346
Delete.....	306	My Surveillance - Full Screen Live Video Mode	347
Rename.....	308	My Surveillance - Digital Zoom Video Mode.....	348
Properties.....	310	My Surveillance - E-Map View	349
Create a Zip file from the Selected Folder....	311	My Surveillance - Snapshot View	350
Add to Zip.....	312	My Surveillance - Motion Detection Camera	
Unzipping a Zipped File	314	Mode	351
Unzipping a Tar File	315	My Surveillance - Configuring Patrol Settings..	352
Opening a File	316	My Surveillance - Configuring Patrol Preset	
Previewing a File	317	Points.....	353
Share to Facebook	318	My Surveillance - Viewing Preset Points.....	354
Share to Picasa	319	My Surveillance - Live Video/Playback Settings.....	355
Share to Flickr.....	320	My Surveillance - OSD Settings	356

My Surveillance - Playback.....	357	USB Backup Process	426
My Surveillance - Playback.....	358	P2P Downloads.....	428
My Surveillance - Playback.....	359	Settings.....	428
My Surveillance - Recording Information	360	Downloads	429
My Surveillance - Setup	361	Amazon S3.....	430
My Surveillance - Setup - Camera Setup	362	Creating an AWS Account	431
My Surveillance -Search and Add Camera.....	370	mydlink.....	437
My Surveillance -Setup - Audio and Video	373	mydlink Verification	438
My Surveillance - Setup - Recording Setup	375	mydlink Java Runtime Machine.....	440
My Surveillance -Setup - Event Setup	384	Creating a New Folder.....	445
My Surveillance - Setup - E-map Upload.....	387	mydlink Settings Details.....	446
My Surveillance - Setup - Backup.....	391	ShareCenter™ NAS Status	447
My Surveillance - Setup - Server Port	396	Deleting a mydlink device	448
My Surveillance - Status	397	Deleting a mydlink account	449
My Surveillance - Status	398	The mydlink Access NAS App	451
My Favorites Application.....	401	The mydlink Access NAS App - Features	452
Adding Applications	402	The mydlink Access NAS App - Compatibility.....	453
Applications.....	403	Knowledge Base	455
FTP/HTTP Downloads	403	What is RAID?	455
Remote Backups.....	405	RAID Options.....	457
Create Wizard	406	UPS Connectivity	459
Local Backups.....	410	Deleting a UPS Slave.....	463
Time Machine.....	411	USB Print Server	465
Time Machine - On the Mac	412	Setting up a printer using Mac OS 10.8	468
Time Machine - Delete a Volume	419	Setting up a printer using Mac OS 10.8	469
USB Backups	422	469
MTP Backups.....	423		
USB Backups	423		
MTP Backup Process.....	424		

Product Overview

The D-Link ShareCenter™ DNS-327L is a 2-Bay Cloud Network Storage device. When used with internal SATA drives, it enables you to share documents, files, and digital media such as music, photos, and video with everyone in your home or in the office network. Remotely accessing files through the internet is also possible using the built-in FTP server, Web File server and the WebDAV protocol. Whether you are allowing access locally or over the internet, you can keep data safe by only giving rights to specific users or groups. Users can also access their DNS-327L remotely using the mydlink portal, or using mobile devices with the mydlink Access-NAS app on a mobile phone or tablet. When configuring the DNS-327L, you can create and assign users and groups to folders with either read or read/write permissions. This is ideal for an office environment with employee-specific sensitive data or for the home where you can limit your children to age appropriate material. The DNS-327L will be available to any computer (PC, Mac, or Linux) on your network, without the need to install any software.

You may back up your music, photos, and video collections to the DNS-327L for safekeeping. Then enjoy the benefits of the built-in UPnP AV media server as you stream digital content to compatible media players² (such as those found in D-Link's MediaLounge product line). This feature is highly convenient as it allows you to turn off a computer that would normally be needed for the same function.

The availability of four different hard drive modes (Standard, JBOD, RAID 0, RAID1) allows you to choose the configuration best suited to your needs. Standard mode creates two separately accessible hard drives. JBOD combines both drives in linear fashion for maximum space efficiency. RAID 0 combines both drives in a 'striped' configuration, which provides the highest performance when using a Gigabit Ethernet connection. RAID 1 causes the drives to mirror each other, providing maximum protection. If one drive fails while configured as RAID 1, the unaffected drive continues to function as a single drive until the failed drive is replaced. The new drive will then be re-mirrored, allowing the DNS-327L to return to its full protection.

To further enhance your ShareCenter's™ capabilities, the DNS-327L supports a proprietary mydlink service, provided to D-Link customers only, serves as a portal to those users who wish to access their data from any location. Mydlink service supports list, download, upload or delete files/folders and can see the status of a ShareCenter™ from any location via web browser.

The DNS-327L also has several Add-on features to enhance your experience, including PhotoCenter, Blogging, Transmission and Audio Streamer among others.

¹ Hard Drive(s) not included.

² D-Link cannot guarantee full compatibility or proper playback with all codecs. Playback capability depends on the codec support of the UPnP™ AV media player.

Before you Begin

- Check box contents
- Check system requirements
- Ensure that you have the hardware you need for your ShareCenter™ device

System Requirements

For best results, the following minimum requirements are recommended on any system used to configure and use the ShareCenter™:

- Computer with: 1Ghz processor / 512MB RAM / 200MB available space / CD-ROM drive
- Internet Explorer® version 8, Mozilla® Firefox® 4, Google® Chrome 3, or Apple® Safari® 4 and above
- Windows® XP (with Service Pack 2), Windows Vista®, Windows® 7, Windows® 8
- Mac OS® X 10.5.6 or greater
- 3.5" SATA Hard Drive(s)

Package Contents

- D-Link ShareCenter™ DNS-327L
- CD-ROM with Manual and Software
- Quick Installation Guide
- 12VDC 3A Output Power Adapter
- CAT5E Ethernet Cable



Features

The ShareCenter™ DNS-327L is an easy to install data storage platform used for remote access through a local network or from the Internet. This ShareCenter™ supports up to 2 SATA hard drives and includes the product features listed below:

- Equipped one 10/100/1000 Mbps auto-MDIX Gigabit Ethernet LAN port, 1000BASE-T support Half duplex and Full duplex mode
- Embedded two SATA II 3.5" HDD interface, support 4TB HDD
- 2-bay Serial ATA with RAID 0/1 and JBOD supported
- Equipped Ultra Cooler (Plastic housing + FAN speed control)
- Trays for the hard drives.
- Supports Real-Time Clock (RTC)
- Network Options
 - DHCP Client or Static IP
 - NTP Client
 - Windows 7/ Vista x32/64 PnP-X/ LLTD
 - Dynamic DNS
 - Bonjour
 - UPnP Port Forwarding
 - IPv6
- Network File Services
 - Supports Windows XP/Vista/ 7/ 8, Mac OSX 10.5+, Linux clients
 - CIFS/SMB for Windows and Mac OS X and Linux
 - NFSv3 Server for Linux and UNIX
 - AFP3.3 for Mac OS X
 - HTTP and HTTP/S for web browsers
 - WebDAV
- File System
 - EXT4 for internal HDD
 - FAT32, NTFS for USB external Storage
- File System Management
 - Unicode Support for both Samba and FTP server
 - File sharing: Windows/ Mac/ Linux
 - File Searching
- FTP server
 - FTP over explicit SSL/ TLS mode (FTPES)
 - FTP bandwidth and connection control
 - FTP support FXP
 - IP Blocking
- Disk Management
 - Hot Swappable
 - RAID: Standard, JBOD, 0, 1
 - RAID 1 Auto/Manual Rebuild
 - RAID migration: Standard to RAID 1
 - Disk Status Monitoring (S.M.A.R.T)
 - HDD S.M.A.R.T test
 - Scandisk
 - Support Advanced Format HDD
 - AES based volume encryption
 - Disk Roaming
 - RAID roaming

- Folder Management
 - Share Folder Level Permission
 - Supports ISO mount
 - ISO creator
- Remote File Sharing
 - My Files (Web File Server)
 - WebDAV
 - FTP Server
 - Mobile device accesss (mydlink Access NAS)
- User/Group Management
 - User/Group assignmentfor network sharing and FTP server
 - Quota for user and group
 - Assign users to multiple groups
 - Create User/Import User(s) batch files
- Backup Management
 - Schedule Backup from PC to NAS (ShareCenter™ Sync)
 - Remote network backup (Rsync, Remote Snapshot)
 - Apple Time Machine support
 - Local Backup
 - USB Backup
 - USB Copy button
 - Cloud Storage Backup (Amazon S3)
- Download Management
 - HTTP/FTP schedule download
 - Peer-to-peer (P2P) downloads, aMule and Transmission support
- System Management
 - Support mydlink portal
 - Support D-Link Storage Utility / Setup Wizard
 - OS Support: Windows XP, Vista, 7, 8 and Mac OS X
 - Two access modes supported: Open (Share) mode and Account (User) mode, no setup Account and Password necessary in open mode
 - Support Configuration file save/load
 - System Status
 - Email / SMS notifications
 - Network Recycle Bin
 - System /FTP Log (Syslog Client)
 - Rescue F/W image
 - Resource Monitor
 - Multi-lingual GUI support
- Power Management
 - Power Saving (Disk idle spin-down)
 - Automatic power recovery (with UPS)
 - Schedule power on/off
 - Auto-shutdown on UPS low battery
 - Smart FAN control
 - Network UPS
- USB port support
 - Print Server
 - UPS monitoring
 - External storage device
 - MTP/PTP
- Media Streaming
 - UPnP AV Server

- Support PS3 / XBOX 360
- Support UPnP AV > 4GB
- Comply with DLNA HNv1.5
- D-Link new Media Player (including Boxee) compatible
- Supports Logitech Squeeze Center
- Support Sonos Digital Music System via Samba
- iTunes Server
- Audio Streamer (icestation)
- My Music (Music Center)
- My Photos (Photo Center)
- Cloud Service-mydlink Portal Web Access
 - Remote Files Access through Web Browser
 - Browse, Upload/Download, and Manage File/Folders
 - Redirect to NAS Device UI for the Access of NAS Applications
 - Email Notification to Registered mydlink Account
 - Supports Zero configuration
- Cloud Service–Mobile Apps (the “mydlink Access-NAS” app)
 - Ability to Access Content from Mobile Devices
 - Browse, Upload/Download, Open, and Manage File/Folders
 - View Photo and Playback Multimedia Files
 - Access to Media: Streaming for Music, Photo Galleries
 - Content Classification : Classify Contents by “Photo, Music, Video, and Document”
 - Supports iOS, Android
- Built-in Applications
 - My Files (Web File Server)
 - My Photos (Photo Center)
 - My Music (Music Center)
 - My Surveillance (Surveillance Center)
- My Files
 - Access, and Manage (Copy, Move, Delete, Rename, zip/unzip) Files through Web Browser
 - Open Files on Web Browser or from PC’s Default Program
 - Share Files to Social Network (Facebook, Picasa, Flickr)
 - Shows File Properties
- My Photos
 - Generates Photo Library, and Sort by All Photos, and by Timeline
 - Creates Albums and Manage Photos
 - Share Photos to Social Networks (Facebook, Picasa, Flickr)
 - Views Photos through Cooliris
 - Slideshows
 - Supports AirPlay
 - Shows and Adds GPS information of Photos
- My Music
 - Generates Music Library, and Sort by All Tracks, Albums, Artists, and Genres
 - Supports Playlist
 - Integrates Music Player
 - Supports AirPlay

■ My Surveillance

- Camera Auto Installation
- 4-Channel Motion JPEG, MPEG4 or H.264 Recording
- Audio & Video recording in Synchronization
- Auto Recycling Recording
- 4-channel Live Video
- 4-channel Synchronous Playback
- Recording Type : Record by Schedule, Manual Record
- E-map Support
- Backup Recorded Video

■ Add-ons Applications

- Multilingual Language Package
- Photo Center (Gallery2)
- Blog (Wordpress)
- Audio Streamer (icestation)
- Logitech Squeeze Center
- AjaXplorer
- aMule
- phpMyAdmin
- phpBB
- Joomla
- Transmission

■ Web Browsers supported

- Internet Explorer 8+
- Mozilla Firefox 4
- Apple Safari 4+
- Google Chrome 3+
- Opera 10

Checking the Hardware Requirements

To use your DNS-327L, you will need at least one hard drive. If you plan to use RAID 1, which protects your data against one hard drive failure, you will need two hard drives.

This section will help you:

- Select the hard drives
- Determine hard disk space you will need
- Ensure your data is protected
- Understand the basic requirements for a router or switch

Selecting Hard Drives:

You can use hard drives from any manufacturer and with any capacity with your DNS-327L. The D-Link ShareCenter™ supports standard 3.5" internal SATA drives. If you are unsure, ask your administrator or hard drive retailer/manufacturer to verify that your hard drives meet this standard.

***Warning - Any pre-existing data on the drives will be erased during installation.**

Determining How Much Hard Drive Space you Need:

In order to protect your data from hard drive failure, your DNS-327L requires more space than what you will use for your data, sometimes more than double the amount of space required.

Using a Router or Switch:


If you are connecting your ShareCenter™ to a router or switch, your router or switch needs to support Gigabit Ethernet (1000Mbit/s) for maximum performance. The ShareCenter™ will auto-negotiate the highest connection speed available to your router or switch. If you are using Port Bonding, use a managed switch.

Using an Uninterrupted Power Supply (UPS):

We highly recommend that you use your ShareCenter™ in conjunction with an uninterrupted power supply (UPS), which will protect against sudden loss in power and power surges.

Hardware Overview

Front Panel

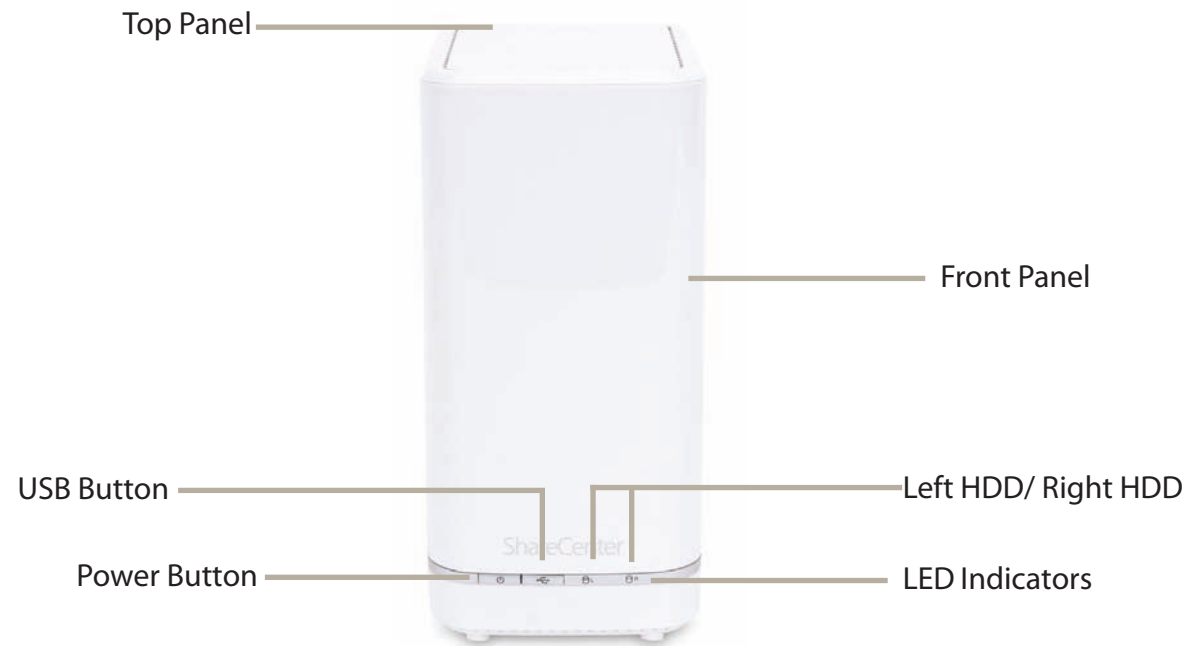

COMPONENT	DESCRIPTION
Top Panel	This panel unlatches simply by pressing the lever at the back. Unhook and lift up to insert or remove your hard drive(s).
Front Panel	The casing of the entire NAS
Power Button	Press once to power on the ShareCenter™. Press and hold the button for more than 5 seconds to power it down.
USB Button	Press once to activate USB or press and hold the button for more than 5 seconds to release USB activity.
Left HDD/Right HDD	Indicates the position of the drive (Left or Right)
LED Indicators	Illuminates blue or red depending on activity (see the next page for details)

LED Description



Power On/Off:

White Light - the device is on
Blinking Orange - the device is booting or restarting
No Light - the device is off

USB On/Off:

White Light - the USB Storage is connected
Blinking Orange - transferring data, a USB device is being installed or unmounted
Orange Light - USB storage failed to mount
No Light - No USB Storage or the device is off

HDD On/Off:

Orange Light(s) - the hard drives are faulty
No Light(s) - the hard drives are inactive



HDD On/Off:

White Light(s) - the hard drives are working
Blinking Orange Light(s) - the HDD(s) is writing/reading

Rear Panel (Connections)



COMPONENT	DESCRIPTION
Cooling Fan	The cooling fan is used to cool the hard drives and features speed control. When the unit is first powered on, the fans rotate at a low speed and later rotate at a high speed when the temperature rises above 49 °C.
Gigabit Ethernet Ports	Use the Gigabit Ethernet port to connect the ShareCenter™ to the local network. The port is equipped with 2 LEDs. The LED on the left will illuminate solid green for a good connection and will blink during data transmission. If this LED is off, check the connection/cable to the device you are connecting to. The LED on the right will light solid for a Gigabit connection and will remain off when connected to a 10/100 device.
Power Receptacle	Connect the supplied power cord to the receptacle.
USB Port	A single USB 3.0 (Type A) connector. The USB Host port is for Print Servers, USB memory disks, or USB UPS monitoring.
Latch	Press the latch to release the Top Panel and insert or remove the hard drives
Security Lock	Prevent theft by tying a cable to the ShareCenter™ NAS and a desk. Cable is sold separately.

Bottom Panel



COMPONENT	DESCRIPTION
Product Details	Information about the product - DNS-327L Serial Number, Part Number, Manufacturer Number
Reset Button	Press and hold this button for more than 5 seconds to reset the unit to factory defaults.

Getting Started

Hardware Setup

This User Guide will help you get your ShareCenter™ set up in just a few steps. To install the ShareCenter™ on your local network, refer to the steps below, or skip to page 17 to run the setup wizard which will show you how to install and configure your DNS-327L.



Step 1 - Remove the top panel by firmly pressing the latch at the back.



Step 2 - Once the faceplate is unlatched, pull it off the the device to expose the devices's bays.



Step 3 - Attach the hard drive brackets to the sides of your hard drives with the included screws. Ensure the brackets are aligned so that when the hard drive is inserted, the arrow on the bracket points to the front of the ShareCenter™.



Step 4 - Insert up to two 3.5" SATA hard drives into the drive bays.

Note: Make sure to align the drive connector to the SATA connector at the back edge inside the drive bay of the ShareCenter™. Gently push the drive in until it connects. When a drive is inserted properly, you will feel it "set" into the connector. Some hard drives that are thin or oddly shaped may need to be inserted carefully into position. If a drive is not properly set in place, the hard drive LED will not illuminate after powering on the device.



Step 5 - Re-attach the top panel. Ensure the latch is inserted inside the panel.



Step 6 - Connect an Ethernet cable to the Ethernet port. This cable should connect the ShareCenter™ to your local network via a router, switch, or directly to a computer for configuration (cross-over cable required).



Step 7 - Connect the power adapter to the power receptacle.

Zero Configuration Setup

If you have a mydlink-enabled Cloud Router, you can take advantage of Zero Configuration. Zero Configuration automatically configures your NAS's settings for you, and adds it to your mydlink account automatically. This type of setup allows you to set up your DNS-327L by simply plugging it in and connecting it to your router.

Connect your NAS to your mydlink-enabled Cloud Router and Zero Configuration will automatically configure your DNS-327L and automatically add it to your mydlink account. After the short time it takes to do this you can remotely access your NAS from the www.mydlink.com website to manage and monitor your DNS-327L.

Connect the Ethernet Cable

Use the included Ethernet cable and plug it into the NAS. Plug the other end into an available port on your router. If you wish to use your NAS wirelessly, you will be able to remove the cable from the router after Zero Configuration Setup is complete.


Attach the External Power Adapter

Connect the power adapter to the power connector on your NAS, then plug the power adapter into a wall outlet.



Check Your mydlink Account

Open a web browser and login to your mydlink account. The mydlink page will check for new devices and display a New device Found! pop-up notification in the bottom-left corner. Click the notification to continue.




[FAQ](#) | [Support](#) | [Language: English ▼](#)

Welcome, **Neo Chen** | [Sign out](#)


My Devices

My Profile



DIR-605L
20315122

Router Status



0003.6 kbps
0884.1 kbps

Settings

Model NameDIR-605LReboot




Network Name(SSID)605L_Neo (2.4 GHz)

Internet IP61.230.48.41

LAN IP192.168.0.1

Connected Devices2 device(s)

Connection List

Device	Device Name	IP Address	MAC Address	Block
	DNS-327L	192.168.0.103	AC:F1:DF:00:B6:D8	<input type="checkbox"/>
	dell-in	192.168.0.101	00:21:70:B7:43:28	<input type="checkbox"/>
	Android_356812041 817030		64:A7:69:CC:2B:0F	<input checked="" type="checkbox"/>

Suspect List


Device	Device Name	Time	MAC Address	Block
--------	-------------	------	-------------	-------

New Devices!


DNS-327L

D-Link

Access Anywhere



With iOS and Android mobile apps, you can check your devices on-the-go




D-Link ShareCenter DNS-327L User Manual

16

Section 2 - Getting Started

Double-click the device to add it to your mydlink devices. If you wish to add it immediately, click Yes, but if you are unsure of what to do click No. The pop-up screen displays the **Device Name**, **mydlink number**, **Network Name**, and **Admin Password**. If you are unsure of what to do, you can always go back to **Advanced Settings**.

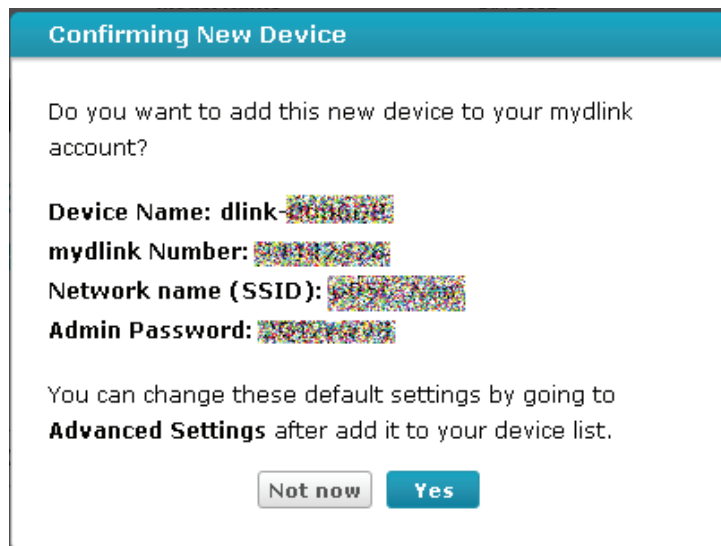

Section 2 - Getting Started

After the DNS-327L is registered, you will be able to access all information about the NAS from the cloud service. This service is already available locally but the mydlink service provides a way for you to view these details from any location. From this location, you can view all physical disk information, and configure RAID. Please be advised that configuring RAID over the mydlink service will slow your system down and this service depends on your ISP and the speeds you are using to connect to mydlink.


The screenshot shows the mydlink web interface. At the top, there's a navigation bar with 'My Devices' and 'My Profile' tabs. The 'My Profile' tab is active. On the left, there's a sidebar with two device icons: 'dlink-00B6 ...' and 'DIR-605L'. The main content area has a 'File' and 'Settings' tab, with 'Settings' selected. A blue 'Congratulations!' message states: 'Your new NAS was successfully registered to your mydlink account!'. Below this, a pink box contains a message: 'We detect new hard drive(s) have not been format. Choose the RAID type you would like to use then click the **Format** button to start the format process. Please note all the data on the hard drive(s) will be erased.' Underneath is a table titled 'Physical Disk Info' with the following data:

Vendor	Disk	Model	Serial Number	Size
Disk2	Seagate	ST3250620NS	9QE79LT3	232GB
Disk1	Seagate	ST3250620NS	9QE79GB5	232GB


Below the table, it says 'Choose the RAID type you would like to use.' with a dropdown menu set to 'Standard' and a 'Format' button. A tooltip for 'Standard' explains: 'Creates 1 or more separate volumes. Each hard drive is its own volume.' On the right, there's a vertical banner for 'D-Link Access Anywhere' with a large 'D' logo and text about mobile apps. At the bottom right, there's an image of a hand holding a smartphone displaying the mydlink app interface.

Section 2 - Getting Started

If you have decided to format your NAS using mydlink, select the RAID method from the drop-down list and then click the Format button. A pop-up message appears asking you to confirm your choice to format the volume using mydlink. Click Yes to format, No to return to the menu.

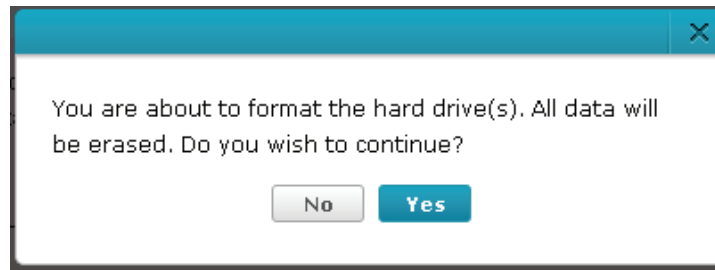



The format process takes a while to finish. The format process depends on the speed of your network connection and client CPU.



FAQ | Support | Language: English ▼

Welcome, **Neo Chen** | Sign out

My DevicesMy Profile



FileSettings

Congratulations!

Your new NAS was successfully registered to your mydlink account!

We detect new hard drive(s) have not been format. Choose the RAID type you would like to use then click the **Format** button to start the format process. Please note all the data on the hard drive(s) will be erased.

Physical Disk Info

Vendor	Disk	Model	Serial Number	Size
Disk2	Seagate	ST3250620NS	9QE79LT3	232GB
Disk1	Seagate	ST3250620NS	9QE79GB5	232GB


Formatting hard drives

The drives in your device are now being formatted. Please wait a moment...


82%

D-Link

Access Anywhere



With iOS and Android mobile apps, you can check your devices on-the-go




Section 2 - Getting Started

Once the format process is complete, mydlink cloud will show you the RAID status and the Volume Status. It also displays the size of the drive available and used.

The screenshot displays the mydlink web interface. At the top left is the mydlink logo. To the right, there are links for 'FAQ', 'Support', and 'Language: English'. Below these, a user is logged in as 'Neo Chen' with a 'Sign out' link. The main navigation bar has 'My Devices' and 'My Profile' tabs. On the left sidebar, under 'My Devices', two devices are listed: 'dlink-00B6 ...' with ID '44442428' and 'DIR-605L' with ID '20315122'. The main content area has 'File' and 'Settings' tabs. A blue banner reads 'Congratulations! Your new NAS was successfully registered to your mydlink account!'. Below this, there are 'Home' and 'Channel' buttons. A section for 'Volume_1' shows a progress bar indicating '0% used (187MB of 226GB)'. On the right, a vertical banner promotes 'D-Link Access Anywhere' with a large 'D' logo and text about mobile app access, accompanied by an image of a smartphone.

mydlink on the DNS-327L

The DNS-327L provides a different UI experience than the usual NAS interface. once connected to the mydlink service. Click the Application button you can access **My Music**, **My Files**, **My Photos**, and **P2P Downloads** from the main panel.

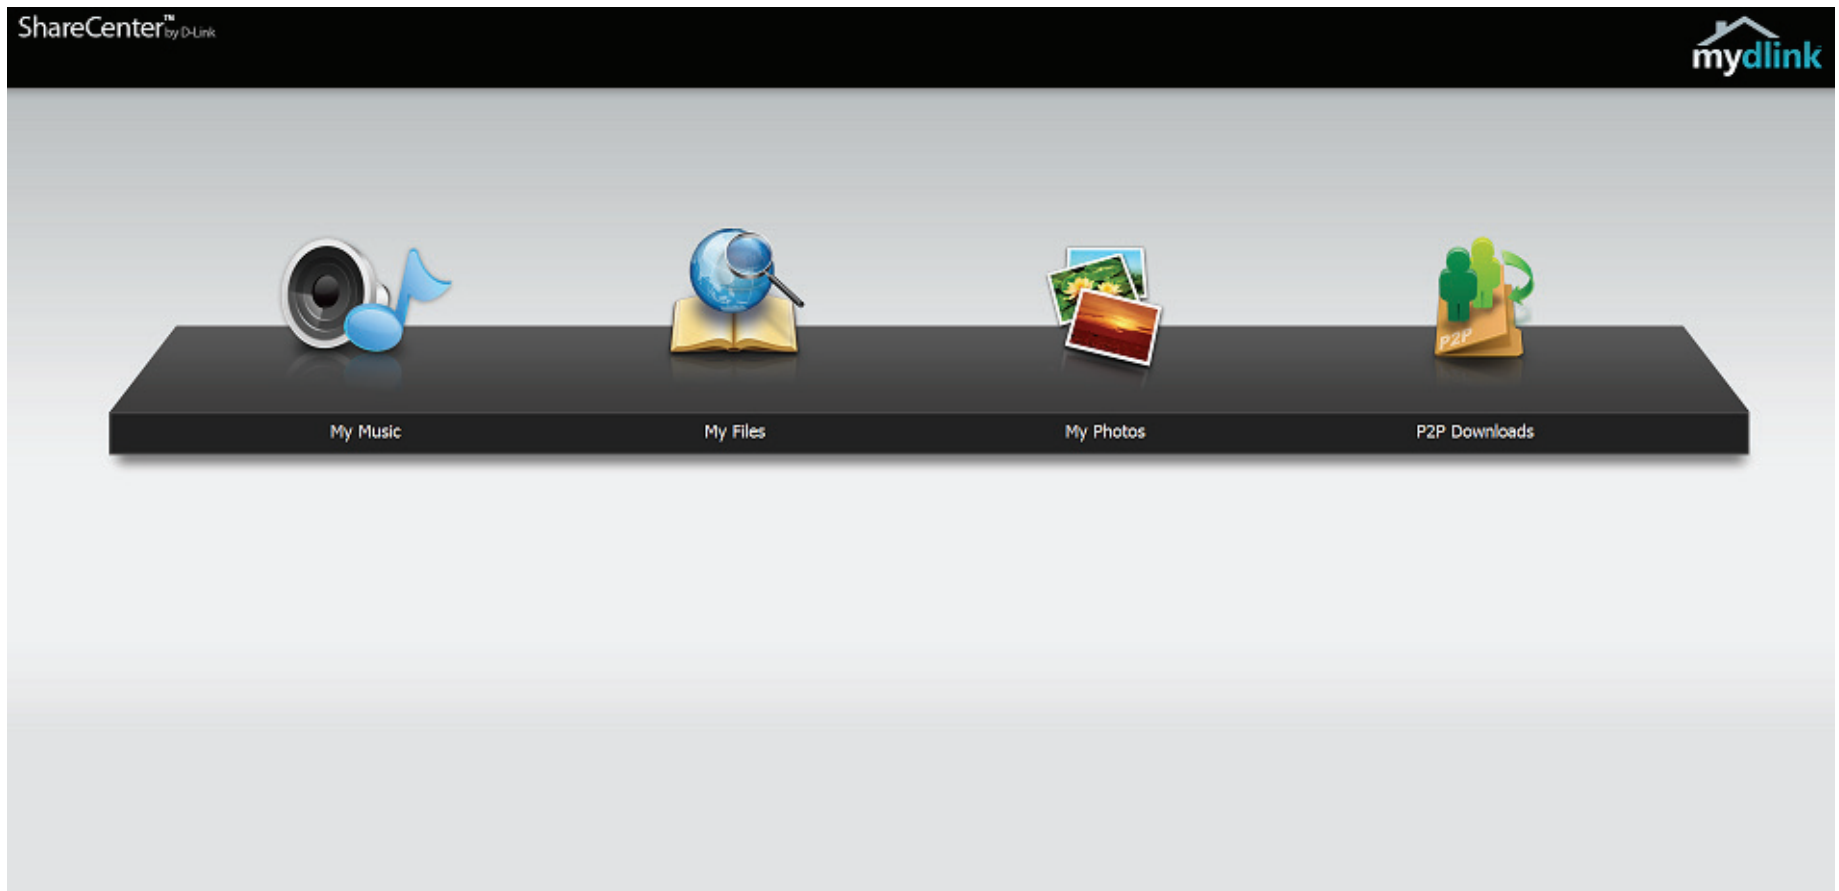



Windows Installation Setup Wizard

To run the Setup Wizard, insert the ShareCenter™ CD into your CD-ROM drive.

Step 1 - When the autorun screen appears, click **Install**

Note: Windows Firewall presents you with a warning message to unblock the device. Click Unblock to give your computer access to the NAS.

Step 2 - Select the Language of your choice and then click the **Start** button.

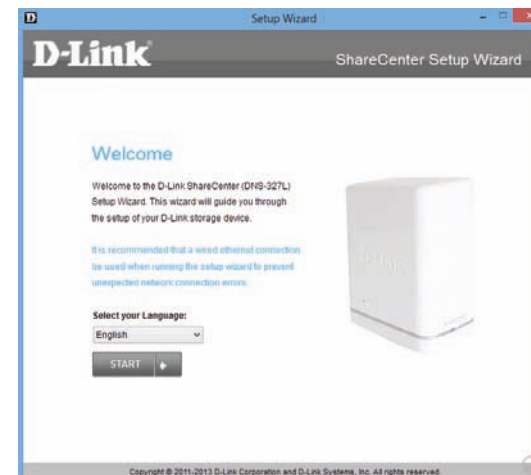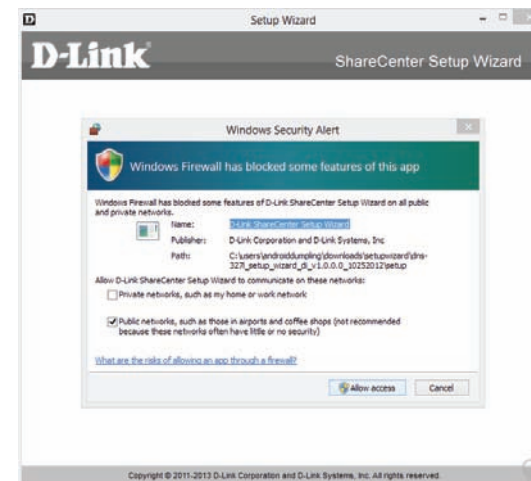

Install the Hard Drives


Step 3 - Follow the instructions to remove the top cover of your ShareCenter™.

Click **Next** to continue.




Step 4 - Attach the Hard Drives Bracket(s) to the side of the hard drives as indicated.

Click **Next** to continue.

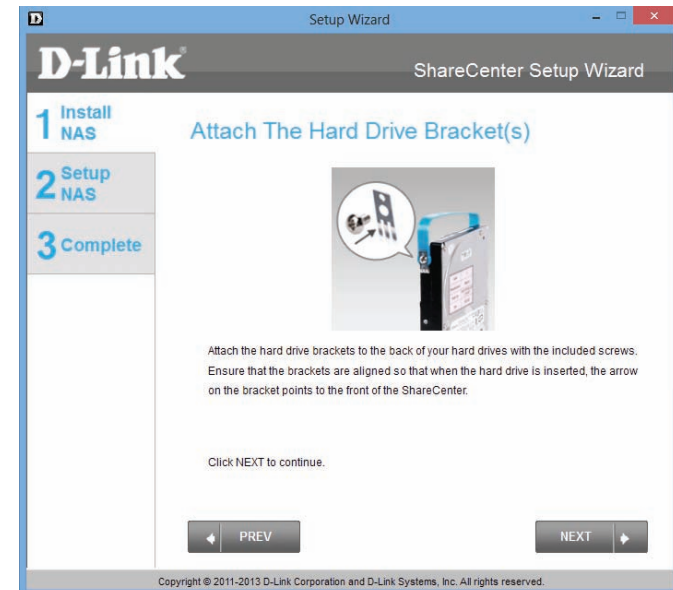

Step 5 - Slide one, or two hard drive into an available hard drive bay of your ShareCenter™.


Click **Next** to continue.

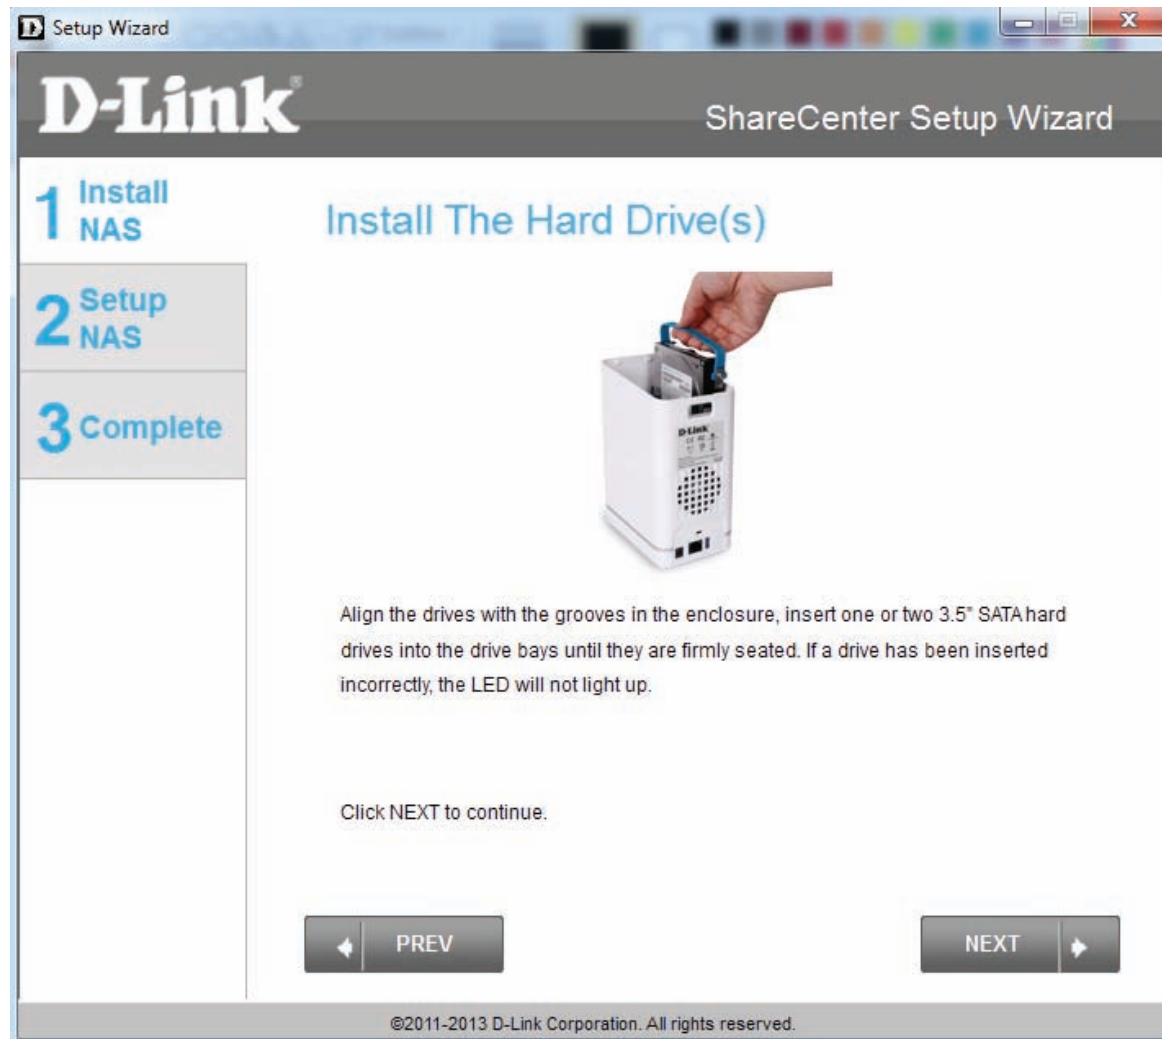

Connect to your Network

Step 6 - With the hard drives installed properly into each bay, close the chassis by re-attaching the top panel into place.

Click **Next** to continue.

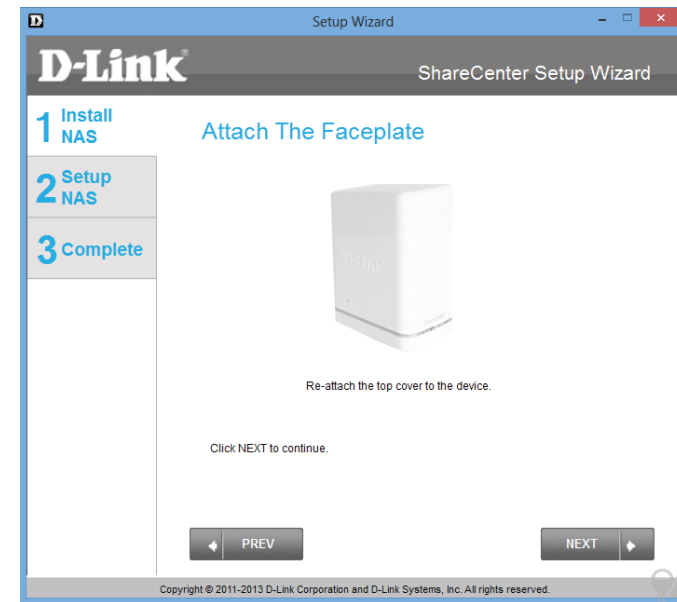

Step 7 - Connect a CAT5 Ethernet cable to your ShareCenter™ and connect the other end to a switch or router (Local LAN).

Click **Next** to continue.



Power and Device Selection

Step 8 - Connect the power adapter connector to the power receptacle on the back of the ShareCenter™. Then, power on the ShareCenter™ by pressing the power button located in the front panel.


Click **Next** to continue.



Step 9 - With the power on, press the **Next** button on the device and check and make sure the IP address of your ShareCenter™ matches what you see on the screen.


Note: Allow 1-2 minutes for the DNS-327L to be recognized.

Click **Next** to continue.

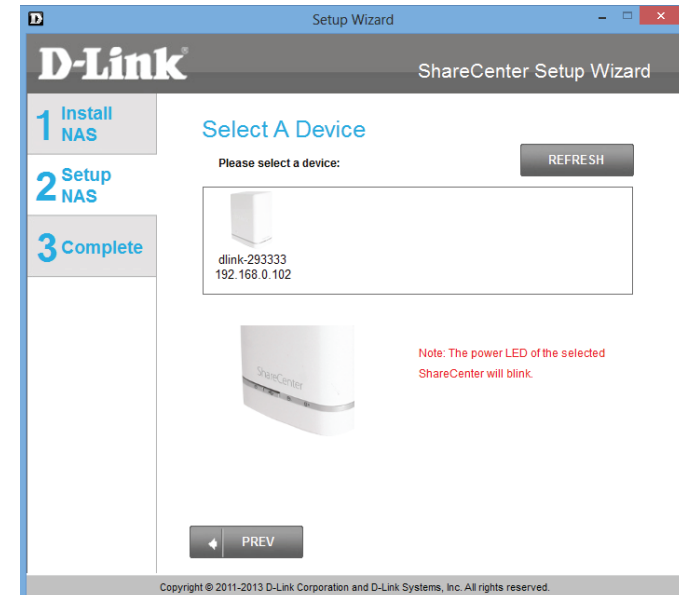

Step 10 - A warning message will appear prompting you to confirm the device. Click Yes, to proceed.

Click **Next** to continue.

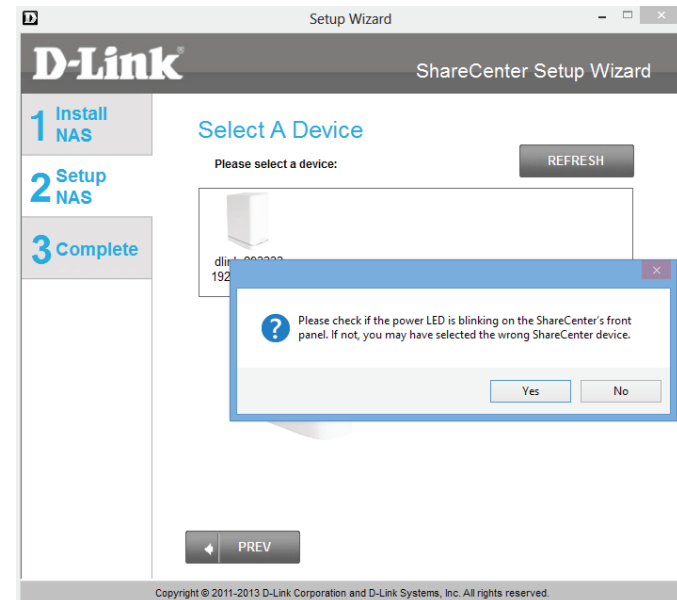

Admin Password

Step 11 - Enter the administrator password. If this is the first time you are doing the installation on this NAS, leave the password blank.

Click **Next** to continue.

The screenshot shows the 'Setup Wizard' window for the D-Link ShareCenter. The title bar says 'Setup Wizard'. The window has a sidebar on the left with three steps: '1 Install NAS' (selected), '2 Setup NAS', and '3 Complete'. The main area is titled 'Input The Admin Password'. It contains the following text: 'Enter your administrator account password in order to login to your NAS. For the first install, the password should be blank, but also the username should be "admin".' Below this text are two input fields: 'Username:' with the value 'admin' and 'Password:' which is empty. At the bottom, there are two buttons: 'PREV' and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Step 12 - In this step you can create a new password for the **Admin** username. It is recommended you set a password, however you may also leave the fields blank.

Click **Next** to continue.

The screenshot shows the 'Setup Wizard' window for the D-Link ShareCenter. The title bar says 'Setup Wizard'. The window has a sidebar on the left with three steps: '1 Install NAS', '2 Setup NAS' (selected), and '3 Complete'. The main area is titled 'Create A New Password For Your NAS'. It contains the following text: 'Create a new password to secure your NAS. You will need to use "admin" as the username and the new password you have created whenever you login to the GUI of your ShareCenter.' Below this text are three input fields: 'Admin ID:' with the value 'admin', 'Password:' with masked characters '*****', and 'Confirm Password:' with masked characters '*****'. A red note below the fields states: 'Note: Password must contain at least 5-16 characters.' At the bottom, there are two buttons: 'PREV' and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Networking Setup

Step 13 - You may either use Static IP or DHCP to configure the IP network settings of the ShareCenter™. If you select Static IP, then enter the IP parameters as listed.

Click **Next** to continue.

The screenshot shows the 'ShareCenter Setup Wizard' window. On the left, a sidebar indicates the progress: '1 Install NAS' (selected), '2 Setup NAS', and '3 Complete'. The main area is titled 'Configure Device LAN'. It contains the instruction: 'If you want to set an IP address for your ShareCenter please select "Static IP" and enter the required information. Otherwise click NEXT.' Below this, there are two radio buttons: 'DHCP Client' (unselected) and 'Static IP' (selected). Under 'Static IP', there are three text input fields: 'IP Address:' with the value '192.168.0.102', 'Subnet Mask:' with '255.255.255.0', and 'Gateway:' with '192.168.0.1'. Below these, there are two more radio buttons: 'Obtain DNS server address automatically' (unselected) and 'Use the following DNS server address' (selected). Under the second option, there are two text input fields: 'DNS1:' with '192.168.0.1' and 'DNS2:' which is empty. At the bottom, there are 'PREV' and 'NEXT' buttons. A copyright notice at the very bottom reads: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

You may also use DHCP to configure the IP network settings of the ShareCenter™. In this situation, leave the parameters blank as your router should automatically configure them.

Click **Next** to continue.

This screenshot is identical to the one above, showing the 'ShareCenter Setup Wizard' window. However, in this instance, the 'DHCP Client' radio button is selected instead of 'Static IP'. Consequently, the IP Address, Subnet Mask, and Gateway fields are empty. The 'Obtain DNS server address automatically' radio button is also selected, leaving the DNS1 and DNS2 fields empty. The 'PREV' and 'NEXT' buttons are still present at the bottom, along with the same copyright notice.

Step 14 - Configure the **Device Information**. Type the workgroup name, a name and a description for the device. This **workgroup** works best when it uses the same name as your current **workgroup** settings. If you haven't setup a **workgroup** yet, type a name that best suits the environment or leave the default "**workgroup**" name.

Click **Next** to continue.

The screenshot shows the 'ShareCenter Setup Wizard' window. On the left, a sidebar lists three steps: '1 Install NAS' (highlighted in blue), '2 Setup NAS', and '3 Complete'. The main area is titled 'Configure Device Information'. It contains a paragraph: 'If you have a workgroup other than your Operating System's default, or if you want to customize the device name and description of your ShareCenter, please enter the information below. Otherwise click NEXT.' Below this are three input fields: 'Workgroup:' with the text 'workgroup', 'Name:' with 'dlink-293333', and 'Description:' with 'DNS-327L'. At the bottom, there are 'PREV' and 'NEXT' buttons. A copyright notice at the very bottom reads: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Step 15 - Configure the **System Time**. Select a **Time Zone** from the drop-down list. Click Enable **NTP Server** and select NTP Server from the drop-down list if your network is connected to the internet. Set the **Date & Time** settings using the calendar drop-down menu. Configure the time settings by manually configuring the **Hour**, **Minute**, and **Second** settings or just click the "**Set time from my computer**" button.

Click **Next** to continue.

The screenshot shows the 'ShareCenter Setup Wizard' window. The sidebar on the left shows '1 Install NAS', '2 Setup NAS' (highlighted in blue), and '3 Complete'. The main area is titled 'Configure System Time' with the subtitle 'Configure Time Zone, NTP server, system Date and Time.' It features a 'Time Zone:' dropdown menu set to '(GMT) Monrovia, Reykjavik'. Below is an 'Enable NTP Server:' checkbox which is unchecked. An 'NTP Server:' field is followed by a '<<' button and a 'Select NTP Server' dropdown. The 'Date and Time:' section shows a calendar dropdown set to 'Saturday, January 1, 2000', and three dropdowns for 'Hour' (19), 'Minute' (28), and 'Second' (52). A large button labeled 'Set time from my computer' is positioned below these fields. 'PREV' and 'NEXT' buttons are at the bottom. The copyright notice at the bottom is: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'


Step 16 - The **Disk Information** window provides the current RAID Type. However, if this isn't already configured, read the instructions under the **Note**.

Click **Next** to continue.



Step 17 - The **RAID Configuration** window provides more detailed **Physical Disk** information. Here you can analyse your **Disk**, **Vendor**, **Model** number, **Serial** number, and **Disk** size. Under **Select RAID Type**, there are four options to choose from. **Standard**, **JBOD**, **RAID 0**, and **RAID 1**. Selecting each one provides a brief description of which each **RAID** format offers. See illustrations below and check the **Knowledge Base** at the back of this manual for more RAID descriptions. Skip this step if you have setup this system before.

By default **Standard** is selected.

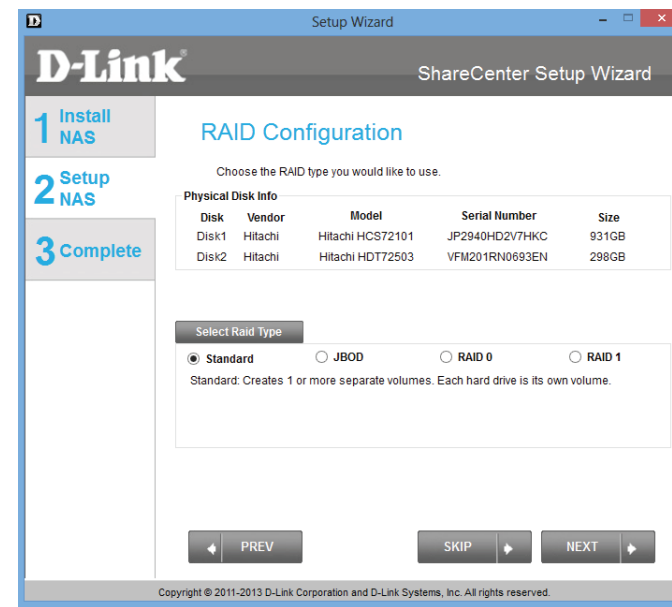


Step 17 - Select **JBOD** to see your configuration options.



Step 17 - Select **RAID 0** to see your configuration options.



Step 17 - Select **RAID 1** to see your configuration options. When you select **RAID 1**, the **Auto-Rebuild** Settings tab appears. The **Auto-Rebuild Settings** tab allows you to **enable** or **disable Auto-Rebuild** the **RAID**. This is necessary should the **RAID** fail.

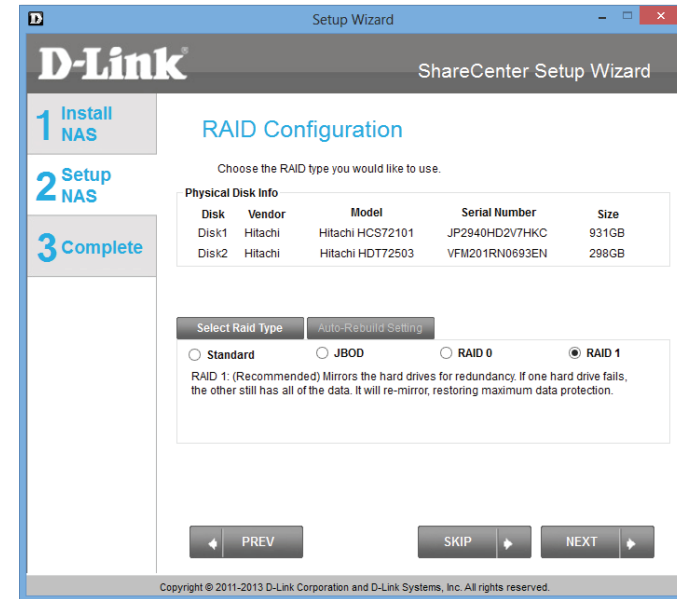

Note - In **Step 18** we resume the settings wizard using the **Standard RAID** configuration. Please see images further down for other configurations.

Note - Once you have configured the RAID of your choice, skip ahead to **Step 41**. Otherwise scroll through this manual to view other **RAID** installation options.

RAID OPTIONS



Standard - Step 18



JBOD - Step 23




RAID 0 - Step 29



RAID 1 - Step 35

Step 18 - Click **Next** to configure the **Standard RAID** or click **SKIP** to bypass this step.

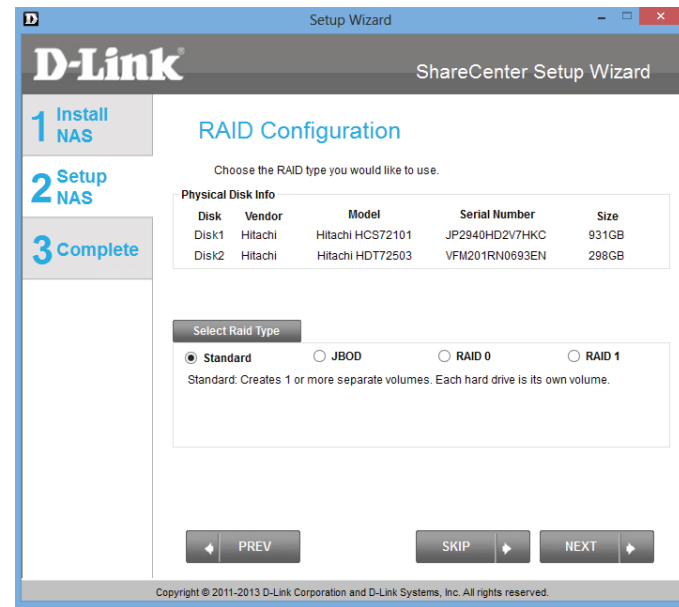

The screenshot shows the 'RAID Configuration' step of the D-Link ShareCenter Setup Wizard. On the left, a progress bar indicates three steps: '1 Install NAS' (completed), '2 Setup NAS' (current step), and '3 Complete'. The main area is titled 'RAID Configuration' and instructs the user to 'Choose the RAID type you would like to use.' Below this is a table titled 'Physical Disk Info' with columns for Disk, Vendor, Model, Serial Number, and Size. The table lists two disks: Disk1 (Hitachi HCS72101, 931GB) and Disk2 (Hitachi HDT72503, 298GB). Under the 'Select Raid Type' section, four options are shown: 'Standard' (selected), 'JBOD', 'RAID 0', and 'RAID 1'. A description for 'Standard' states: 'Standard: Creates 1 or more separate volumes. Each hard drive is its own volume.' At the bottom, there are 'PREV', 'SKIP', and 'NEXT' buttons. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Disk	Vendor	Model	Serial Number	Size
Disk1	Hitachi	Hitachi HCS72101	JP2940HD2V7HKC	931GB
Disk2	Hitachi	Hitachi HDT72503	VFM201RN0693EN	298GB

Step 19 - Map Drive to Network. This window makes it possible for you and users on your network to communicate with your NAS directly. The **Map Drive** assigns a letter to each Volume on your NAS. See **Mapping a Drive** further in the manual for more details.


Click **Next** to continue.




The screenshot shows the 'Map Drive To Network' step of the D-Link ShareCenter Setup Wizard. The progress bar on the left shows '1 Install NAS' (completed), '2 Setup NAS' (current step), and '3 Complete'. The main area is titled 'Map Drive To Network' and asks the user to 'Please choose a drive letter that will correspond to your network storage device.' There are two dropdown menus: 'Available drive 1 letter:' with 'Z:' selected, and 'Available drive 2 letter:' with 'Y:' selected. At the bottom, there are 'PREV' and 'NEXT' buttons. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Once you have completed the previous step, the Wizard automatically creates mapping drives to your configured Volumes.


Click **Next** to continue.

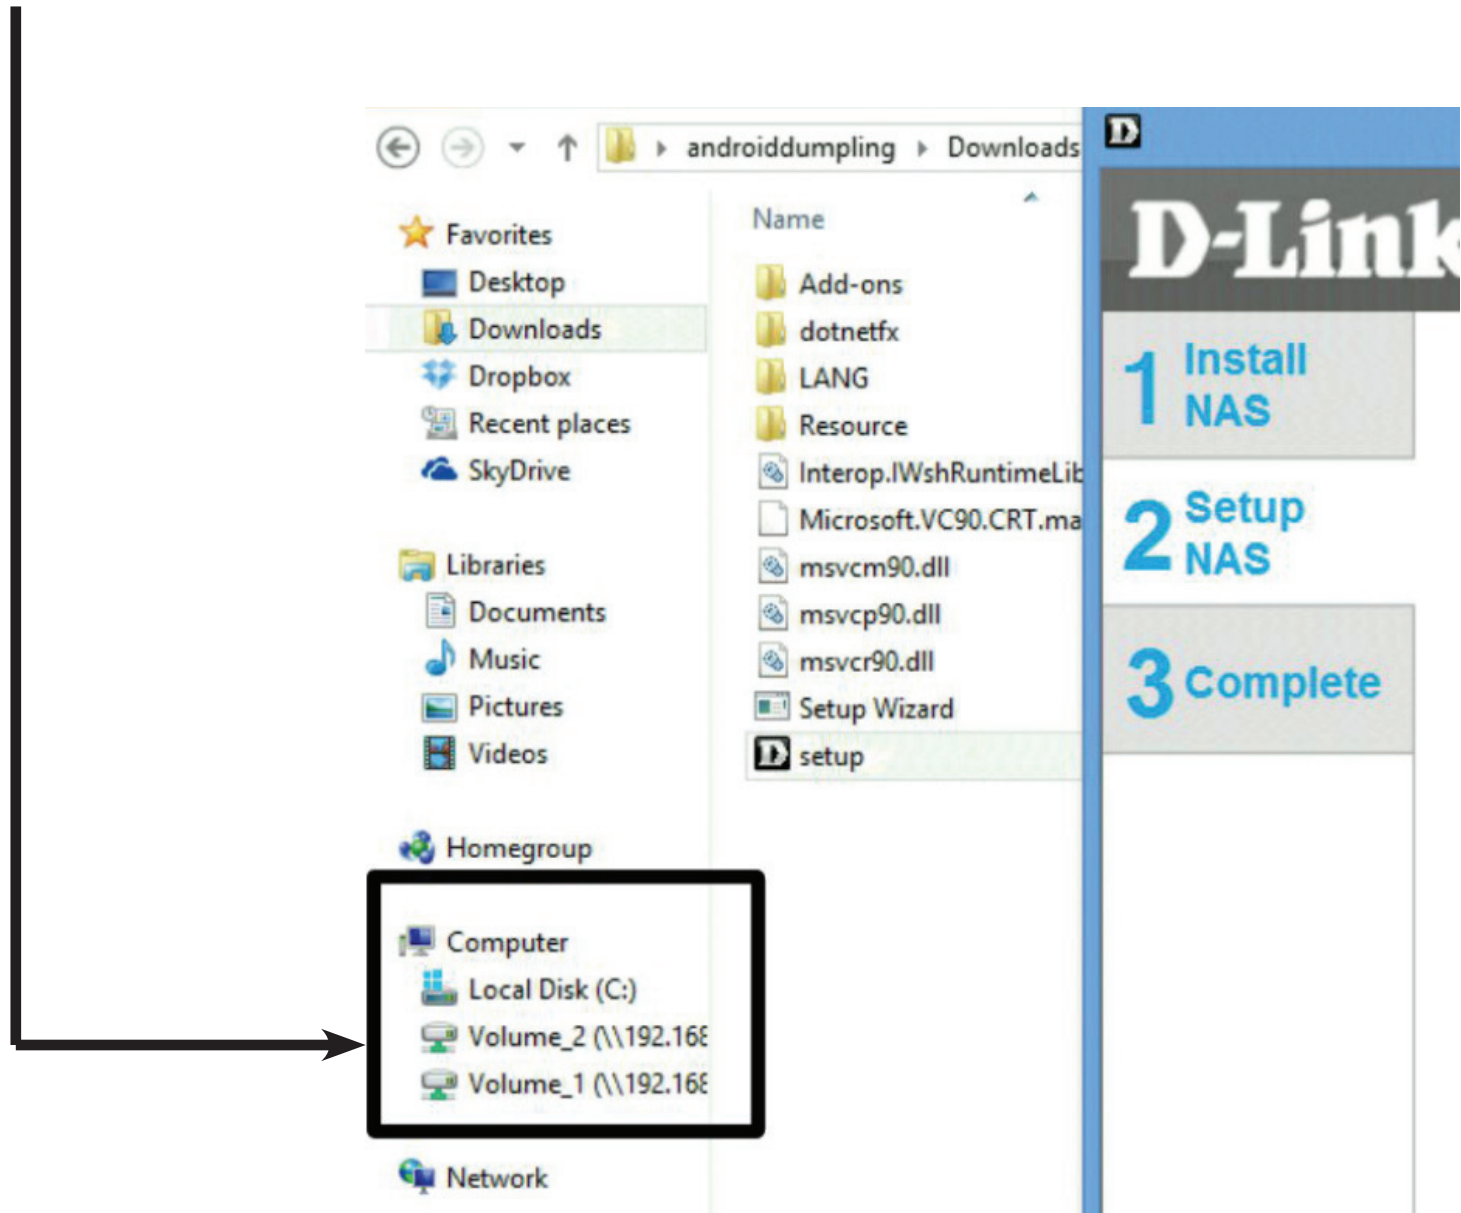




Step 20 - Volume Configuration Summary. This window provides a detailed summary of your current configuration. If you are satisfied with your configuration click **Next** or if you want to change your settings click **PREV** to go back and change your settings. Read the details carefully before making your choice.

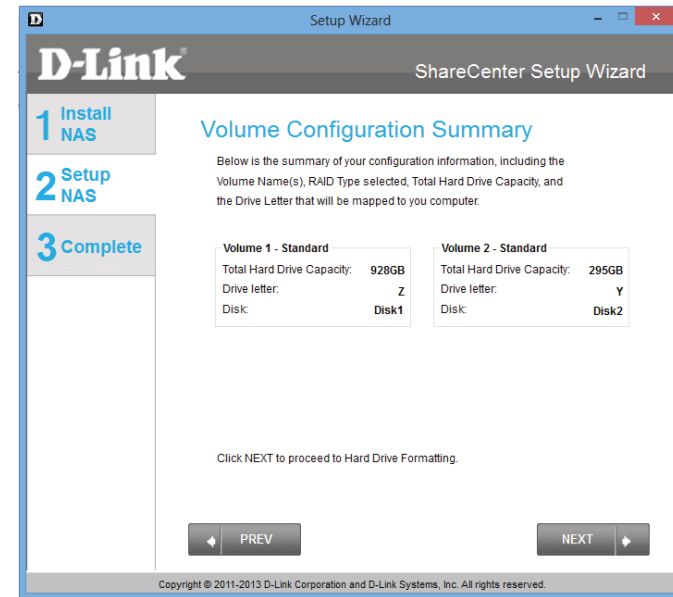

Step 21 - When you click **Next**, you are prompted to verify your decision before you continue.

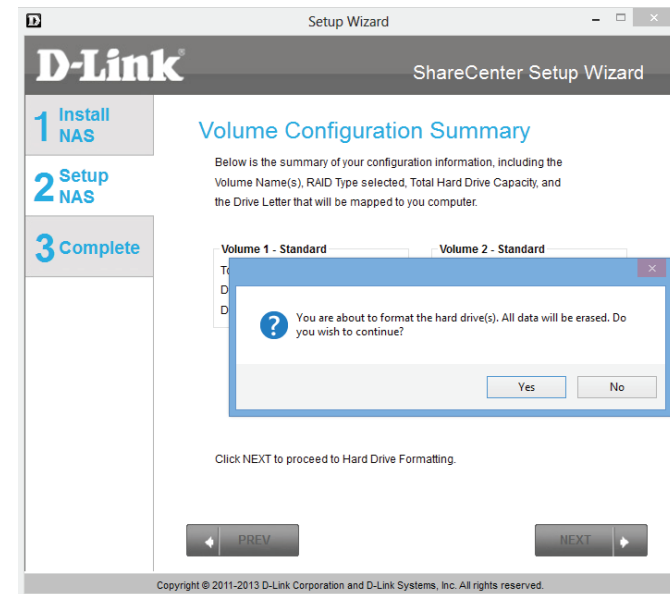

Step 22 - The Wizard software starts the formatting process. **Initializing**, **formatting** and finally **Success**. This completes the **Format** process. Click **Next** to continue.

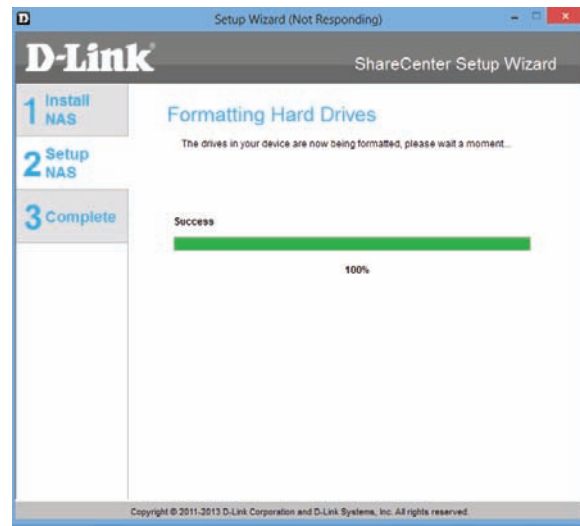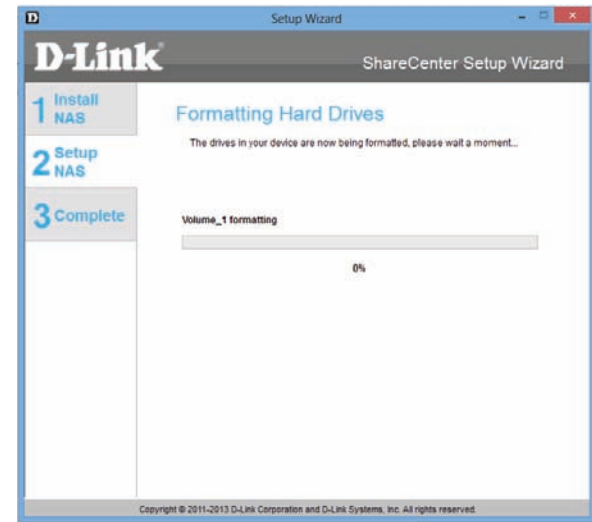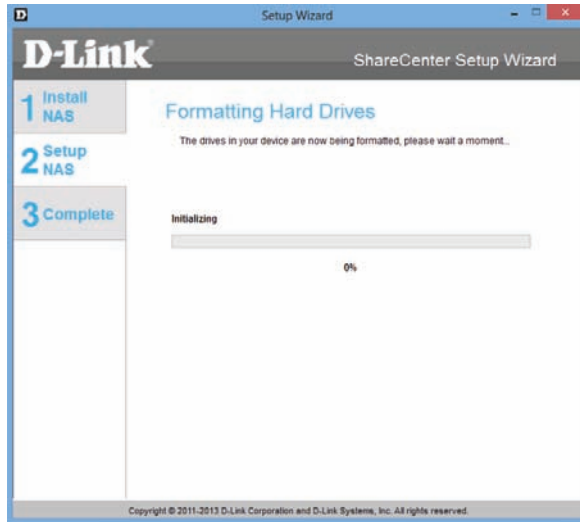

Step 23 - Under **RAID Configuration**, Select **RAID Type**, choose **JBOD**. Read the **JBOD RAID** configuration requirements.

Click **Next** to continue.




The screenshot shows the 'RAID Configuration' step of the D-Link ShareCenter Setup Wizard. On the left, a progress bar indicates three steps: '1 Install NAS', '2 Setup NAS', and '3 Complete'. The main area is titled 'RAID Configuration' and asks the user to 'Choose the RAID type you would like to use.' Below this is a table titled 'Physical Disk Info' with columns for Disk, Vendor, Model, Serial Number, and Size. The table lists two disks: Disk1 (Hitachi HCS72101, 931GB) and Disk2 (Hitachi HDT72503, 298GB). Below the table, there is a 'Select Raid Type' section with four radio buttons: 'Standard', 'JBOD' (which is selected), 'RAID 0', and 'RAID 1'. A description for JBOD states: 'JBOD: Combines 2 or more hard drives in a linear fashion which will create one large volume geared towards maximum available space.' At the bottom, there are three buttons: 'PREV', 'SKIP', and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Disk	Vendor	Model	Serial Number	Size
Disk1	Hitachi	Hitachi HCS72101	JP2940HD2V7HKC	931GB
Disk2	Hitachi	Hitachi HDT72503	VFM201RN0693EN	298GB

Step 24 - Under **JBOD** more than one disk is classified as a complete **Volume** so when mapping a drive, only one drive letter is needed. **Map Drive to Network** only shows one drive.


Click **Next** to continue.

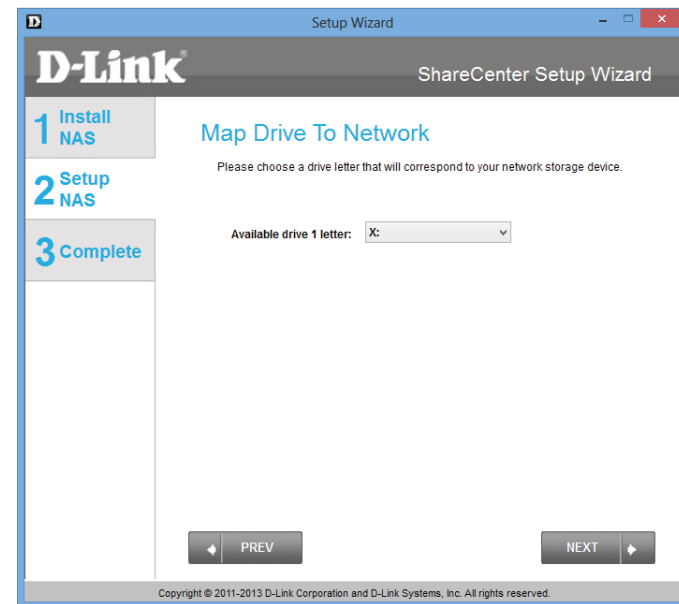


The screenshot shows the 'Map Drive To Network' step of the D-Link ShareCenter Setup Wizard. On the left, the same progress bar as in the previous screen is shown. The main area is titled 'Map Drive To Network' and asks the user to 'Please choose a drive letter that will correspond to your network storage device.' Below this, there is a label 'Available drive 1 letter:' followed by a dropdown menu showing 'X:'. At the bottom, there are two buttons: 'PREV' and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Step 25 - The **Volume Configuration Summary** displays a detailed summary of **JBOD**.


Click **Next** to continue.

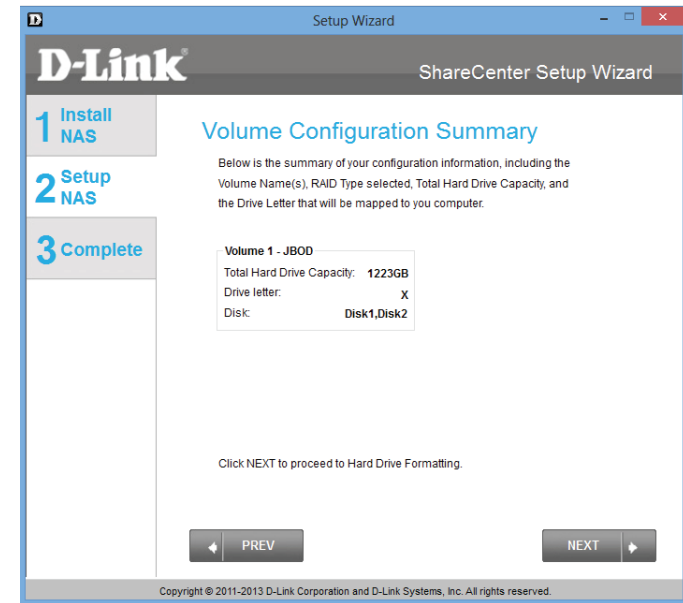


Step 26 - Click **Next**, you are prompted to verify your decision before you continue. Click **Yes** to continue.

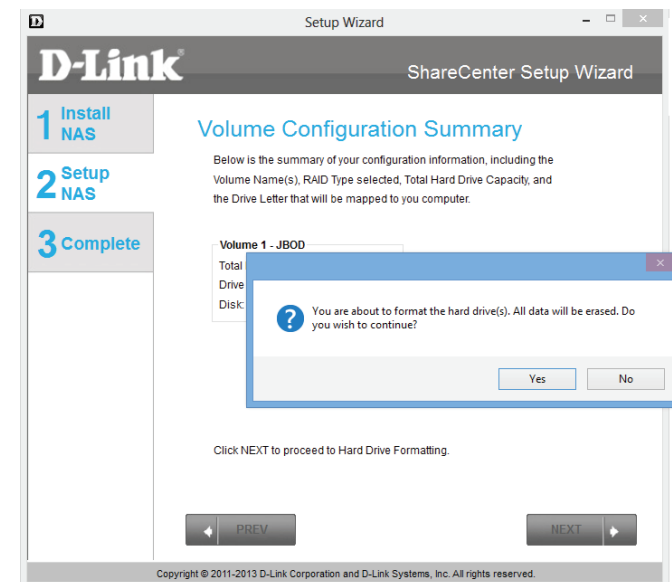

Step 27 - The **JBOD** is **initialized, formatted, and complete** in 3 easy steps. Do not click any buttons while this process is ongoing.

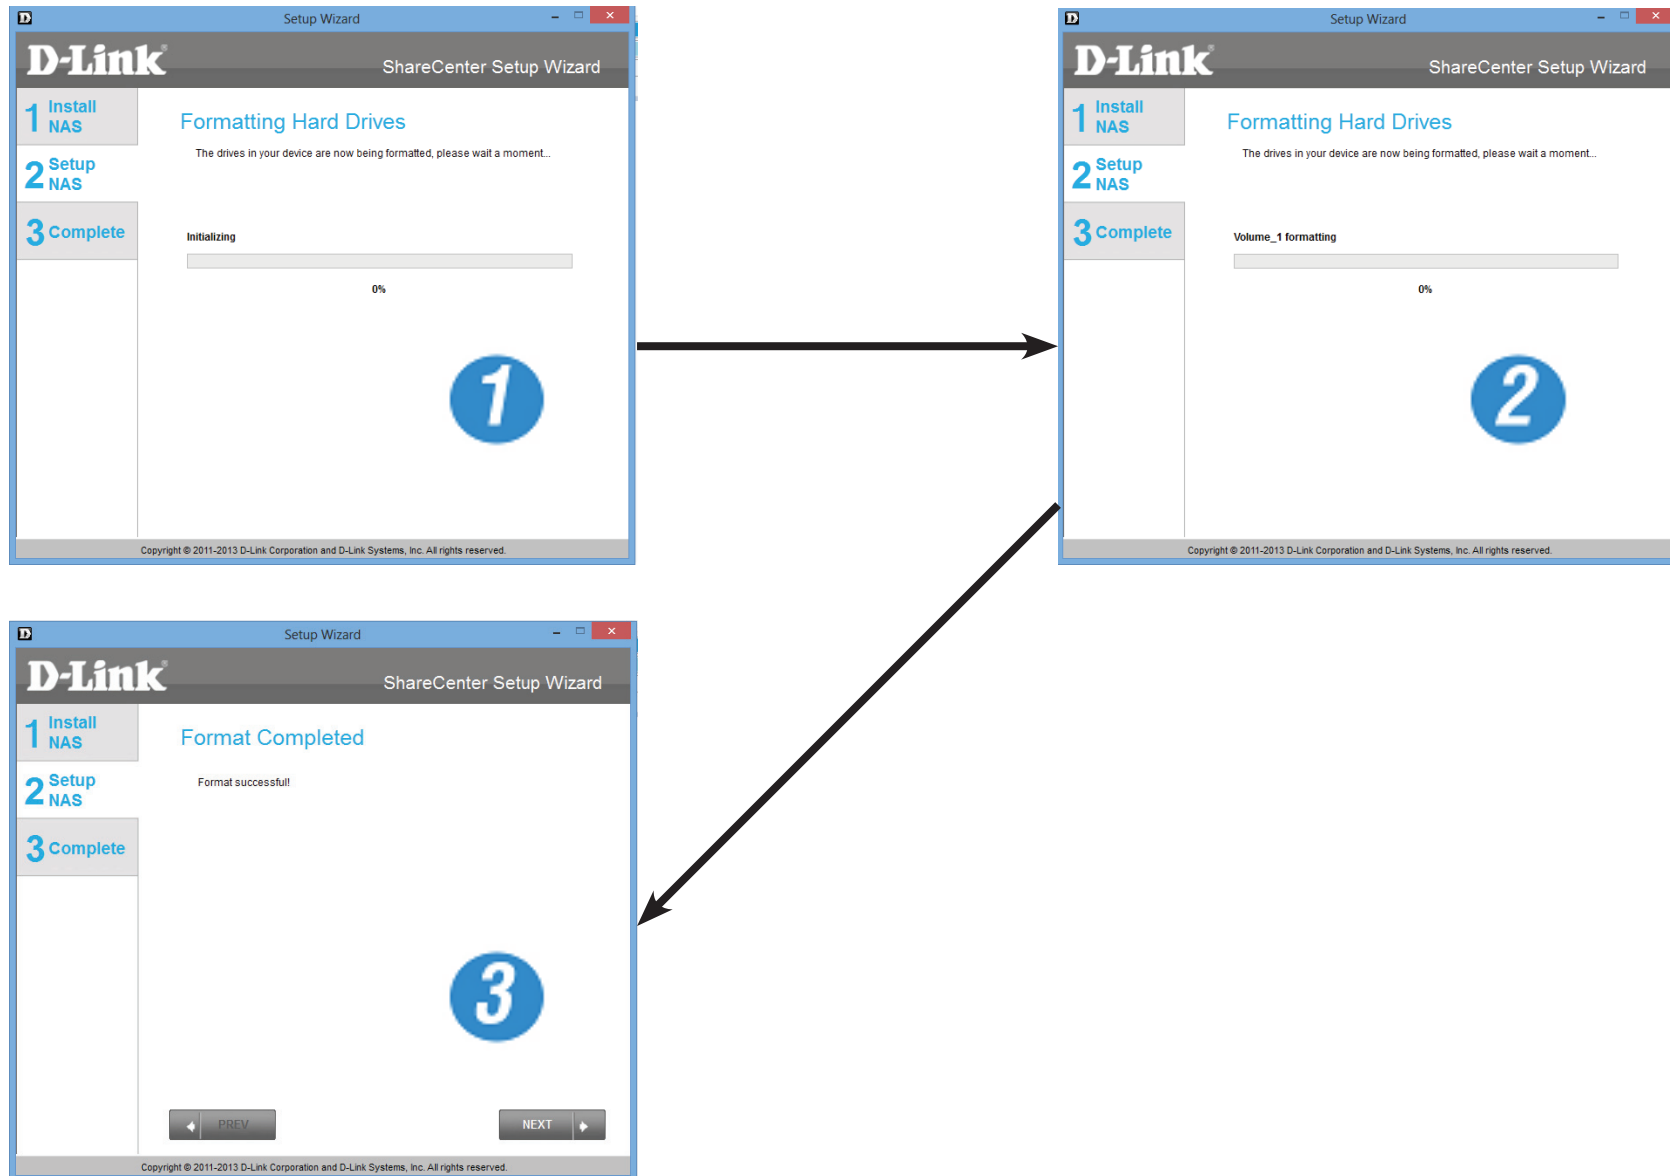

Step 28 - To verify your **JBOD**, login to your NAS, go to **Management. Disk Management**, and **Hard Drive Configuration**. This shows the current status of your drives.

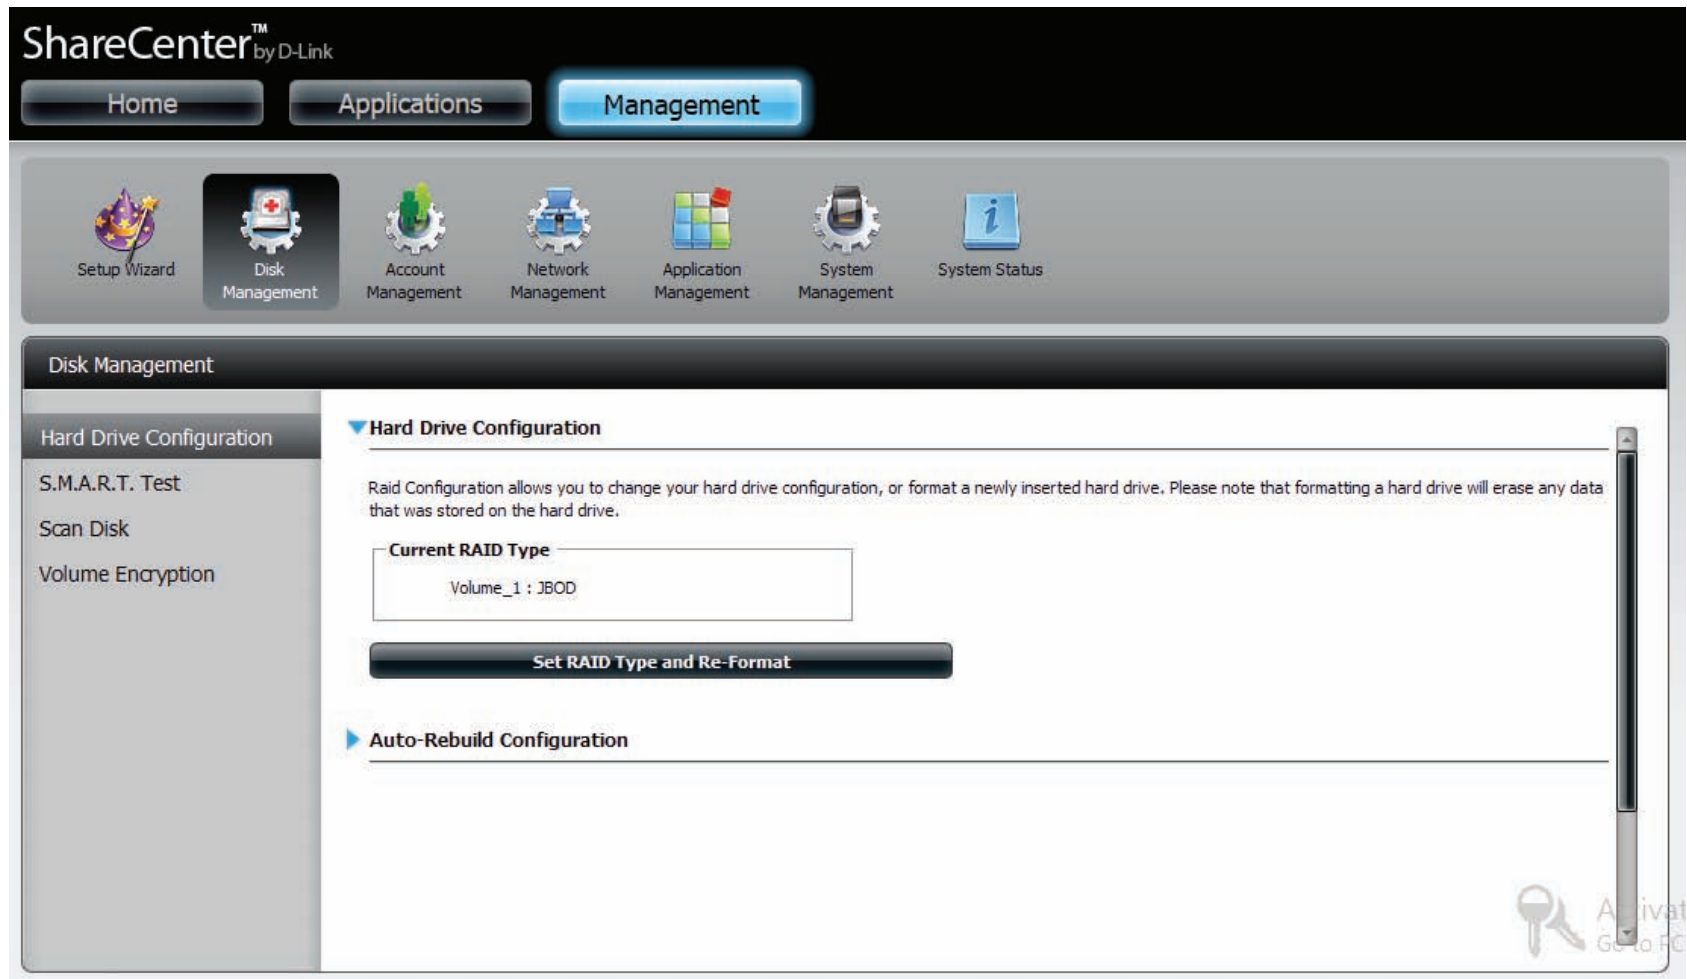


Step 29 - Under **RAID Configuration**, Select **RAID Type**, choose **RAID 0**. Read the **RAID 0** configuration requirements.

Click **Next** to continue.

Step 30 - With **RAID 0**, the two drives are striped into one Volume, making it appear that you have one drive.

Map Drive to Network indicates that the NAS has separated the drive into 2 Volumes. To explain, if the size of the two drives are different, the spare drive space will be formatted as a JBOD volume. It is better to have drives of the same sizes.

Click **Next** to continue.

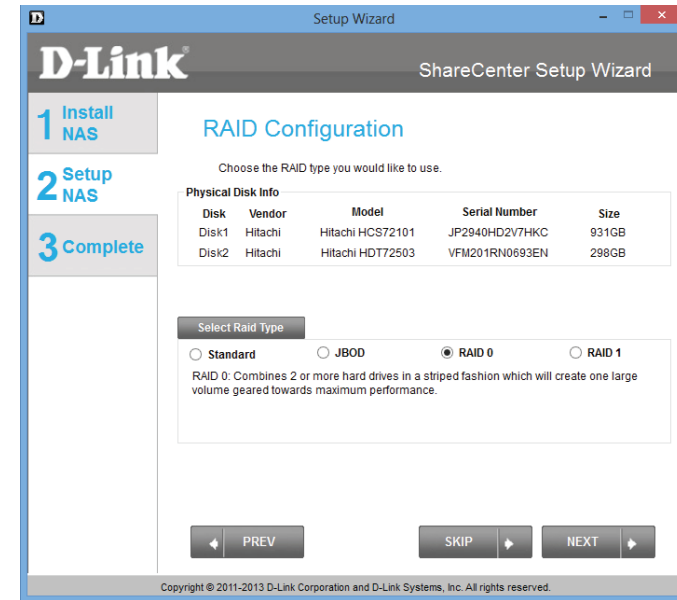

The screenshot shows the 'RAID Configuration' step of the D-Link ShareCenter Setup Wizard. On the left, a sidebar indicates the progress: '1 Install NAS' (selected), '2 Setup NAS', and '3 Complete'. The main area is titled 'RAID Configuration' and instructs the user to 'Choose the RAID type you would like to use.' Below this, a table titled 'Physical Disk Info' lists two disks:

Disk	Vendor	Model	Serial Number	Size
Disk1	Hitachi	Hitachi HCS72101	JP2940HD2V7HKC	931GB
Disk2	Hitachi	Hitachi HDT72503	VFM201RN0693EN	298GB

Below the table, the 'Select Raid Type' section shows three options: 'Standard' (unselected), 'JBOD' (unselected), and 'RAID 0' (selected). A description for RAID 0 states: 'RAID 0: Combines 2 or more hard drives in a striped fashion which will create one large volume geared towards maximum performance.' At the bottom, there are 'PREV', 'SKIP', and 'NEXT' buttons. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'




The screenshot shows the 'Map Drive To Network' step of the D-Link ShareCenter Setup Wizard. The sidebar on the left shows '1 Install NAS' (selected), '2 Setup NAS', and '3 Complete'. The main area is titled 'Map Drive To Network' and asks the user to 'Please choose a drive letter that will correspond to your network storage device.' There are two dropdown menus: 'Available drive 1 letter:' with 'W:' selected, and 'Available drive 2 letter:' with 'V:' selected. At the bottom, there are 'PREV' and 'NEXT' buttons. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Step 31 - The **Volume Configuration Summary**, displays the details of the new configuration.


Click **Next** to continue.




Step 32 - Verify your configuration selection before continuing. Click **Yes** to continue

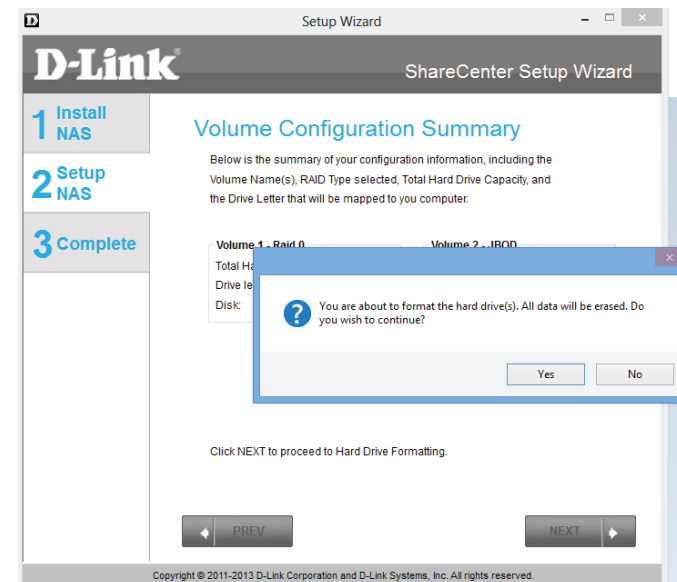

Step 33 - The **RAID 0** is **initialized, formatted, and complete** in 3 easy steps. Do not click any buttons while this process is ongoing.

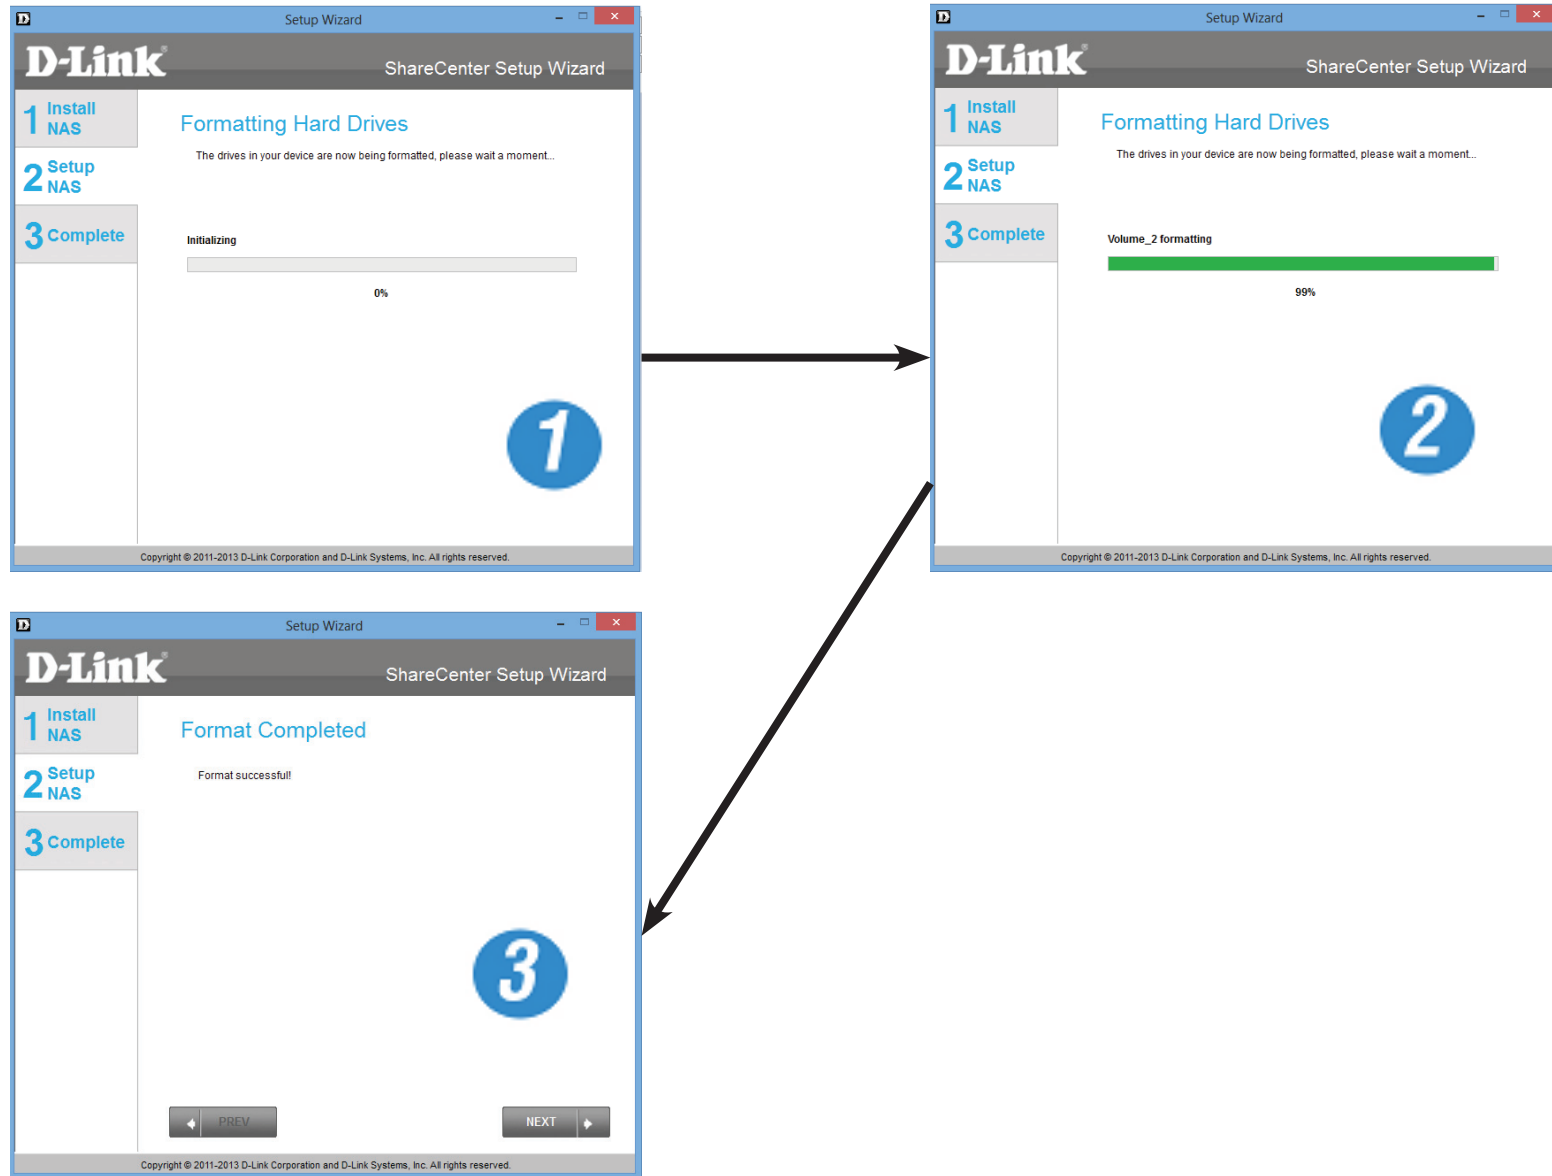

Step 34 - To verify your **RAID 0**, login to your NAS, go to **Management. Disk Management**, and **Hard Drive Configuration**. This shows the current status of your drives.

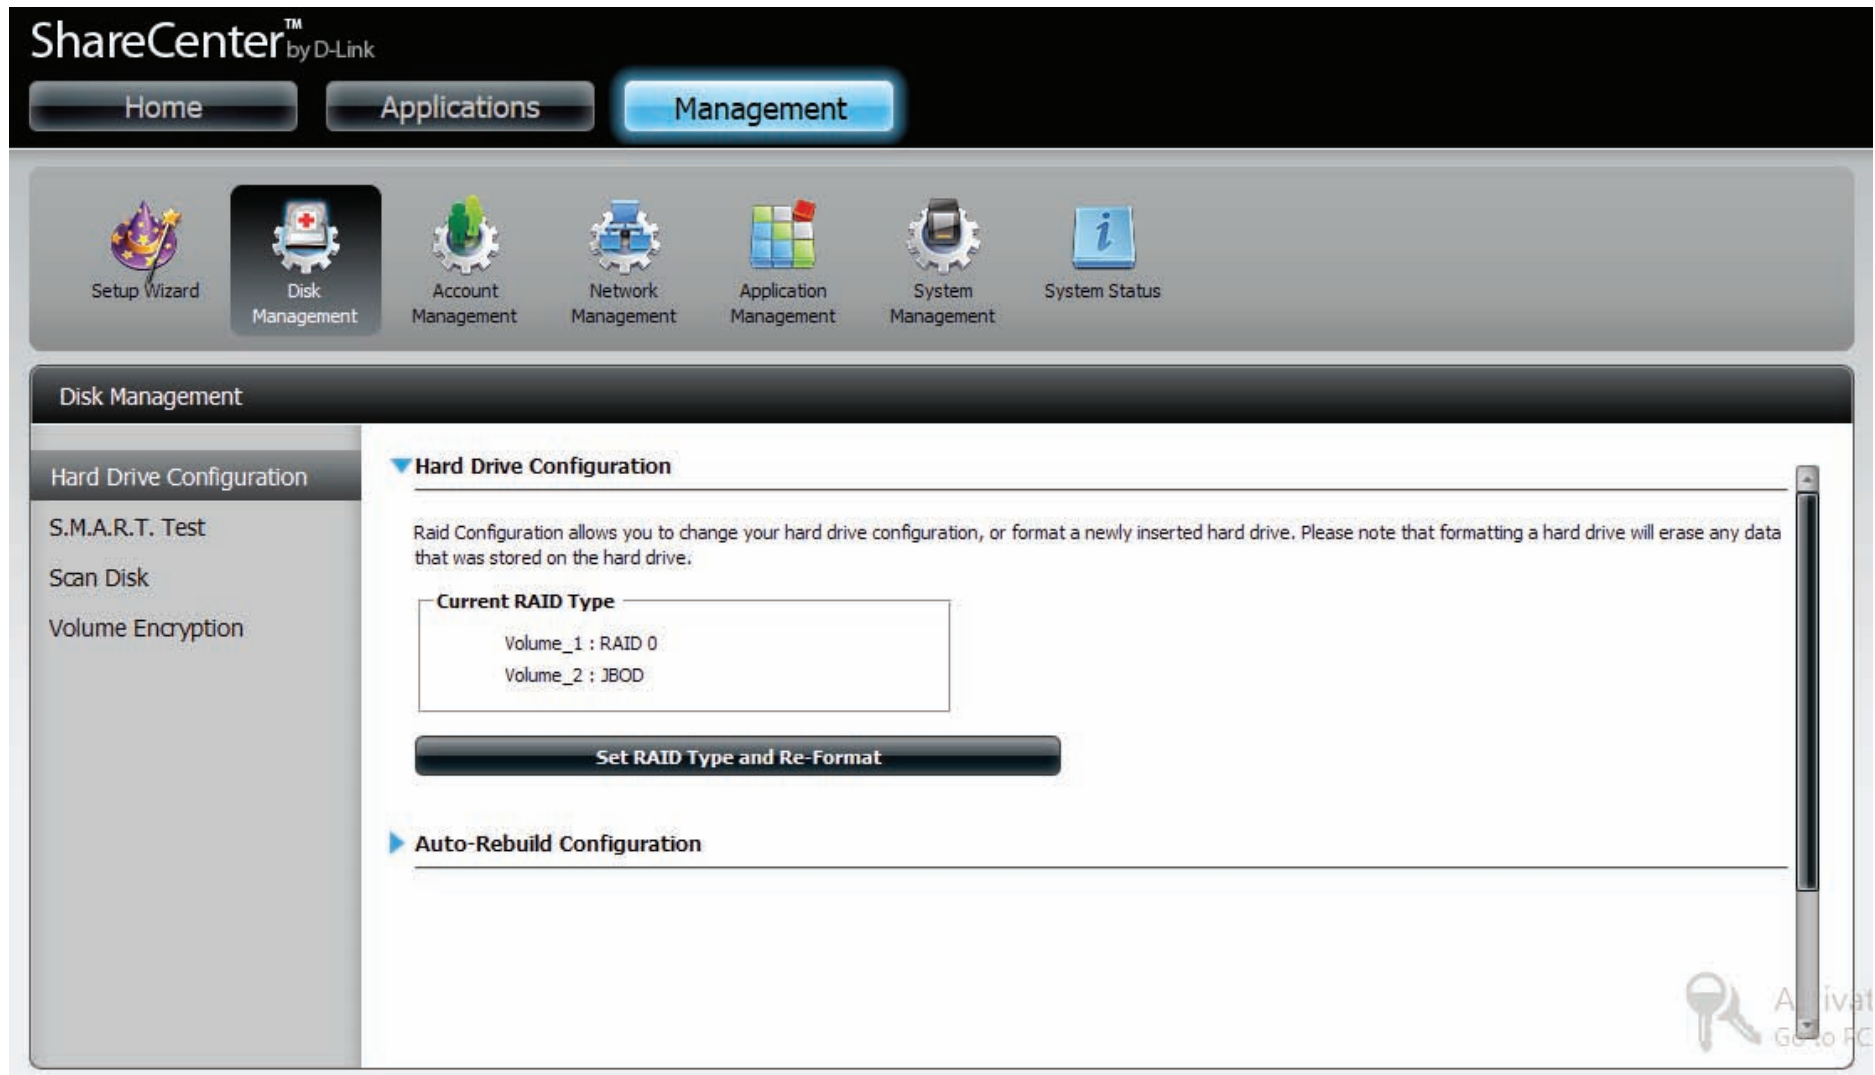

Step 35 - Under **RAID Configuration**, Select **RAID Type**, choose **RAID 1**. Read the **RAID 1** configuration requirements.

Click **Next** to continue.

The screenshot shows the 'RAID Configuration' step of the D-Link ShareCenter Setup Wizard. On the left, a progress bar indicates three steps: '1 Install NAS', '2 Setup NAS', and '3 Complete'. The main area is titled 'RAID Configuration' and asks the user to 'Choose the RAID type you would like to use.' Below this, a table lists 'Physical Disk Info' with columns for Disk, Vendor, Model, Serial Number, and Size. Two disks are listed: Disk1 (Hitachi HC872101, 931GB) and Disk2 (Hitachi HDT72503, 298GB). Under 'Select Raid Type', there are four radio buttons: Standard, JBOD, RAID 0, and RAID 1. The 'RAID 1' option is selected. A note below the radio buttons states: 'RAID 1: (Recommended) Mirrors the hard drives for redundancy. If one hard drive fails, the other still has all of the data. It will re-mirror, restoring maximum data protection.' At the bottom, there are navigation buttons: 'PREV', 'SKIP', and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Disk	Vendor	Model	Serial Number	Size
Disk1	Hitachi	Hitachi HC872101	JP2940HD2V7HKC	931GB
Disk2	Hitachi	Hitachi HDT72503	VFM201RN0693EN	298GB

Step 36 - With RAID 1, the drives are mirrored for redundancy. **Map Drive to Network** indicates that the NAS has separated the drive into a RAID array.

Note: If the size of these two drives are different, the spare drive space will be formatted as **JBOD** Volume.

Click **Next** to continue.


The screenshot shows the 'Map Drive To Network' step of the D-Link ShareCenter Setup Wizard. On the left, the same progress bar as in the previous screen is shown. The main area is titled 'Map Drive To Network' and asks the user to 'Please choose a drive letter that will correspond to your network storage device.' There are two dropdown menus: 'Available drive 1 letter:' with 'Q:' selected, and 'Available drive 2 letter:' with 'P:' selected. At the bottom, there are navigation buttons: 'PREV' and 'NEXT'. The footer contains the copyright notice: 'Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.'

Step 37 - The **Volume Configuration Summary**, displays the details of the new configuration.


Click **Next** to continue.




Step 38 - Verify your configuration selection before continuing. Click **Yes** to continue

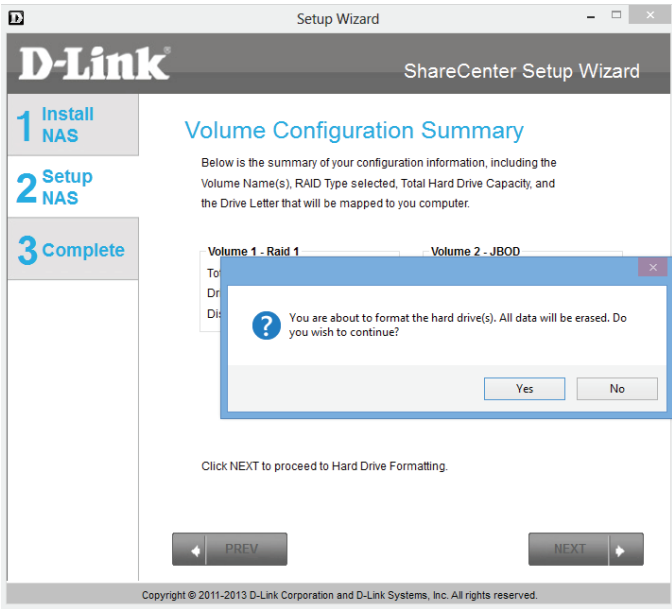

Step 39 - The **RAID 1** is **initialized, formatted, and complete** in 3 easy steps. Do not click any buttons while this process is ongoing.

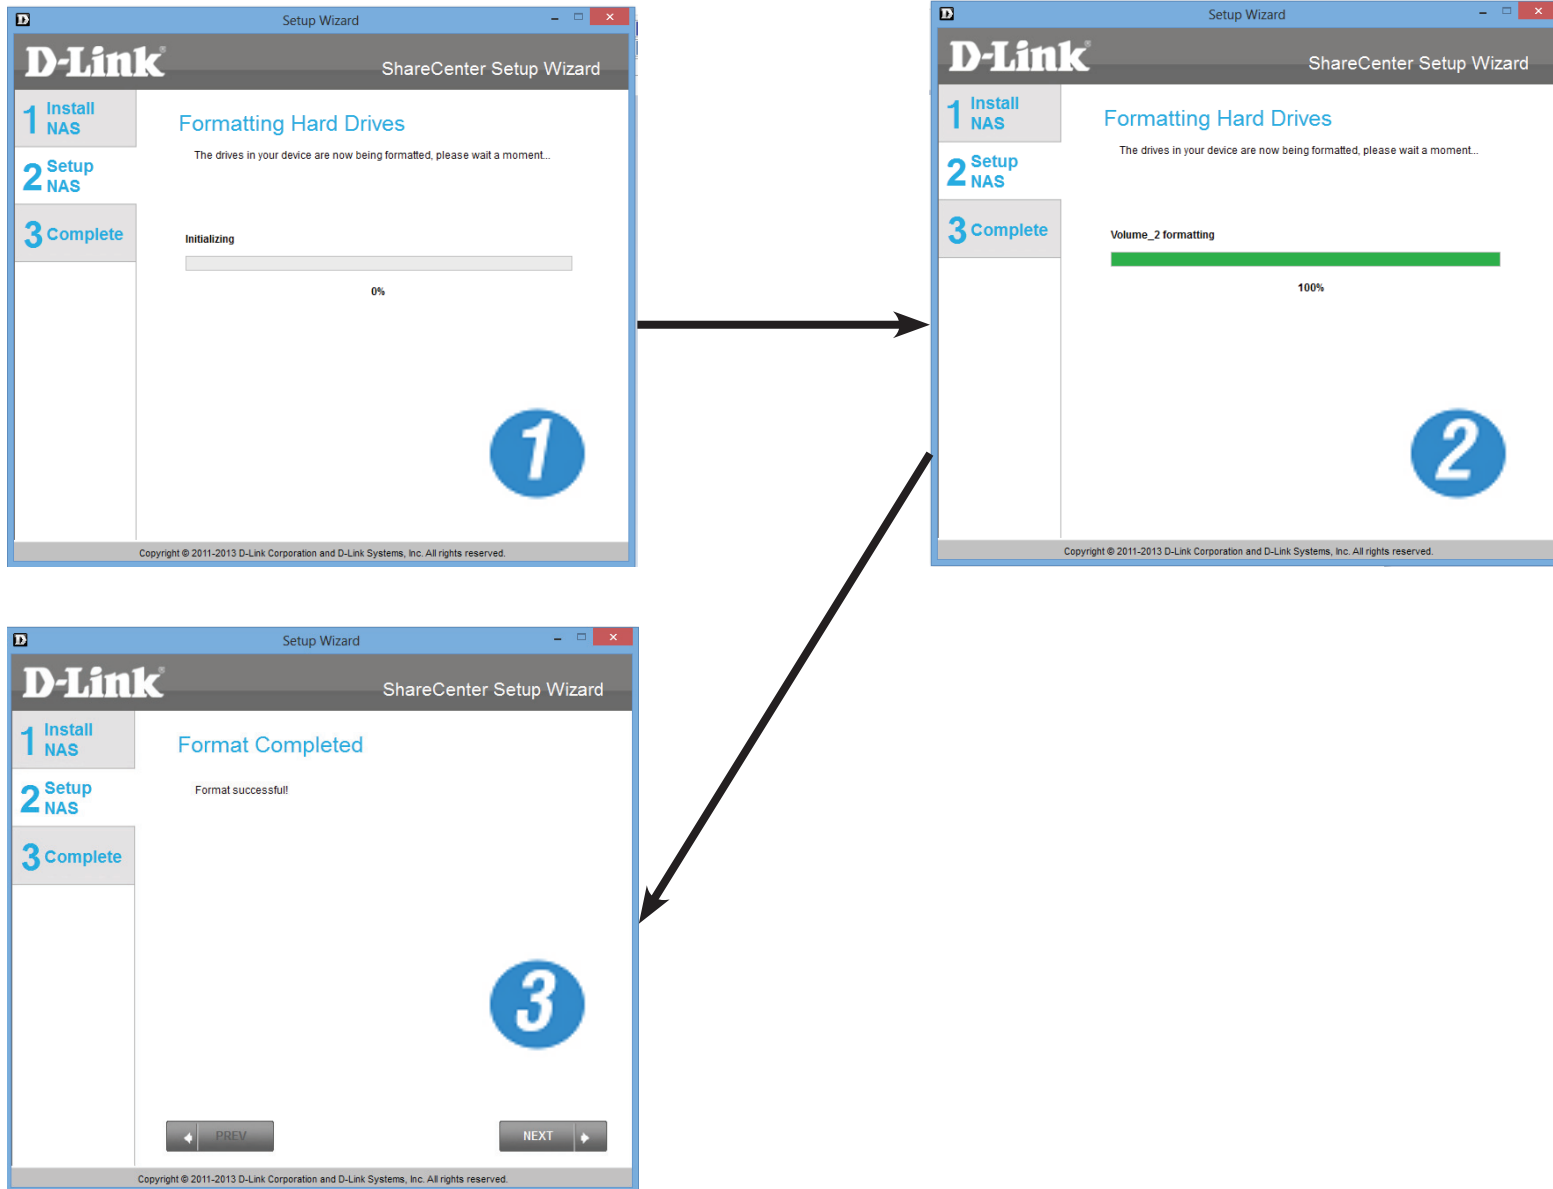

Step 40 - To verify your **RAID 1**, login to your NAS, go to **Management. Disk Management**, and **Hard Drive Configuration**. This shows the current status of your drives.

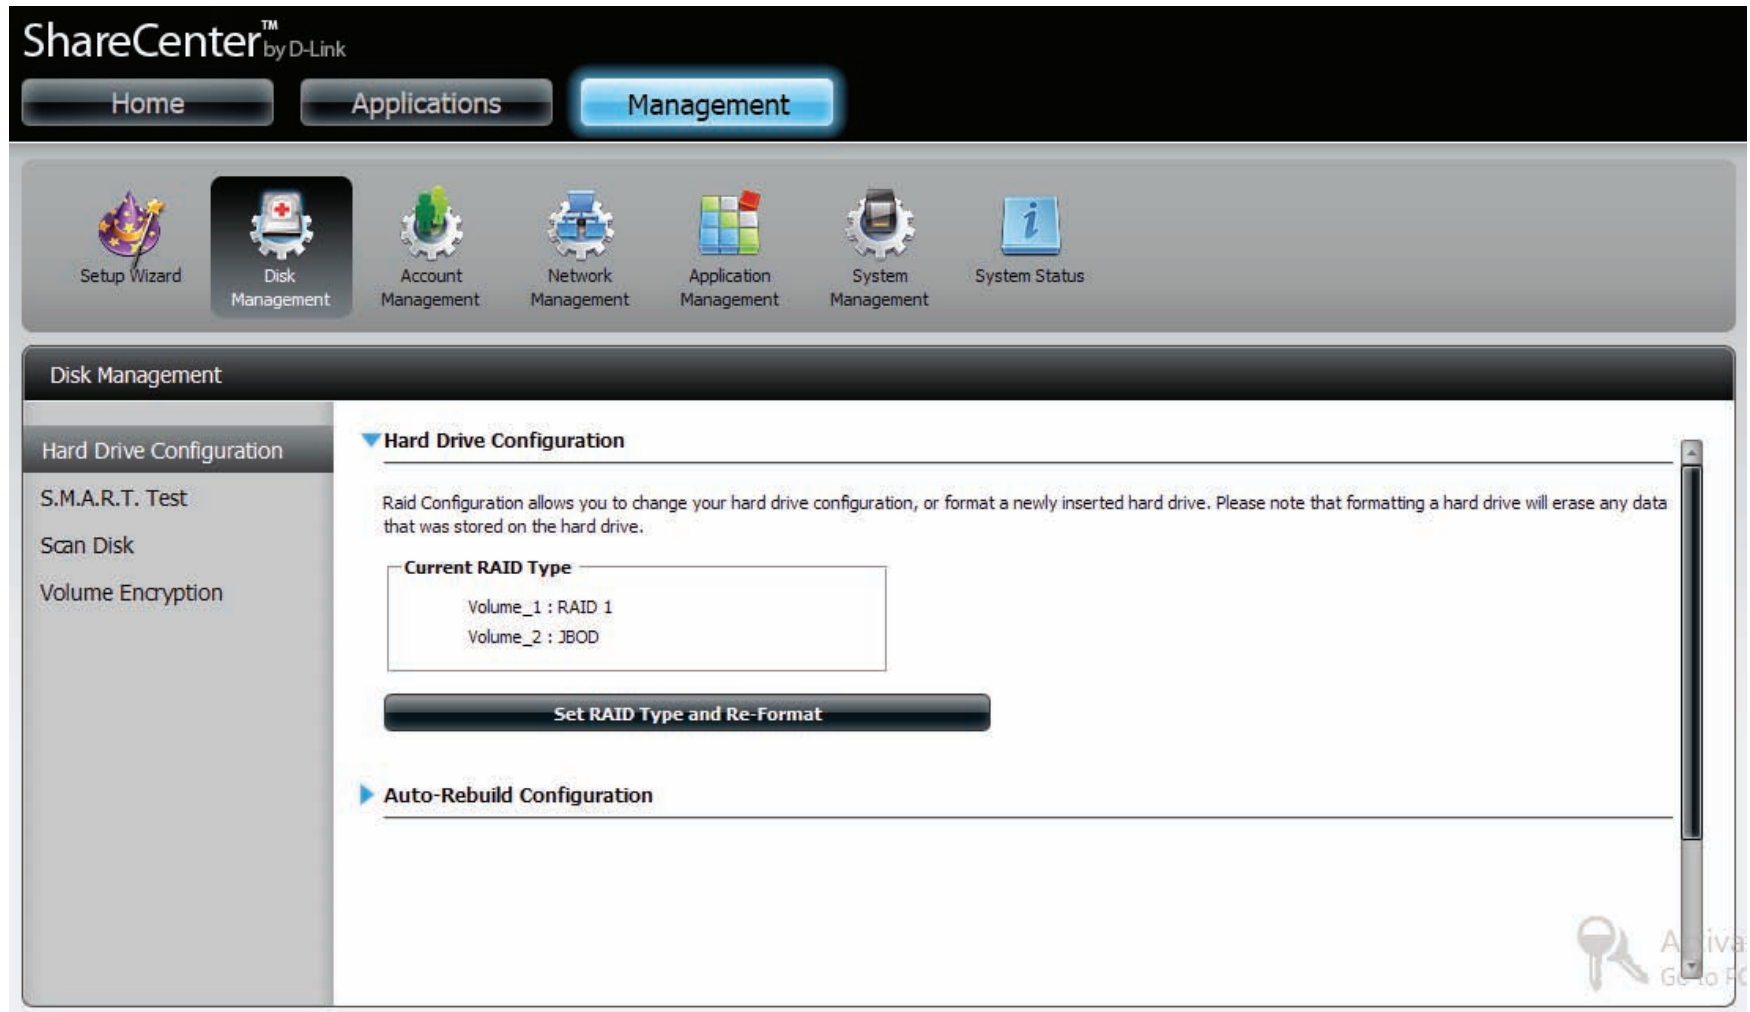

Step 41 - The **DNS-327L** also offers **Add-on Packages**. **AjaXplorer**, **Blog**, **Photo Center**, **Joomla**, **Transmission**, **Audio Streamer**, **aMule**, **phpBB**, and **phpMyAdmin** are offered by default.

Alternatively, you can install the add-on packages available on the CD or from the D-Link website at a later stage. Refer to page 223 for details.

Click **Next** to accept these installations or click **SKIP** to continue. If you wish not to install **Squeeze Center** please continue to **Step 45**


Step 42 - If you wish to install the remaining Add-on Package, click the box next to Squeeze Center. However, if you are not sure what Squeeze Center does or do not wish to install it, skip this process.

Squeeze Center is a Logitech Media Server application. More information can be found at http://en.wikipedia.org/wiki/Logitech_Media_Server.




Click **Next** to accept these installations or click **SKIP** to continue.

Once you have selected it and clicked **Next** a window will appear for you to **download** the application at a different location.


Click **Next** to accept these installations or click **SKIP** to continue.

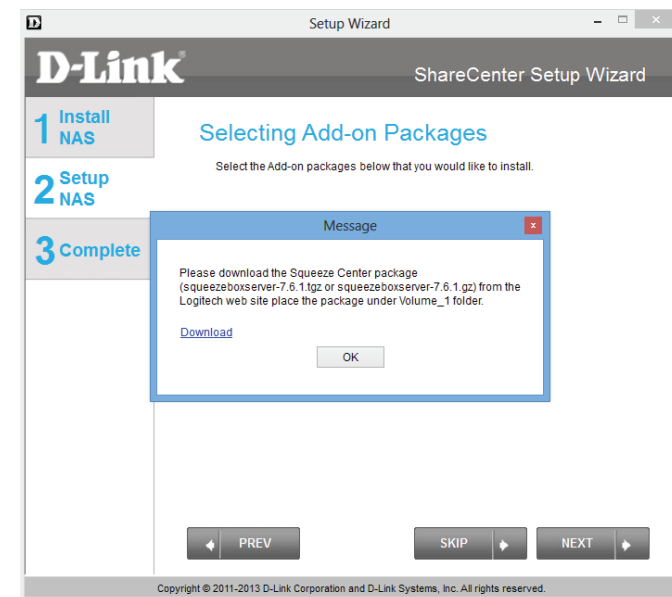


Step 43 - Opting to download the Squeeze Center automatically opens your default browser to download the application. Once Squeeze Center is downloaded, continue with the rest of the installation. Click **Save** to save the file to your local hard drive.

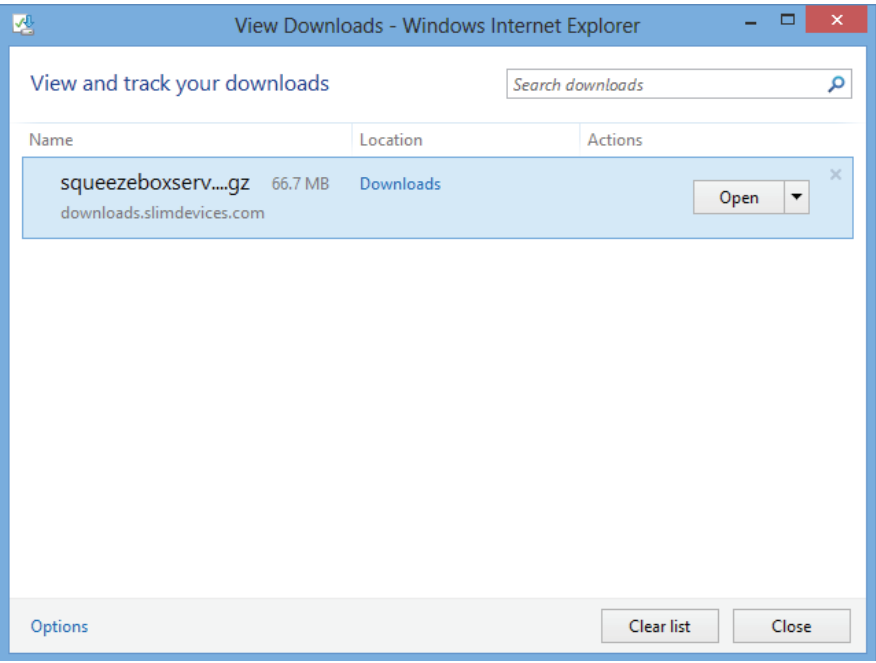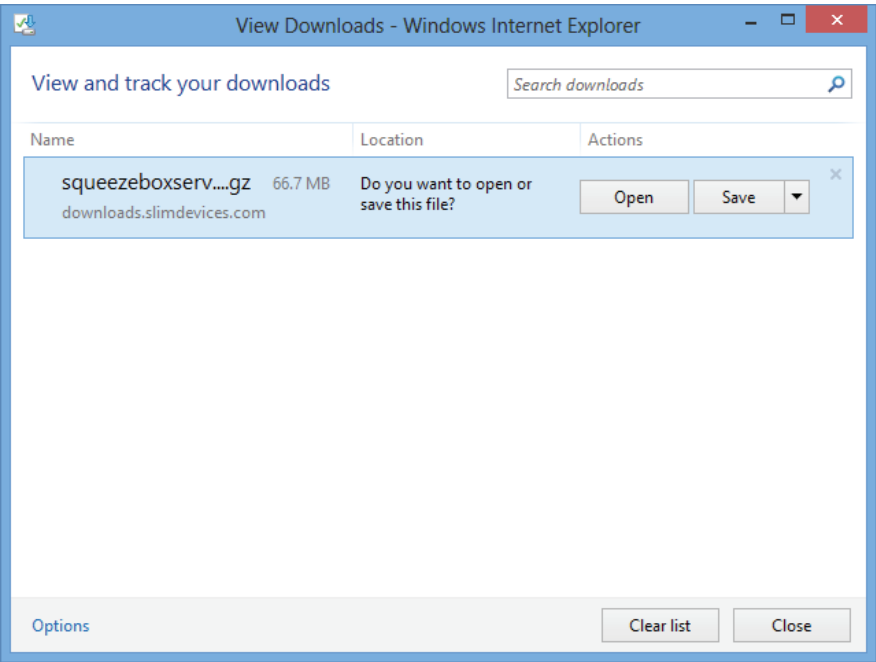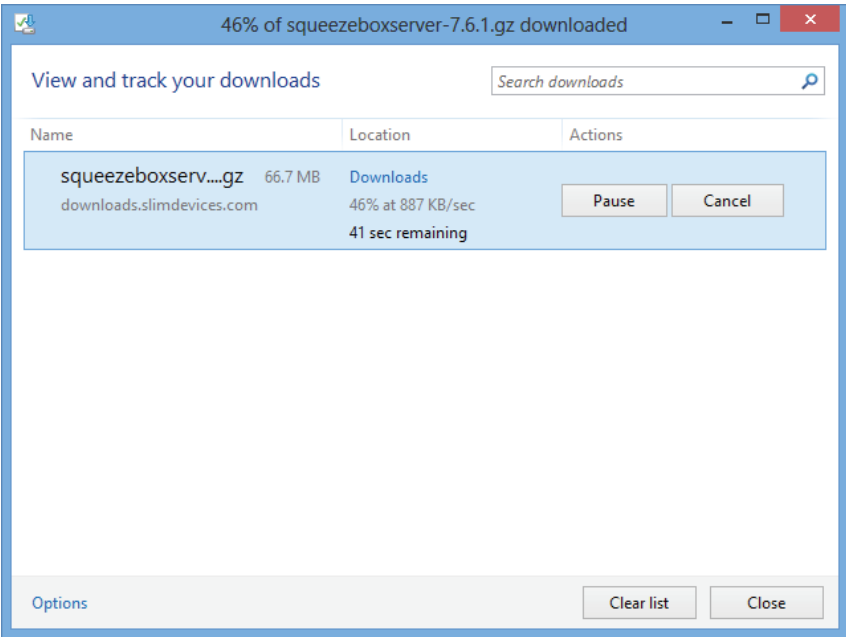

Step 44 - Copy the Squeeze Center package from your local hard drive to Volume_1 of the ShareCenter™.

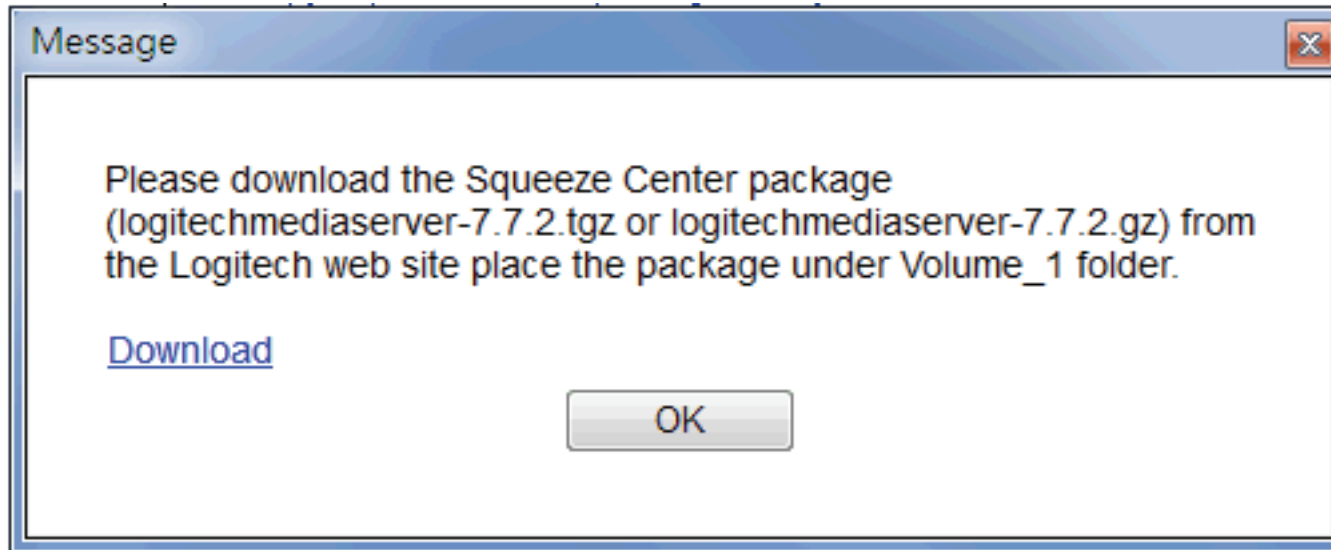



Step 45 - Watch the **Add-on Packages** being installed.

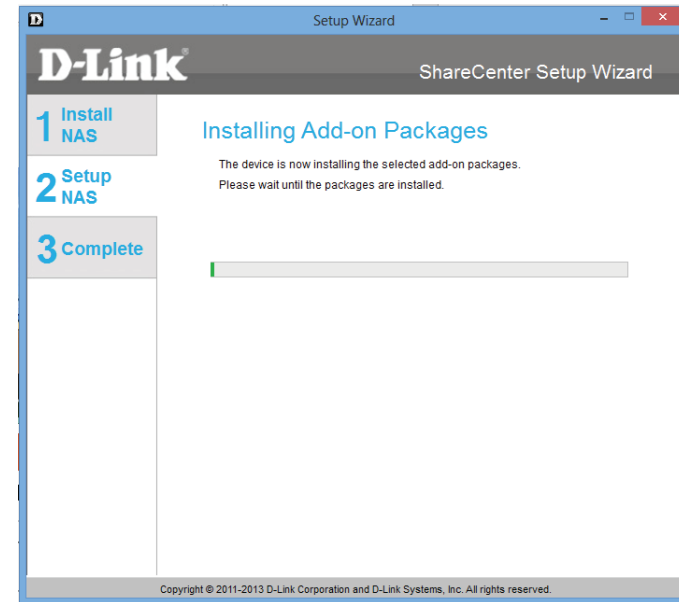

Step 46 - Once the **Add-on Packages** are installed click **Next**.




Step 47 - The next two screens displays the installed **Add-on Packages**. Click **Next** to continue to the next window.

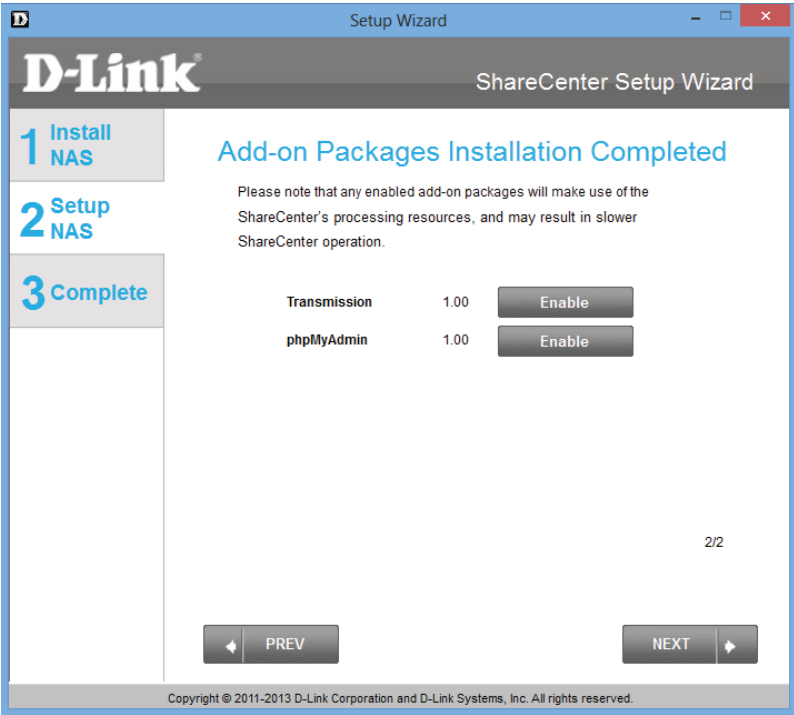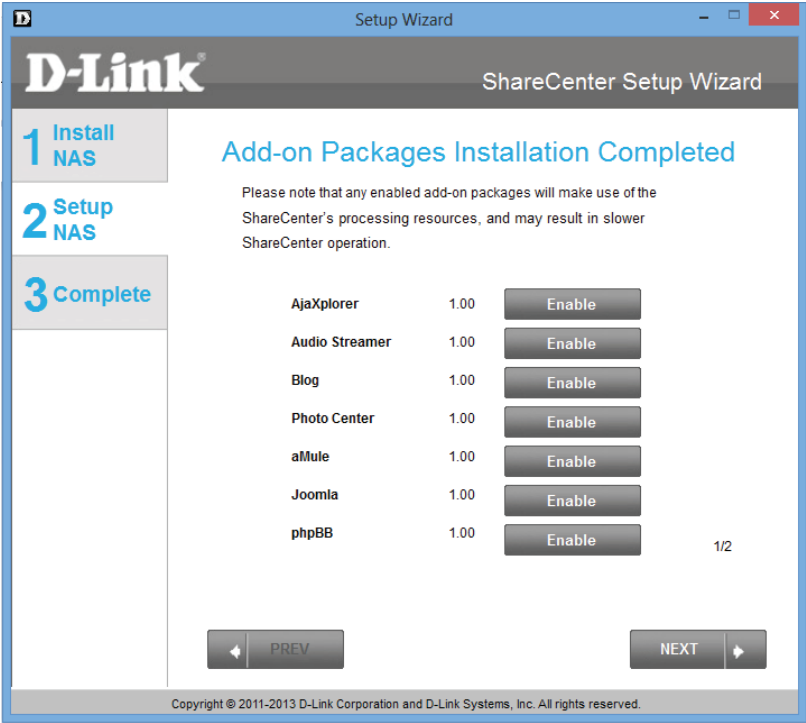

Connecting to the mydlink


Step 48 - D-Link has provided a mydlink service that allows you to remotely access the files from your NAS through the mydlink portal. Read the installation instructions and wait for the process to complete.

Click **Next** to continue.

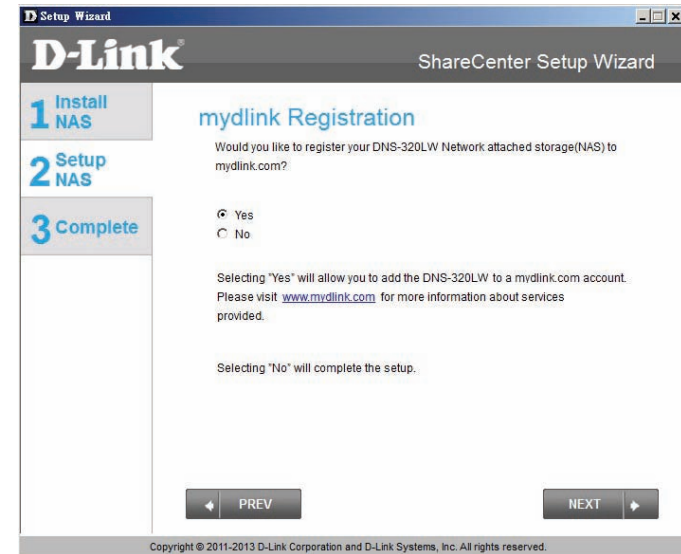


Step 49 - The wizard connects you to the mydlink servers and configures your cloud service.

Click **Next** to continue.

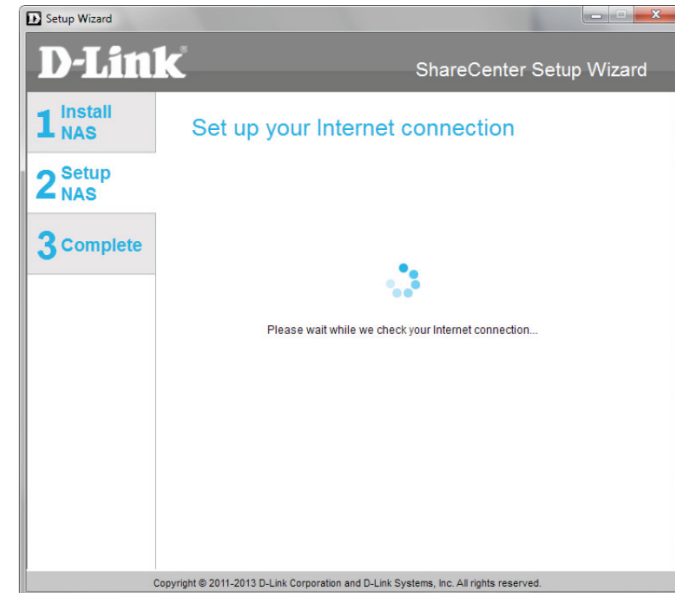

Step 50 - When the wizard fails to connect you to the mydlink servers and configures your cloud service, the following screen appears to warn you of your network configuration.

Click **Next** to continue.

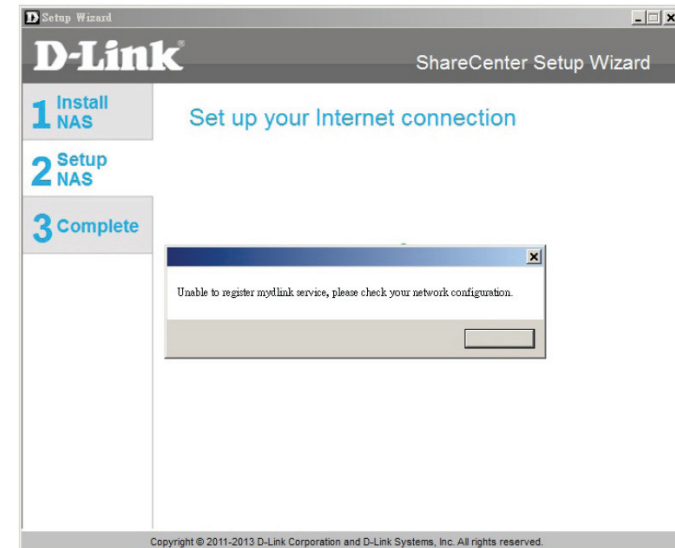

Step 51 - The next screen allows you to setup the remote mydlink cloud service. Select the Yes radio button if you already have a mydlink account.

Enter your email address and password.

Click **Next** to continue.

D-Link ShareCenter Setup Wizard

1 Install NAS
2 Setup NAS
3 Complete

Let's add your NAS to your mydlink account

Adding your NAS to your mydlink.com account will allow you to access your NAS through the Internet.

Do you have a mydlink account?

☒ Yes, I already have a mydlink account.
☐ No, I need to sign up for a new account.

Please enter your mydlink sign-in E-mail address and password:

E-mail:
Password:

PREV SKIP NEXT

Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.

Step 52 - Alternatively, you can create a new account if you select "No, I need to sign up for a new account."

Enter your email address and a password that you can remember. Then retype the password, enter a First Name and a Last Name. Then click the checkbox that reads:

"I accept the mydlink terms and conditions."

Click **Next** to continue.

D-Link ShareCenter Setup Wizard

1 Install NAS
2 Setup NAS
3 Complete

Let's add your NAS to your mydlink account

Adding your NAS to your mydlink.com account will allow you to access your NAS through the Internet.

Do you have a mydlink account?

☐ Yes, I already have a mydlink account.
☒ No, I need to sign up for a new account.

Please enter the following information to sign up for a mydlink account:

E-mail:
Password:
Must be at least 6 characters and is case-sensitive.
Retype password:
First name:
Last name:


☐ I accept the mydlink terms and conditions.

PREV SKIP NEXT

Copyright © 2011-2013 D-Link Corporation and D-Link Systems, Inc. All rights reserved.

Step 53 - A message appears asking you to verify your email address and account.


Click **OK** to continue.

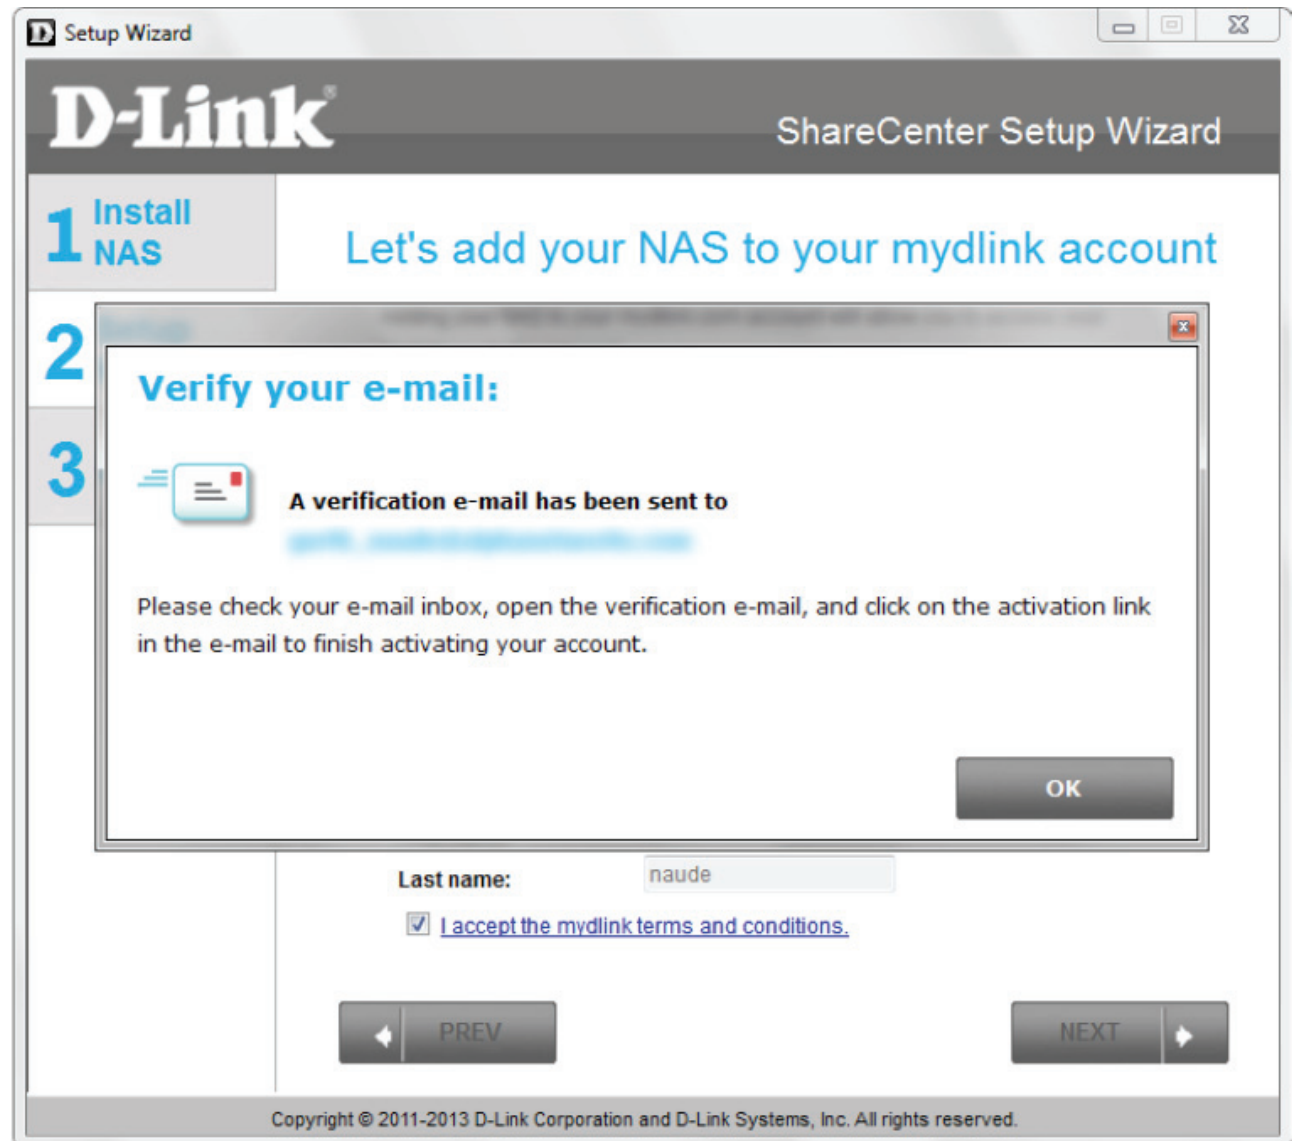

Wizard Complete

Step 54 - The mydlink section of the wizard installation is complete. The wizard provides you with a **mydlink number**. You can also tick the **Add mydlink to My Favorites** checkbox, or **Save a shortcut to mydlink on my computer** checkbox. You can use this mydlink number for future reference.


Click **Finish** to continue.

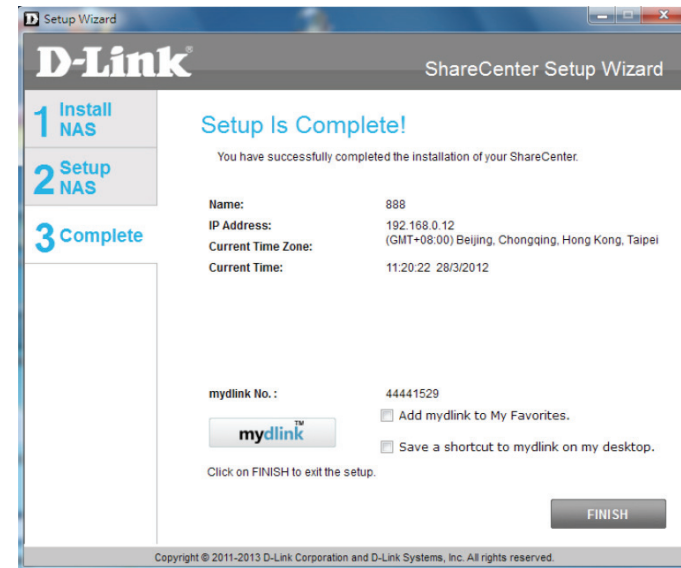

Step 55 - The ShareCenter™ Setup Wizard is complete. Click **Finish** to exit the wizard and start using your DNS-327L.

Your ShareCenter™ is now installed and ready to use. If your drives are mapped using the wizard, you will be able to access them under your 'My Computer' icon.

If you did not use the wizard to map the drives, you can manually map or access the created volumes through your computers operating system. Detailed configurations using the Web UI is explained in the configuration section of this manual.

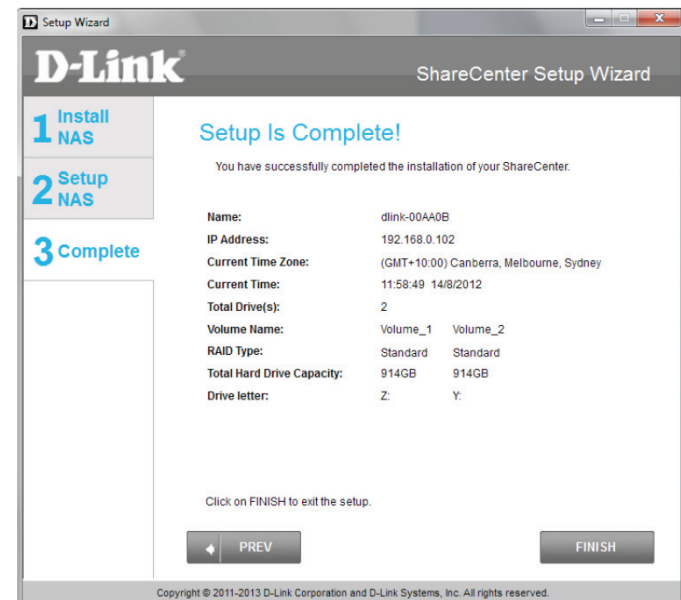


Mapping a Drive


Map a Volume on your DNS-327L using Windows® Explorer in Windows® 7.

Step 1 - Press the Windows key and the letter E on your keyboard at the same time.


The right-side panel displays a list of your hard drives, removable storage, and network locations. If you do not have any network locations, this may be the first time you set up a network drive.. Begin by clicking on '**Map Network Drive**'

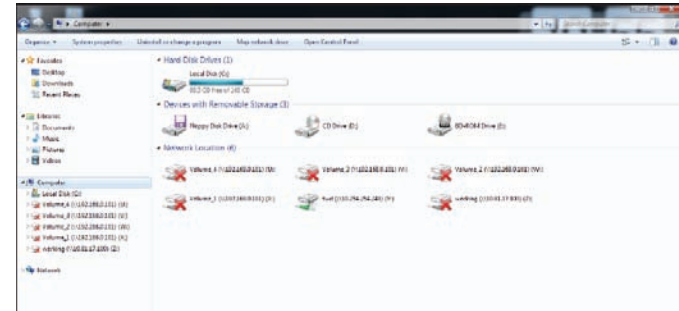


Step 2 - The Map Network Drive screen appears. Choose a Drive letter, click **Browse** to find your network.

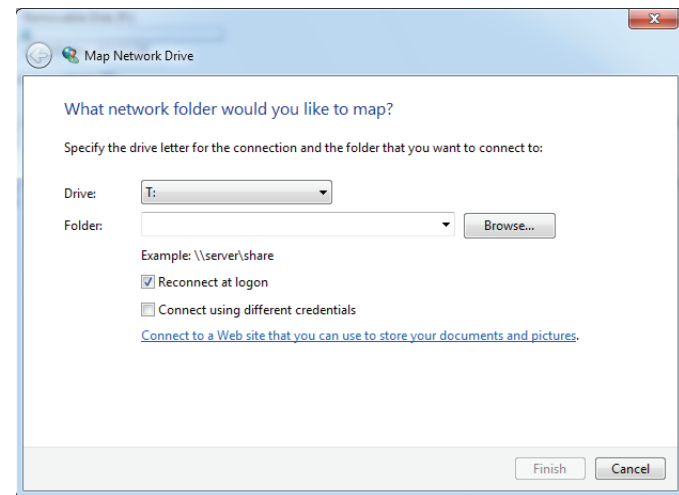


Step 3 - Windows will automatically detect all devices on your network including your ShareCenter™

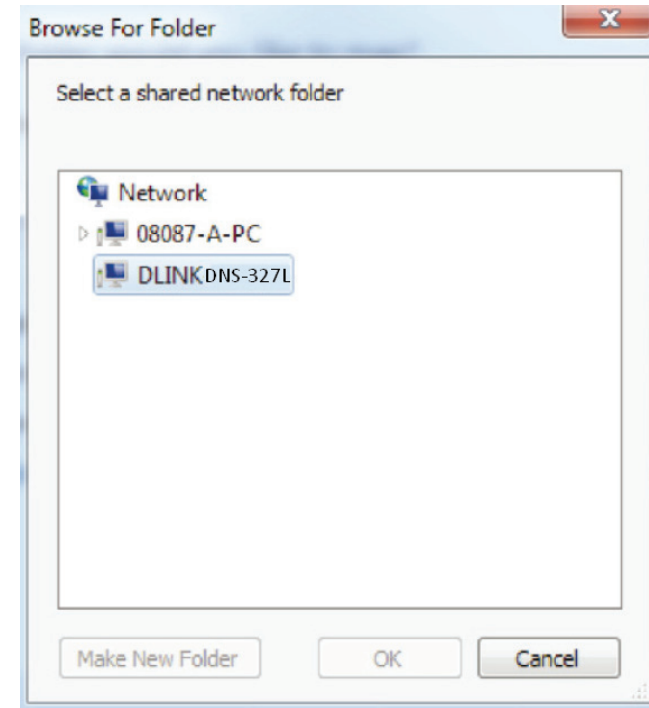


Step 4 - Click on your ShareCenter™ to see the volumes you created earlier. Then select the volume that you wish to access and click **OK**.

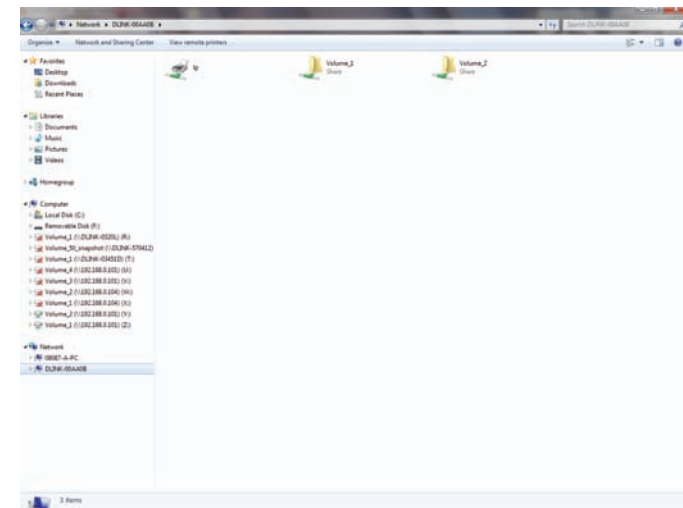

Step 5 - After selecting your volume, click **Finish** to proceed.

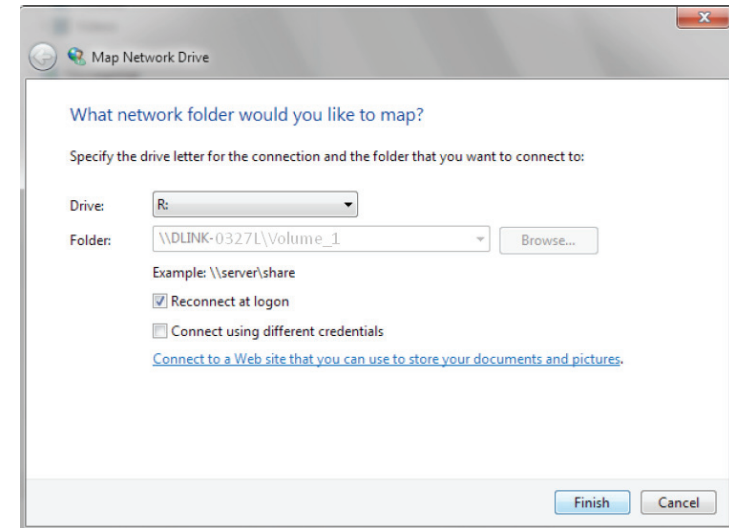



Step 6 - The drive will then appear in your Windows® Explorer under Network. This means the drive is active and ready for use.

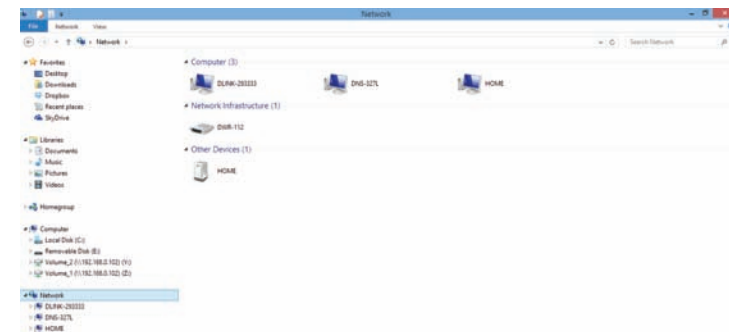


Alternative methods to Mapping a Drive

You can also map a drive using the D-Link Storage Utility. Once the DNS-327L is discovered in the Storage Utility, and the LAN configuration settings are complete, finding the drives happens automatically. Select the drive letter and click Connect. To disconnect the drive, click the Disconnect button.

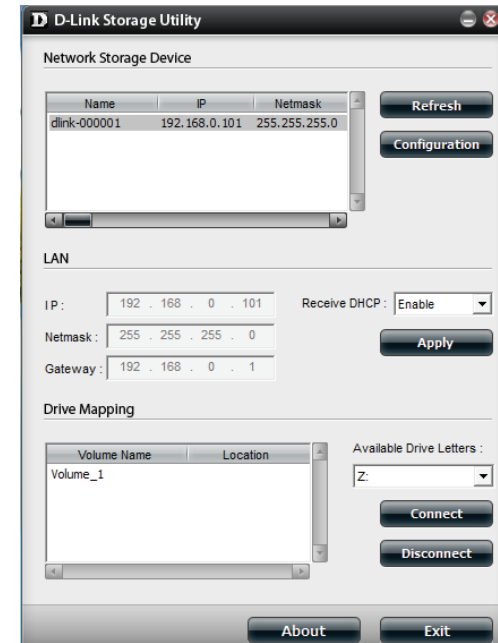


Another method is using the Setup Wizard. As you go through the Setup Wizard process, there is a step in the process to map the drive. See the image here. 

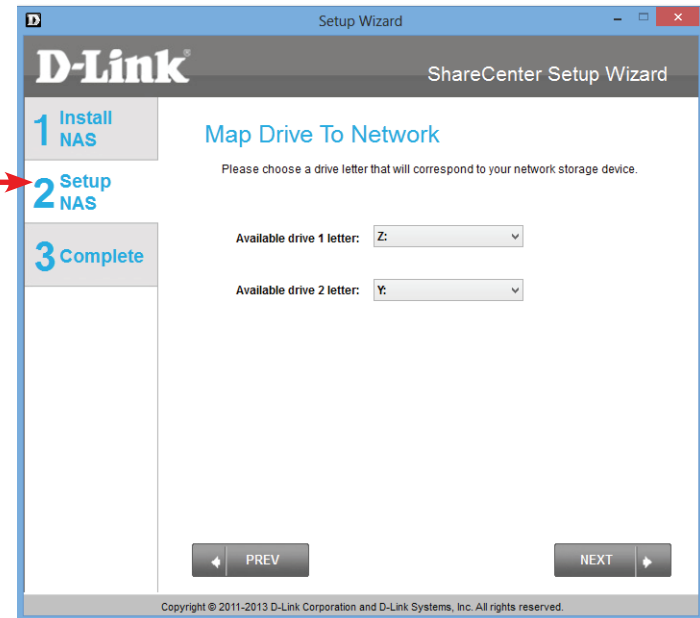

Mac - Setup Wizard Installation

To run the Setup Wizard, insert the ShareCenter™ CD into your CD-ROM drive.


Step 1 - When the autorun screen appears, double-click the dmg file.

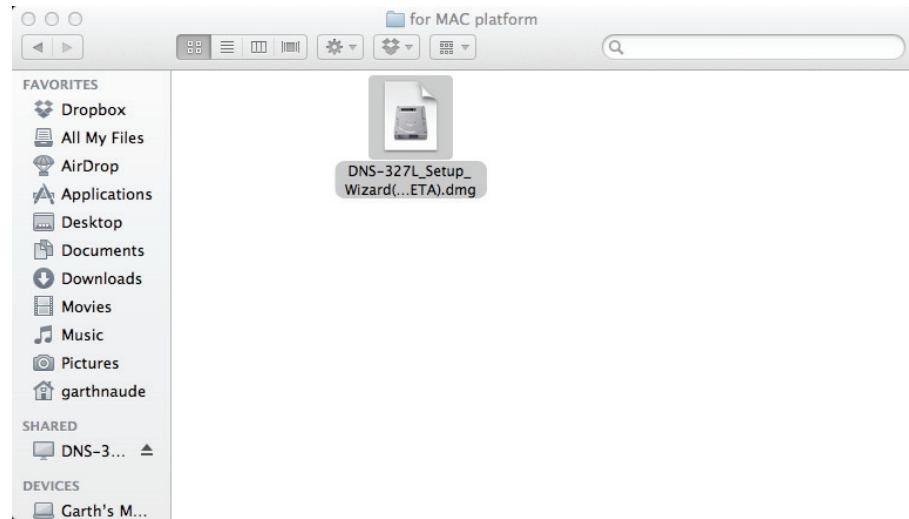

Step 2 - Double-click the SetupWizardDNS icon.




Step 3 - Click Start to begin the wizard.

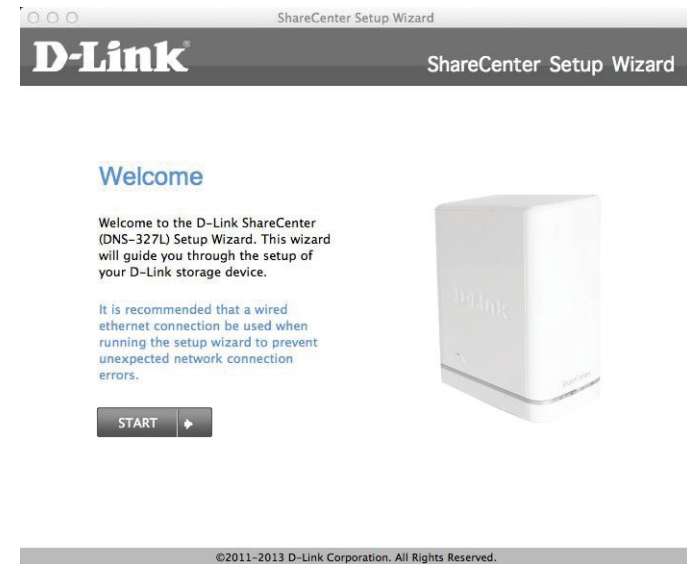


Step 4 - Follow the instructions on the screen (Pull the Top out) and click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

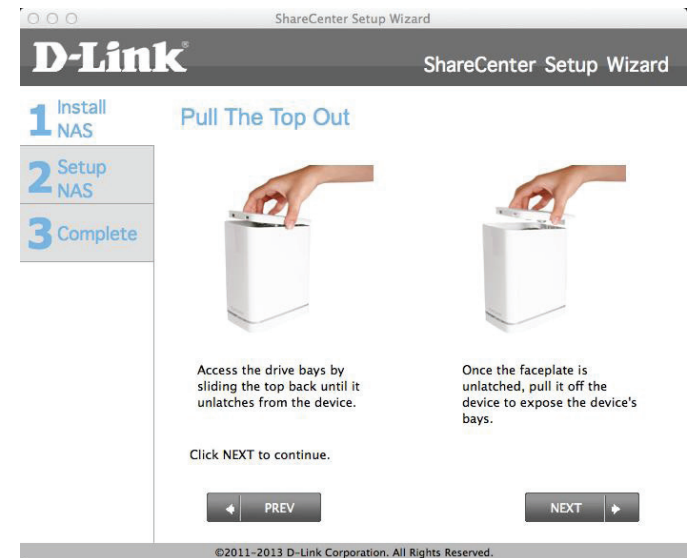

Step 5 - Follow the instructions on the screen (Attach the Hard Drive Bracket(s)) and click **Next**.

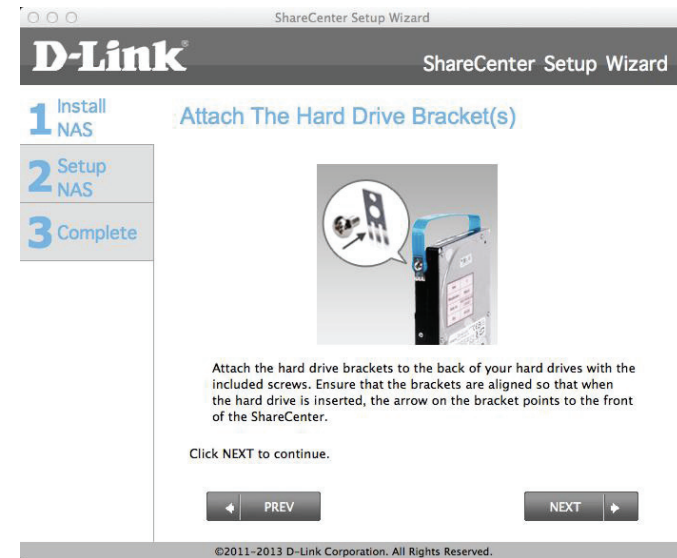


Step 6 - Follow the instructions on the screen (Install the Hard Drive(s)) and click **Next**.

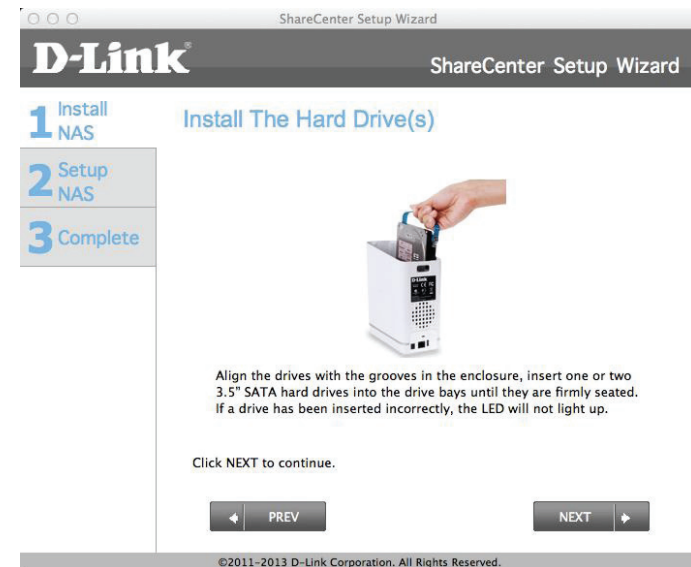

Step 7 - Follow the instructions on the screen (Attach the Faceplate) and click **Next**.




Step 8 - Follow the instructions on the screen (Connect to your Network) and click **Next**.

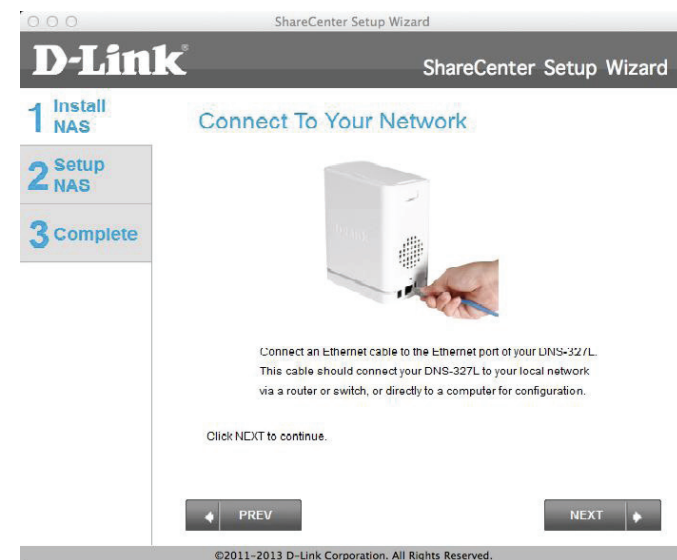


Step 9 - Follow the instructions on the screen (Power on the NAS) and click **Next**.


Step 10 - Return to the DNS-327L on your desktop and click the device if you see it onscreen. Alternatively, if you do not see the DNS-327L, check the settings as explained previously.

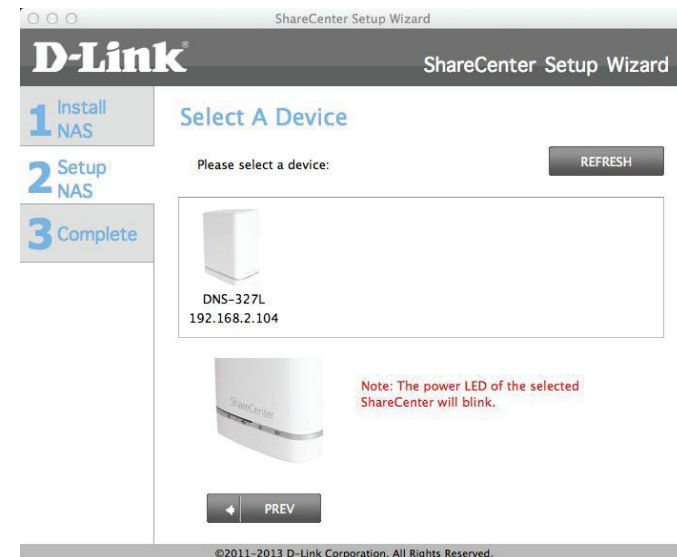


Step 11 - A warning message appears. Read the instructions before proceeding. If all is working, click **Yes**. Otherwise click **No** and check your set up again.

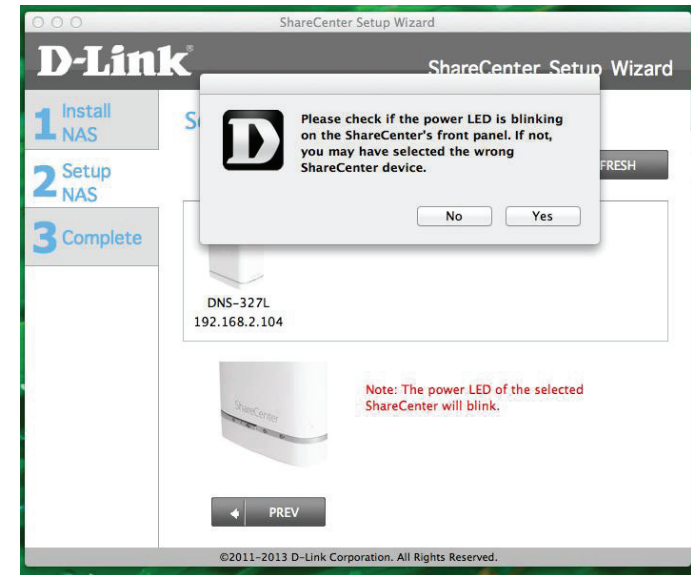

Step 12 - Enter an admin Password. If you have setup this system before, use the password you used before. Otherwise leave the password field blank. Click **Next** to continue.

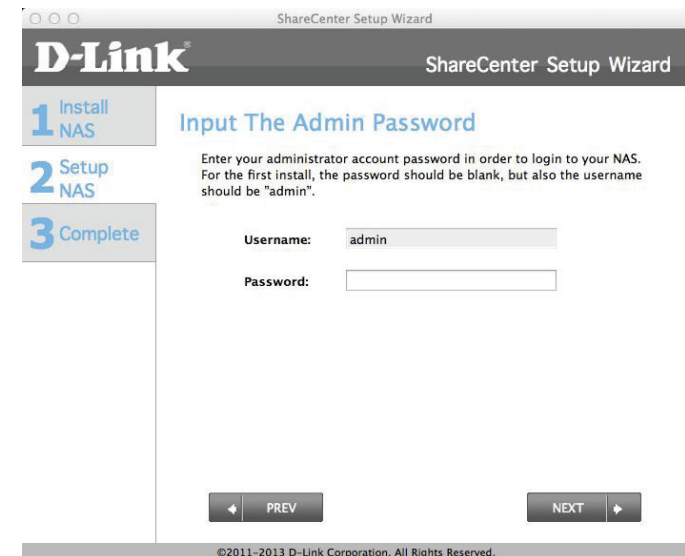


Step 13 - If you have entered a wrong password from a previous installation, a warning message prompts you to relog-in. Click **OK** to continue.

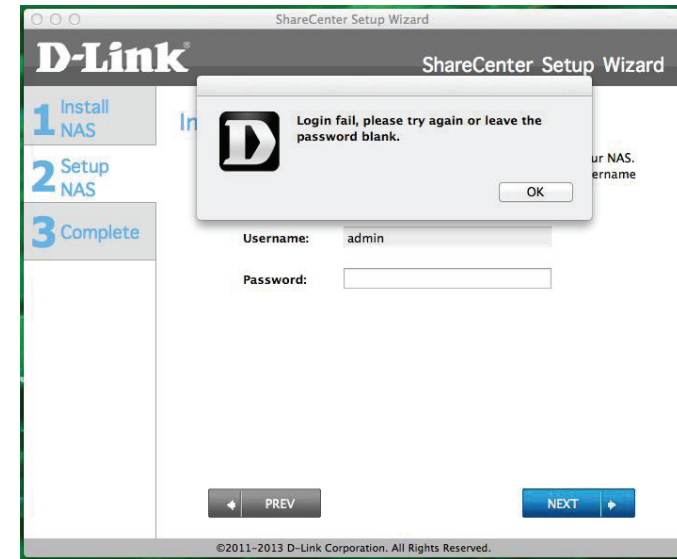

Step 14 - Create a new password and verify that password by filling in the **Confirm Password** field.

Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

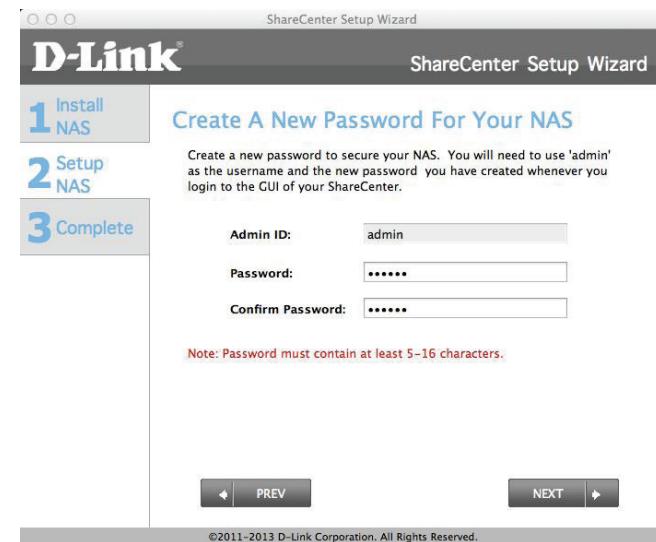

Step 15 - To configure the Device IP, select either DHCP or Static IP. In this window, we select DHCP (the router automatically configures the Device IP) and click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

ShareCenter Setup Wizard

D-Link ShareCenter Setup Wizard

1 Install NAS
2 Setup NAS
3 Complete

Configure Device IP

If you want to set an IP address for your ShareCenter please select "Static IP" and enter the required information. Otherwise click NEXT.

☒ DHCP Client ☐ Static IP

IP Address: 192.168.2.104

Subnet Mask: 255.255.255.0

Gateway: 192.168.2.1

☒ Obtain DNS server address automatically
☐ Use the following DNS server address

DNS1: 172.19.10.99

DNS2: 172.19.10.100

PREV NEXT

©2011-2013 D-Link Corporation. All Rights Reserved.

Step 16 - To configure the Device IP, select either DHCP or Static IP. In this window, we select Static IP (you manually configure the Device IP) and click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

ShareCenter Setup Wizard

D-Link ShareCenter Setup Wizard

1 Install NAS
2 Setup NAS
3 Complete

Configure Device IP

If you want to set an IP address for your ShareCenter please select "Static IP" and enter the required information. Otherwise click NEXT.

☐ DHCP Client ☒ Static IP

IP Address: 192.168.2.104

Subnet Mask: 255.255.255.0

Gateway: 192.168.2.1

☐ Obtain DNS server address automatically
☒ Use the following DNS server address

DNS1: 172.19.10.99

DNS2: 172.19.10.100

PREV NEXT

©2011-2013 D-Link Corporation. All Rights Reserved.

Step 17 - To configure the Device Information, enter the particulars in the fields provided: Workgroup, Name, and Description.

Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

The screenshot shows the 'ShareCenter Setup Wizard' window. On the left, a sidebar indicates the progress: '1 Install NAS' (completed), '2 Setup NAS' (current step), and '3 Complete'. The main area is titled 'Configure Device Information'. It contains a text box for 'Workgroup' with 'workgroup' entered, and two text boxes for 'Name' and 'Description', both with 'DNS-327L' entered. Below these fields are 'PREV' and 'NEXT' buttons. A copyright notice '©2011-2013 D-Link Corporation. All Rights Reserved.' is at the bottom.

Step 18 - To configure the System Time, select a Time Zone from the drop-down list. Click Enable NTP Server if you are connected to one. Select a NTP server from the drop-down list. Enter a Date and Time manually or click Set time from my computer.

Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

The screenshot shows the 'ShareCenter Setup Wizard' window at the 'Configure System Time' step. The sidebar shows '1 Install NAS' (completed), '2 Setup NAS' (current step), and '3 Complete'. The main area is titled 'Configure System Time' with the instruction 'Configure Time Zone, NTP server, system Date and Time.' It includes a 'Time Zone' dropdown menu set to '(GMT+08:00) Taipei', an 'Enable NTP Server' checkbox, an 'NTP Server' dropdown menu with a 'Select NTP Server' button, and a 'Date and Time' section with fields for '1/18/2013', 'Hour: 14', 'Minute: 48', and 'Second: 59'. A 'Set time from my computer' button is also present. 'PREV' and 'NEXT' buttons are at the bottom, along with the copyright notice '©2011-2013 D-Link Corporation. All Rights Reserved.'

Step 19 - The Wizard displays the Disk Information.



Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

Step 20 - To configure RAID, select one of the RAID Types from the list (Standard, JBOD, RAID 0, and RAID 1). Selecting each one provides a brief description of which each RAID format offers. See illustrations below and check the Knowledge Base at the back of this manual for more RAID descriptions. Skip this step if you have setup this system before

Click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

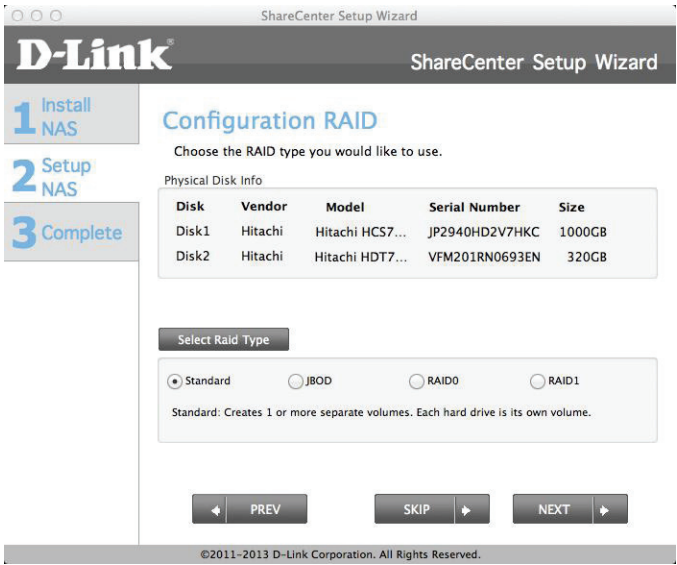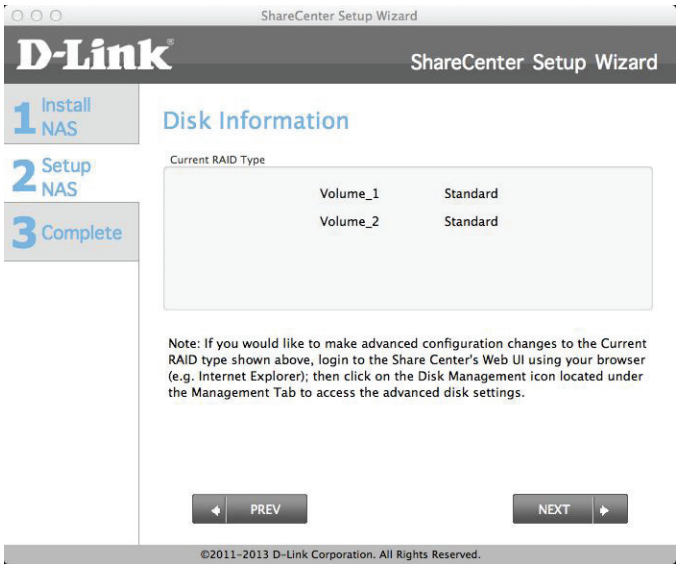

Step 21 - Now that you have set the RAID, a Volume Configuration Summary shows you details about your settings.

Click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

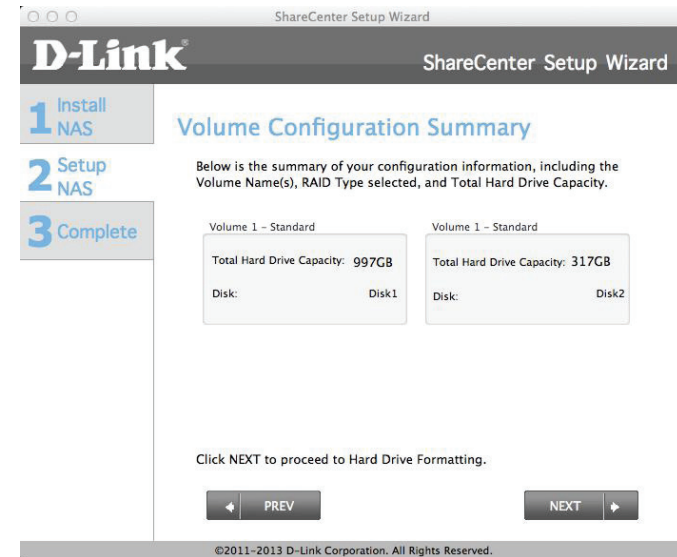

Step 22 - Before the RAID configuration is set, a warning message appears to inform you that all data will be erased.

Click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

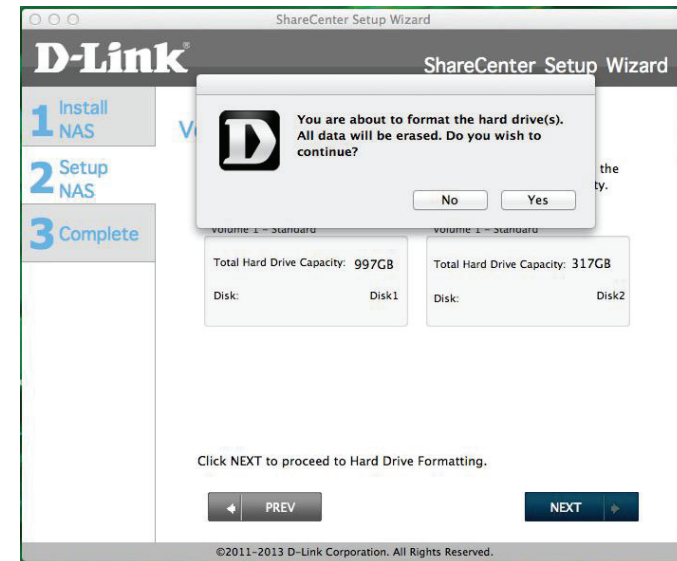

Step 23 - The format begins.

Click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

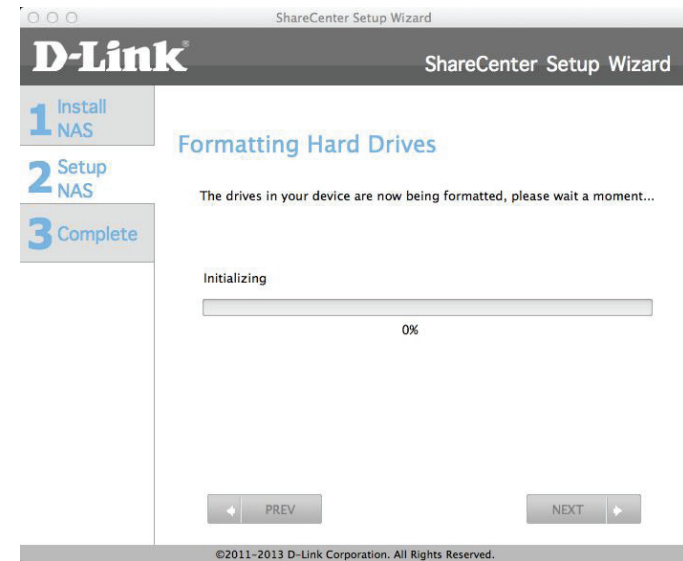

Step 24 - The formatted process is successful.

Click **Next**.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

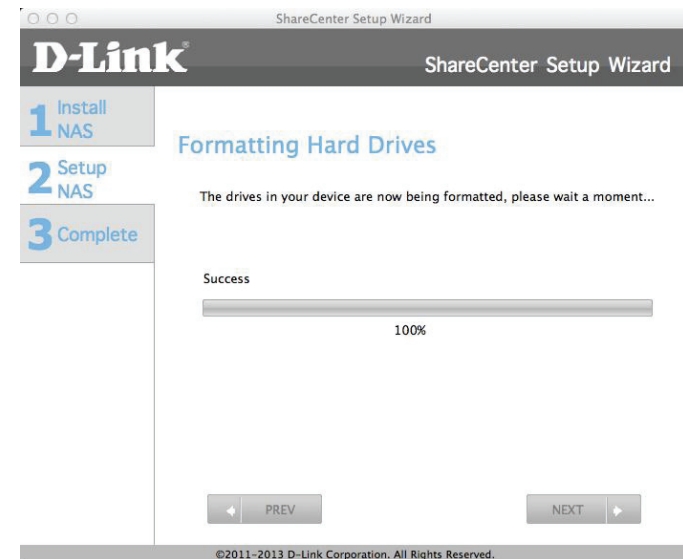

Step 25 - The format is complete.


Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

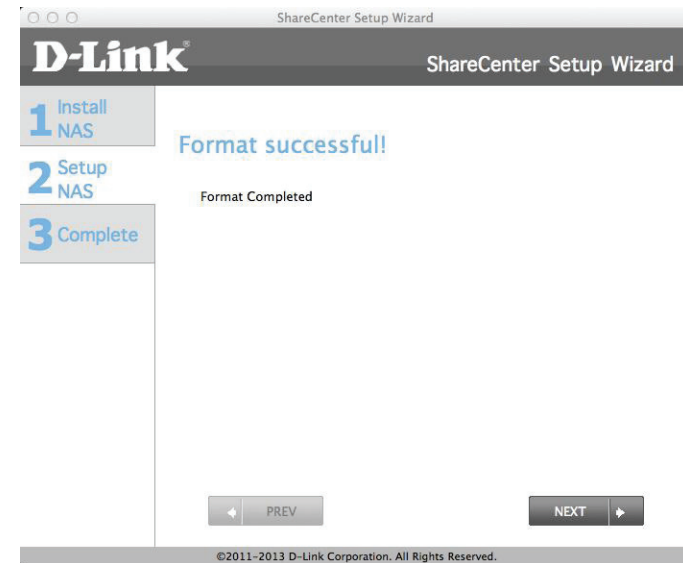

Step 26 - To install the Add-ons, select the Add-ons. you wish to install. The Squeeze Center is the only Add-on that is not checked by default. When you click this. download details are provided.

Click **OK**.

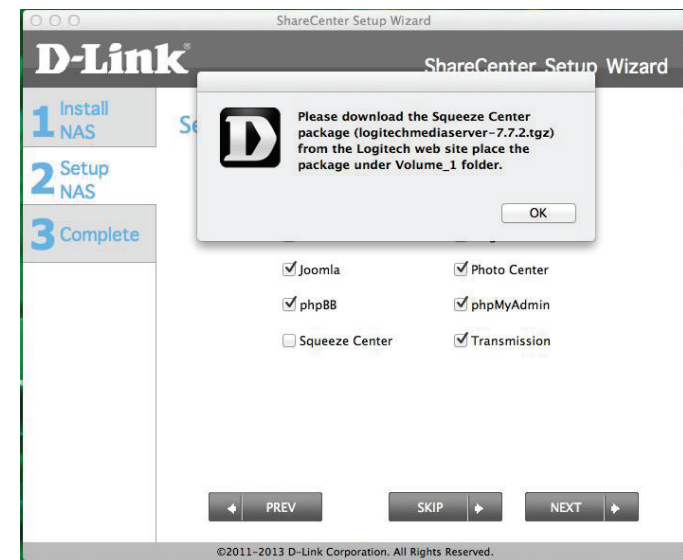

Step 27- Alternatively, install the default Add-ons.



Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

Step 28 - The Add-on packages are installed.

Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

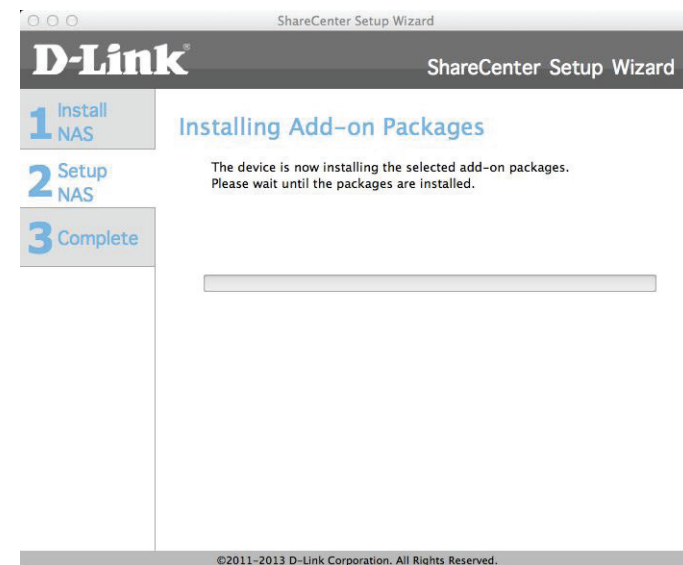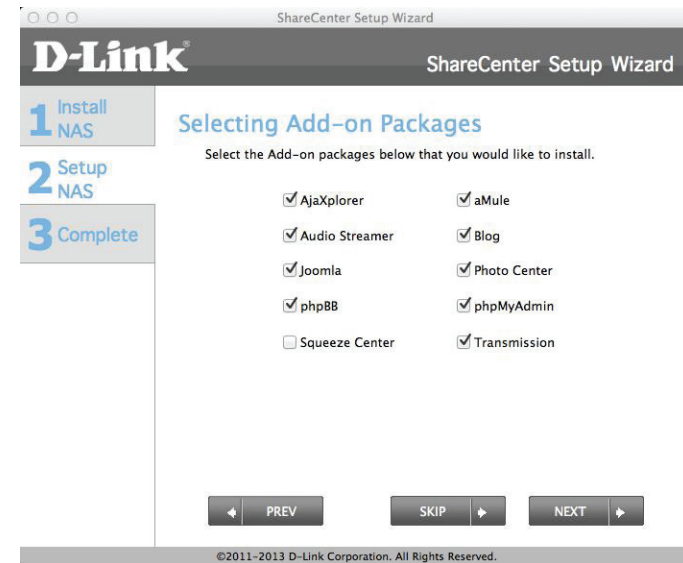

Step 29 - Add-ons complete.



Click **Next**.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

Step 30 - This screen displays all the packages installed but it doesn't enable all the packages by default. Depending on how many packages you initially installed, there are two package screens.

Click **Next** to view the next screen.


Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

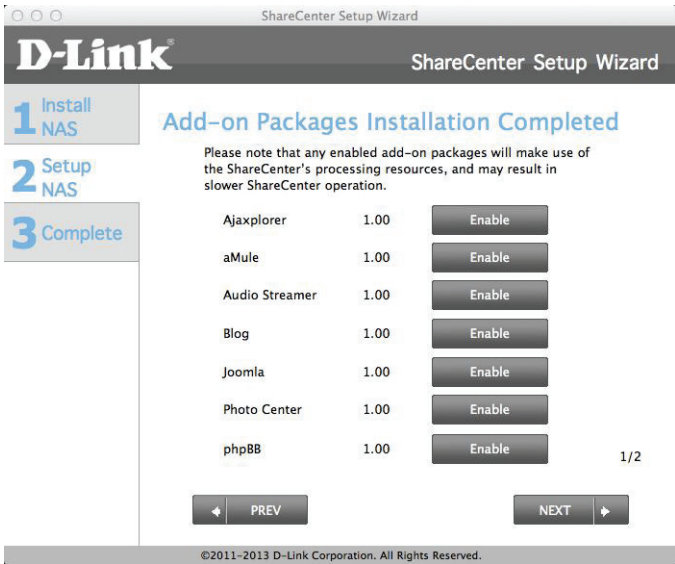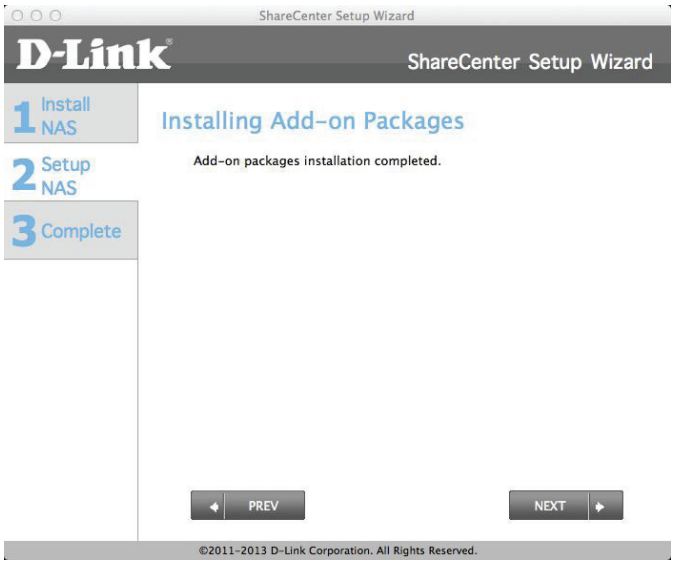

Step 31 - The second screen.

Click **Next** to view the next screen.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

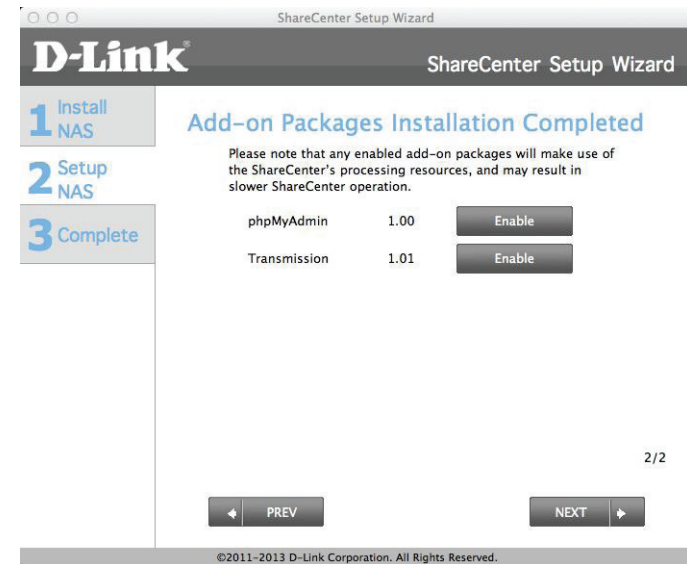

Step 32 - Setup the mydlink administration.

Click **Next** to view the next screen.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.



Step 33 - The NAS starts to link to the internet and register mydlink.


Click **Next** to view the next screen.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

Step 34- If you are unable to connect to the mydlink registration site, a warning message notifies you of an unsuccessful connection.

Click **OK** to continue. Check your connection settings or your NAS settings.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

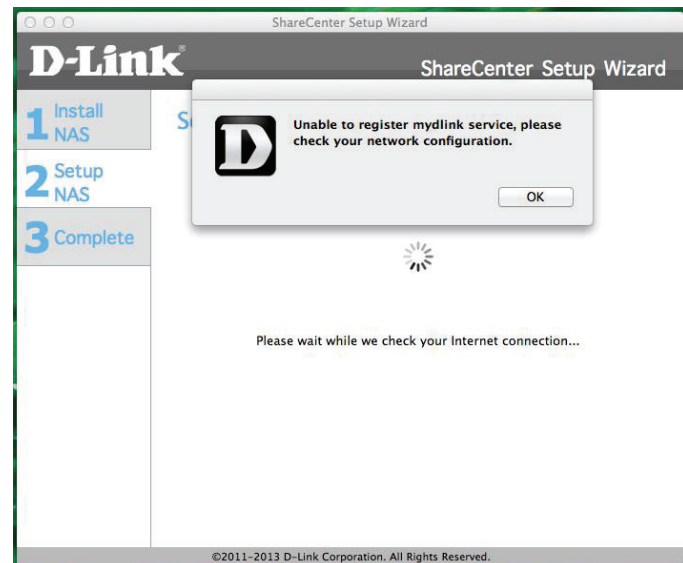

Step 35 - When the connection settings are correct, the mydlink server provides the connection details.

The next screen allows you to setup the remote mydlink cloud service. Select the Yes radio button if you already have a mydlink account.

Enter your email address and password.

Click **Next** to view the next screen.

Click **Previous** if you want to go back and make changes to any parts of your past configuration options.

Step 36 - Alternatively, you can create a new account if you select "No, I need to sign up for a new account."


Enter your email address and a password that you can remember. Then retype the password, enter a First Name and a Last Name. Then click the checkbox that reads:

"I accept the mydlink terms and conditions."

Click **Next** to continue.


Step 37 - A message appears asking you to verify your email address and account.

Click OK to continue.

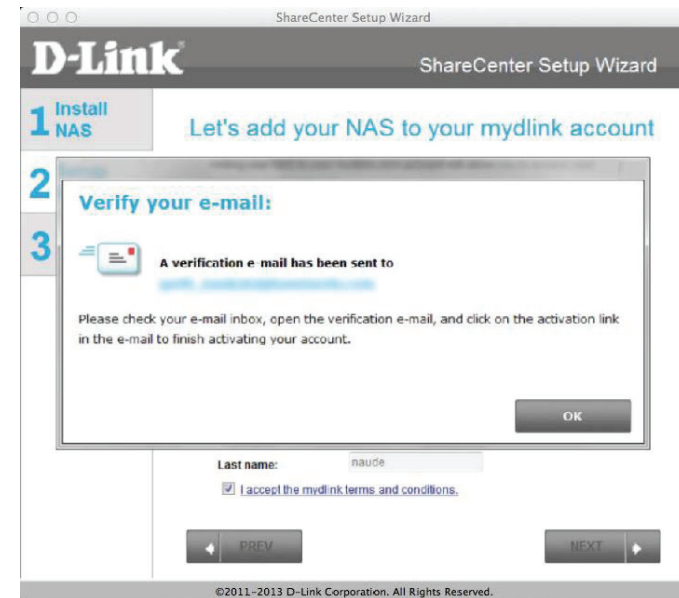


Step 38 - The mydlink section of the wizard installation is complete. The wizard provides you with a **mydlink number**. You can also tick the **Add mydlink to My Favorites** checkbox, or **Save a shortcut to mydlink on my computer** checkbox. You can use this mydlink number for future reference.

Click **Finish** to continue.

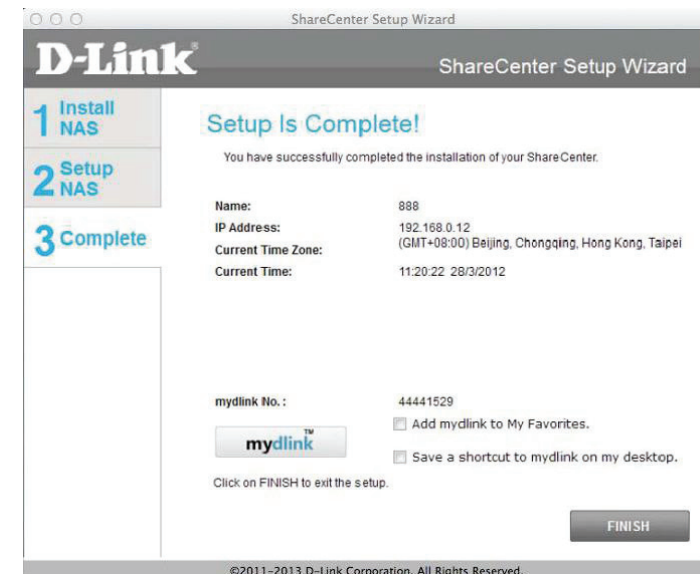


Step 39 - The setup is complete.


Click **Finish**.

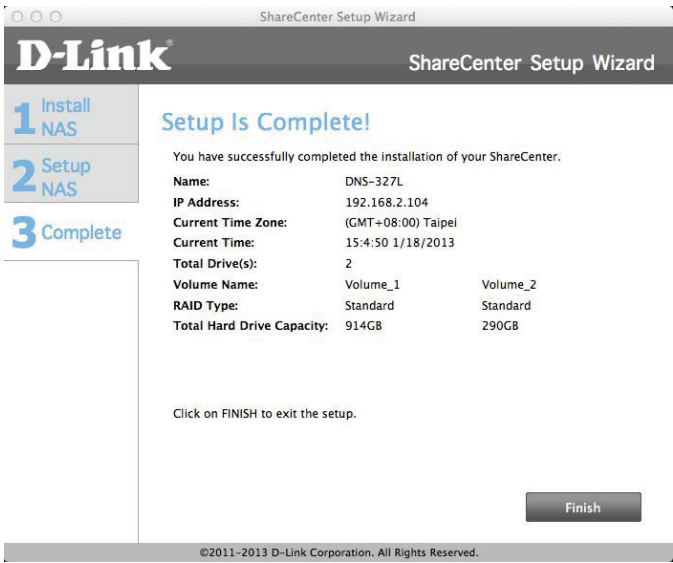

Step 40 - You can now view the DNS-327L in the Finder on the left panel.

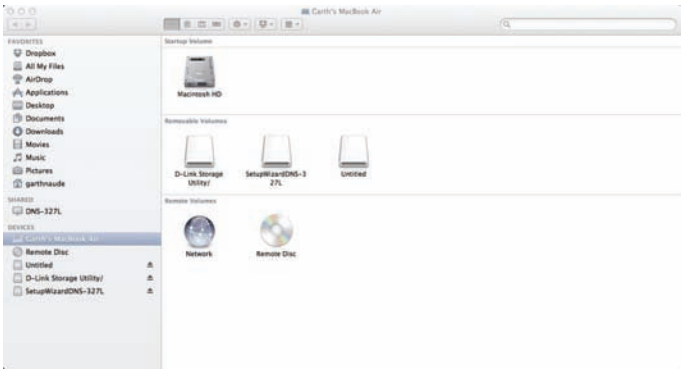

Step 41 - Click the icon to view contents on your NAS.

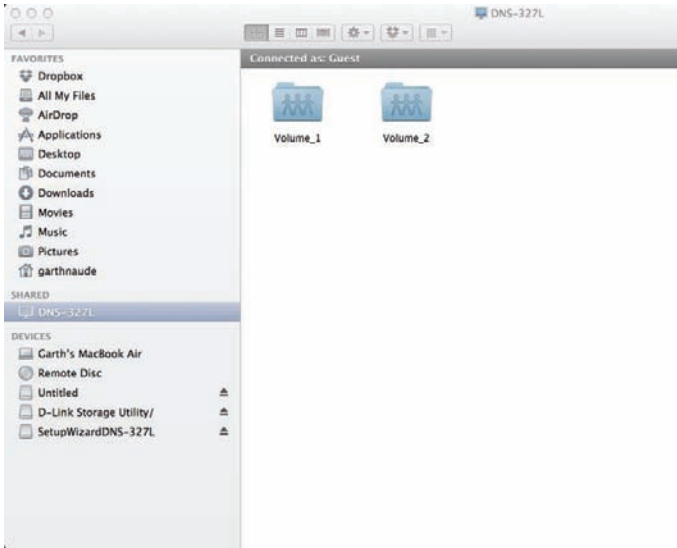

Configuration

Managing your DNS-327L

ShareCenter™ Web UI (User Interface) is a browser-based utility that allows you to manage and configure the different tools and services. The Web UI is divided into three main sections:

1. Home
2. Applications
3. Management

SECTION	OPTION	DESCRIPTION
Home - My Folder	My Photos	Create albums and manage photos, share photos through social networking sites, and slideshows
	My Files	Access files on your NAS via a web browser
	My Music	Access your music collection. Add tracks, albums, etc
	My Surveillance	View and control security cameras connected to your NAS
	My Favorites Application	Add the favorite applications you use on a regular basis to the Home page

SECTION	OPTION	DESCRIPTION
Applications	FTP/HTTP Downloads	Configure FTP and HTTP download settings
	Remote Backup	Configure remote backup services
	Local Backups	Configures local backups, Time Machine© settings, and USB backups
	P2P Downloads	Configure your P2P downloads and control your download schedules
	My Files	Access files on your NAS via a web browser
	Amazon S3	Create, modify, and delete your Amazon S3© settings

SECTION	OPTION	DESCRIPTION
Management	Setup Wizard	Step by step guide through password & time settings, connectivity, and device configuration
	Disk Management	Configures disk volumes, RAID, and performs disk diagnostics
	Account Management	Configures user and group management, network shares
	Network Management	Configures LAN, Dynamic DNS, and Port Forwarding
	Application Management	Configures FTP, add-ons, AFP, NFS, and multimedia services
	System Management	Configures language, time and date, device, and system settings. Also allows you to control power, notifications, view logs, do firmware upgrades, and manage USB devices.
	System Status	Displays system and hard drive information along with resource monitoring

D-Link Storage Utility

When first powered on, during the initial boot sequence, the ShareCenter™ will wait to be assigned an IP address via DHCP. If it does not receive a DHCP assigned IP address, the ShareCenter™ will be automatically assigned a 169.254.xxx.xxx address. It is recommended that you use the included D-Link Storage Utility software when accessing and configuring the ShareCenter™ for the first time. If you want to change the IP address before logging in or you are having trouble connecting to the ShareCenter™ IP address, you can use the Storage Utility software included on the product CD to locate the device on your network and make any necessary changes.

Network Storage Device: The D-Link Storage Utility displays any ShareCenter™ devices it detects on the network here.

Refresh: Click **Refresh** to refresh the device list.

Configuration: Click **Configuration** to access the Web based configuration of the ShareCenter™.

LAN: Configure the LAN Settings for the ShareCenter™ here.


Apply: Click **Apply** to save changes to the LAN Settings.

Drive Mapping: Volumes available for mapping are displayed here.

Available Drive Letters: Choose an available drive letter. Click **Connect** to map the selected volume. Click **Disconnect** to disconnect the selected mapped volume.



About: Click **About** to view the software version of the Easy Search Utility.

Exit: Click **Exit** to close the utility.

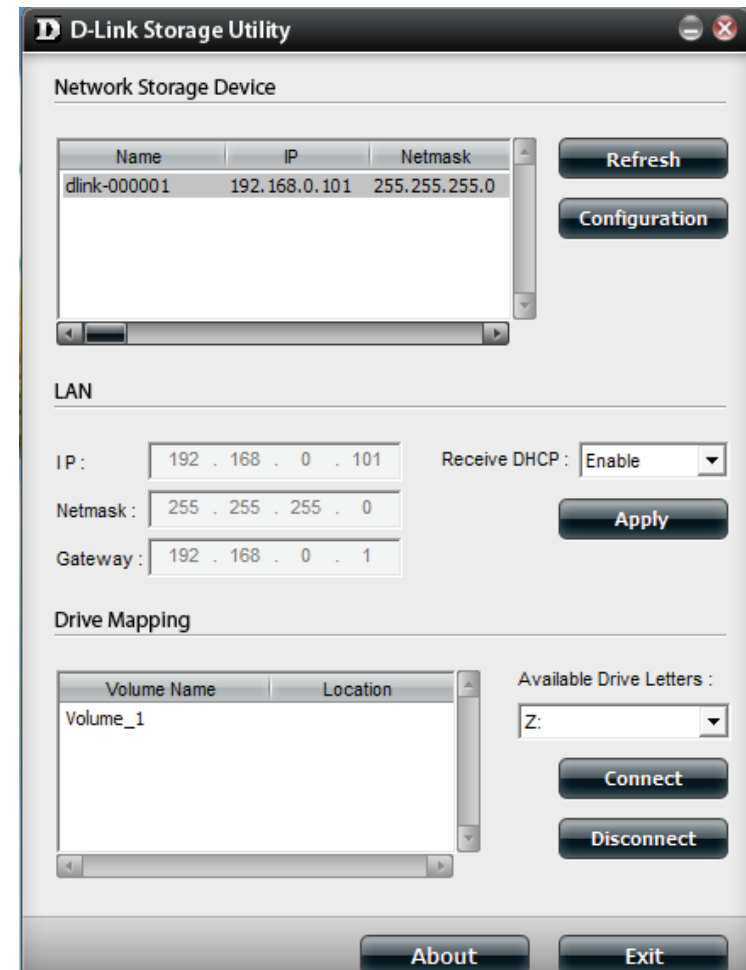


Select the ShareCenter™ from the list and click the **Configuration** button. This will launch the computer's default web browser and direct it to the IP address listed for the device. Make sure the browser is not configured to use a proxy server.

Note: The computer used to access the ShareCenter™ web-based configuration manager must be on the same subnet as the ShareCenter.™ If your network is using a DHCP server and the computer receives IP settings from DHCP server, the ShareCenter™ will automatically be in the same subnet.

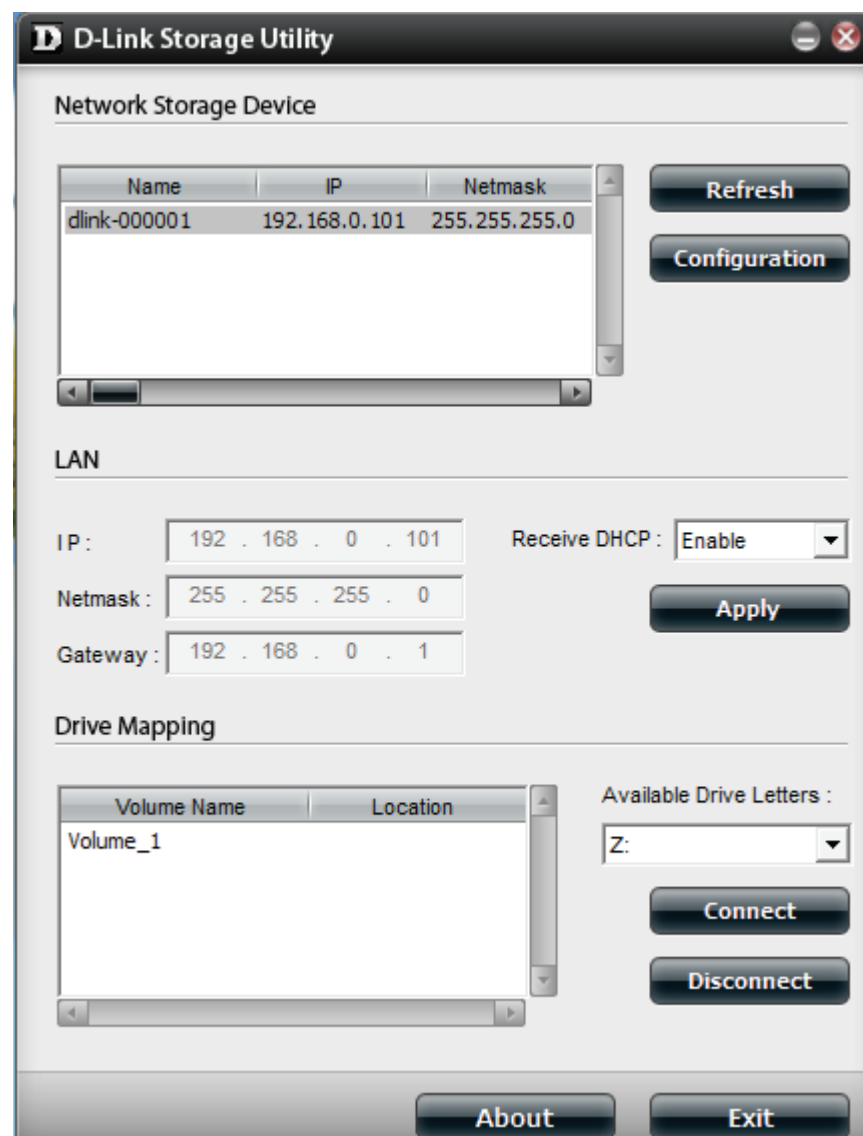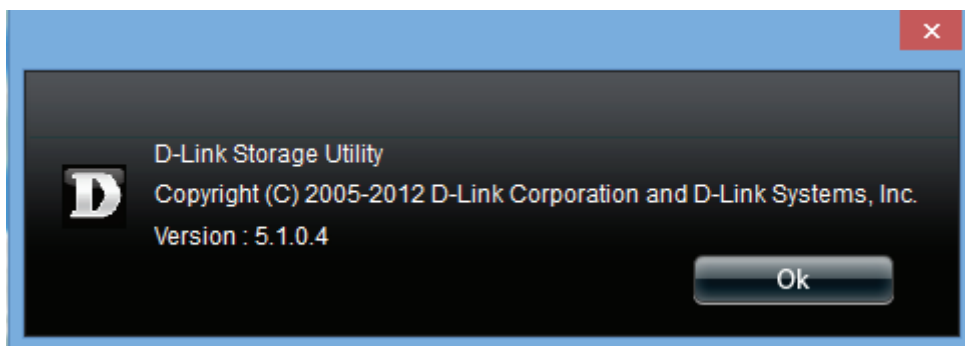


D-Link Storage Utility - For Mac


Step 1: To get started with the ShareCenter™ Storage Utility for Mac, insert the supplied CD into your CD-ROM drive: Double-click the .dmg file.

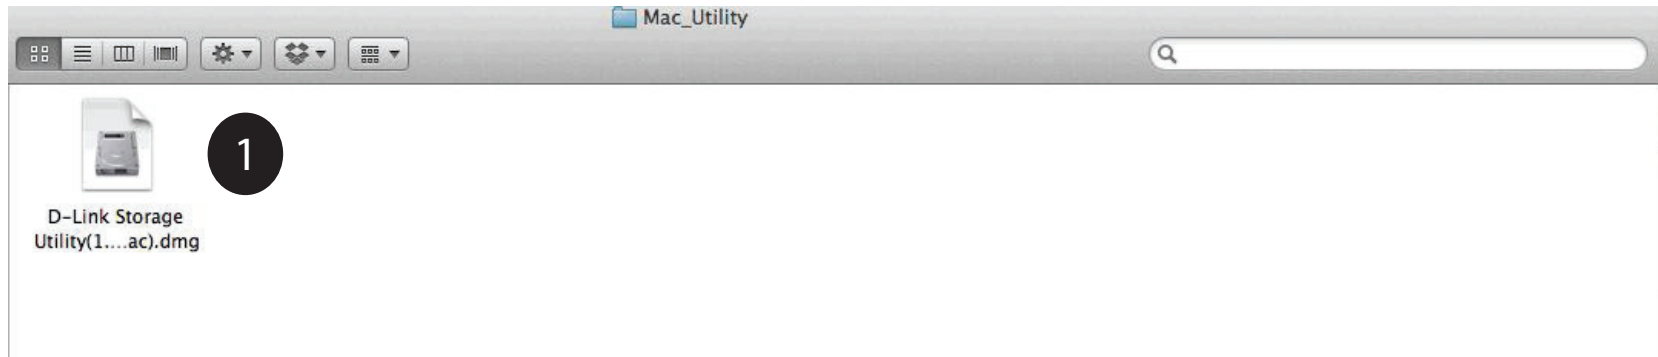


Step 2: Double-click the .dmg file to install the program. In the end you should have the D-link Storage Utility for Mac.

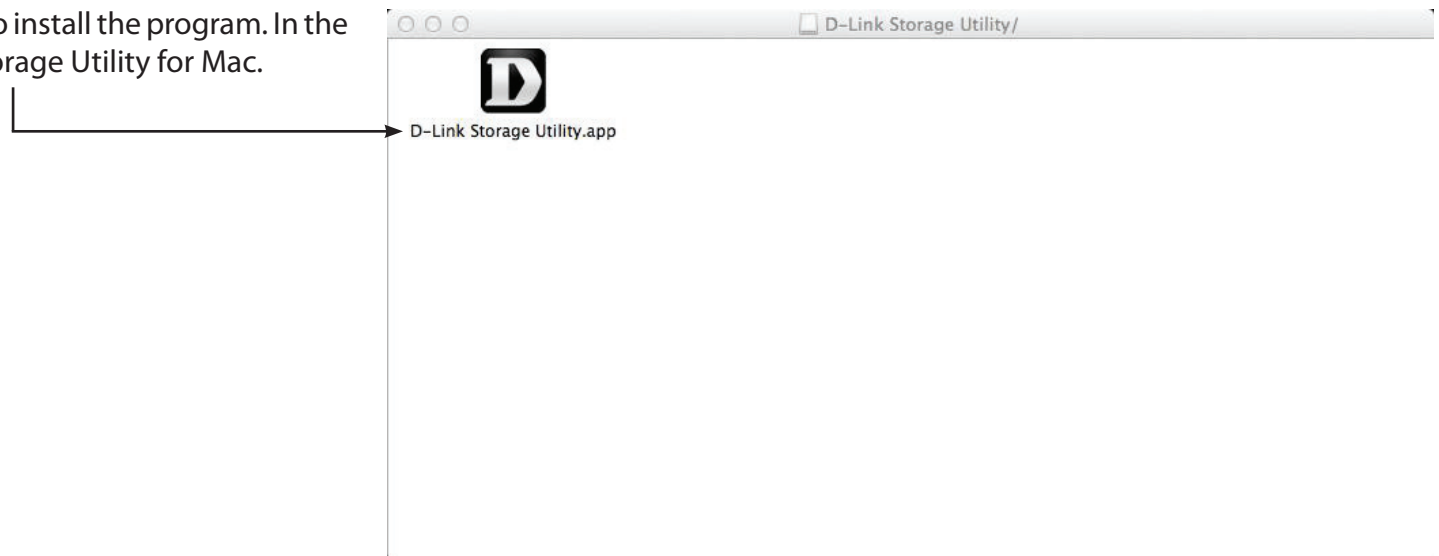

Step 3: This opens the D-Link Storage Utility

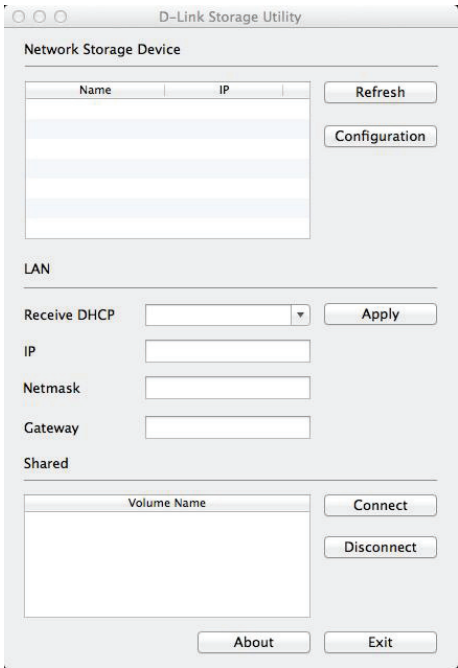


Step 4: Make sure you are connected to your local LAN. Click the Refresh button. The D-Link Storage Utility displays the D-Link DNS-327L.

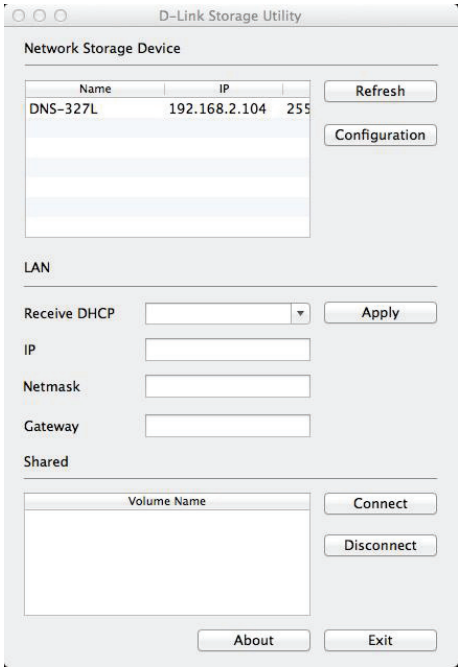


Section 2 - Getting Started

Step 5: The Storage Utility now shows the DNS-327L, the LAN configuration (toggle between DHCP and manual), and the Volume details.


Use the drop-down list to configure your LAN settings and click Apply.

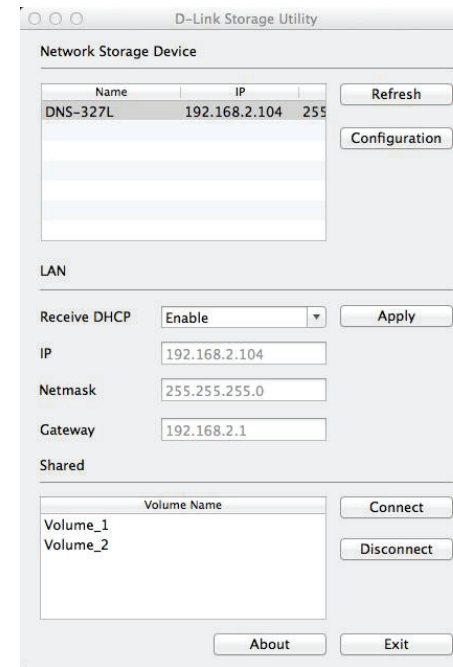


Step 6: To configure the NAS, click the configuration button. This opens your default browser. Log in and configure.

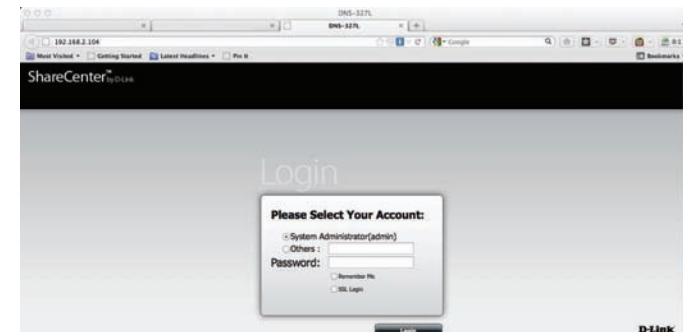

Step 7: To map the NAS volume, select a **Volume** from the list then click the **Connect** button.

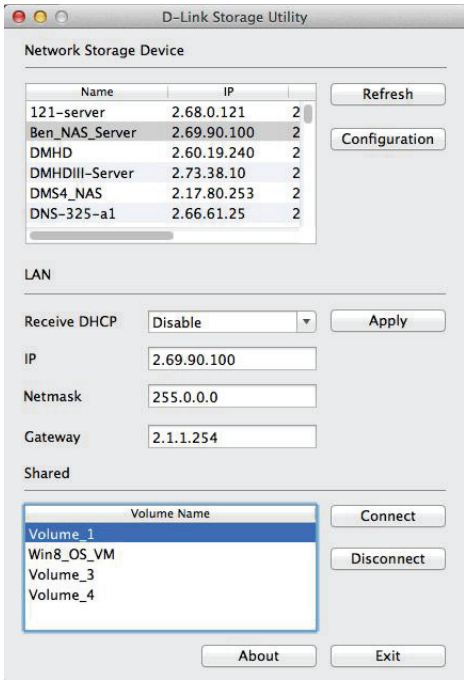


Step 8: The Log-in window appears. Select Guest or Registered User.

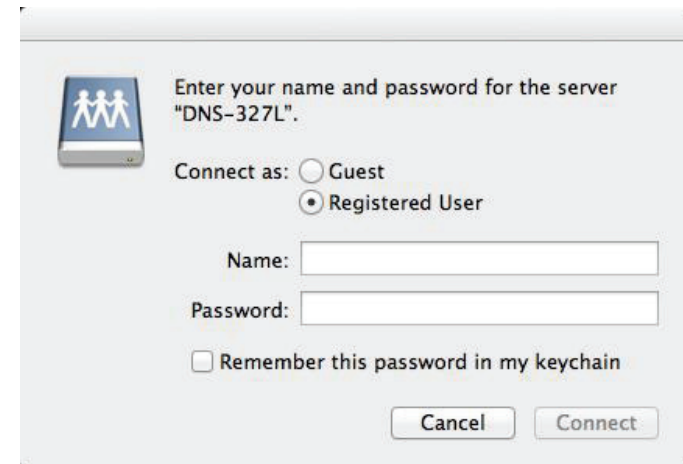


Step 9: Enter a username and password for the DNS-327L and click Connect.




Step 10: A pop-up window appears notifying you that mapping the drive was a success. Click OK to continue. Use the Disconnect button to disconnect from the mapped drive(s).

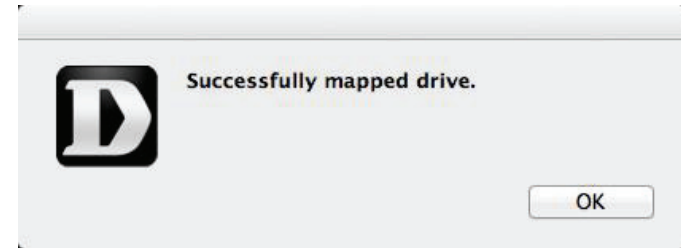

Step 11: Finder now opens the drive and displays the DNS-327L under the Shared column on the left and the Volumes on the right.

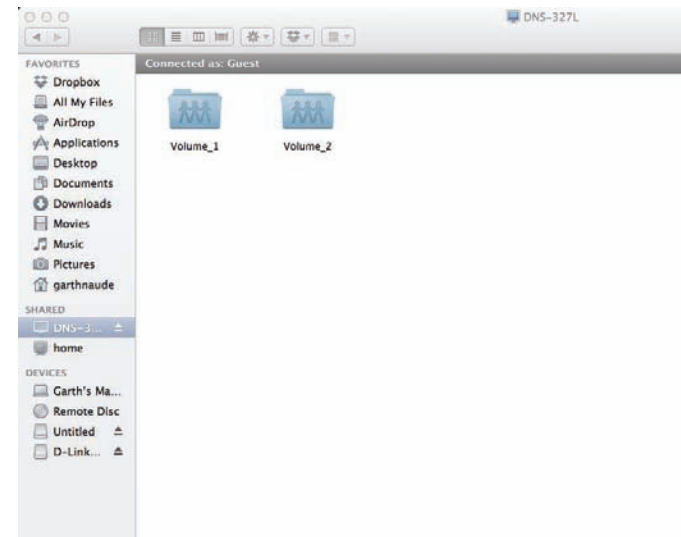

Step 12: When you click the About button it displays the software version number. This comes in handy when updating to a new version.

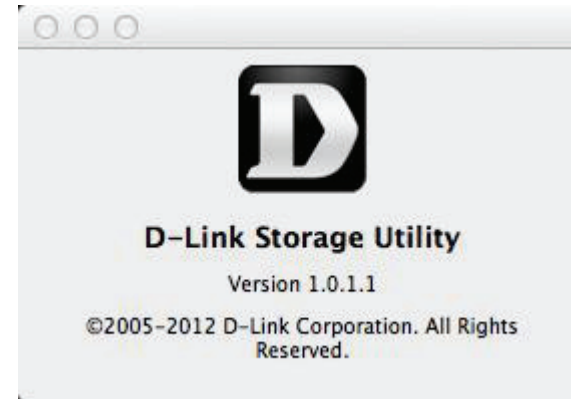


Web UI Login

To access the Web UI, open the D-Link Storage utility, select DNS-327L from the Network Storage Device list, then click the Configuration button.

The following screen will appear:

Select **System Administrator** and enter the password created during the Setup Wizard. Click **Login**.

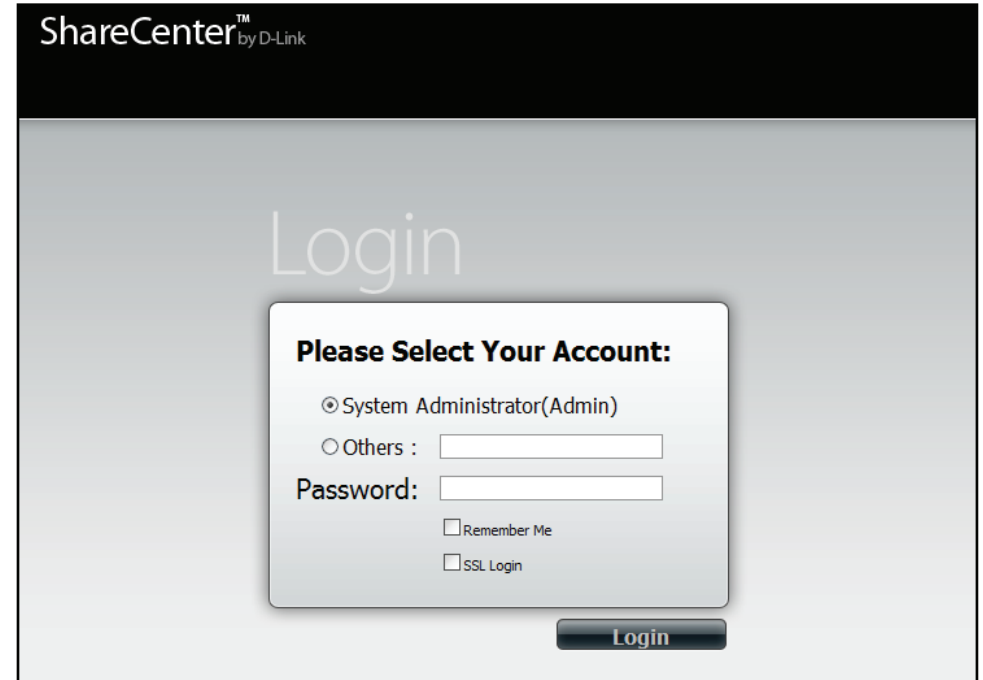


The image shows the ShareCenter™ by D-Link login interface. At the top, the text "ShareCenter™ by D-Link" is displayed. Below this, the word "Login" is shown in a large, light font. In the center, there is a white box with a gray border containing the following elements: the heading "Please Select Your Account:", two radio button options ("System Administrator(Admin)" which is selected, and "Others :"), a "Password:" label followed by a text input field, and two checkboxes labeled "Remember Me" and "SSL Login". At the bottom right of the white box is a dark gray "Login" button.

Note: The computer used to access the ShareCenter™ web-based configuration manager must be on the same subnet as the ShareCenter™. If your network is using a DHCP server and the computer receives IP settings from the DHCP, the ShareCenter™ will automatically be in the same subnet.

Web UI General Layout

Home

After logging in, the ShareCenter™ Home' tab will appear. You will see the Applications and Management tabs alongside of it.

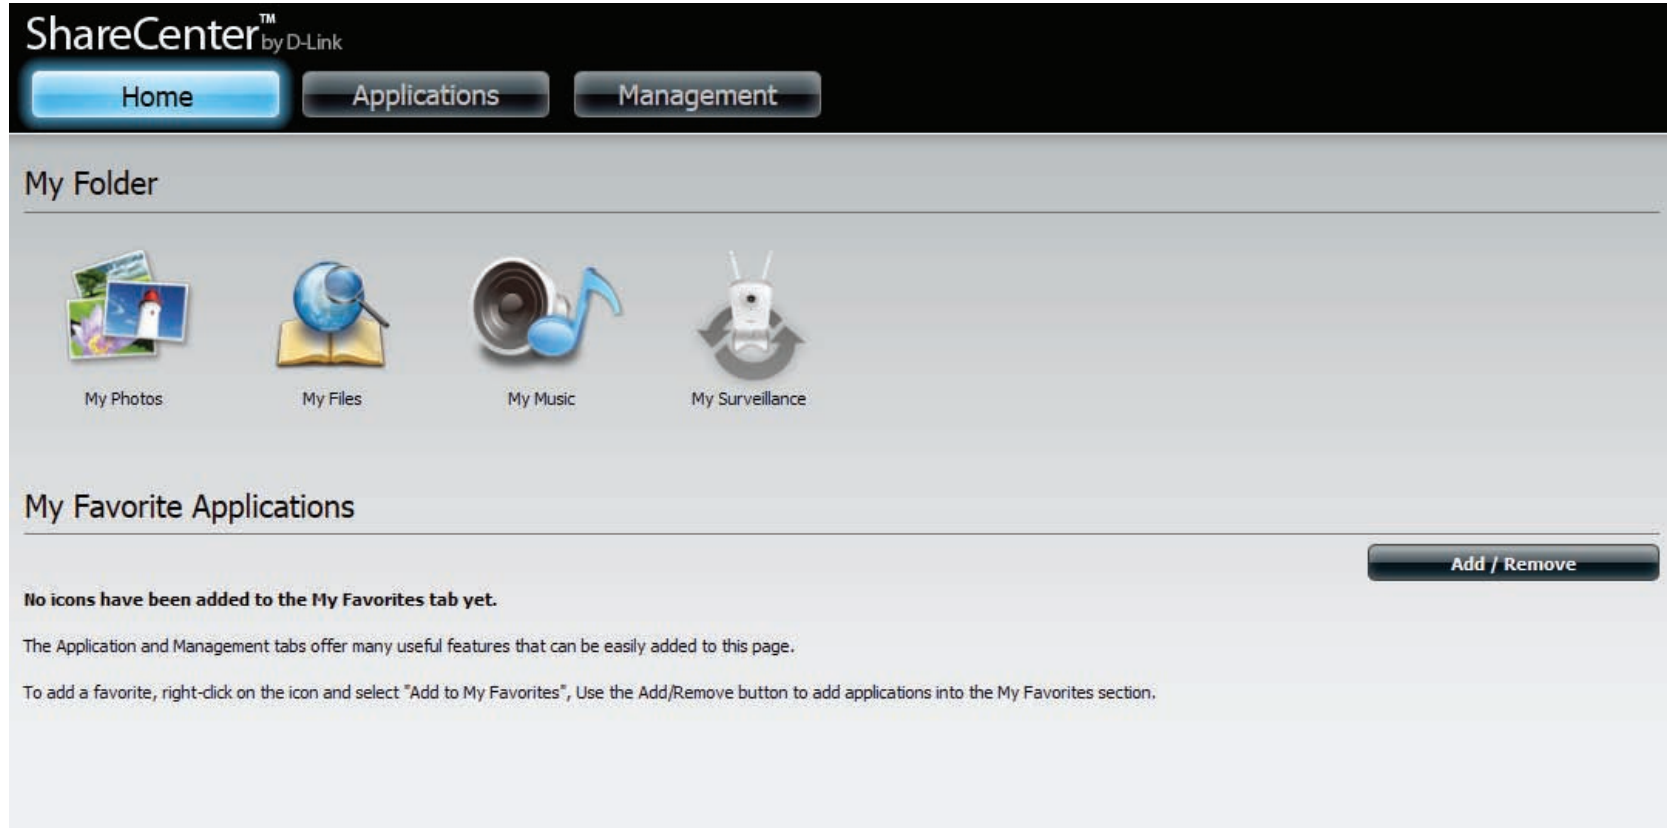

Applications

The Applications tab contains FTP/HTTP Downloads, Remote Backups, Local Backups, P2P Downloads, My Files, and Amazon S3 icons. Click on each icon to see the submenus.



Management

The Management tab contains the Setup Wizard, Disk Management, Account Management, Network Management, Application Management, System Management, and Status icons. Click on each icon to see the submenus.




Management

Setup Wizard (Web UI)

The ShareCenter™ has a Setup Wizard that allows you to quickly configure some of the basic device settings. Click the **Setup Wizard** icon to start the Setup Wizard.

Step 1 - Click the **Run Wizard** button to start the setup wizard.

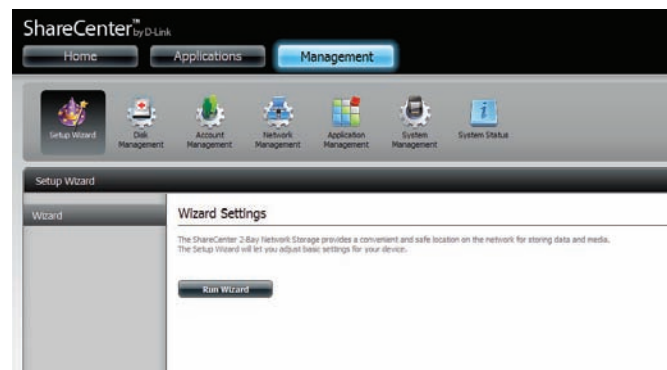


Step 2 - Click **Next** to continue.



Section 4 - Configuration

Step 3 - Update the administrator account password here and confirm the password or leave it blank.

Click **Next** to continue.

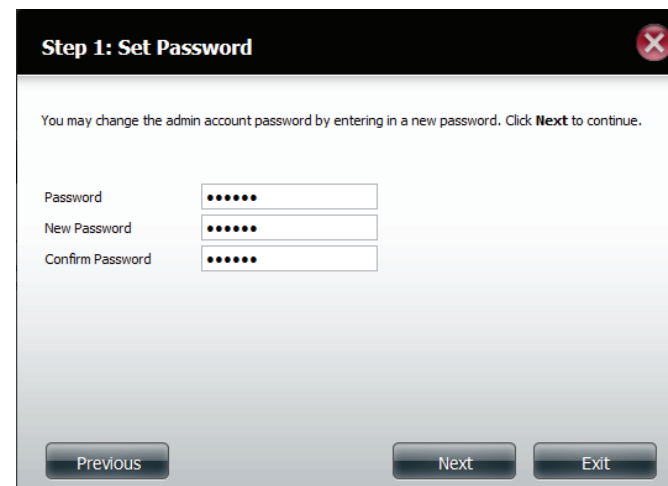

Step 1: Set Password

You may change the admin account password by entering in a new password. Click **Next** to continue.

Password:


New Password:

Confirm Password:

Previous Next Exit

Step 4 - Set the time zone from the drop-down menu to the appropriate geographical zone closest to your location.

Click **Next** to continue or click **Skip** to ignore these settings.

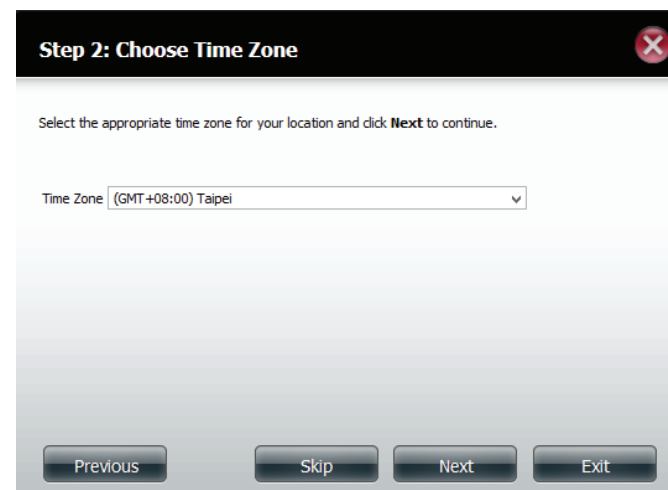

Step 2: Choose Time Zone

Select the appropriate time zone for your location and click **Next** to continue.

Time Zone:

Previous Skip Next Exit

Section 4 - Configuration

Step 5 - Select **DHCP** to obtain IP settings automatically from a DHCP server (router) or **Static** to assign the parameters below manually.


IP Address: Enter an IP address for the DNS-327L.

Subnet Mask: Enter the subnet mask of your network.

Gateway IP Address: Enter the IP address of your gateway (usually the local IP of your router).

DNS Servers: Enter the IP address(es) of your DNS server(s). DNS1 is usually the IP address of your router.

Click **Next** to continue or click **Skip** to ignore these settings.

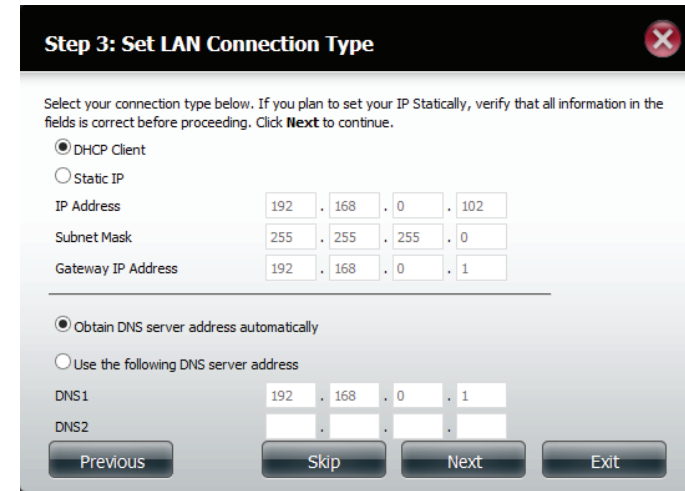

Step 3: Set LAN Connection Type

Select your connection type below. If you plan to set your IP Staticly, verify that all information in the fields is correct before proceeding. Click **Next** to continue.

☒ DHCP Client

☐ Static IP

IP Address: 192 . 168 . 0 . 102

Subnet Mask: 255 . 255 . 255 . 0

Gateway IP Address: 192 . 168 . 0 . 1

☒ Obtain DNS server address automatically

☐ Use the following DNS server address


DNS1: 192 . 168 . 0 . 1

DNS2:

Previous Skip Next Exit

Step 6 - Here you can assign a workgroup and name to the ShareCenter™ with a short description.

Click **Next** to continue or click **Skip** to ignore these settings.

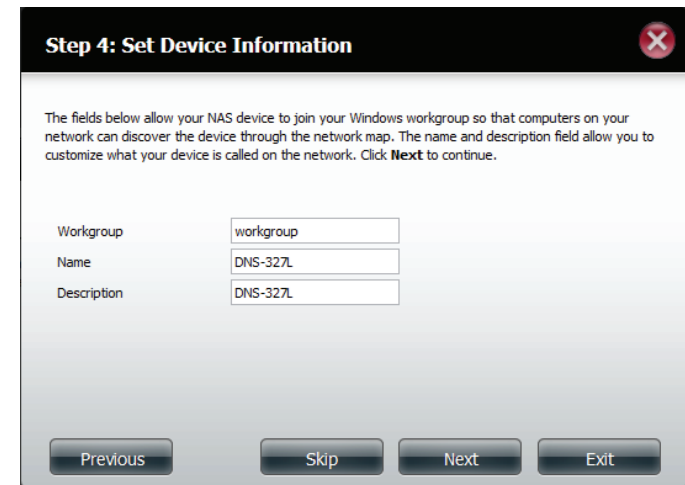

Step 4: Set Device Information


The fields below allow your NAS device to join your Windows workgroup so that computers on your network can discover the device through the network map. The name and description field allow you to customize what your device is called on the network. Click **Next** to continue.

Workgroup: workgroup


Name: DNS-327L

Description: DNS-327L

Previous Skip Next Exit

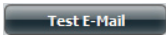Step 7 - Click **Account** and enter your e-mail information in the boxes provided to receive Event Alerts from the ShareCenter™. Click the  button to test your settings.

Click **Next** to continue or click **Skip** to ignore these settings.

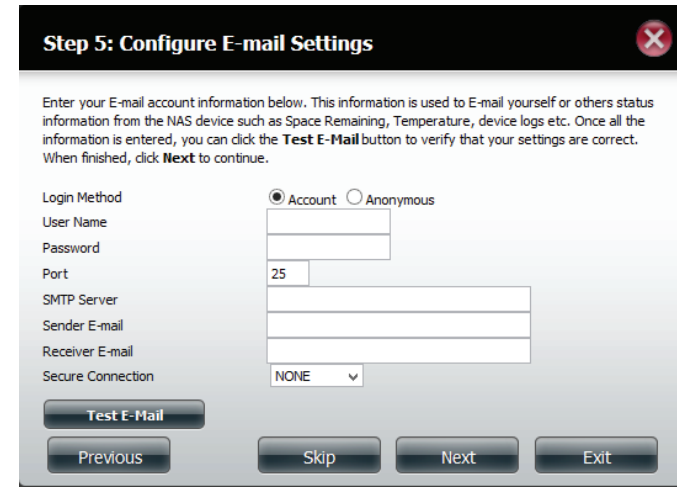

Step 5: Configure E-mail Settings

Enter your E-mail account information below. This information is used to E-mail yourself or others status information from the NAS device such as Space Remaining, Temperature, device logs etc. Once all the information is entered, you can click the **Test E-Mail** button to verify that your settings are correct. When finished, click **Next** to continue.

Login Method: ☒ Account ☐ Anonymous

User Name:

Password:



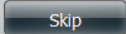
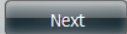
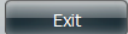
Port:

SMTP Server:

Sender E-mail:


Receiver E-mail:

Secure Connection:

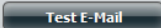Step 8 - Click **Anonymous** to create a random account with no specific settings. Click the Test Email button to test your settings.

Click **Next** to continue or click **Skip** to ignore these settings.

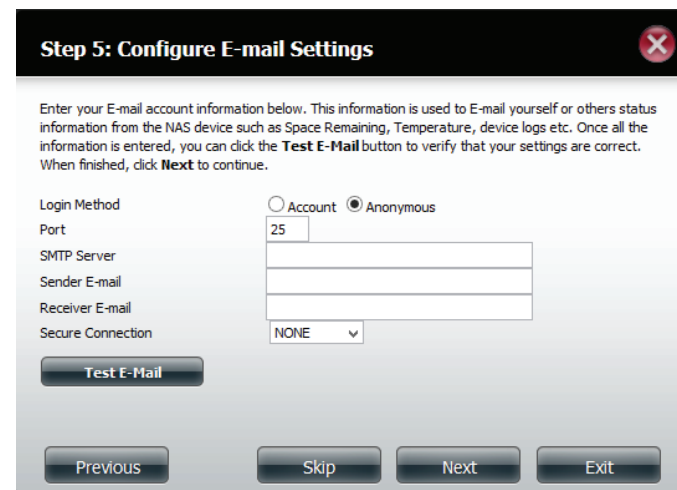

Step 5: Configure E-mail Settings

Enter your E-mail account information below. This information is used to E-mail yourself or others status information from the NAS device such as Space Remaining, Temperature, device logs etc. Once all the information is entered, you can click the **Test E-Mail** button to verify that your settings are correct. When finished, click **Next** to continue.

Login Method: ☐ Account ☒ Anonymous





Port:

SMTP Server:


Sender E-mail:

Receiver E-mail:

Secure Connection:

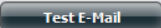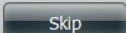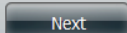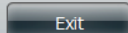Step 9 - Click the **Previous** button to go back and check your settings. If you are satisfied with the settings, click the **Finish** button to save and complete the wizard. Click **Exit** to end the wizard without saving the settings.

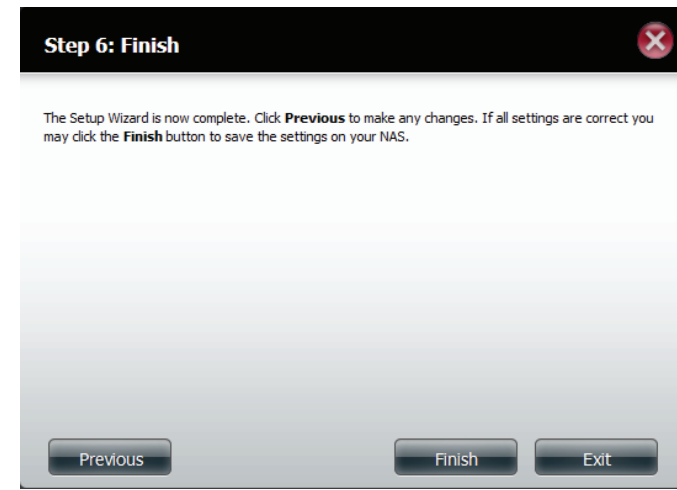

Disk Management

Hard Drive Configuration

To setup the Hard Drive RAID configuration of your ShareCenter™, click on the Management tab and then the **Disk Management** icon. Select the Hard Drive Configuration menu item on the left of the window. This menu will allow you to set the RAID type and format your hard drives.

Hard Drive Configuration: Your ShareCenter™ hard drives can be configured here and formatted in various RAID configurations.

Current Raid Type: If the drives are already formatted the RAID configuration will be displayed here.

Set RAID type and Reformat: Click on this button to launch a wizard that allows you to select the RAID configuration and format the drives.


Auto-Rebuild Configuration: If you have chosen RAID 1 as the configuration option, then set the Auto-Rebuild function here using the radio buttons.

Enable Auto-Rebuild: Enabling Auto-Rebuild will rebuild a failed RAID 1 drive when a new drive has replaced the degraded one.

Disable Auto-Rebuild: If you do not want to automatically rebuild drives after a failure when using the RAID 1 functionality then you can check this option.

Note: You can still rebuild a drive using the RAID 1 functionality however you must initiate the rebuild manually.

Manual Rebuild Now: If Auto-Rebuild is disabled then you can use the Manual Rebuild option by clicking this button.

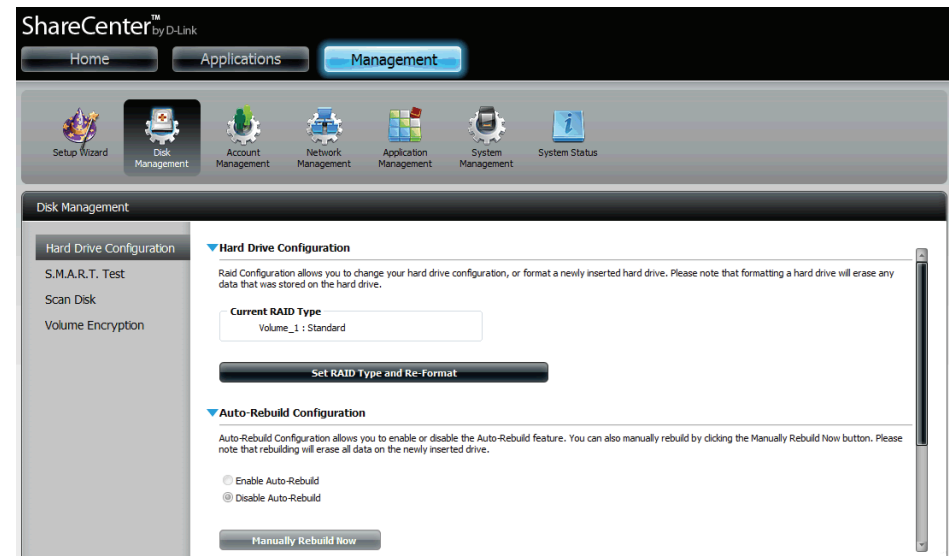

Hard Drive Configuration Wizard

When you click on the **Set RAID type and Re-Format** button in the Disk Management-Hard Drive Configuration menu a wizard will start, allowing you to format your drives and create the volume RAID format. The following is an example of a standard volume configuration:

The Hard Drive Configuration page displays the current RAID configuration under 'Current RAID Type'.

Current RAID Type

Volume_1 : Standard

Volume_2 : Standard

Click **Set RAID Type and Re-Format**.

Set RAID Type and Re-Format

The Setup Wizard begins.

Welcome To Hard Drive Configuration Wizard

Change the hard drive configuration and format the new hard drive(s). All data stored on this drive will be erased when you format the drive(s). Click **Next** to continue.

This wizard will guide you through the following settings:

1. Physical Disk Information
2. Select A RAID Type
3. Volume Configuration Summary
4. Formatting Hard Drive(s)
5. System Is Updating
6. Setup Completed



Next

Exit

Section 4 - Configuration

The 'Physical Disk Information' page displays all of the hard drives on the DNS-327L. It shows the array number, vendor, model, serial number, and drive capacity.

Click **Next** to continue.

Select the format you want by clicking on the RAID type box (highlight in blue).

Click **Next** to continue.

Step 1 :Physical Disk Information

This section provides information on your hard drives. It shows the disk array sequence, the manufacturer, the model and serial number, and disk capacity.

Disk	Vendor	Model	Serial Number	Size
Disk1	Hitachi	Hitachi HCS72101	JP2940HD2V7HKC	931.5 GB
Disk2	Hitachi	Hitachi HDT72503	VFM201RN0693EN	298.1 GB

Previous

Next

Exit

Step 2 :Select A RAID Type

Select your RAID type.

Standard
Creates separate volumes (or one volume if only one hard drive is present). Each hard drive is its own volume.

JBOD
Supports any number of disks in an array. Each of these disks are accessed directly as an independent drive and maximizes available disk space.

RAID 0
Stripes data across 2 or more drives increasing performance.

RAID 1
Copies exactly one of the data disks and produces a mirrored copy on another disk.

Previous


Next

Exit

Section 4 - Configuration


Volume Encryption encodes your Volumes to keep it safe from hackers. Select the Volume you wish to encrypt by clicking in the box next to it. You can select one Volume or many.

Click **Next** to continue.

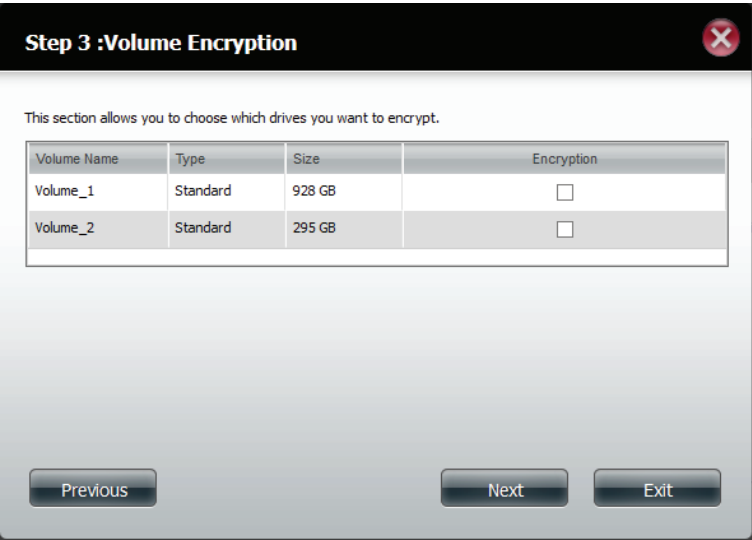

A warning messege appears indicating a slowdown in access speeds.

Click **Yes** to continue.

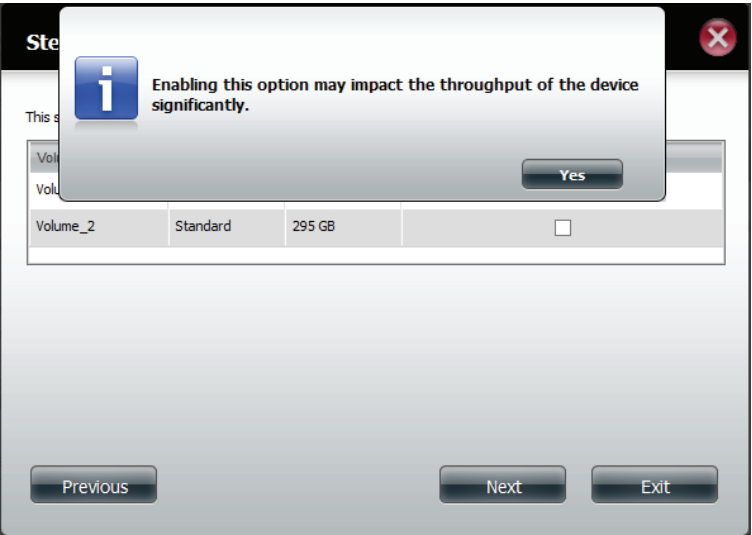

Section 4 - Configuration

Click **Auto Mount** if you wish the encrypted file to be automatically mounted. Enter a **password** and re-enter the same **password** to verify your settings.

Click **Next** to continue, **Previous** to edit any settings, or **Exit** to leave the configuration process.

Step 3-1 :Volume_2 Encryption

This section allows you to set up a password for the selected drive. Select Auto Mount to automatically mount the encrypted drives without re-entering the password every time upon boot up.

☒ Auto Mount

Input Encryption Password :

Verify Encryption Password :

Previous

Next

Exit

The **Volume Configuration Summary**, shows a mapping of the **Volume Name**, the **RAID** type, the **File System** used, the **Size**, and the **Disk**.

Click **Format** to continue, **Previous** to go back to your past settings, or **Exit** to cancel any changes.

Step 4 :Volume Configuration Summary

This section provides a summary of the configuration you just created. It will show the volume name, file format, disk size and disk array number.

:Encryption

:Auto Mount

:Enable

:Disable

	Volume Name	Type	File System	Size	Disk
	Volume_1	Standard	EXT 4	928 GB	Disk1
	Volume_2	Standard	EXT 4	295 GB	Disk2

Previous


Format

Exit


Section 4 - Configuration

A warning message will appear to inform you that all volumes and data will be formatted and erased.

Click **Yes** to continue.

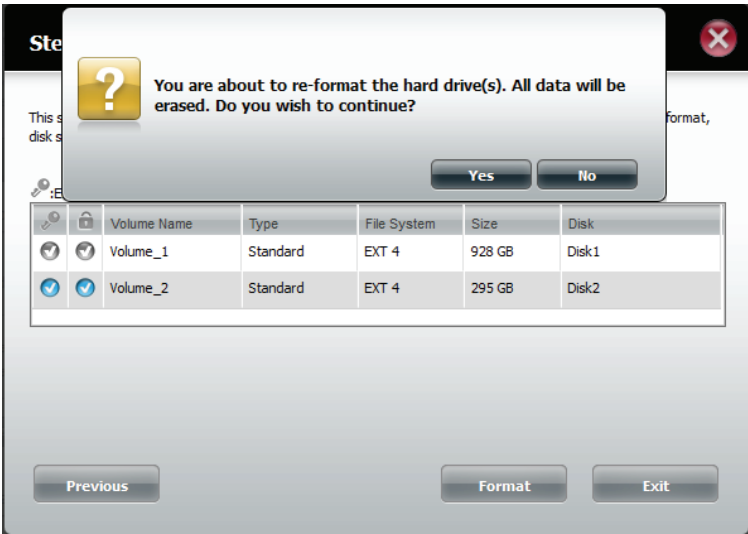


Partitioning will now begin. Please be patient while this process takes place. Do not turn off your NAS during this process.

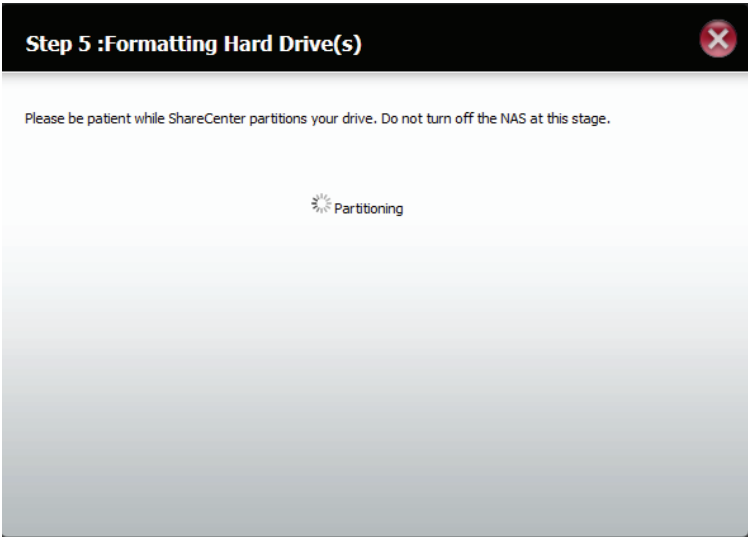

Section 4 - Configuration


Once the partition is completed, the formatting process will begin. A graphical bar will show the volume being formatted. Do not turn off your NAS during this process.

If you would like to change your settings at this stage, click **Exit**.

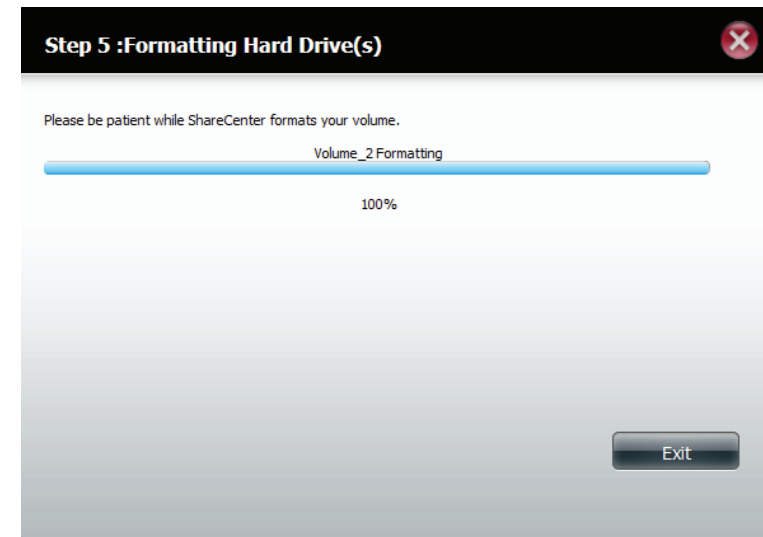


The system will now update all of the changes made.

Please be patient during this process. Do not turn off your NAS during this process.

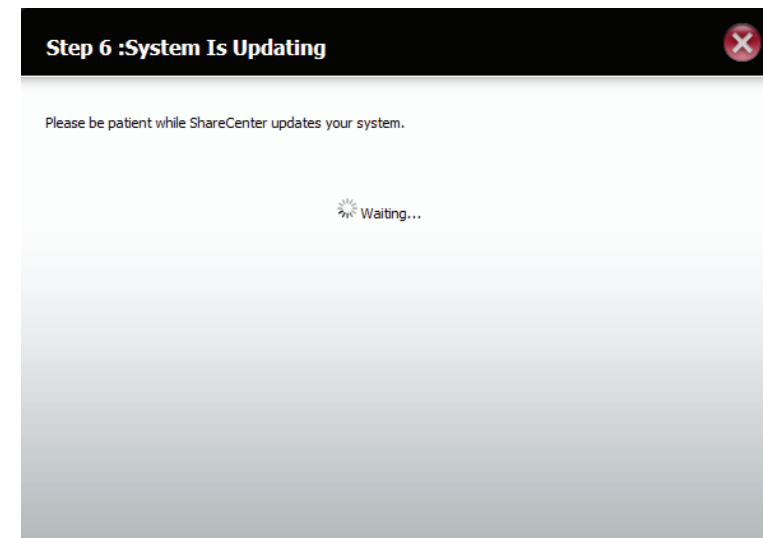


The wizard is now complete. It shows the **Volume number(s), file system** selected, the type of **RAID**, and the **disk formation** in the RAID.

Click **Finish** to complete the process and start using your DNS-327L.

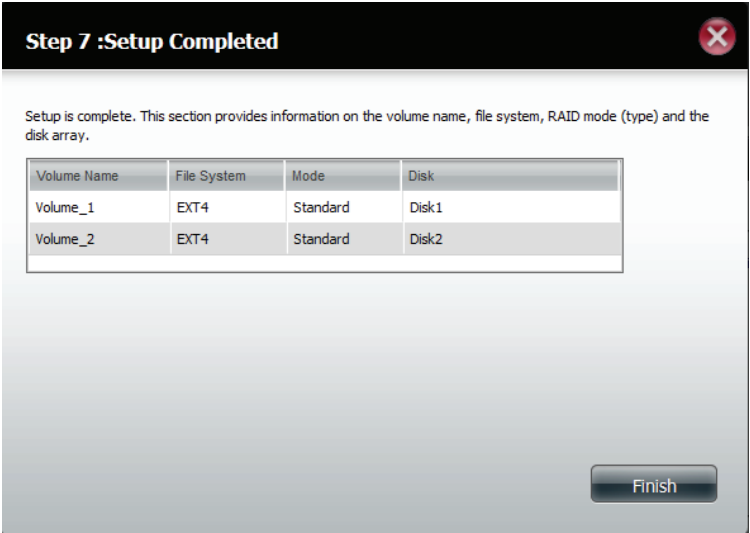


Confirm encryption on the **Volume** by going to **Management, Disk Management, Volume Encryption**.

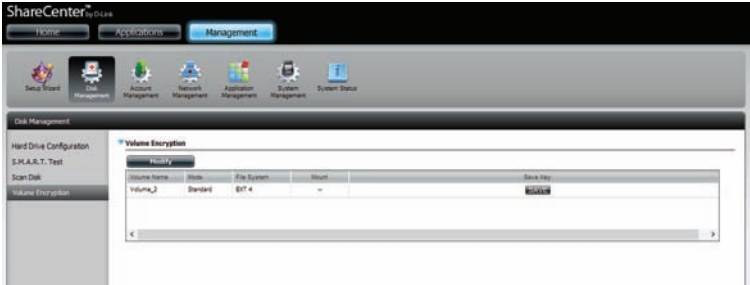


Section 4 - Configuration

Select the encrypted **Volume** and click the **Save** button. This will save the Encrypted Key on your local hard drive for future reference.

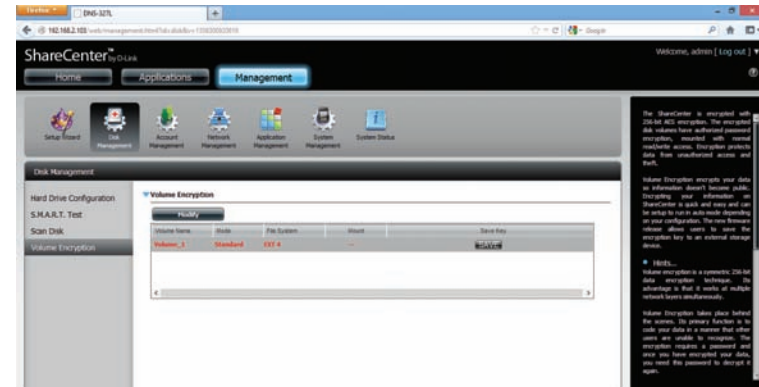


Save the file to your local hard drive. Depending on your browser, click OK to save

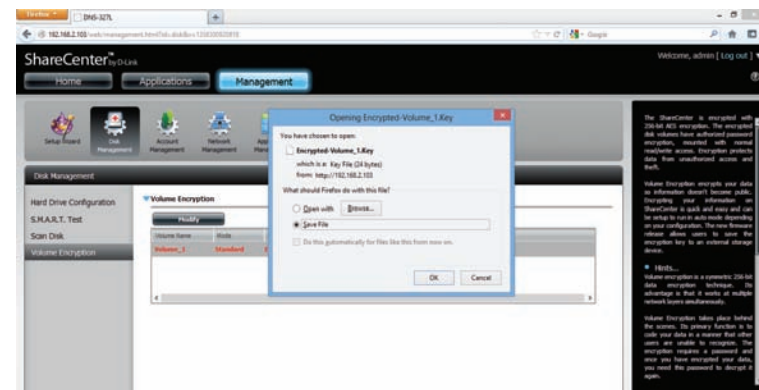

JBOD

Select **JBOD** to create a single volume from all of the drives.

Click **Next** to continue.

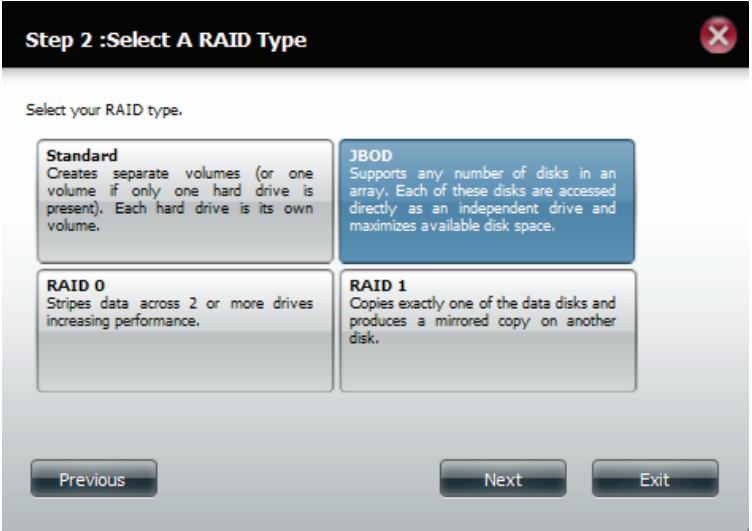


Volume Encryption encodes your Volumes to keep it safe from hackers. Select the Volume you wish to encrypt by clicking in the box next to it. You can select one Volume or many.

Click **Next** to continue.



A warning messege appears indicating a slowdown in access speeds.

Click **Yes** to continue.

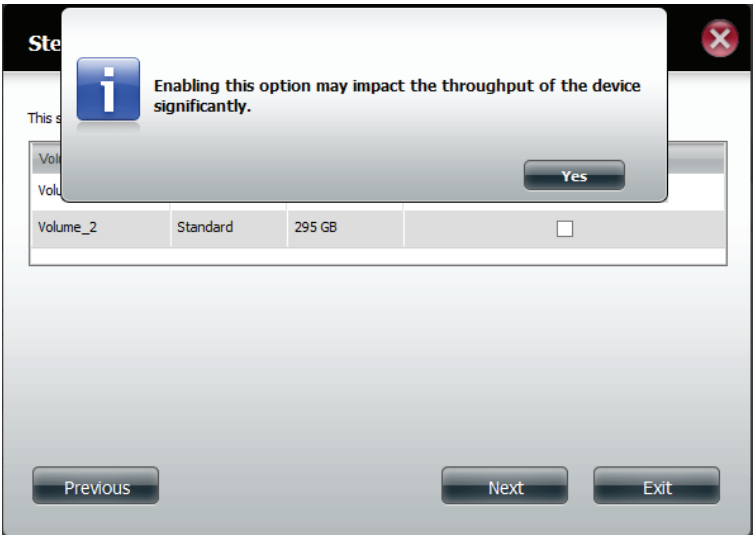

Click **Auto Mount** if you wish the encrypted file to be automatically mounted. Enter a **password** and re-enter the same **password** to verify your settings.


Click **Next** to continue, **Previous** to edit any settings, or **Exit** to leave the configuration process.



Section 4 - Configuration


If you do not enter a password in the field provided, a message will prompt you to do so. Click **Yes** to enter **Auto Mount** and **Password** details.

Click **Next** to continue.

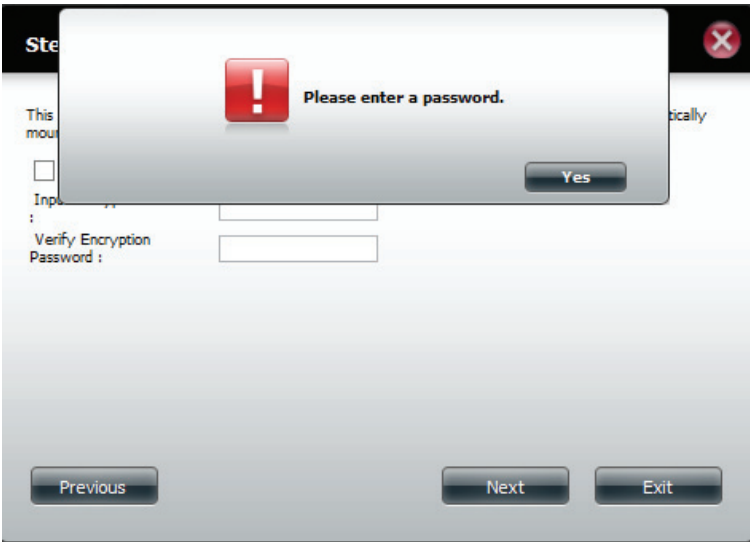

The **Volume Configuration Summary**, shows a mapping of the **Volume Name**, the **RAID** type, the **File System** used, the **Size**, and the **Disk**.


Click **Format** to continue, **Previous** to go back to your past settings, or **Exit** to cancel any changes.

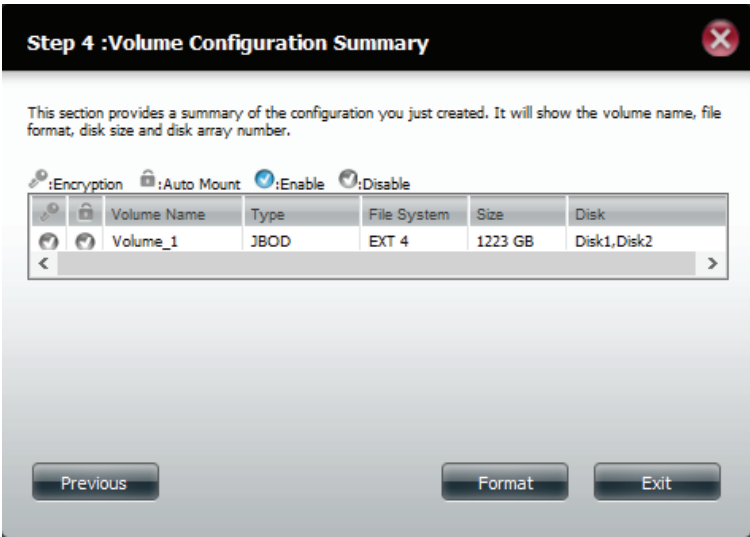


Section 4 - Configuration

A warning message will appear to inform you that all volumes and data will be formatted and erased.

Click **Yes** to continue.

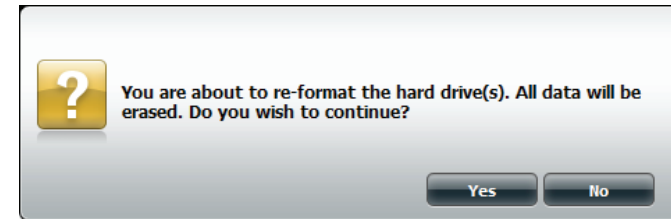


Partitioning will now begin. Please be patient while this process takes place. Do not turn off your NAS during this process.

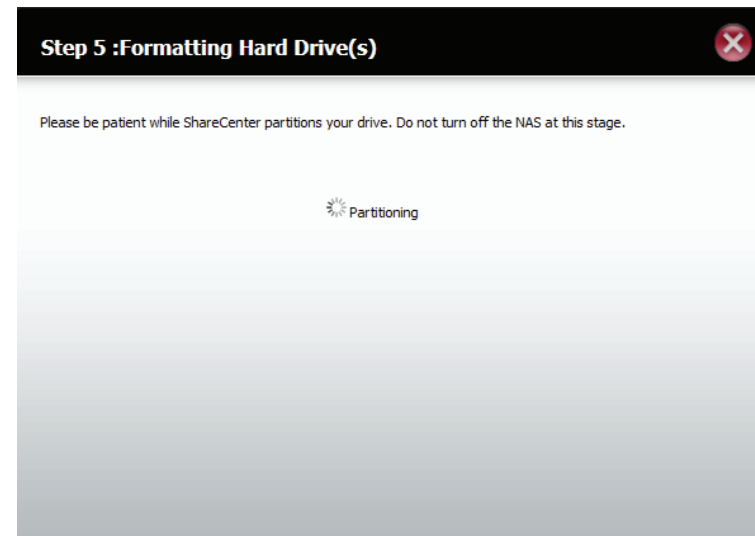

Section 4 - Configuration


Once the partition is completed, the formatting process will begin. A graphical bar will show the volume being formatted. Do not turn off your NAS during this process.

If you would like to change your settings at this stage, click **Exit**.

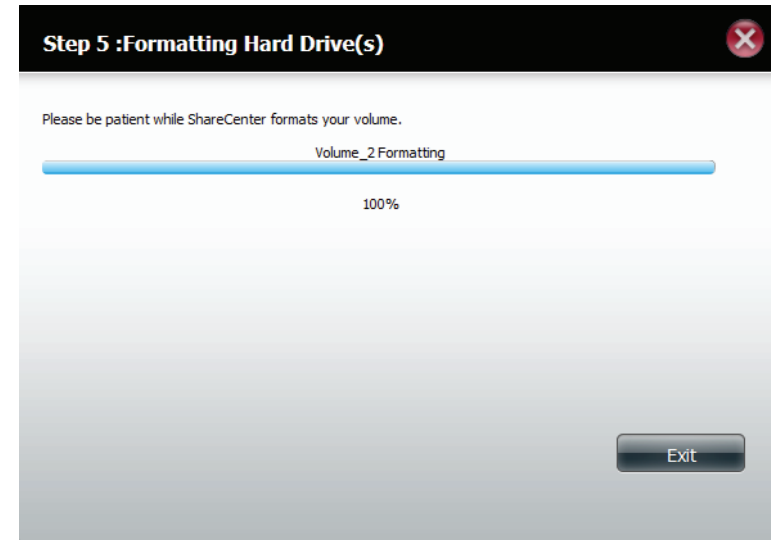

The system will now update all of the changes made.


Please be patient during this process. Do not turn off your NAS during this process.

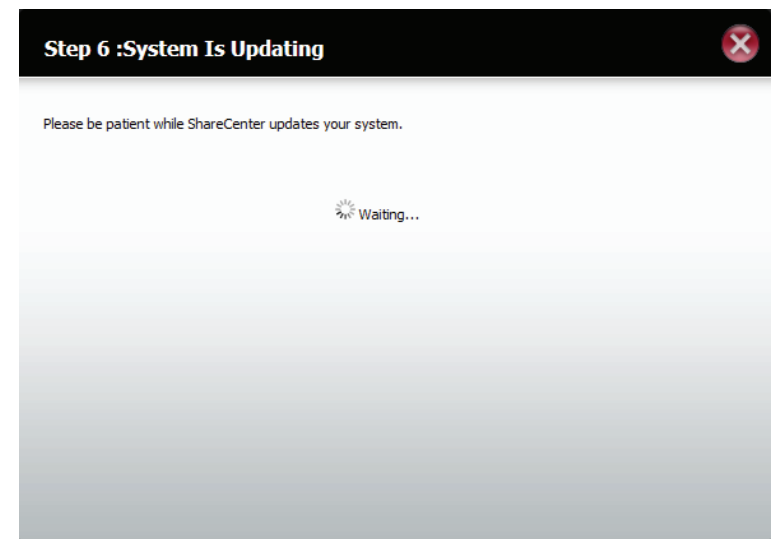


Section 4 - Configuration

The wizard is now complete. It shows the **Volume number(s), file system** selected, the type of **RAID**, and the **disk formation** in the RAID.

Click **Finish** to complete the process and start using your DNS-327L.

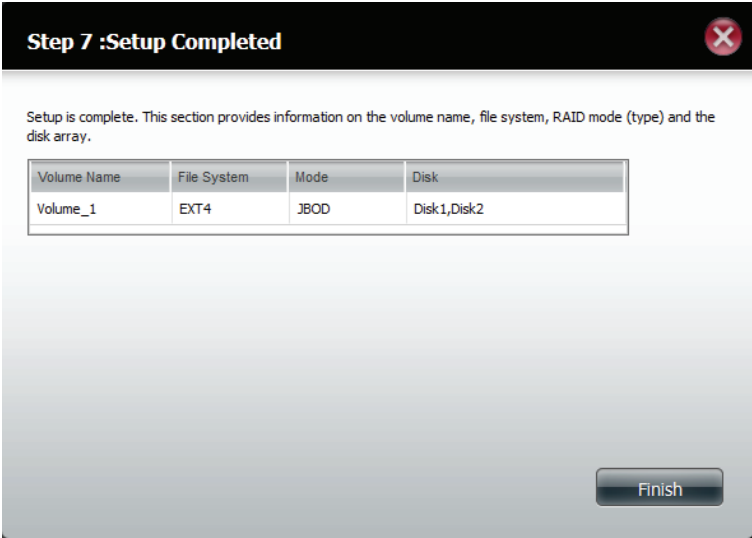


In order to confirm the **Volume** on the drive is encrypted. go to **Management, Disk Management, Volume Encryption**.

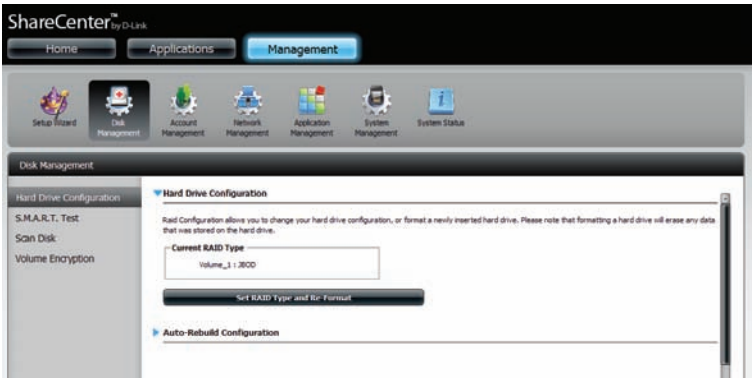

RAID 0


Select RAID 0 (stripes all of the drives).

Click **Next** to continue.

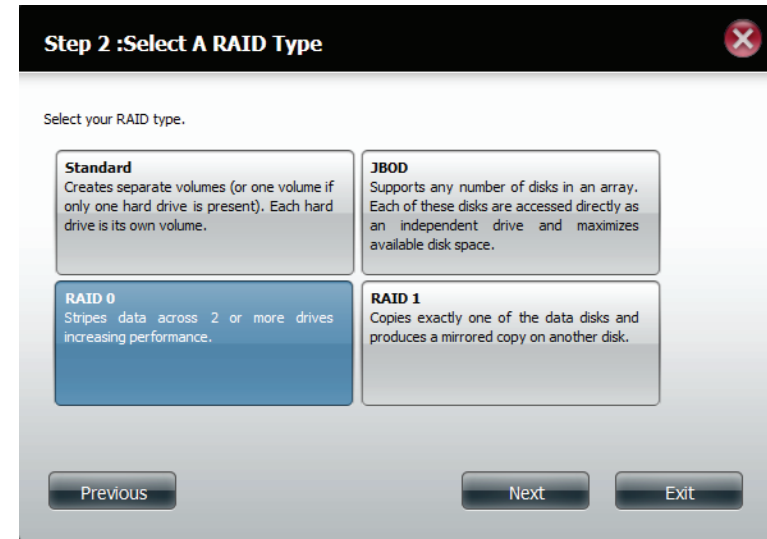

RAID Size Settings allows you to tweak the size of the **RAID Volume**. Use the slider to change the RAID size or enter an amount in the field provided. Click the “**Configure the remaining disk space as JBOD**” if you wish to use the remaining space for another RAID configuration.


Click **Next** to continue.

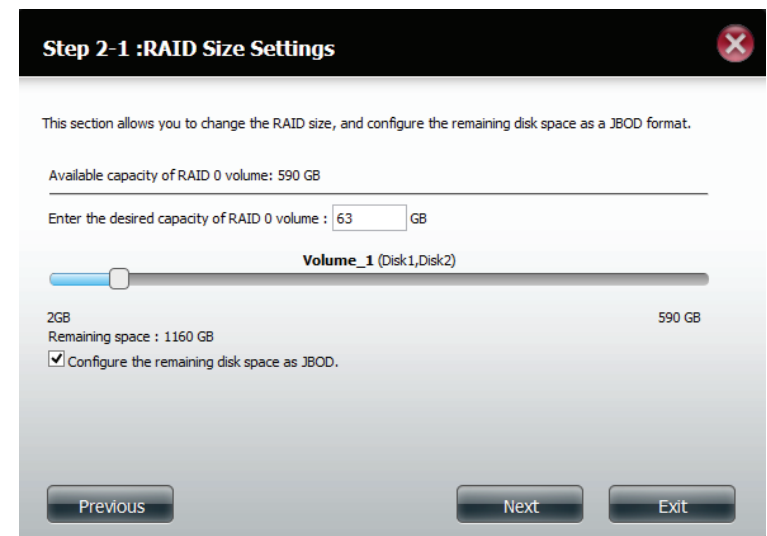

Section 4 - Configuration

Volume Encryption encodes your Volumes to keep it safe from hackers. Select the Volume you wish to encrypt by clicking in the box next to it. You can select one Volume or many.

Click **Next** to continue.

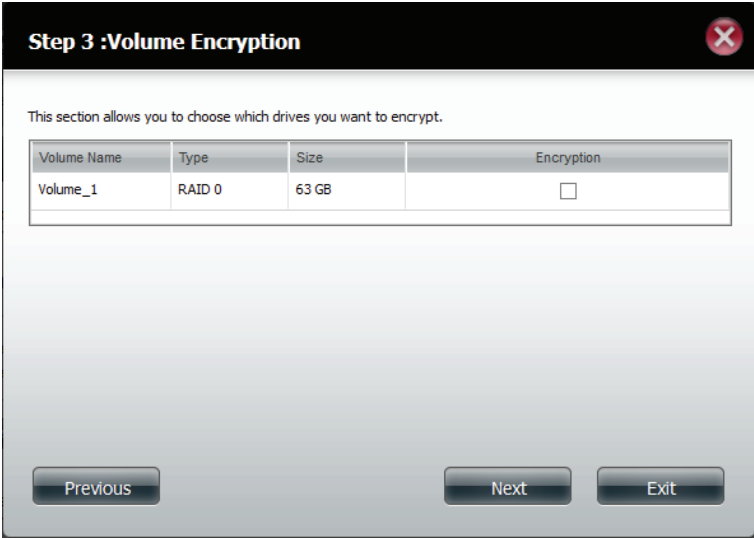

A warning messege appears indicating a slowdown in access speeds.

Click **Yes** to continue.



Section 4 - Configuration

Click **Auto Mount** if you wish the encrypted file to be automatically mounted. Enter a **password** and re-enter the same **password** to verify your settings.

Click **Next** to continue, **Previous** to edit any settings, or **Exit** to leave the configuration process.



Step 3-1 :Volume_2 Encryption

This section allows you to set up a password for the selected drive. Select Auto Mount to automatically mount the encrypted drives without re-entering the password every time upon boot up.

☒ Auto Mount


Input Encryption Password :

Verify Encryption Password :

Previous Next Exit

If you do not enter a password in the field provided, a message will prompt you to do so. Click **Yes** to enter **Auto Mount** and **Password** details.

Click **Next** to continue.

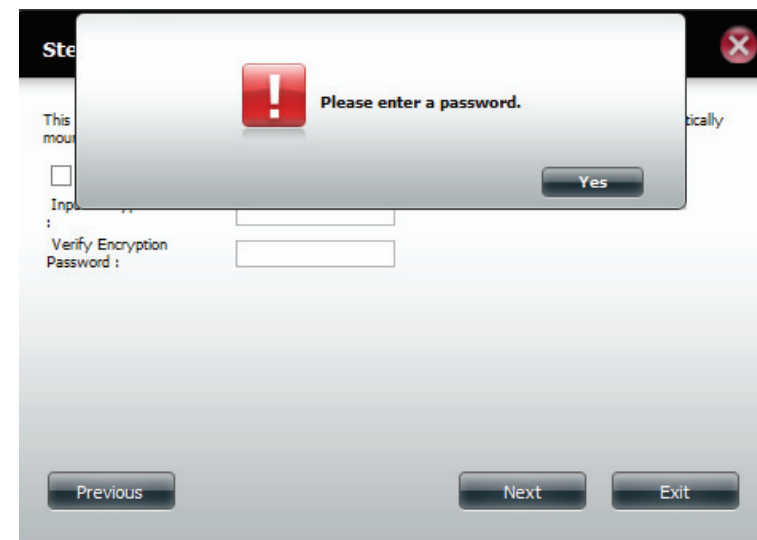

Step 3-1 :Volume_2 Encryption

This section allows you to set up a password for the selected drive. Select Auto Mount to automatically mount the encrypted drives without re-entering the password every time upon boot up.

☐ Auto Mount

Input Encryption Password :

Verify Encryption Password :


Previous Next Exit

Please enter a password.

Yes


Section 4 - Configuration

The 'Volume Configuration Summary' shows details on all of the configured drives. Check the details on the list and click **Format** to continue or click **Previous** to make changes.

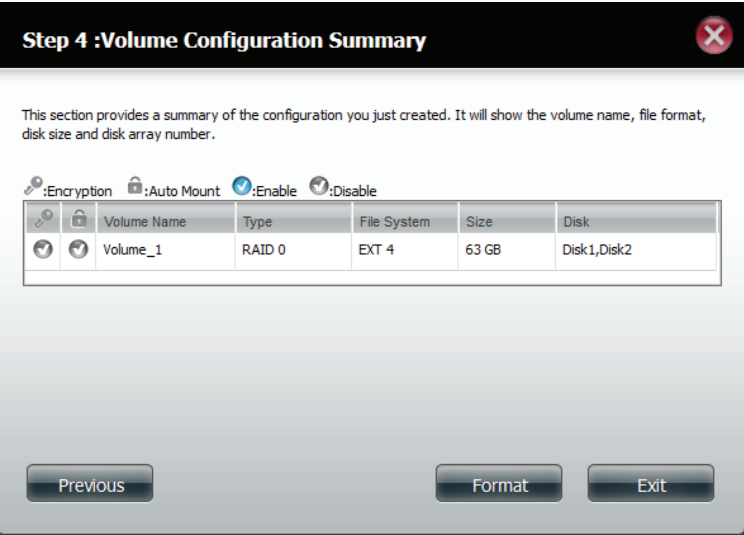


A warning message will appear to inform you that all volumes and data will be formatted and erased.

Click **Yes** to continue.

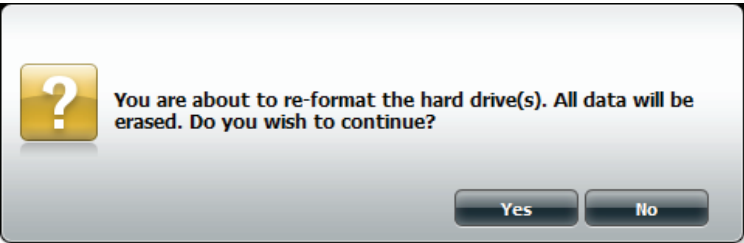


Section 4 - Configuration

Partitioning will now begin. Please be patient while this process takes place. Do not turn off your NAS during this process.

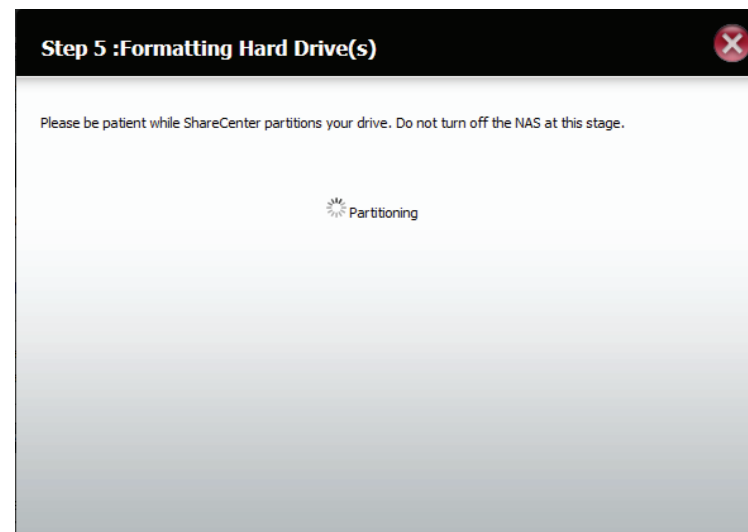

The system formats the Volume.


If you would like to change your settings at this stage, click **Exit**.

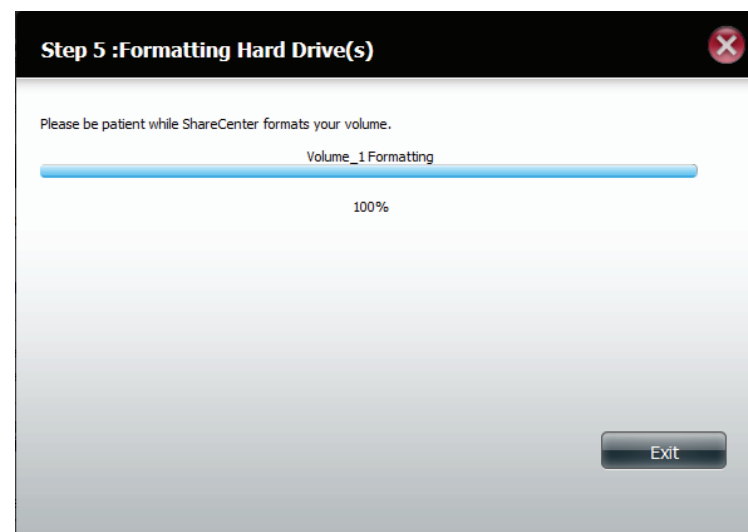

Section 4 - Configuration


The system will now update all of the changes made.

Please be patient during this process. Do not turn off your NAS during this process.

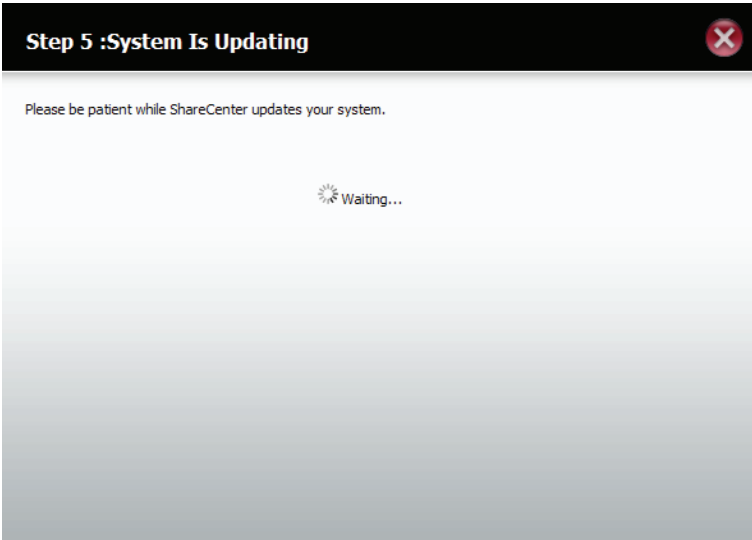


The wizard is now complete. It shows the **Volume number(s), file system** selected, the type of **RAID**, and the **disk formation** in the RAID.

Click **Finish** to complete the process and start using your DNS-327L.

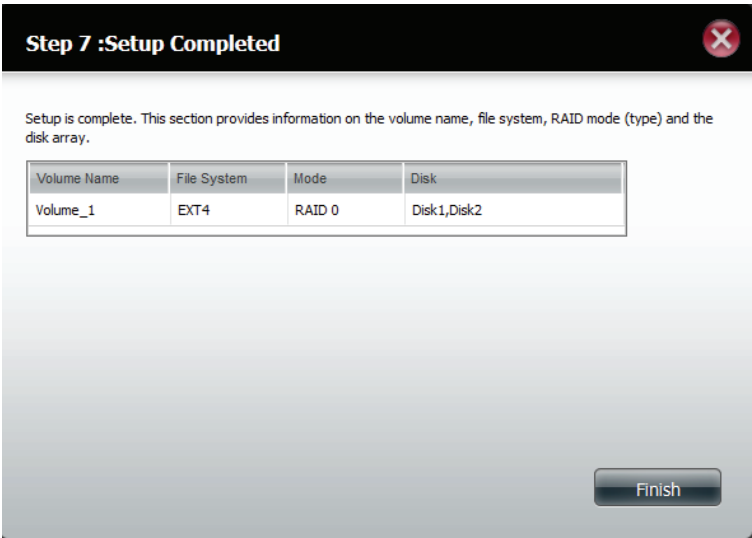

The wizard returns you to main **Hardware Configuration** page.

Under **Current RAID Type**, you can view your changes.

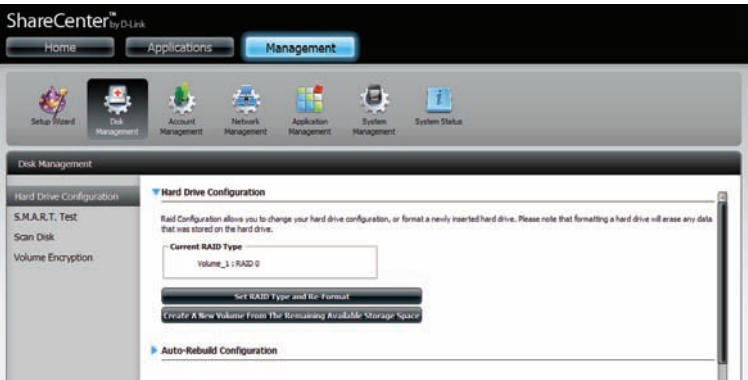

RAID 1


Select **RAID 1** to mirror all the hard drives.

Click **Next** to continue.



View the **Physical Disk Information**.


Click **Next** to continue.

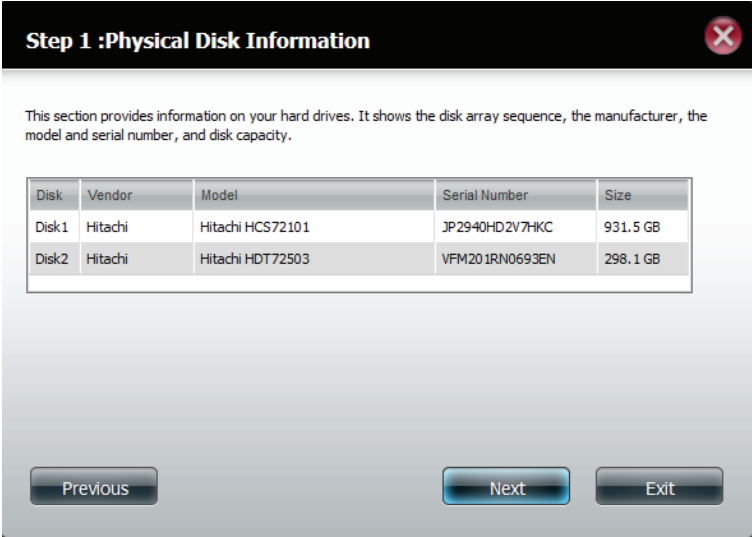

Section 4 - Configuration

Select the **RAID TYPE** you want

Click **Next** to continue.

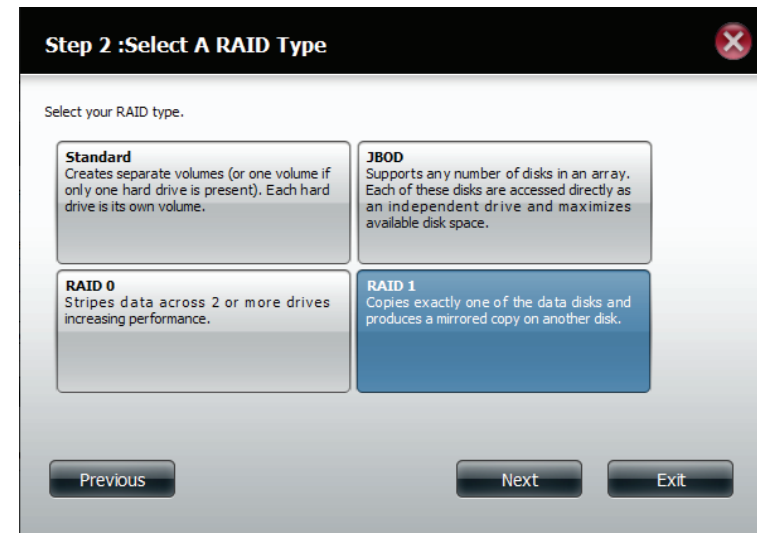

Step 2 :Select A RAID Type


Select your RAID type.

Standard Creates separate volumes (or one volume if only one hard drive is present). Each hard drive is its own volume.	JBOD Supports any number of disks in an array. Each of these disks are accessed directly as an independent drive and maximizes available disk space.
RAID 0 Stripes data across 2 or more drives increasing performance.	RAID 1 Copies exactly one of the data disks and produces a mirrored copy on another disk.

Previous Next Exit

RAID Size Settings allows you to tweak the size of the **RAID Volume**. Use the slider to change the RAID size or enter an amount in the field provided. Click the “**Configure the remaining disk space as JBOD**” if you wish to use the remaining space for another RAID configuration.

Click **Next** to continue.

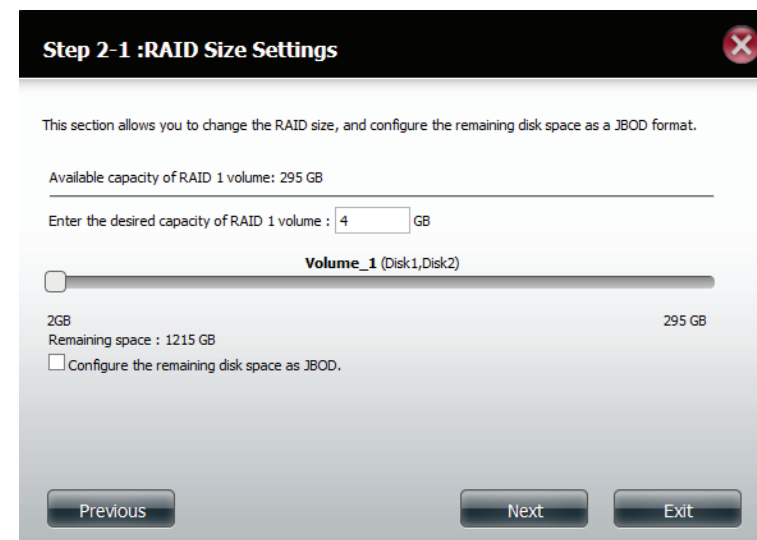

Step 2-1 :RAID Size Settings

This section allows you to change the RAID size, and configure the remaining disk space as a JBOD format.

Available capacity of RAID 1 volume: 295 GB

Enter the desired capacity of RAID 1 volume : 4 GB

☐ **Volume_1** (Disk1,Disk2)

2GB 295 GB

Remaining space : 1215 GB

☐ Configure the remaining disk space as JBOD.


Previous Next Exit

Section 4 - Configuration

Click **Enable Auto-Rebuild** to automatically rebuild a failed drive if it has been replaced with a new one.


Select **Disable Auto-Rebuild** if you want to start the rebuild process manually after replacing a failed drive.

Click **Next** to continue.

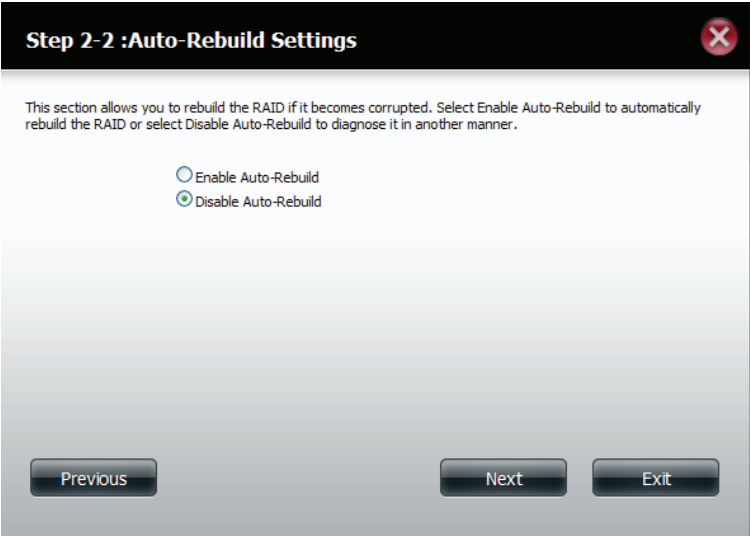


Volume Encryption encodes your Volumes to keep it safe from hackers. Select the Volume you wish to encrypt by clicking in the box next to it. You can select one Volume or many.

Click **Next** to continue.

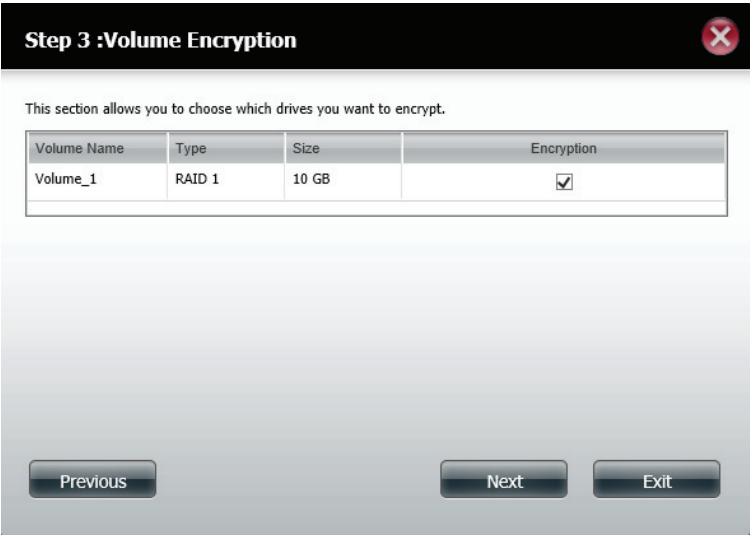

A warning messege appears indicating a slowdown in access speeds.

Click **Yes** to continue.

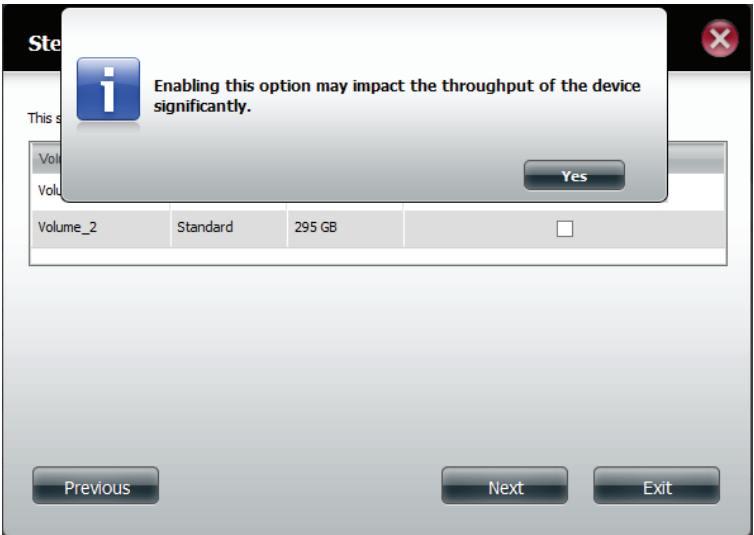

Click **Auto Mount** if you wish the encrypted file to be automatically mounted. Enter a **password** and re-enter the same **password** to verify your settings.


Click **Next** to continue, **Previous** to edit any settings, or **Exit** to leave the configuration process.




Section 4 - Configuration

If you do not enter a password in the field provided, a message will prompt you to do so. Click **Yes** to enter **Auto Mount** and **Password** details.


Click **Next** to continue.

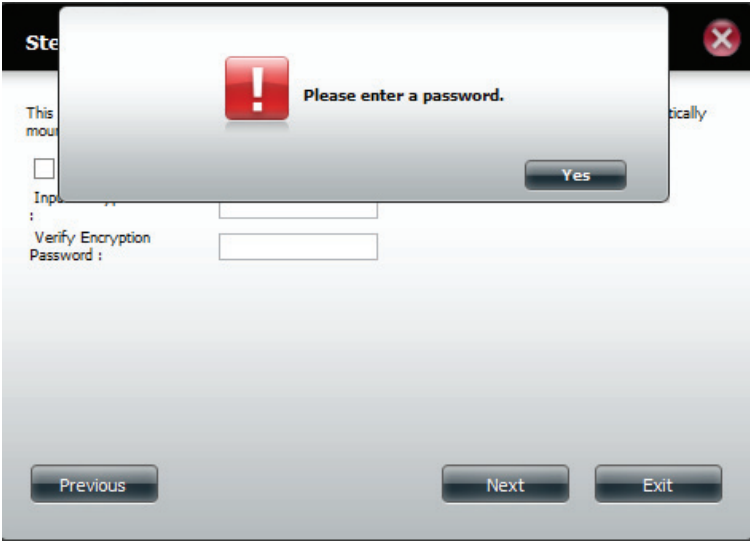

The 'Volume Configuration Summary' shows details on all of the configured drives. Check the details on the list and click **Format** to continue or click **Previous** to make changes.

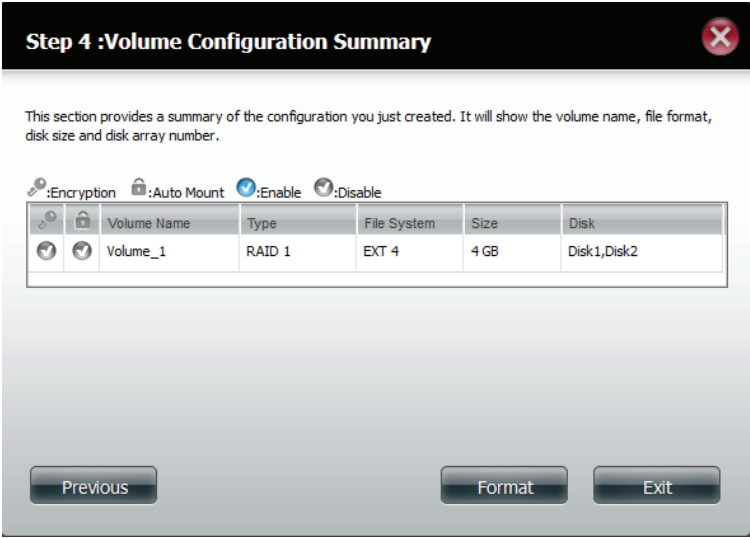


Partitioning will now begin. Please be patient while this process takes place. Do not turn off your NAS during this process.

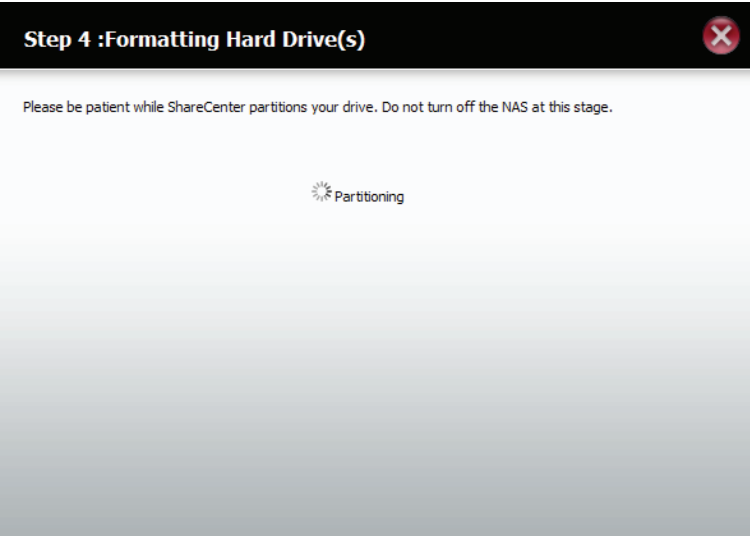


The system formats the Volume.


If you would like to change your settings at this stage, click **Exit**.

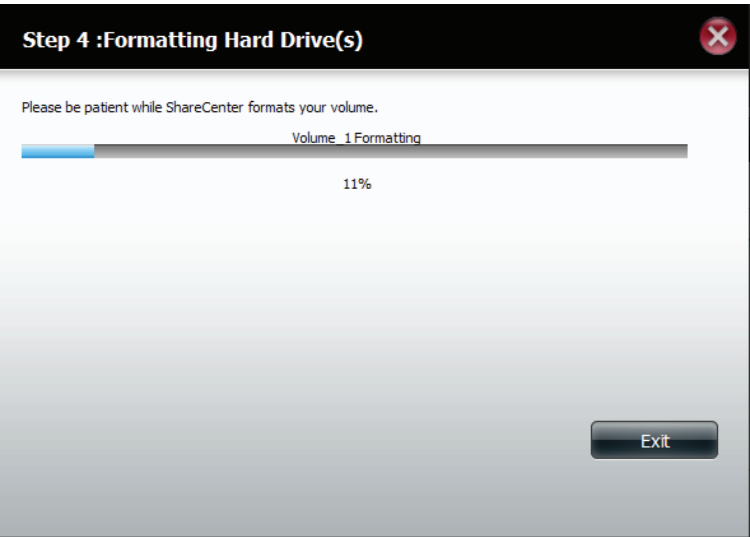

The system updates.

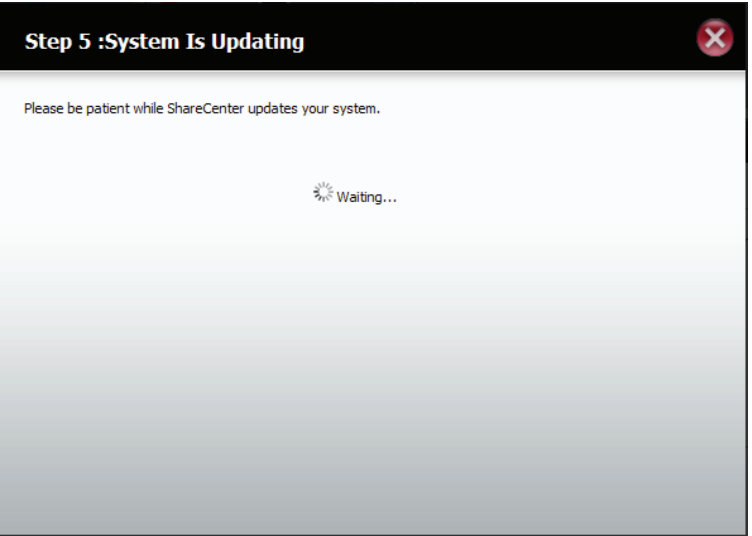


Setup is complete. Setup provides a **Volume Name, File System, and Mode.**

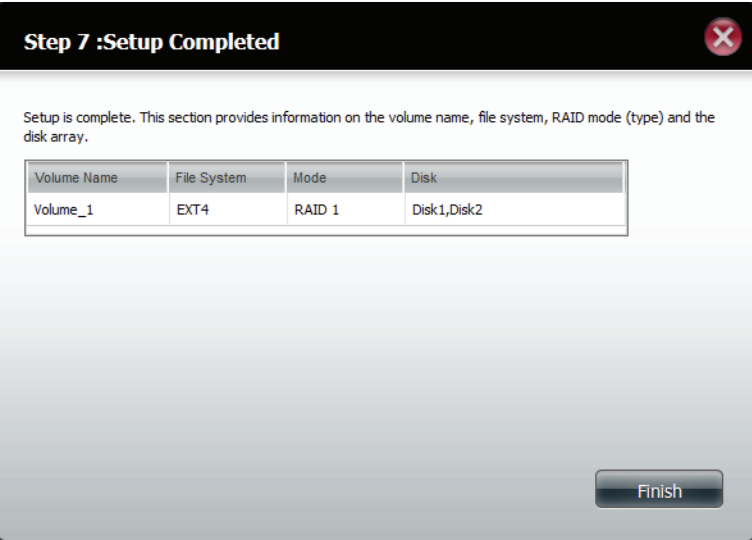

Section 4 - Configuration

Once you have completed the wizard, ShareCenter™ will return to the main screen.

The RAID 1 configuration you just set will be displayed.

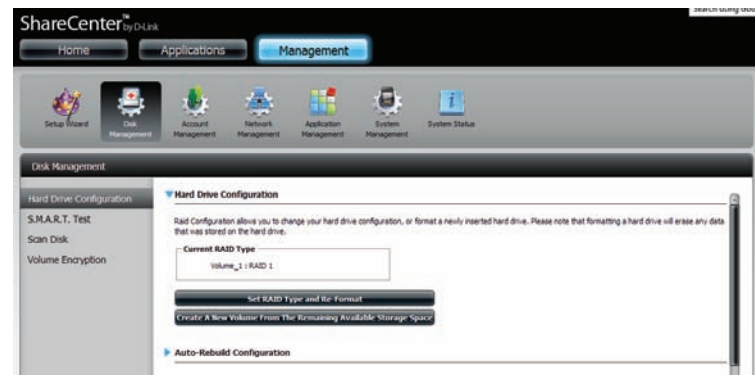

Upgrade from Standard Mode to RAID 1

Standard Mode doesn't offer any redundancy and security of data. It is best then to migrate from Standard Mode to RAID 1. To do this follow these instructions:

Step 1 - Insert a second hard drive into the DNS-327L.



Step 2 - Replace the top and restart the DNS-327L.

Step 3 - Go to Management, Disk Management, Hard Drive Configuration. There are two options available: **Set RAID Type and Re-Format** or **Format the new drive as Standard type**. If you select the latter option your **Hard Drive Configuration Wizard** shows six procedures but if you select the **Set RAID Type and Re-Format**, the **Hard Drive Configuration Wizard** only has four procedures. Take a look at the two images below to compare.

Click **Next** to continue.



Format the new drive as Standard type.




Set RAID Type and Re-Format.

Section 4 - Configuration

Step 4 - Under **Physical Disk Information**, you will be able to see the drive you just installed. It provides the **slot location**, **vendor**, **model number**, serial number, and **disk size**.

Just below this informational box is a **checkbox** that offers you the option to **Reconfigure** the drive to **RAID 1**. Click the checkbox to proceed.

Click **Next** to continue.

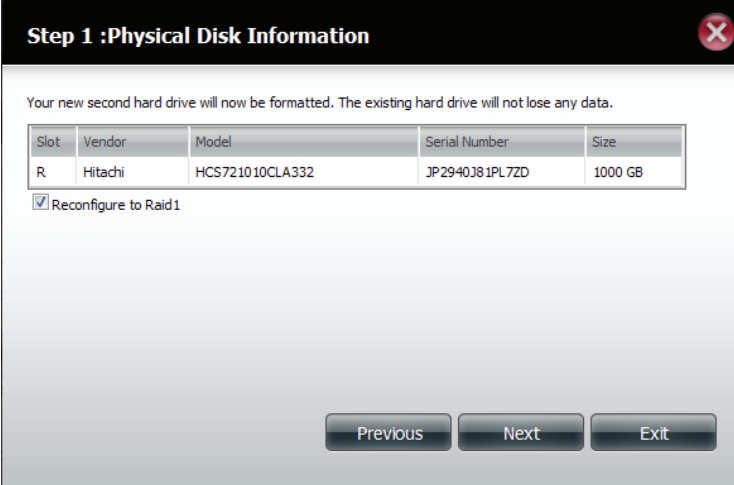

Step 1 :Physical Disk Information

Your new second hard drive will now be formatted. The existing hard drive will not lose any data.


Slot	Vendor	Model	Serial Number	Size
R	Hitachi	HCS7210 10CLA332	JP2940J8 1PL72D	1000 GB

☒ Reconfigure to Raid1

Previous Next Exit

Step 5 - Under **Auto-Rebuild Settings**, select whether you want to **enable auto rebuild** or **disable auto rebuild**.

Click **Next** to continue.

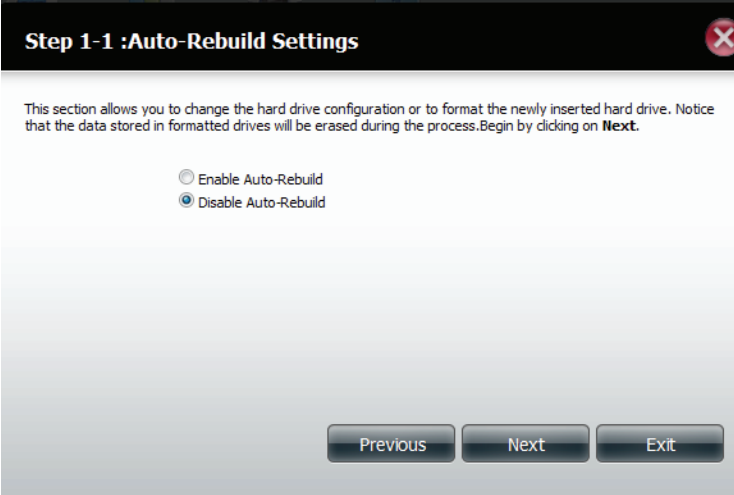

Step 1-1 :Auto-Rebuild Settings


This section allows you to change the hard drive configuration or to format the newly inserted hard drive. Notice that the data stored in formatted drives will be erased during the process.Begin by clicking on **Next**.

☐ Enable Auto-Rebuild
☒ Disable Auto-Rebuild


Previous Next Exit

Step 6 - A warning message will appear prompting you to confirm whether you want to format your hard drive. Click **Yes** to continue or **No** to exit.

Click **Next** to continue.

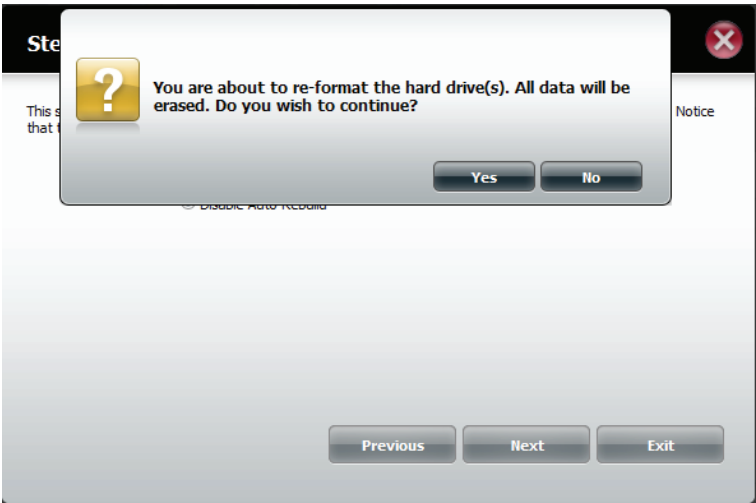


Step 7 - The software communicates with the hardware to build a list.

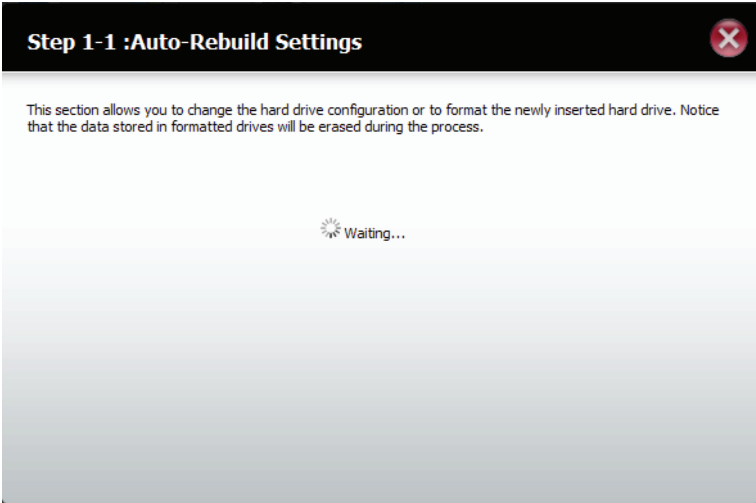


Step 8 - The Wizard formats the hard drive.

Click **Next** to continue.

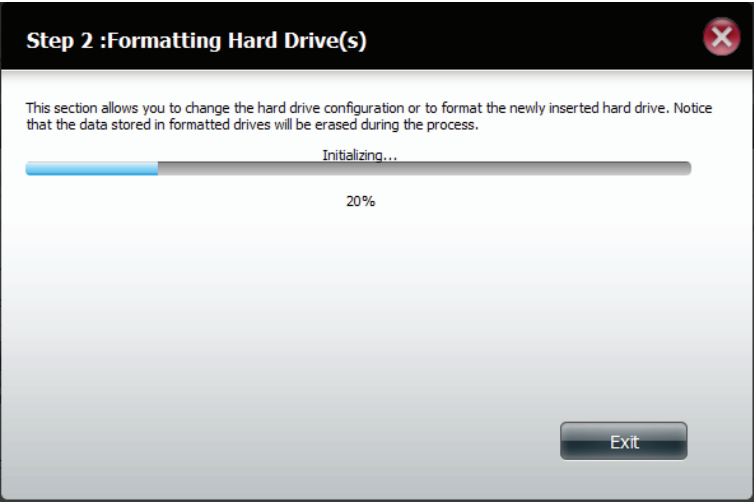


Step 9 - The System updates.

Click **Next** to continue.

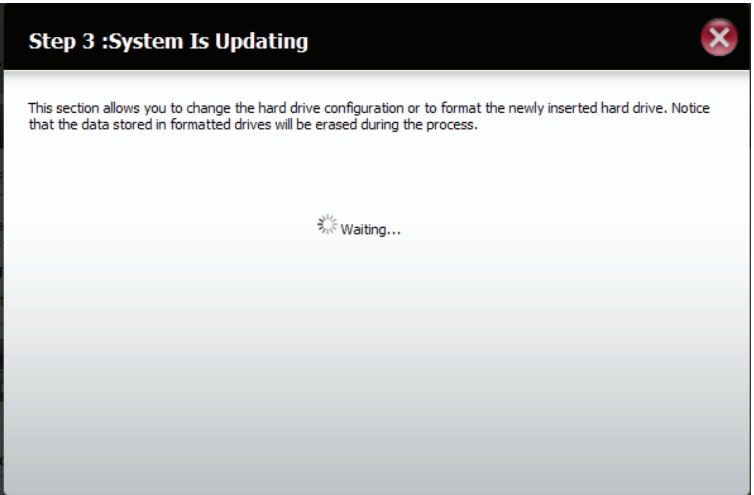


Step 10- Setup is completed when it shows final information on the slot, vendor, model number, and serial number.

Click **Finish** to continue.

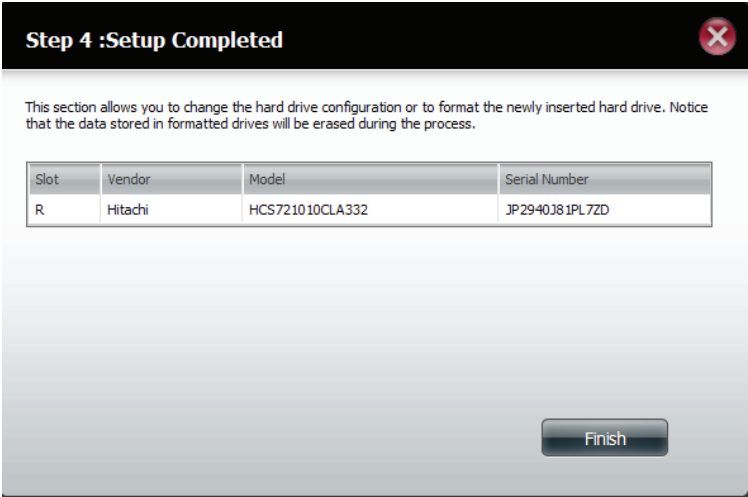

Step 11 - The wizard returns to the main Hard Drive Configuration .

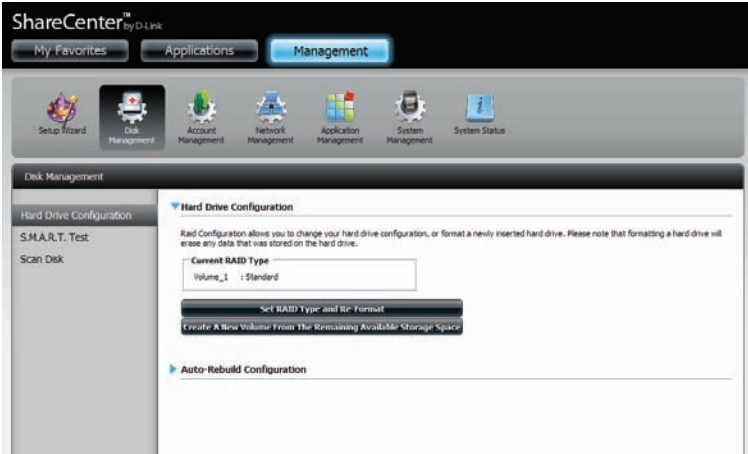

S.M.A.R.T. Test

S.M.A.R.T stands for “Self-Monitoring, Analysis, and Reporting Technology”. This is a system on a hard drive used to monitor and report on the health of the drive. If the HD is grayed out, then it does not support S.M.A.R.T.

To run the S.M.A.R.T test, select the hard drive you wish to perform the S.M.A.R.T test on. Select whether to run a Quick or Extended S.M.A.R.T test. Then click **Start** to run the test. Click the **Create Schedule** button to run the test at a pre-determined time and date.

The Quick Test usually takes less than 10 minutes. This test will check the electrical, mechanical, and read performance of the hard drive. The results are displayed as Passed/Failed on the web UI and can also be sent as an e-mail alert.




The Extended Test requires a lot more time to complete. However, it is a more thorough when compared to the Quick Test

A warning message will prompt you to stop all services and network activity.

Click **Yes** to continue the **Quick S.M.A.R.T.** test.

The test will run and a percentage completed will display under the Progress Tab.

The Start button will change to a Stop button.

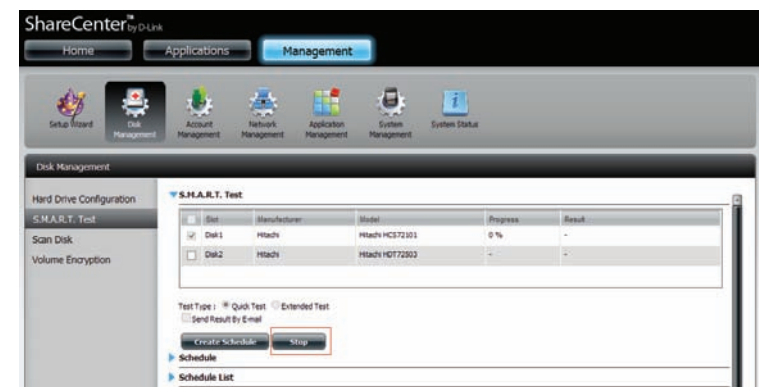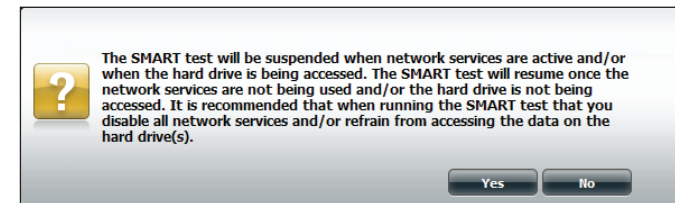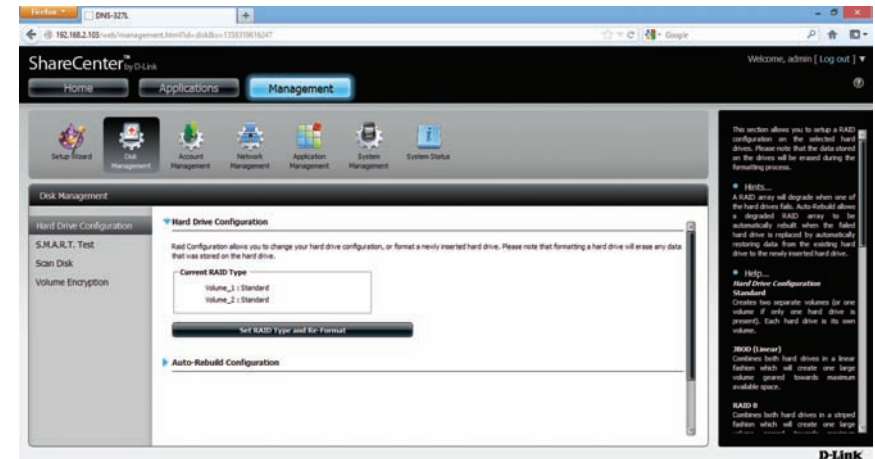

When the test is complete, the results will be displayed in the **Result** column.

ShareCenterTM
by D-Link

Home

Applications

Management

Setup Wizard

Disk Management

Account Management

Network Management

Application Management

System Management

System Status

Disk Management

Hard Drive Configuration

S.M.A.R.T. Test

Scan Disk

Volume Encryption

S.M.A.R.T. Test

<input type="checkbox"/>	Slot	Manufacturer	Model	Progress	Result
<input type="checkbox"/>	Disk1	Hitachi	Hitachi HCS72101	-	Pass [2012/11/22 12:13:07]
<input type="checkbox"/>	Disk2	Hitachi	Hitachi HDT72503	-	-

Test Type : ☒ Quick Test ☐ Extended Test
☐ Send Result By E-mail

Create Schedule

Start


Schedule

Schedule List

Creating a Schedule

To create a schedule, select the disks/volumes to run the test on. Under Schedule, select the period (Daily/Weekly/Monthly) and then select the time from the drop-down menu.

Click **Create**

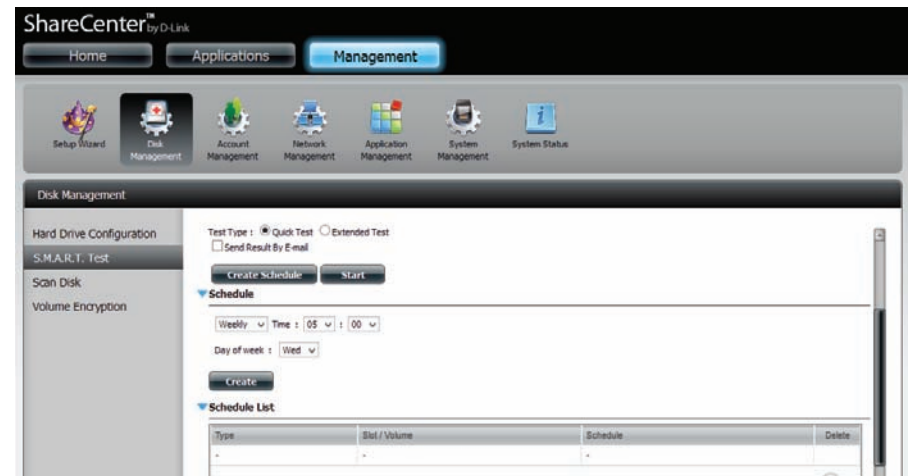

To view the Schedule List, click on the **Schedule List** arrow. A new table will appear showing details of the new schedule created.


To delete a schedule, click on the **Trash Can**.



Scan Disk


Scan Disk provides a method to test the disk's file system on your ShareCenter™. Scan Disk scans your disks file system for errors and/or corruption.

Click **Management**, **Disk Management**, and then **Scan Disk**.

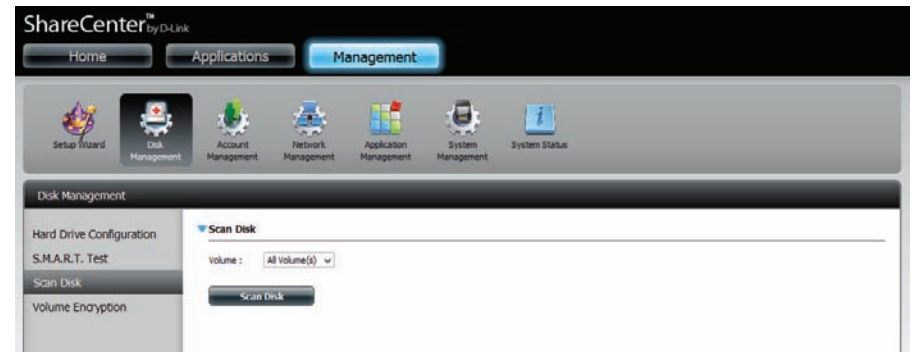

Select the volume from the drop-down list you wish to scan.


Click **Scan Disk**

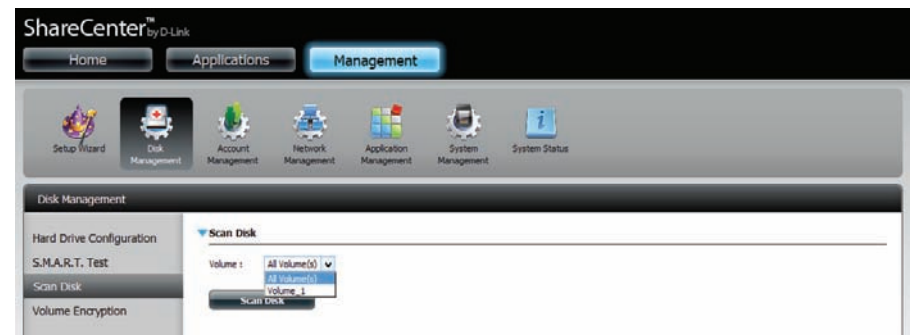

Section 4 - Configuration


A warning message will prompt you to stop running all services (hard drive and network activity).

Click **Yes** to proceed or **No** to cancel.

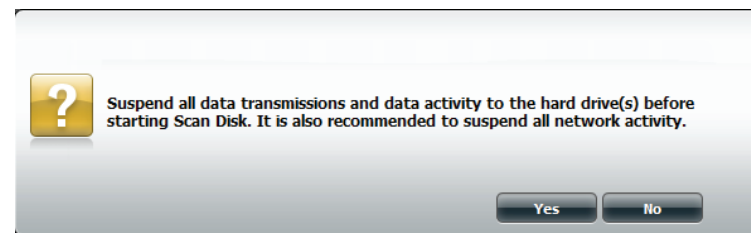


The DNS-327L will initialize the volume(s) and begin scanning.

Please wait while the software scans the volume(s) or click **Exit** to cancel the scan.

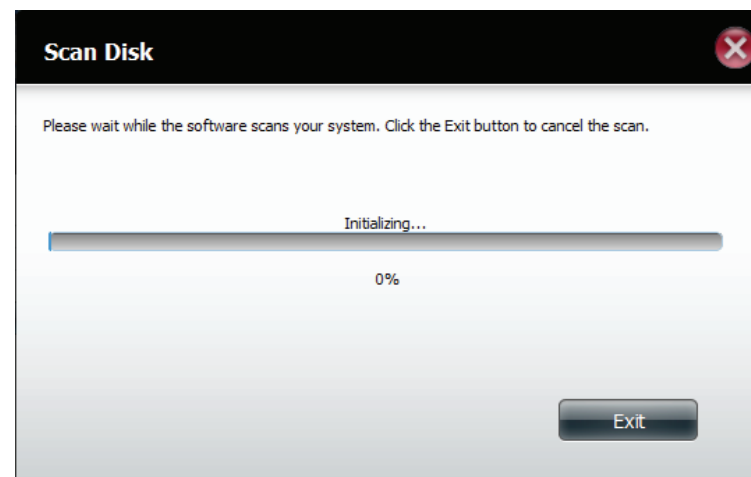


When the scan is complete, the table will either display **Success** or **Failure**.

Click **Finish** to exit.

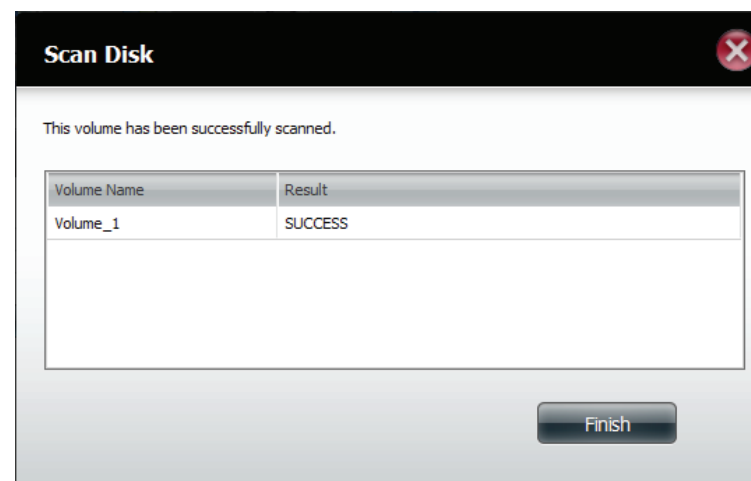


Volume Encryption

Click **Management, Disk Management, Volume Encryption**. The encrypted **Volume** that you created during the **Setup Wizard** is shown.

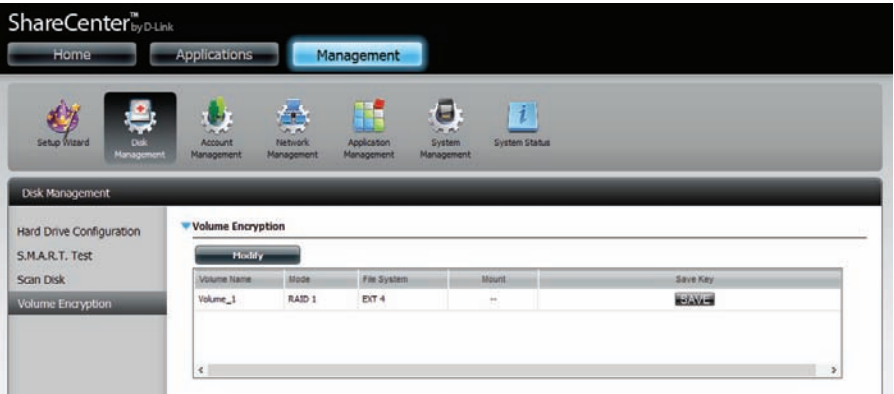


Before proceeding with modifying the encryption data, click the Volume you wish to modify. It turns red. Click **Modify**.

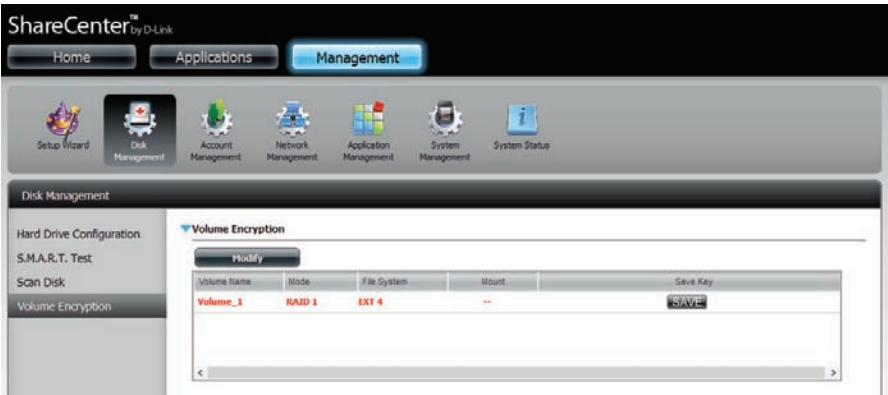


To change the settings for **Volume Encryption**, you need to enter the **Original Password** in the field provided. Alternatively, click the **browse** button to upload an **Encrypted Key File**.

Click **Next** to continue.

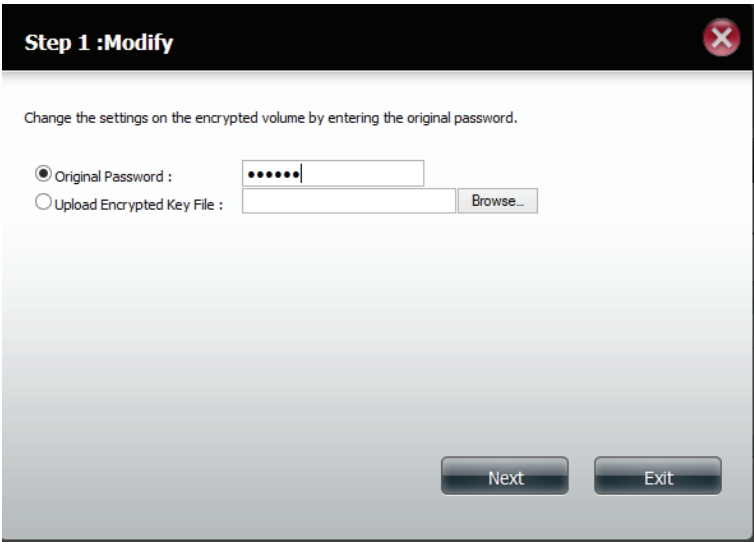


File upload.

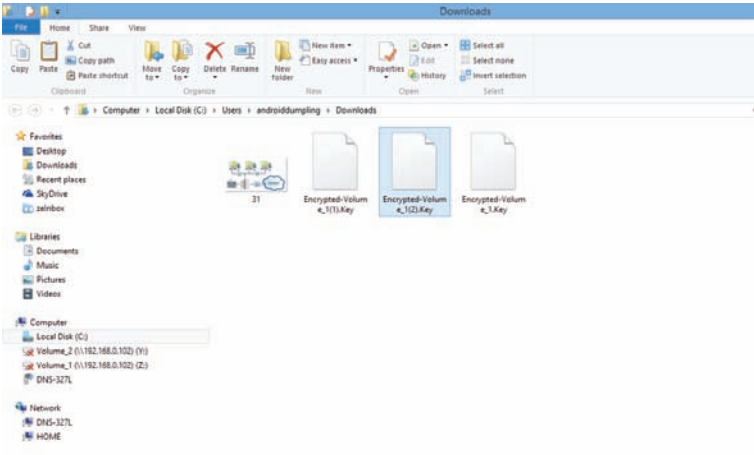

Click the Auto-Mount checkbox to have the system mount the Volume automatically. Enter a New Password and repeat the process.

Click **Apply** to continue.

Wait while the Volume is encrypted.

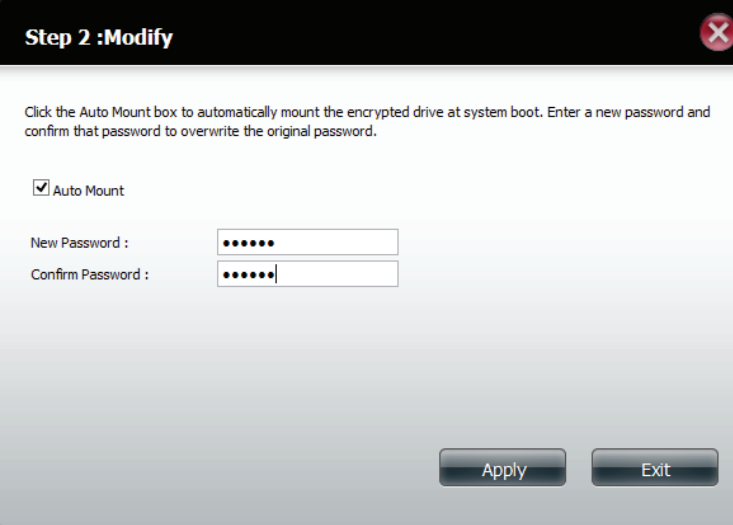

Step 2 :Modify


Click the Auto Mount box to automatically mount the encrypted drive at system boot. Enter a new password and confirm that password to overwrite the original password.

☒ Auto Mount

New Password :

Confirm Password :

Apply Exit

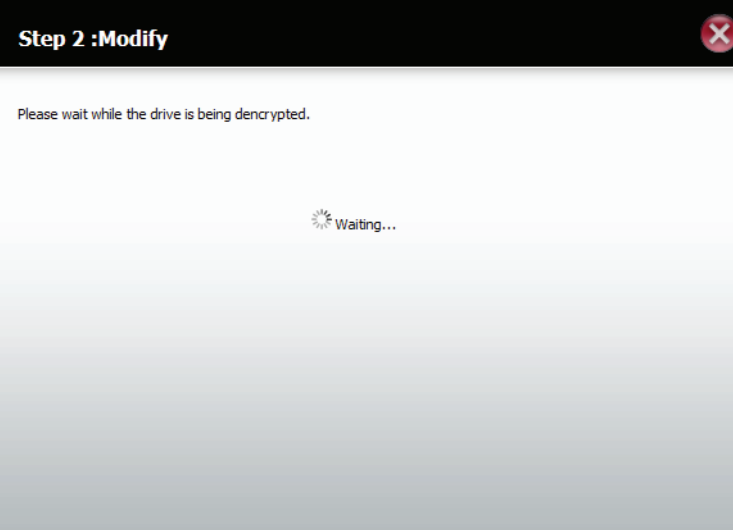


Step 2 :Modify

Please wait while the drive is being decrypted.

Waiting...


Click **Exit** to close the wizard and return to main Volume Encryption window.

Alternatively, click **Download Encrypted Key File**.

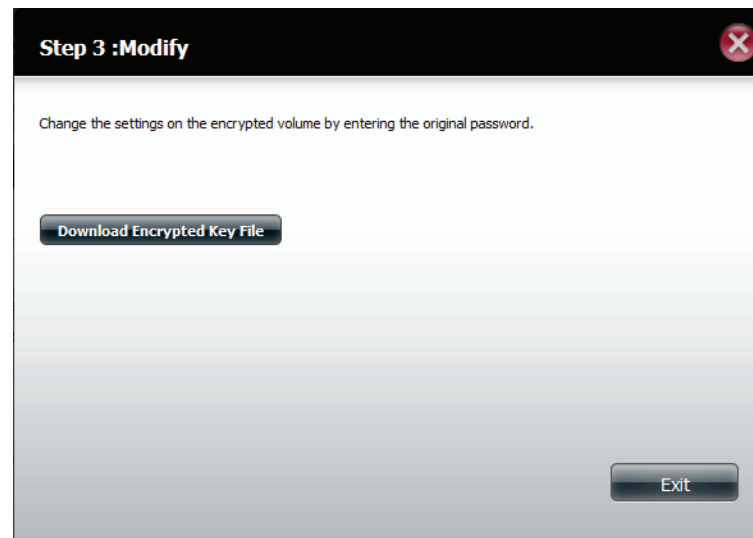

The file can be saved. Click OK to Save File.

Please Note: Using Volume Encryption slows the speed of accessing data off the DNS-327L. However, Volume Encryption does create that layer of security.

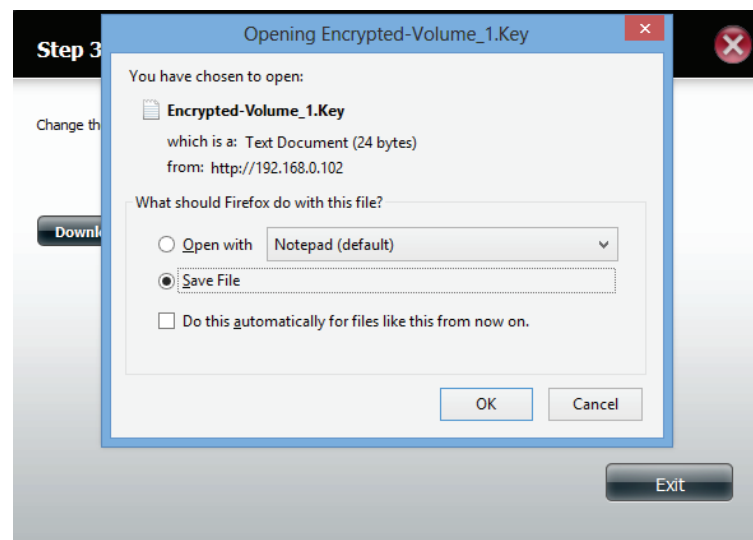

Account Management Users / Groups

Creating a Single User

The Users/Groups menu is used to create and manage user and group accounts. Up to 256 users and 32 groups can be created. By default, all users have read and write access to all folders. However access rules can be created and edited in the Network Shares menu.


Click **Management > Account Management**.

Click **Users/Groups** on the left side and then click **Create**.




The **User Setup Wizard** will appear.

Click **Next** to continue.

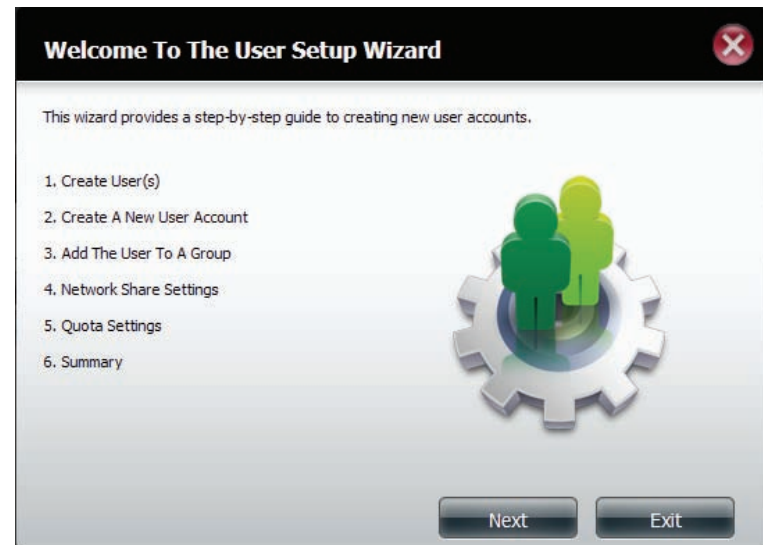

Step 1 - Select **Create A New User Account** and then click **Next** to continue.

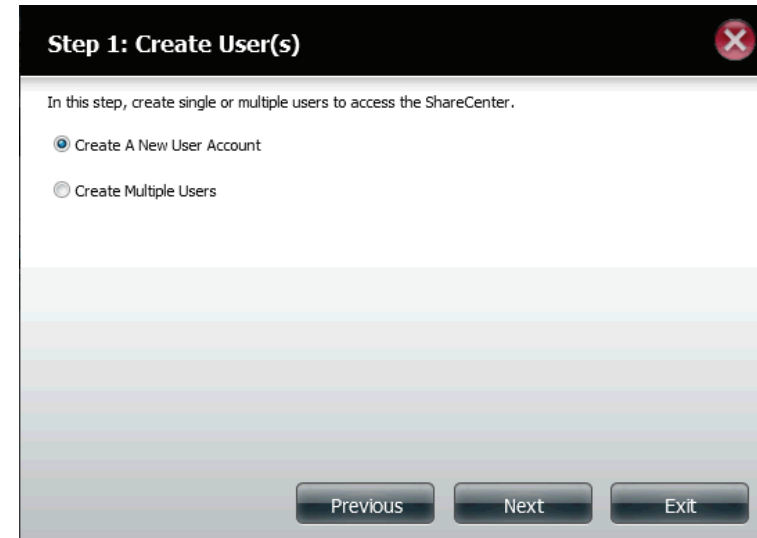

Step 1: Create User(s)


In this step, create single or multiple users to access the ShareCenter.

☒ Create A New User Account

☐ Create Multiple Users

Previous Next Exit

Step 2 - Enter the user name and password for the new user and then click **Next** to continue.

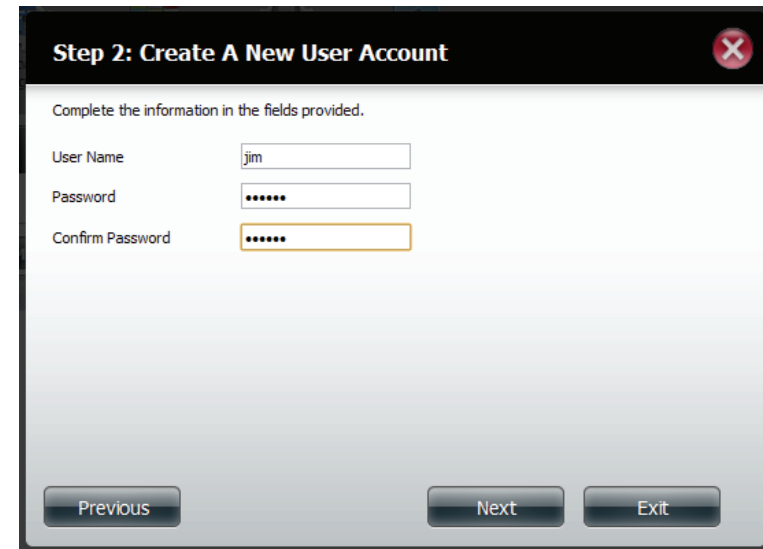

Step 2: Create A New User Account

Complete the information in the fields provided.


User Name: jim

Password:


Confirm Password:

Previous Next Exit

Step 3 - Add the user to a group by clicking the Group checkbox. Click **Next** to continue.

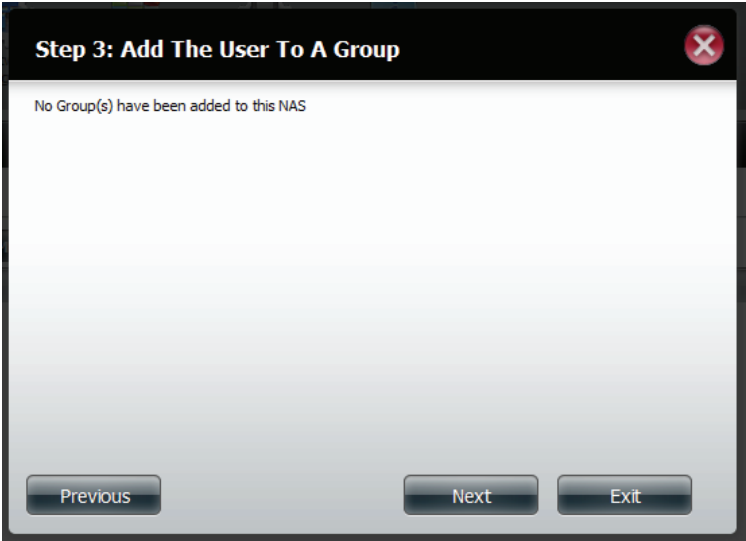


Step 4 - Select the network share settings. Select **Read Only**, **Read/Write**, or **Deny Access**. Click **Next** to continue.

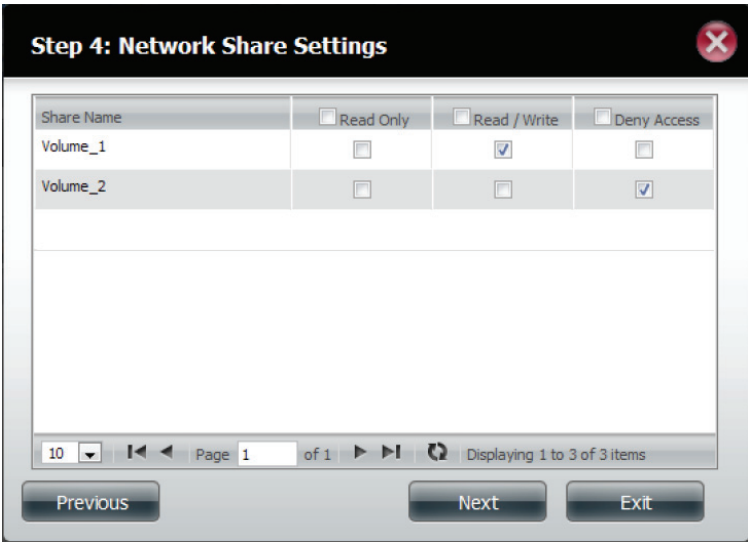

Assign Privileges/Access Methods to the user. Select either **FTP** or **WebDAV**. CIFS and AFP are set as default.

- **CIFS** is short for Common Internet File System.
- **AFP** is short for Apple Filing Protocol.
- **FTP** is short for File Transfer Protocol.
- **WebDAV** is short for Web-based Distribution, Authoring, and Versioning.

Click **Next** to continue.

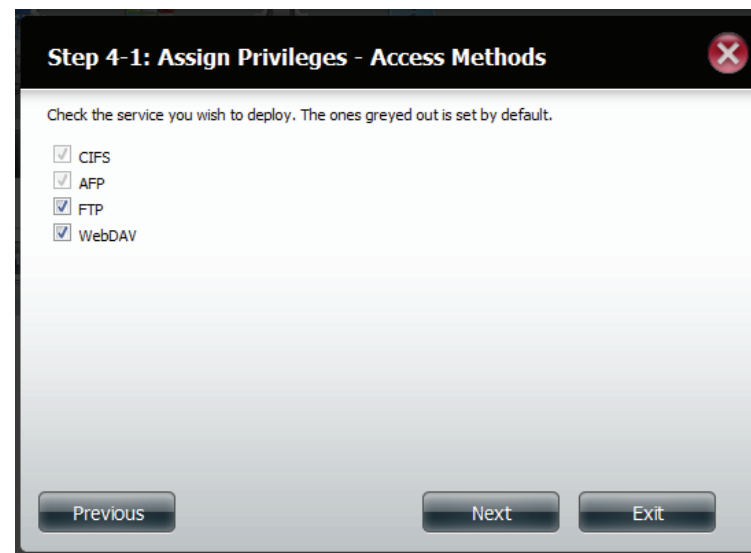

Step 4-1: Assign Privileges - Access Methods

Check the service you wish to deploy. The ones greyed out is set by default.

- ☒ CIFS
- ☒ AFP
- ☒ FTP
- ☒ WebDAV

Previous Next Exit

Select the volumes the user can have WebDAV access to and then select whether to give **Read Only** or **Read/Write** rights.

Click **Next** to continue.



Step 4-1-1: WebDAV Settings

Share Name	Read Only	Read / Write
Volume_1	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Previous Next Exit

Step 5 - Enter the amount of disk space you wish to assign the user on each volume. Enter zero to provide unlimited disk space to the user. Click **Next** to continue.

Step 5: Quota Settings

Enter the amount of hard drive space you wish to assign these users.
Entering "0" into this field denotes the quota as unlimited.

Volume_1 Quota Amount

20

MB

Volume_2 Quota Amount

20

MB

Use zero for unlimited space.

Previous

Next

Exit

Step 6 - The final step is a summary of all the configurations you made. Click **Finish** to accept the changes or click **Exit** to cancel the changes.

Step 6: Summary

This completes the wizard. Click **Previous** to review your settings. Click **Finish** to save the settings.

User Name

jim

Group Name

Read Only

Volume_1,

Read / Write

Volume_2

Deny Access

Application List

FTP,Webdav


Previous

Finish

Exit

Creating Multiple Users

Step 1 - Select **Create Multiple Users** and then click **Next** to continue.

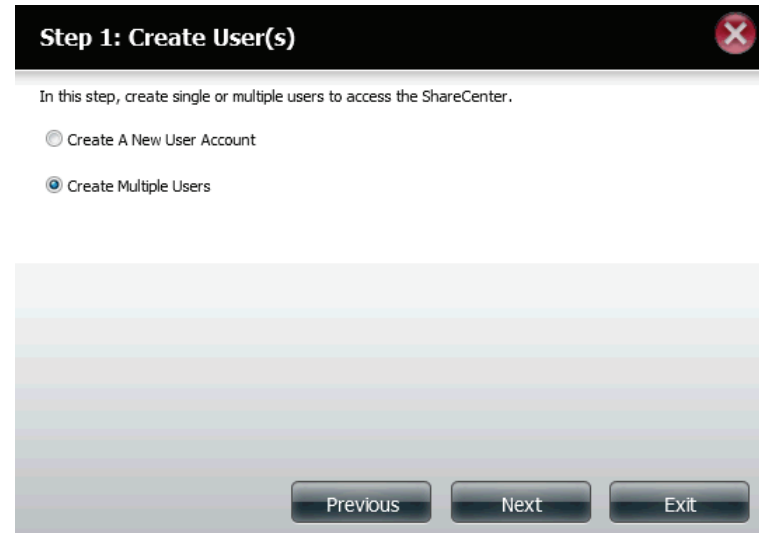

Step 1: Create User(s)

In this step, create single or multiple users to access the ShareCenter.

☐ Create A New User Account

☒ Create Multiple Users

Previous Next Exit

Step 2 - Enter the following information:


Enter a username.

Enter the account prefix. The Account Prefix is a starting number (Eg. 1, no alphabet letters are allowed) you select for the user list.

Enter the amount of users you want to create. Next to the input field is the remaining amount of users you can add to the NAS.

Enter a password and confirm it.

Click **Next** to continue.

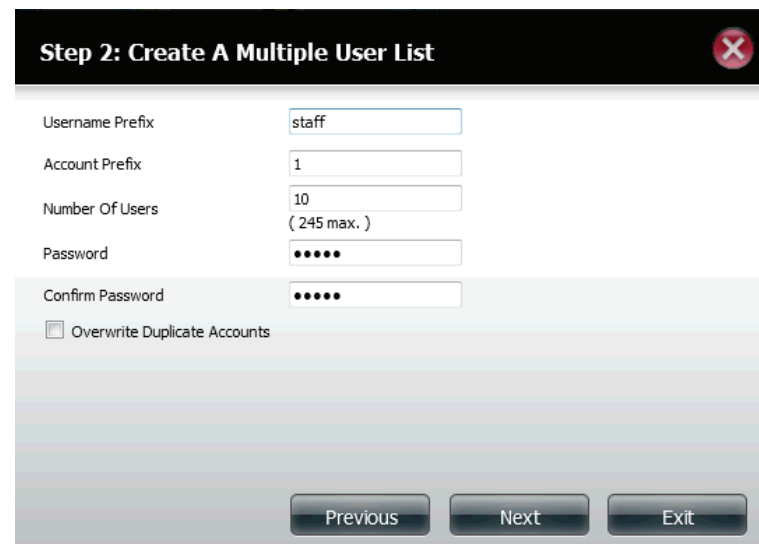

Step 2: Create A Multiple User List

Username Prefix: staff

Account Prefix: 1

Number Of Users: 10 (245 max.)

Password: •••••


Confirm Password: •••••

☐ Overwrite Duplicate Accounts


Previous Next Exit

Step 3 - Add the user(s) to a group by clicking the **Group** checkbox.

Click **Next** to continue.

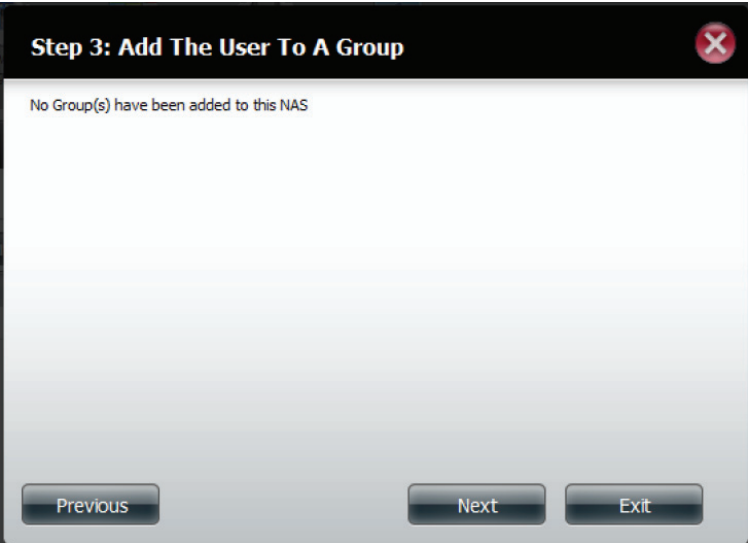

Step 4 - Select the network share settings. Select **Read Only**, **Read/Write**, or **Deny Access**. Click **Next** to continue.

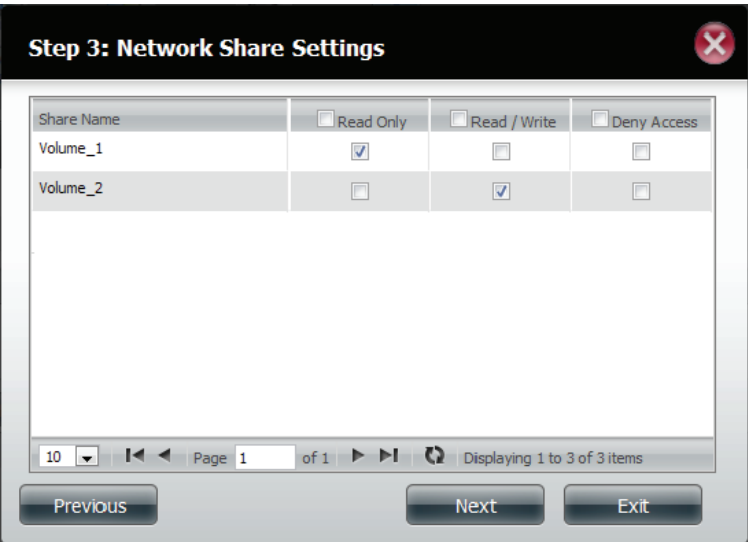

Assign Privileges/Access Methods to the user(s). Select FTP. CIFS and AFP are set as default.

- **CIFS** is short for Common Internet File System.
- **FTP** is short for File Transfer Protocol.

Click **Next** to continue.



Step 4-1: Assign Privileges - Access Methods


Check the service you wish to deploy. The ones greyed out is set by default.

☒ CIFS
☒ FTP

Previous Next Exit

Step 5 - Enter the amount of disk space you wish to assign the user(s) on each volume. Type **0** to provide unlimited disk space to the user(s).

Click **Next** to continue.

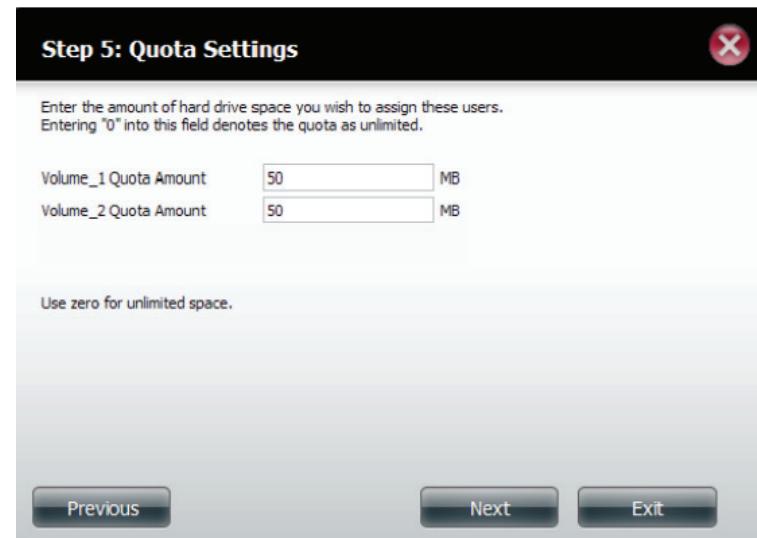

Step 5: Quota Settings


Enter the amount of hard drive space you wish to assign these users.
Entering "0" into this field denotes the quota as unlimited.

Volume_1 Quota Amount 50 MB
Volume_2 Quota Amount 50 MB


Use zero for unlimited space.

Previous Next Exit

Step 6 - The final step is a summary of all the configurations you made. Click **Finish** to accept the changes or click **Exit** to cancel the changes.

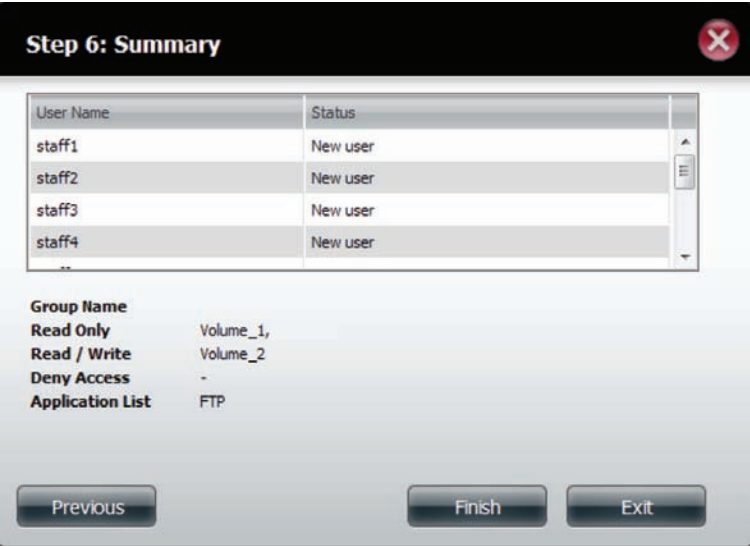


The User Settings window will show a list of the users created.

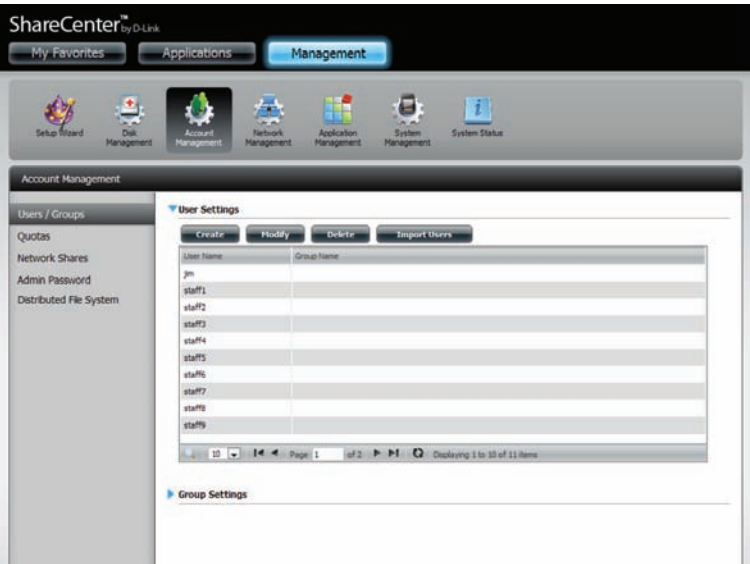

Modify Users


Step 1 - Click the user you wish to modify. The user will be highlighted in red.

Click **Modify** to continue.

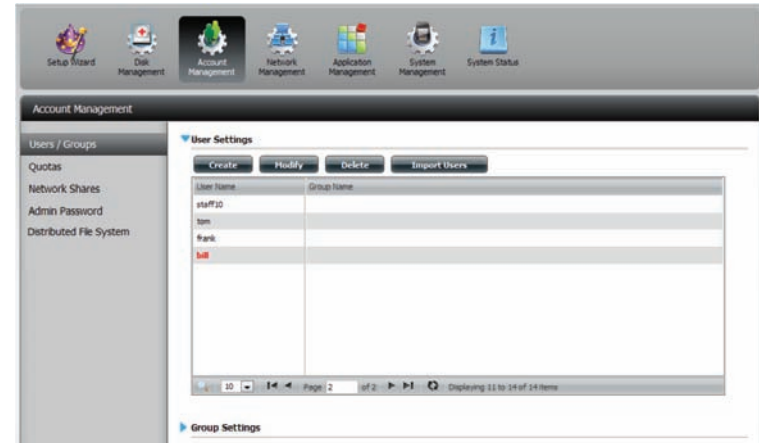

Step 2 - The User Setup Wizard will appear.

Click **Next** to continue.

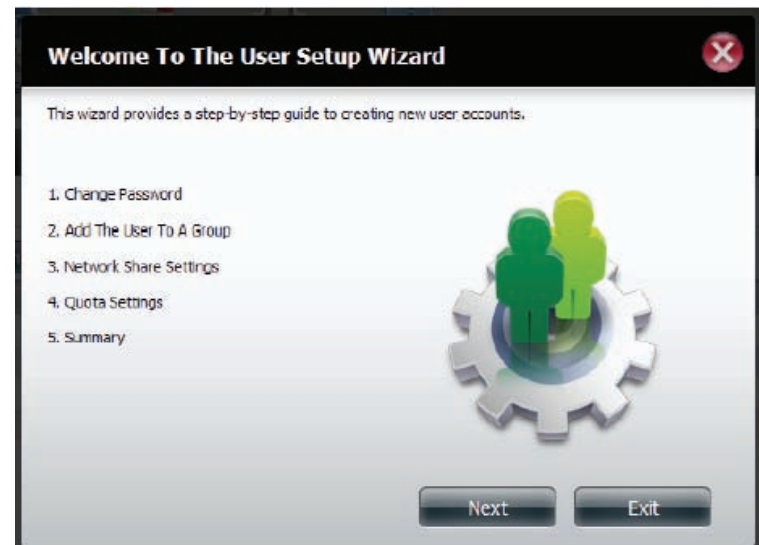

Step 3 - Change the username or password. Click **Next** to continue.

Step 1: Change Password

User Name

bill

Password

Confirm Password

Previous

Next

Skip

Exit

Step 4 - Change the Network Share Settings. Click **Next** to continue.

Step 3: Network Share Settings

Share Name	<input type="checkbox"/> Read Only	<input type="checkbox"/> Read / Write	<input type="checkbox"/> Deny Access
Volume_1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Volume_2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

10

Page 1 of 1

Displaying 1 to 3 of 3 items

Previous


Next

Exit

Step 5 - Assign Privileges/Access Methods for the user. Select either FTP or WebDAV. CIFS and AFP are set as default.

- **CIFS** is short for Common Internet File System.
- **AFP** is short for Apple Filing Protocol.
- **FTP** is short for File Transfer Protocol.
- **WebDAV** is short for Web-based Distribution, Authoring, and Versioning.

Click **Next** to continue.

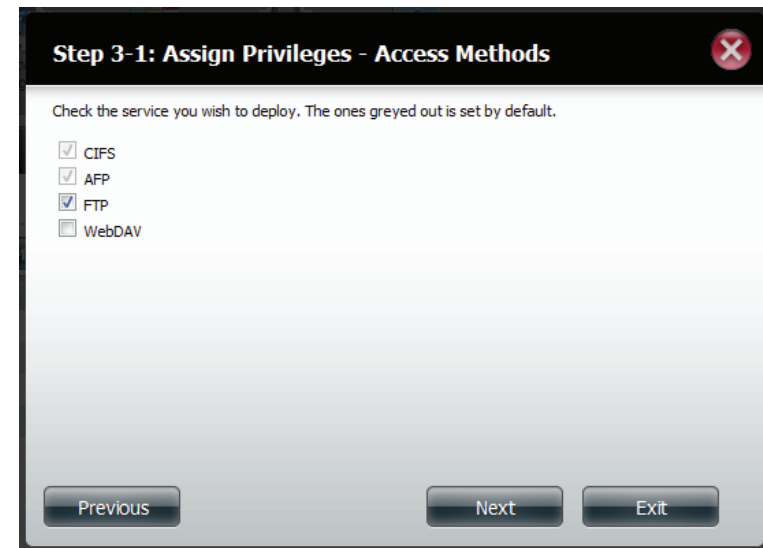

Step 3-1: Assign Privileges - Access Methods


Check the service you wish to deploy. The ones greyed out is set by default.

- ☒ CIFS
- ☒ AFP
- ☒ FTP
- ☐ WebDAV

Previous Next Exit

Step 6 - Enter the re-assigned amount of disk space you wish to assign the user on each volume. Type 0 to provide unlimited disk space to the user.

Click **Next** to continue.

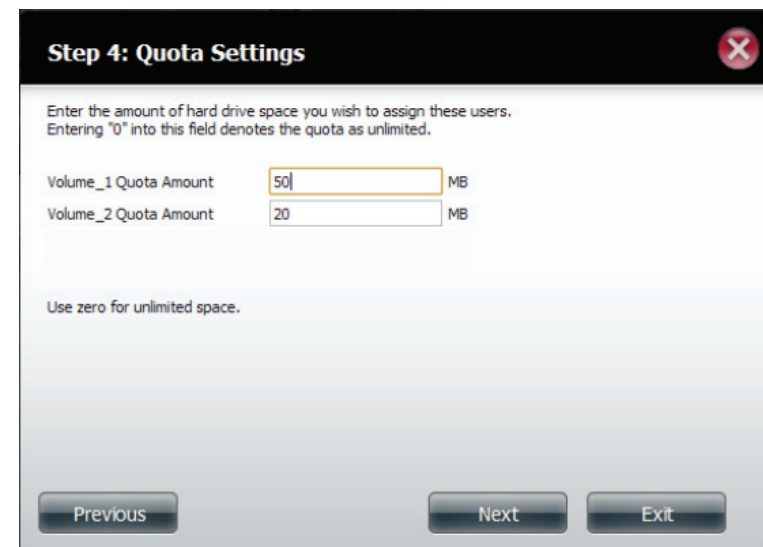

Step 4: Quota Settings

Enter the amount of hard drive space you wish to assign these users.
Entering "0" into this field denotes the quota as unlimited.


Volume_1 Quota Amount MB

Volume_2 Quota Amount MB


Use zero for unlimited space.

Previous Next Exit

Step 7 - The final step is a summary of all the configurations you made. Click **Finish** to accept the changes or **Exit** to cancel the changes.

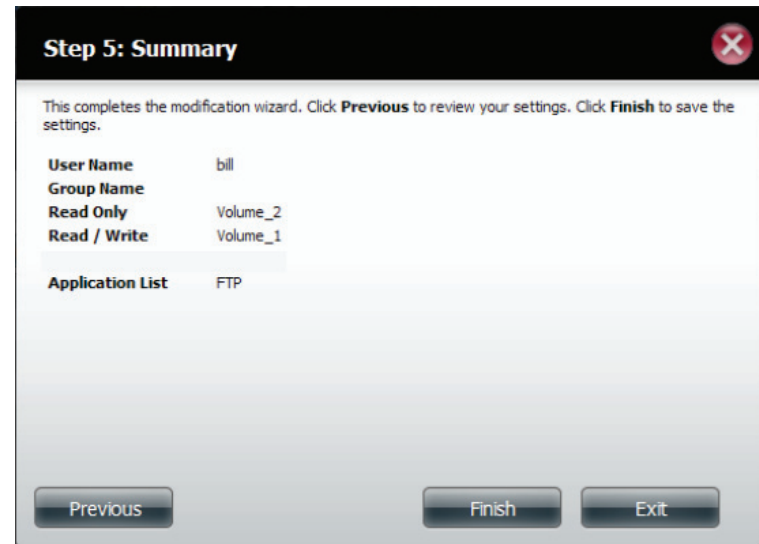


Step 8 - A message will appear stating the user details have been changed successfully. Click **Yes** to exit the wizard.

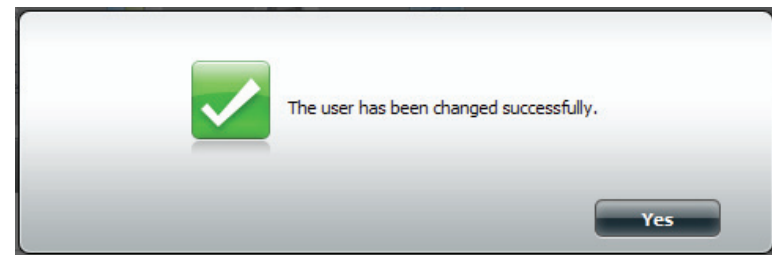


Deleting Users

Step 1 - Click the user you wish to delete. The user will be highlighted in red. Click **Delete** to continue.

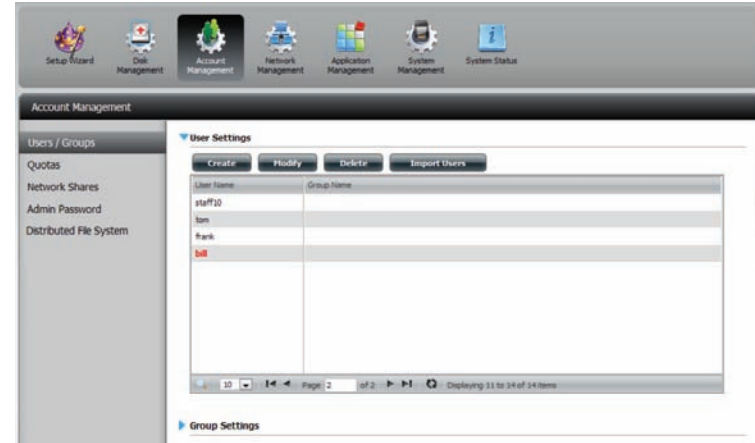


Step 2 - A message will appear prompting you to confirm deleting the user. Click **Yes** to confirm.

The user is now removed from the list.

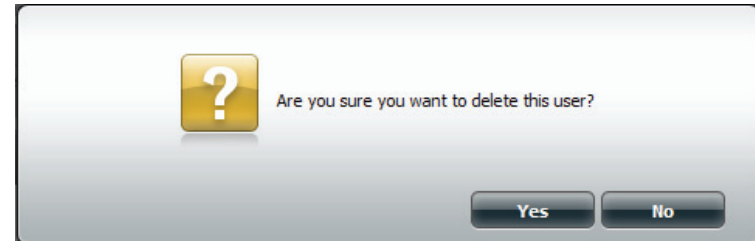


Importing Users

Step 1 - Click **Account Management > Users/Groups > Import Users**.

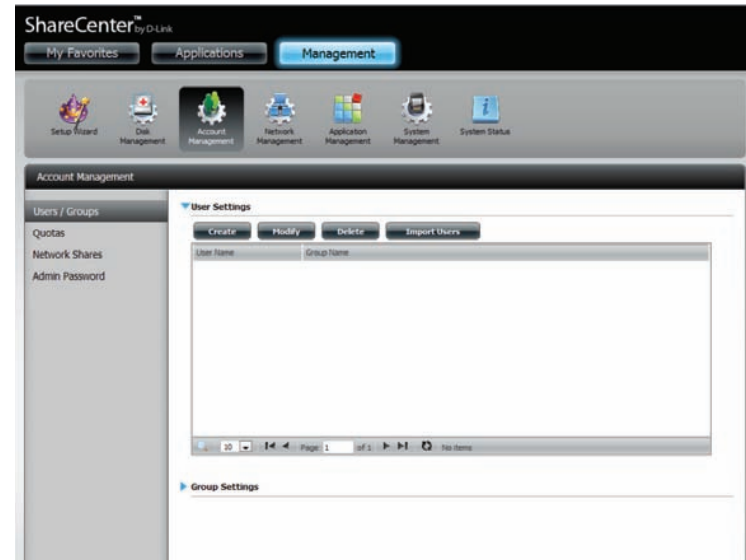

Step 2 - The Import Users Wizard will start. Click **Next** to continue.

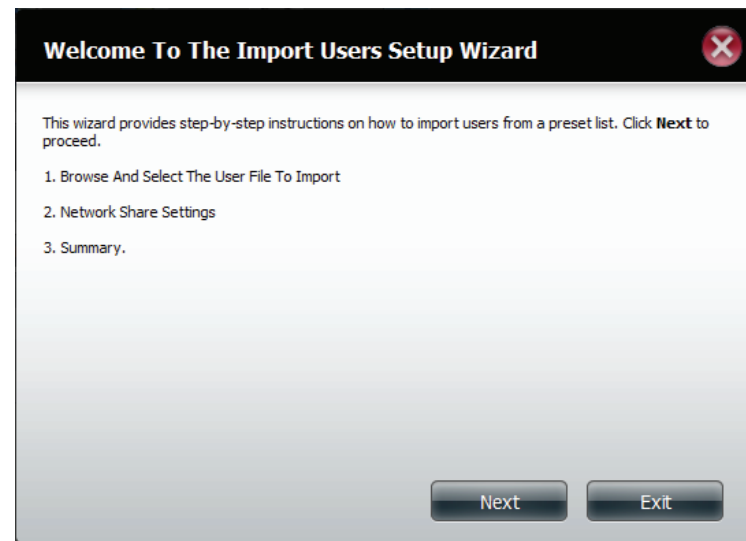

Step 3 - Click **Download** to see a sample file. (import_file.txt)

Format: user name/user password/user groups/shared folder(rw)/
shared folder(ro)/shared folder(deny)/user quota


Ex: staff3/staff3/Group_Staff2/Folder_RW1///100

Note: You must create the user groups and share folders first before importing the users file

Check the **Overwrite Duplicate Accounts** box if this is necessary.

Click **Browse** to select the file you want to import.

Click **Next** to continue

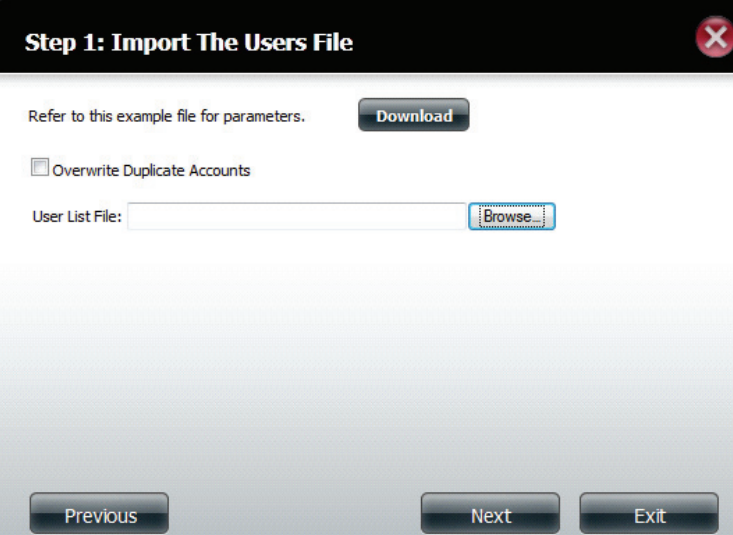

Step 1: Import The Users File

Refer to this example file for parameters. **Download**


☐ Overwrite Duplicate Accounts

User List File: **Browse**

Previous **Next** **Exit**

Step 4 - Assign the privileges and access methods.

Click **Next** to continue.

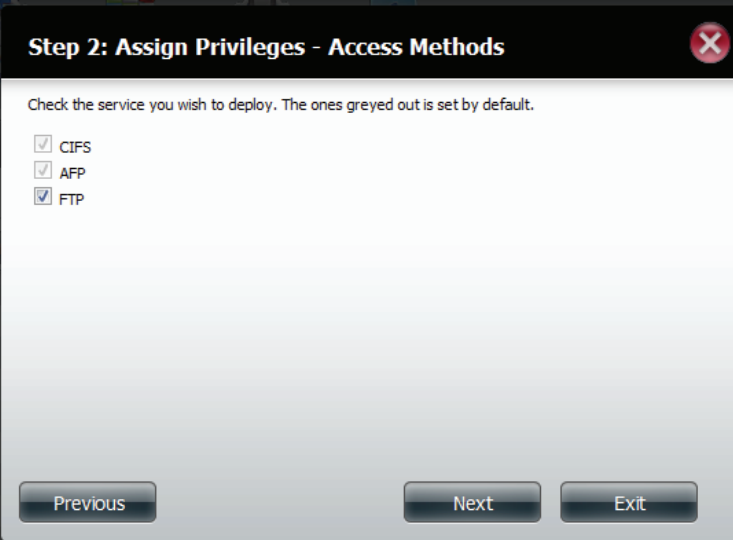

Step 2: Assign Privileges - Access Methods

Check the service you wish to deploy. The ones greyed out is set by default.

- ☒ CIFS
- ☒ AFP
- ☒ FTP




Previous **Next** **Exit**

Step 5 - The Summary will show a list of the imported users. If there are problems with the user list, the wizard will show the errors in red on the table.

Click **Finish** to close the wizard or go back to change the imported file.

Click the “i” icon to see details of each user.


Each user’s details are provided in a list according to username, group name, read/write priveledges, or access control

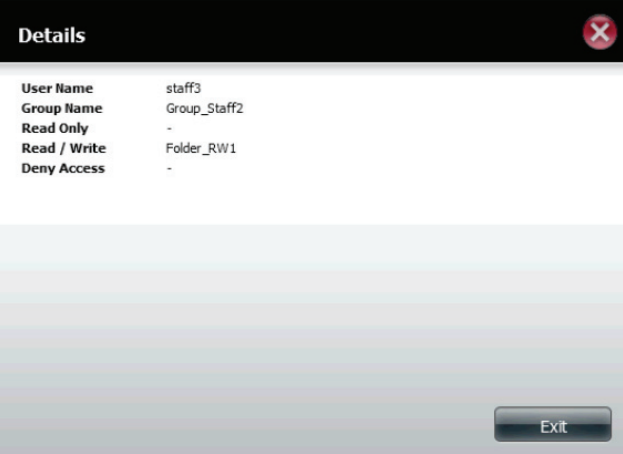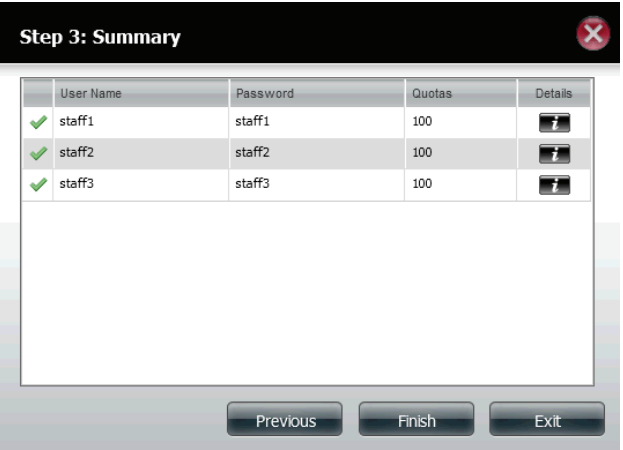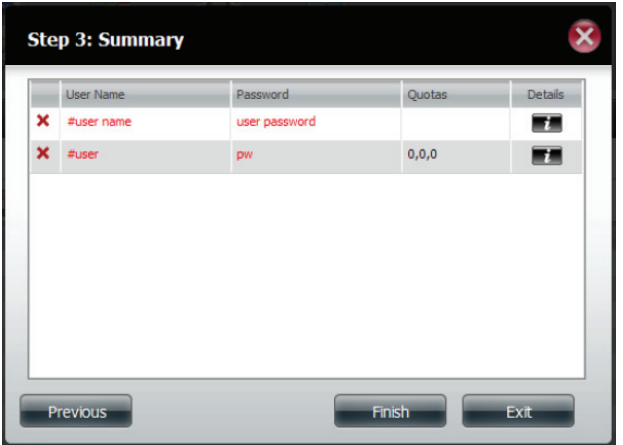

Creating a Group

Step 1 - Click **Account Management > Users/Groups**.

Click the blue arrow next to Group Settings and settings window will appear. Click **New** to create a new Group.

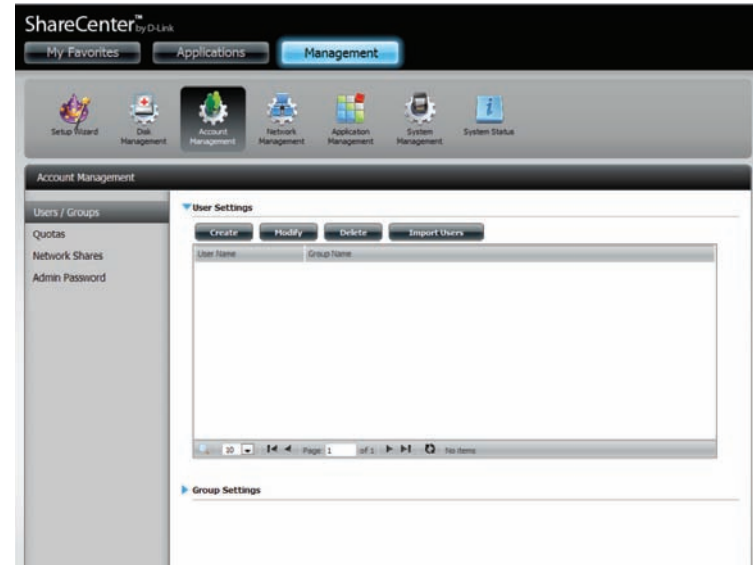

Step 2 - The Group Setup Wizard will now start. Click **Next** to continue.



Step 3 - Enter a Group Name. Click **Next** to continue

Step 1: Create A New Group

Group Name

tech_lab

Previous

Next

Exit

Step 4 - Click the checkbox to select the user(s) you wish to add to the group and then click **Next** to continue.

Step 2: Join User To Group

User Name	<input type="checkbox"/>
staff5	<input type="checkbox"/>
staff6	<input type="checkbox"/>
staff7	<input checked="" type="checkbox"/>
staff8	<input type="checkbox"/>
staff9	<input type="checkbox"/>
staff10	<input type="checkbox"/>
tom	<input checked="" type="checkbox"/>
bill	<input type="checkbox"/>


Previous

Next

Exit

Step 5 - Select the Network Share Settings (read, read/write, deny access) for the corresponding disk volume for the group.

Click **Next** to continue.

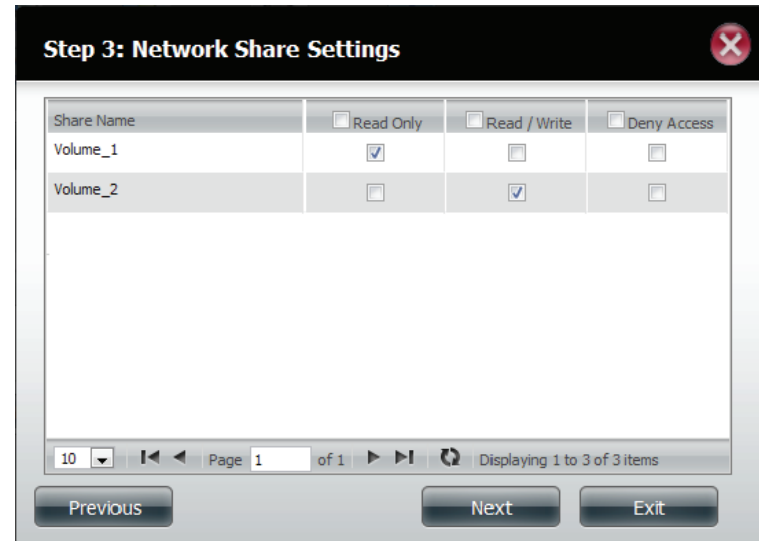

The screenshot shows a window titled "Step 3: Network Share Settings" with a close button in the top right. It contains a table with three columns: "Share Name", "Read Only", "Read / Write", and "Deny Access". There are two rows: "Volume_1" and "Volume_2". In the "Volume_1" row, the "Read Only" checkbox is checked. In the "Volume_2" row, the "Read / Write" checkbox is checked. Below the table is a pagination bar showing "Page 1 of 1" and "Displaying 1 to 3 of 3 items". At the bottom are three buttons: "Previous", "Next", and "Exit".


Share Name	<input type="checkbox"/> Read Only	<input type="checkbox"/> Read / Write	<input type="checkbox"/> Deny Access
Volume_1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Volume_2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

10 | Page 1 of 1 | Displaying 1 to 3 of 3 items

Previous Next Exit

Step 6 - Select the Privileges/Access Methods you want to assign to the group. The greyed out selections are assigned by default.

Click **Next** to continue.

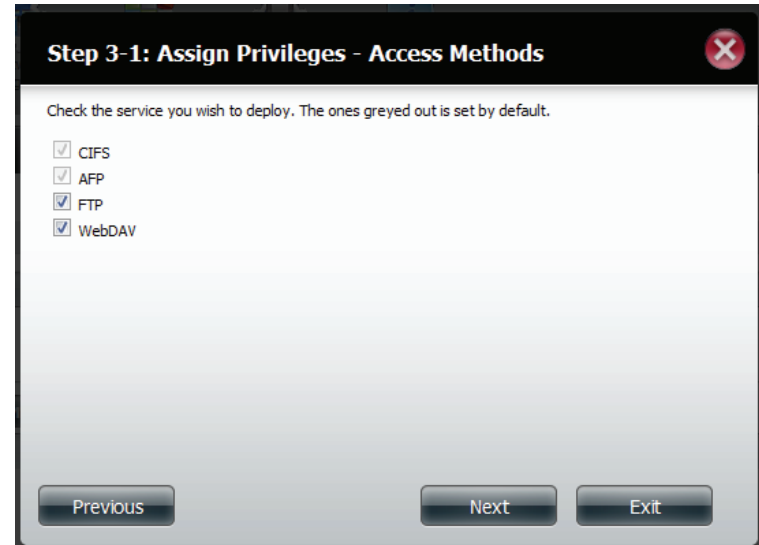

The screenshot shows a window titled "Step 3-1: Assign Privileges - Access Methods" with a close button in the top right. It contains a list of services with checkboxes: CIFS, AFP, FTP, and WebDAV. All four checkboxes are checked. Below the list is a pagination bar showing "Page 1 of 1" and "Displaying 1 to 3 of 3 items". At the bottom are three buttons: "Previous", "Next", and "Exit".

Check the service you wish to deploy. The ones greyed out is set by default.

- ☒ CIFS
- ☒ AFP
- ☒ FTP
- ☒ WebDAV

Previous Next Exit

Step 7 - Select the appropriate WebDAV settings and click **Next** to continue.

Step 3-1-1: WebDAV Settings

Share Name	Read Only	Read / Write
Volume_1	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Volume_2	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Previous

Next

Exit

Step 8 - Enter the amount of space you want to assign to the group for each volume. Enter zero to give unlimited disk space to the group. Click **Next** to continue.

Step 4: Quota Settings

Enter the amount of hard drive space you wish to assign these users.
Entering "0" into this field denotes the quota as unlimited.

Volume_1 Quota Amount

50

MB

Volume_2 Quota Amount

50

MB


Use zero for unlimited space.

Previous


Next

Exit

Step 9 - The wizard is now complete. The last step shows a summary of the group you created. Click **Previous** to change your settings or **Finish** to end the wizard.

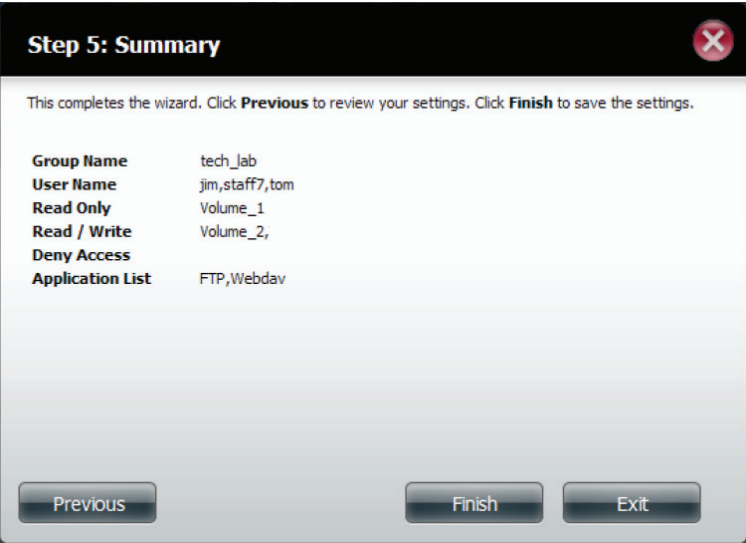


Step 10 - Under Group Settings, a table will display the group you just created.

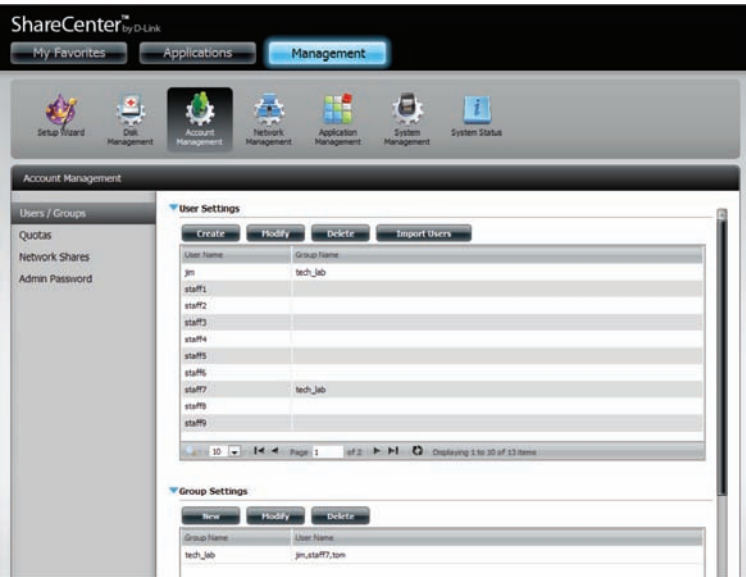

Modifying a Group


Step 1 - Click **Account Management** > **Users/Groups**.

Click the blue arrow next to Group Settings and the Group Settings table will appear.

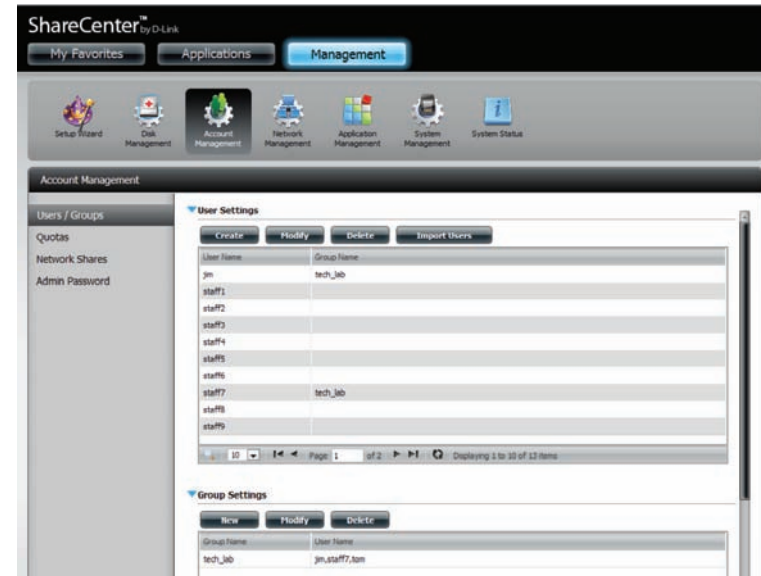

Step 2 - Select the group you want to modify. Your selection will turn red.


Click **Modify** to change the settings for the Group.

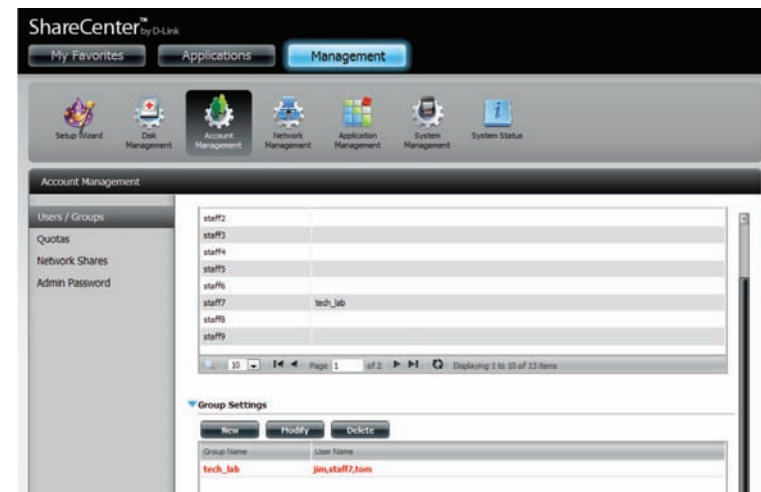


Step 3 - The Group Setup Wizard will now start. Click **Next** to continue.



Step 4 - Make the necessary modifications to the group and then click **Next** to continue.

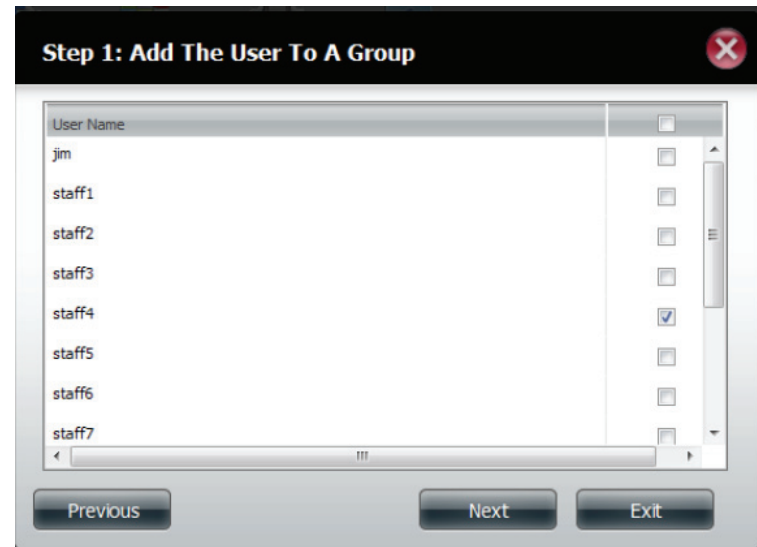

Step 5 - Select the appropriate Network Share Settings (read, read/write, deny access) for the corresponding disk volume for the group. Click **Next** to continue.

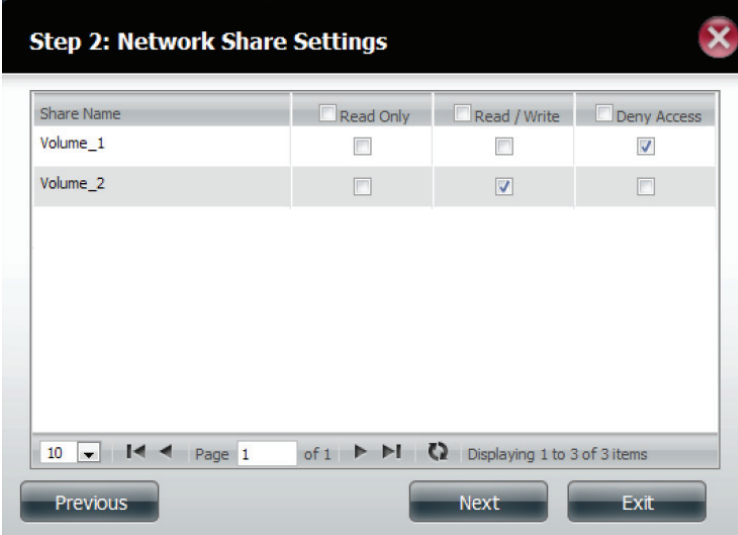


The screenshot shows a window titled "Step 2: Network Share Settings" with a close button in the top right corner. It contains a table with three columns: "Share Name", "Read Only", "Read / Write", and "Deny Access". There are two rows of data: "Volume_1" and "Volume_2". In the "Volume_1" row, "Read Only" is unchecked, "Read / Write" is unchecked, and "Deny Access" is checked. In the "Volume_2" row, "Read Only" is unchecked, "Read / Write" is checked, and "Deny Access" is unchecked. Below the table is a pagination bar showing "10" items, "Page 1 of 1", and "Displaying 1 to 3 of 3 items". At the bottom are three buttons: "Previous", "Next", and "Exit".

Share Name	<input type="checkbox"/> Read Only	<input type="checkbox"/> Read / Write	<input type="checkbox"/> Deny Access
Volume_1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Volume_2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

Step 6 - Select the appropriate privileges you want to assign to the group. The greyed out selections are assigned by default and cannot be modified.

Click **Next** to continue.

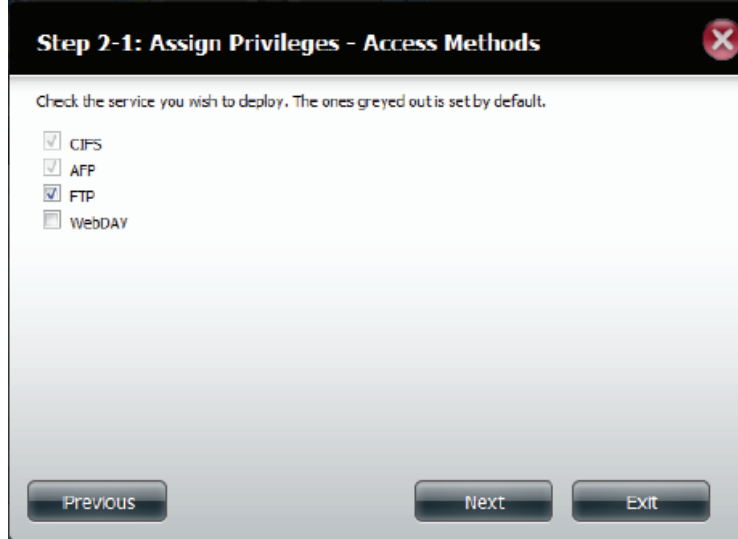


The screenshot shows a window titled "Step 2-1: Assign Privileges - Access Methods" with a close button in the top right corner. It contains a list of services with checkboxes: CIFS, AFP, FTP, and WebDAV. The first three are checked, and the last one is unchecked. Below the list are three buttons: "Previous", "Next", and "Exit".

Check the service you wish to deploy. The ones greyed out is set by default.

- ☒ CIFS
- ☒ AFP
- ☒ FTP
- ☐ WebDAV

Step 7 - Select either Read Only or Read/ Write privileges for WebDav Settings.

Click **Next** to continue.

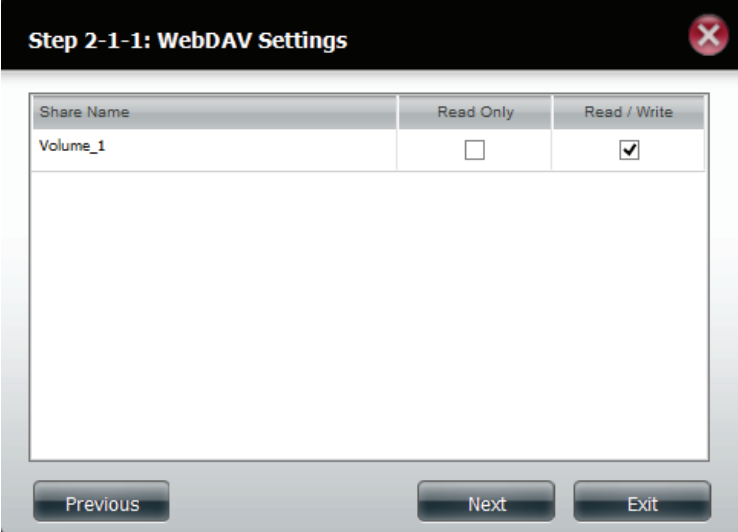


The dialog box titled "Step 2-1-1: WebDAV Settings" contains a table with two columns: "Read Only" and "Read / Write". The first row, labeled "Volume_1", shows the "Read / Write" checkbox checked. Below the table are "Previous", "Next", and "Exit" buttons.

Share Name	Read Only	Read / Write
Volume_1	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Step 8 - Edit the amount of space you want to assign to the group for each volume. Enter zero to give unlimited disk space to the group.

Click **Next** to continue.

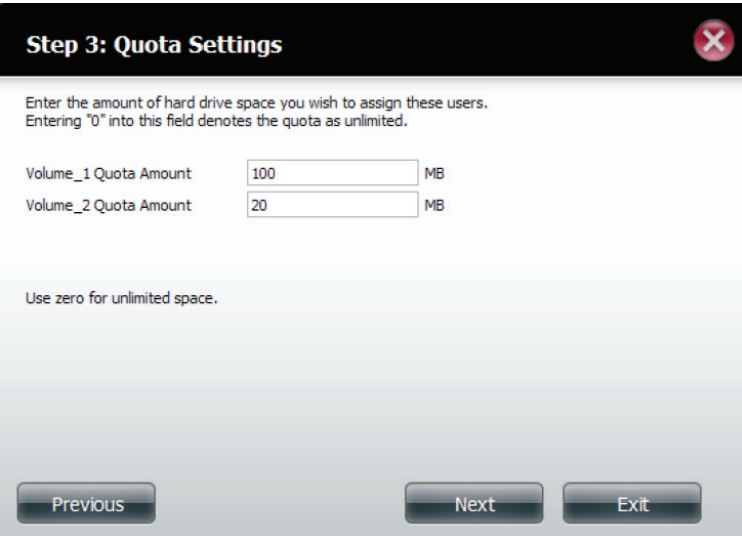

The dialog box titled "Step 3: Quota Settings" provides instructions on setting quotas and includes input fields for "Volume_1 Quota Amount" (100 MB) and "Volume_2 Quota Amount" (20 MB). It also features "Previous", "Next", and "Exit" buttons at the bottom.


Enter the amount of hard drive space you wish to assign these users.
Entering "0" into this field denotes the quota as unlimited.

Volume_1 Quota Amount: MB
Volume_2 Quota Amount: MB

Use zero for unlimited space.


Step 9 - When editing the quota, make sure the size is not smaller than the user quota on his/her account.

Click **Yes** to change the quota.

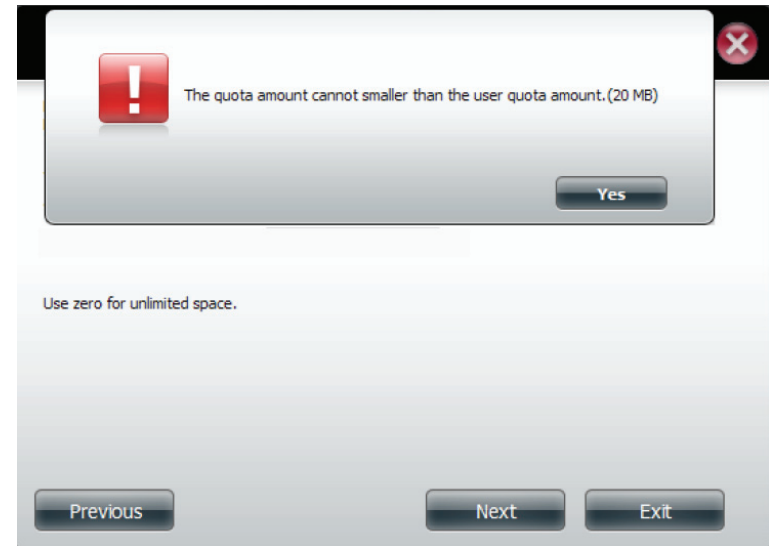


Step 9 - The wizard is now complete and will display a summary of the group you edited.

Click **Previous** to change your settings or **Finish** to end the wizard. **Exit** will cancel all changes you made.

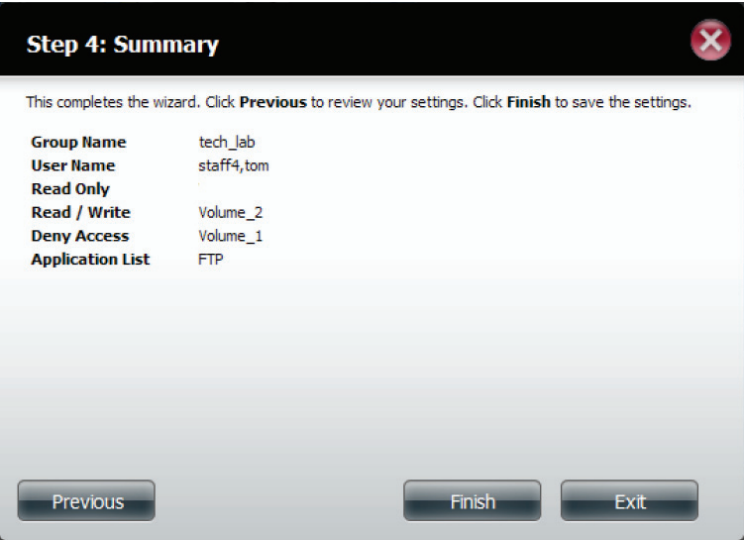


Deleting a Group

Step 1 - Select the Group you want to delete and click **Delete**.

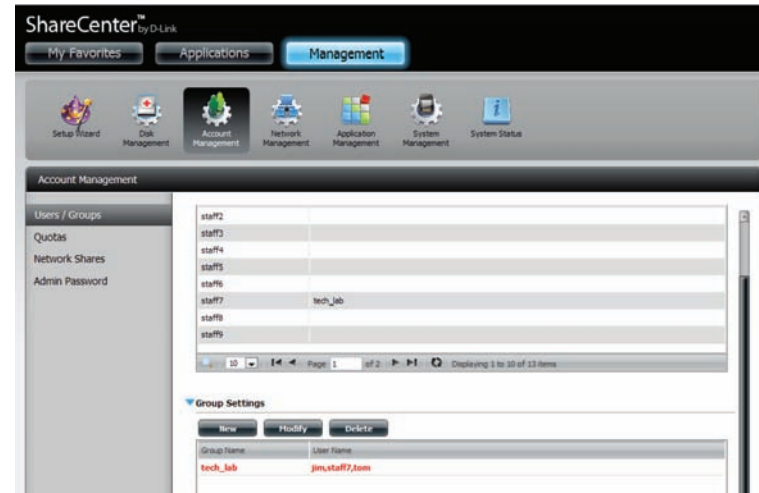


Step 2 - A warning message will appear asking you to verify if you want to delete the Group. Click **Yes** to delete the Group or **No** to cancel your decision.

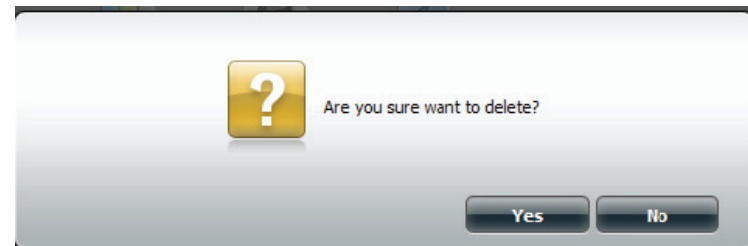


Quotas

The ShareCenter™ supports storage quotas for both groups and individuals. Assigning a quota to a group or user will limit the amount of storage allocated. By default, users and groups do not have a quota. Click **Account Management** and then **Quotas** on the left side.


Click **Enable** to activate Quota Settings. The status will now display 'Started' notifying you that the Quota Settings are enabled.

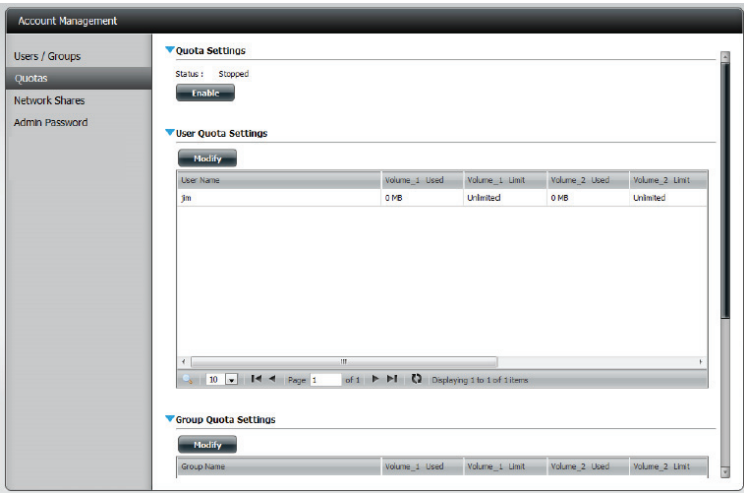

To Modify a User's Quota Settings, click the blue arrow next to User Quota Settings to reveal a table of users.

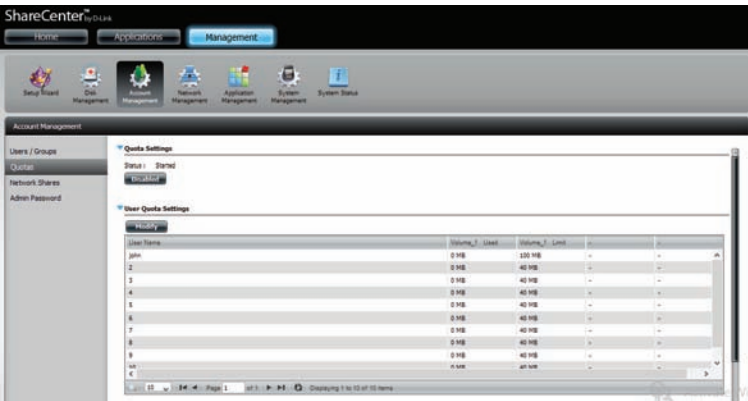


Select the User you want to modify. Your selection will turn red.
Click **Modify** to change the user's settings.

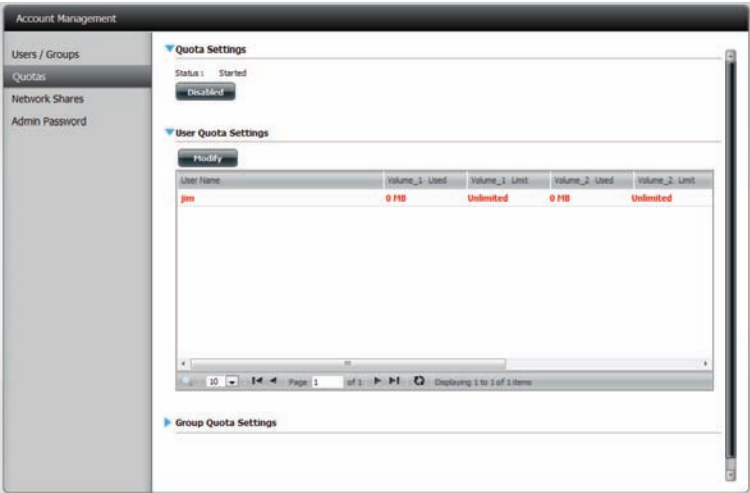


The Quota Settings configuration box will display the user account you want to modify. Enter a new quota amount for each volume.


Click **Apply** to confirm your settings.

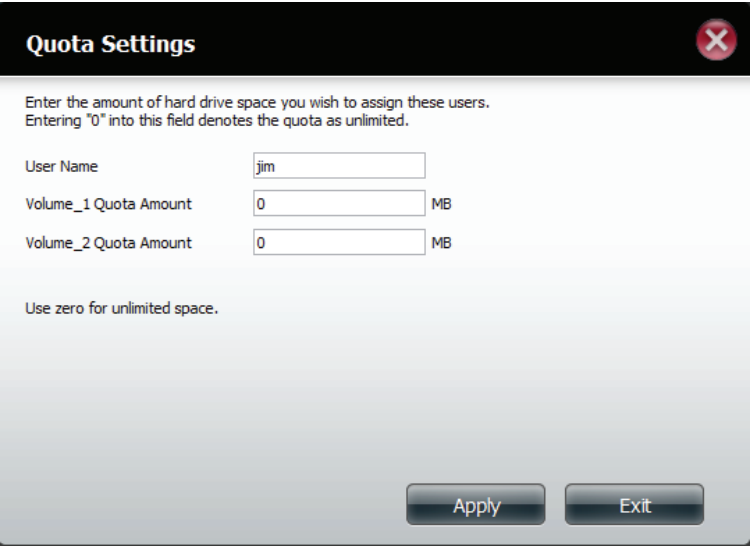


The modified quota settings will be displayed in the table.

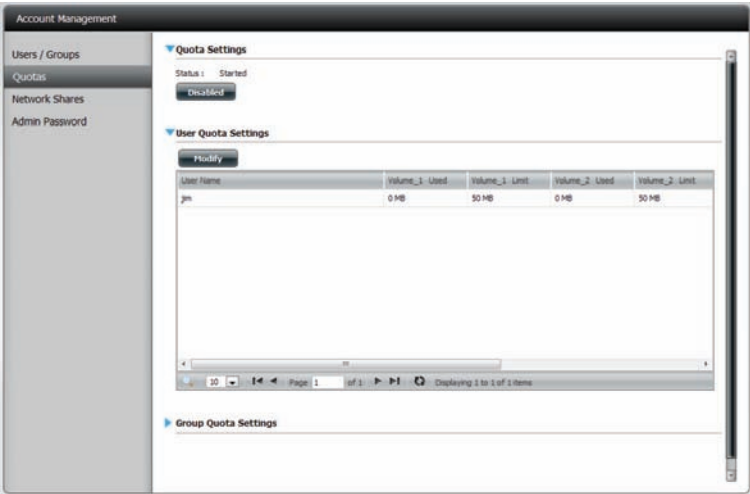


For Group Quota Settings, click the blue drop-down arrow next to Group Quota Settings to view the group quota table.

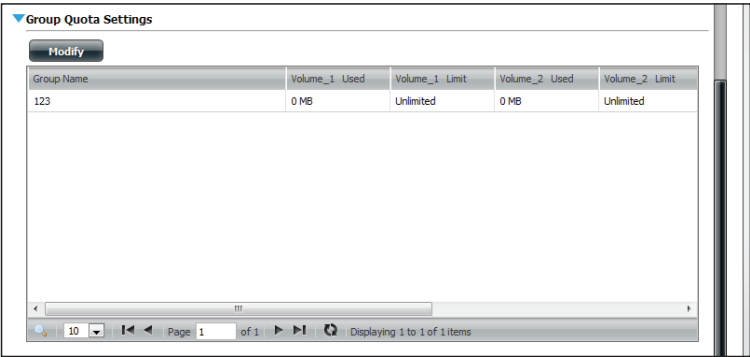

Select the group you want to modify. Your selection will turn red. Click **Modify**.

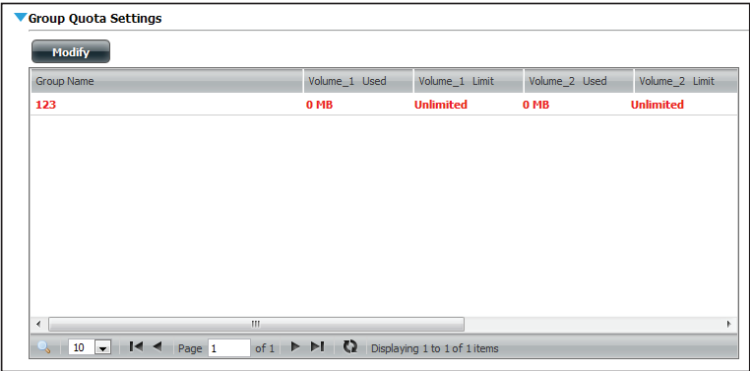

The Group Quota Settings screen will display the group you want to modify. Enter a new quota amount for each volume for the current group and click **Apply**.

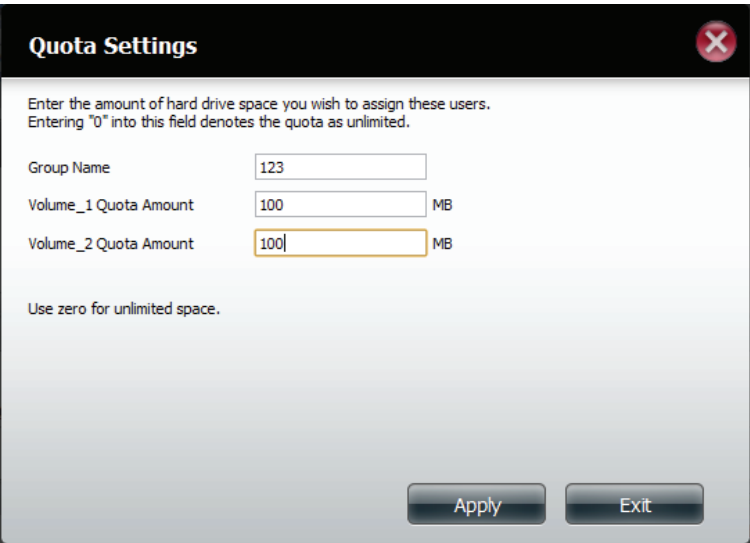

The modified quota settings will be displayed in the table.

Group Quota Settings

Modify

Group Name	Volume_1 Used	Volume_1 Limit	Volume_2 Used	Volume_2 Limit
123	0 MB	100 MB	0 MB	100 MB

10Page 1 of 1Displaying 1 to 1 of 1 items

Network Shares

The Network Shares page allows the user to configure shared folders and rights to specific users and groups. You can also mount .iso files in the ISO Mount Shares settings. When a user has access to a mounted .iso, he/she will also have access to all the files on it.



Network Share/ISO Mount Shares: The Network Shares Settings window allows the user to add, modify, and remove both new and existing Network Share and ISO Mount Share Settings.

To add a rule click on the **New** button. To modify an existing rule click on the **Modify** button. To remove a rule click on the **Delete** button.

To select a rule, simply click on the rule. Your selection will turn red, indicating it is selected for use.

At the bottom of the table, the user can navigate through pages and also refresh the window by click on the **Refresh** button.

Click on the **Reset Network Shares** button to reset the network access list to the default configuration.

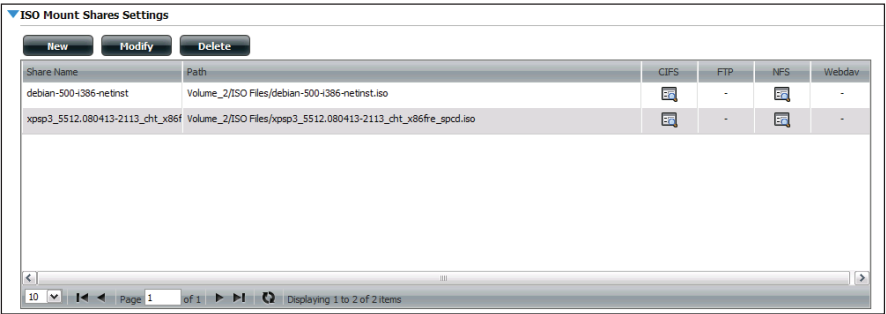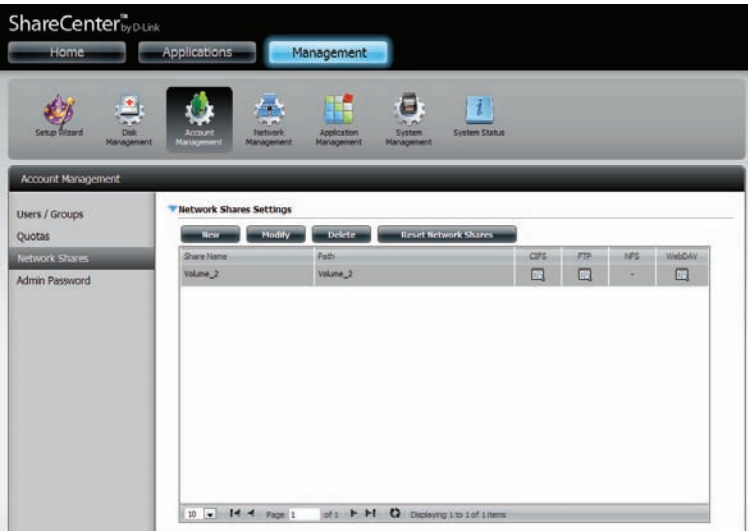

Add/Modify Network Shares Wizard

The following section will describe how to add a new Network Share on the ShareCenter™. To add a Network Share click on the **New** button. An easy to configure wizard will launch.

Step 1 - This window welcomes the user to the setup wizard for creating a new network share.


In this wizard the user will be able to:

- 1) Select share folders.
- 2) Configure shared folder access rights.
- 3) Configure network access settings.
- 4) View a summary of the configuration before completing.

Click **Next** to continue.


Step 2 - Select the Share Folder from one of the volumes.

Click **Next** to continue.

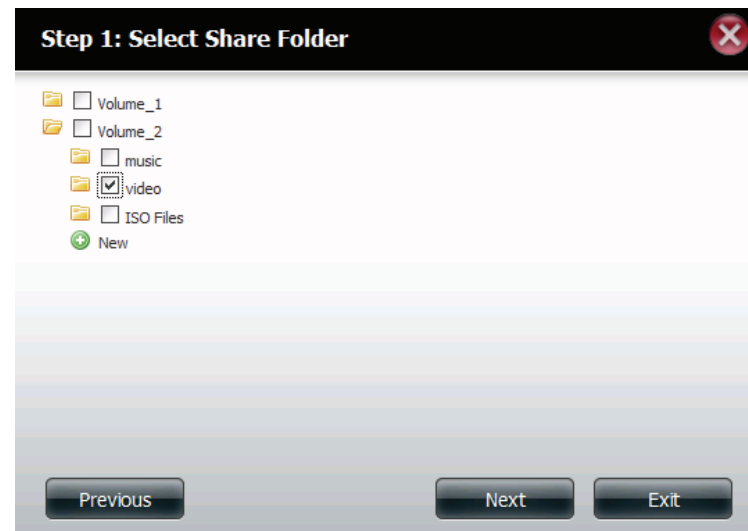

Step 3 - Select the user accounts or group which are allowed to access this folder(s). Select **All Accounts** to allow access to this folder to all the accounts. Select **Specific User/Group** to only allow certain users or groups access to this folder.

Click **Next** to continue.

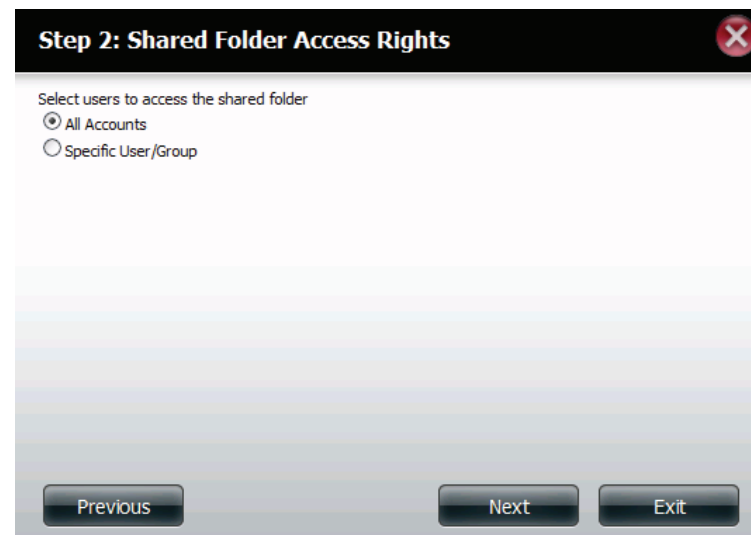

Step 2: Shared Folder Access Rights

Select users to access the shared folder

- ☒ All Accounts
- ☐ Specific User/Group

Previous Next Exit

Step 4 - Select the appropriate access rights for the share. Options to select from are Read Only, Read/Write, and Deny Access.

This procedure can also be used to block certain users from accessing certain folders.

Click **Next** to continue.




Step 2-1: Assign Access Rights

- ☐ Read Only
- ☒ Read / Write
- ☐ Deny Access

Previous Next Exit

Step 5 - If you selected **Specific User/Group** in Step 3, then this step allows you to set the access rights for each User configured on the ShareCenter™.

Click **Next** to continue.

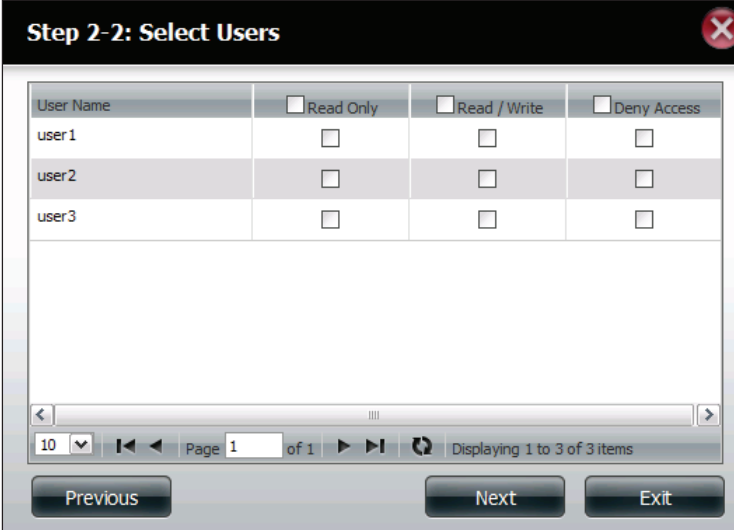


The screenshot shows a window titled "Step 2-2: Select Users" with a close button (X) in the top right corner. It contains a table with columns: "User Name", "Read Only", "Read / Write", and "Deny Access". There are three rows of users: "user1", "user2", and "user3". Each row has checkboxes for the three access rights. Below the table is a search bar and a pagination control showing "Page 1 of 1" and "Displaying 1 to 3 of 3 items". At the bottom are three buttons: "Previous", "Next", and "Exit".

User Name	<input type="checkbox"/> Read Only	<input type="checkbox"/> Read / Write	<input type="checkbox"/> Deny Access
user1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
user2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
user3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Step 6 - If you selected **Specific user/Group** in Step 3, then this step allows you to set the access rights for each Group configured on the ShareCenter™.

Click **Next** to continue.

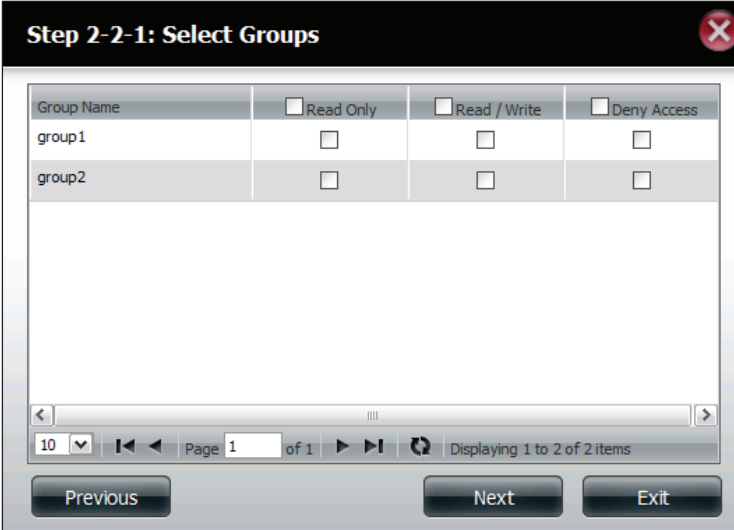

The screenshot shows a window titled "Step 2-2-1: Select Groups" with a close button (X) in the top right corner. It contains a table with columns: "Group Name", "Read Only", "Read / Write", and "Deny Access". There are two rows of groups: "group1" and "group2". Each row has checkboxes for the three access rights. Below the table is a search bar and a pagination control showing "Page 1 of 1" and "Displaying 1 to 2 of 2 items". At the bottom are three buttons: "Previous", "Next", and "Exit".

Group Name	<input type="checkbox"/> Read Only	<input type="checkbox"/> Read / Write	<input type="checkbox"/> Deny Access
group1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
group2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>


Step 7 - Here you can assign privileges to this share.

Opportunistic locks (oplocks) are a characteristic of the LAN Manager networking protocol implemented in the 32-bit Windows family.

Oplocks are guarantees made by a server for a shared logical volume to its clients. These guarantees inform the Client that a file's content will not be allowed to be changed by the server, or if some change is imminent, the client will be notified before the change is allowed to proceed.

Oplocks are designed to increase network performance when it comes to network file sharing. However it is recommended to set the share oplocks to No (off) when using file-based database applications. When enabled "Map Archive", the file attribute will be copied as the file is being stored on the ShareCenter™.

Click **Next** to continue.

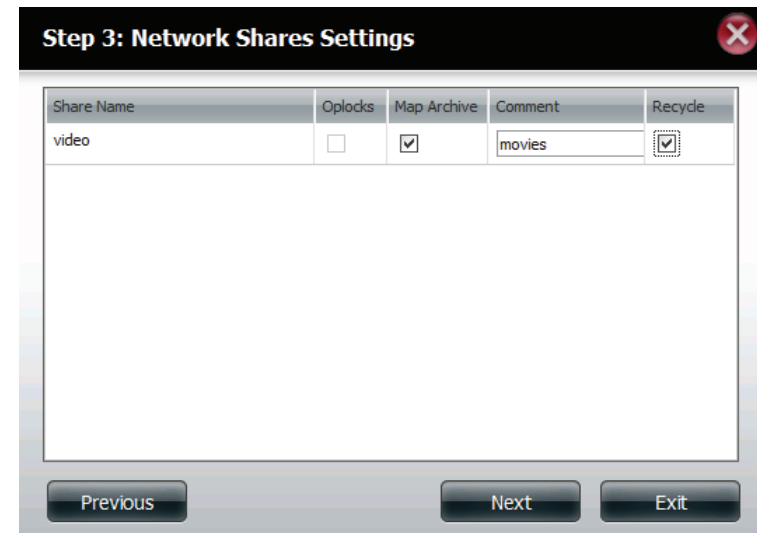


Share Name	Oplocks	Map Archive	Comment	Recycle
video	<input type="checkbox"/>	<input checked="" type="checkbox"/>	movies	<input checked="" type="checkbox"/>

Previous Next Exit

Step 8 - Here you can assign more protocol privileges that a user can use to access this share. Options to choose from are FTP, NFS, and WebDAV. CIFS and AFP are set as default.

- CIFS is short for Common Internet File System.
- AFP is short for Apple Filing Protocol.
- FTP is short for File Transfer Protocol
- NFS is short for Network File System.
- WebDAV is short for Web-based Distributed Authoring and Versioning.


Click **Next** to continue.

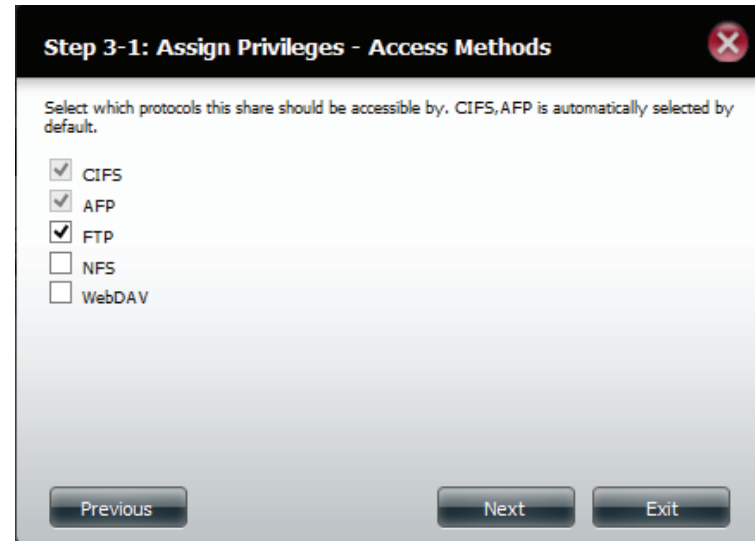

Step 9 - Here you can configure the FTP settings for this share. FTP access can be:

- 1) FTP Anonymous None (No Access).
- 2) FTP Anonymous Read Only (Limited Access).
- 3) FTP Anonymous Read/Write (Full Access).

Click **Next** to continue.

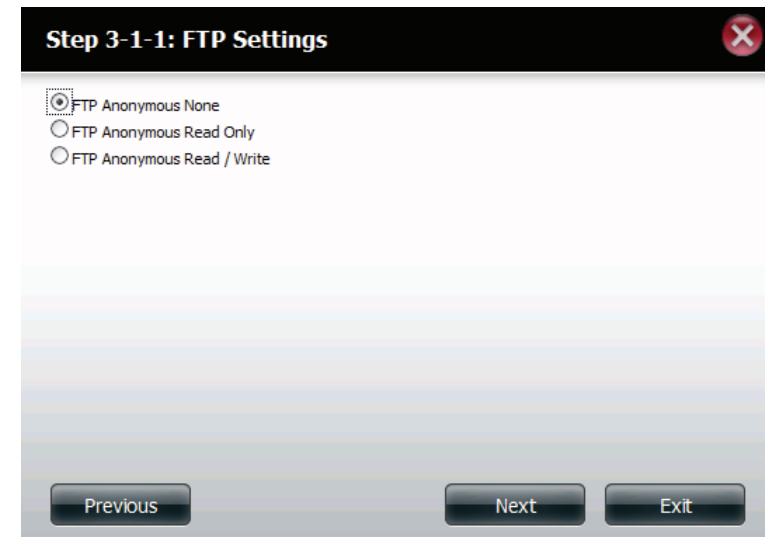

Step 3-1-1: FTP Settings


☒ FTP Anonymous None
☐ FTP Anonymous Read Only
☐ FTP Anonymous Read / Write

Previous Next Exit

If you checked NFS as an access method to your network share then this step allows you to set the parameters below:

- **Host** - Allowable host address that can access using NFS (*indicates all hosts)
- **Root Squash** - Disables writing to the Root owned directories and files on the system when the user has root access privileges.
- **Write** - provide write permission to the file system.

Click **Next** to continue.

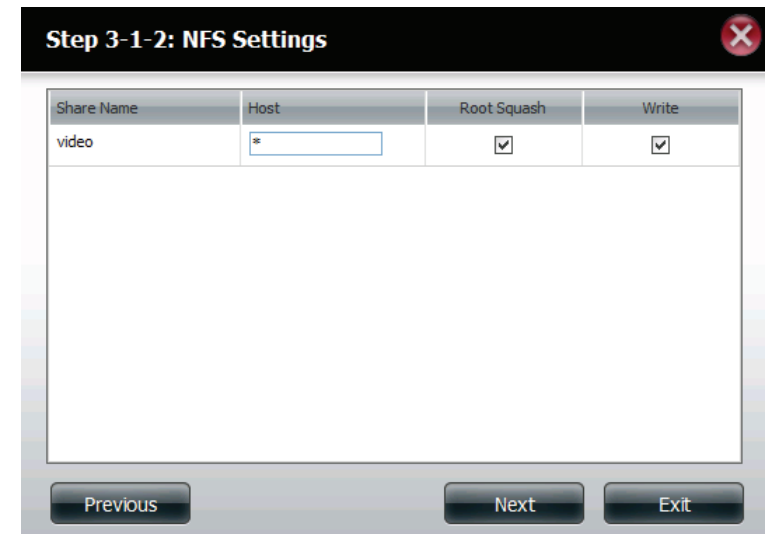

Step 3-1-2: NFS Settings

Share Name	Host	Root Squash	Write
video	*	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Previous Next Exit

If you checked WebDAV as an access method, then this step will allow you to set the access parameters.

Click **Next** to continue.

Step 10 - Here a summary of the created shares will be displayed.

Click **Finish** to save your settings.

Step 3-1-3: WebDAV Settings

	Share Name	Read Only	Read / Write	Summary
<input checked="" type="checkbox"/>	video	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Read Only: - Read / Write: All Accounts

Previous

Next

Exit

Step 4: Finish

Your settings are now complete. Review your settings below and then click the **Finish** button below to save the settings to your NAS.

Share Name

video

Read Only

Read / Write

All Accounts

Deny Access

Application List

FTP,NFS,WebDAV


Previous

Finish


Exit

Deleting a Network Share


Select the Network Share you wish to delete. Your selection will turn red. Click **Delete** to remove the share.

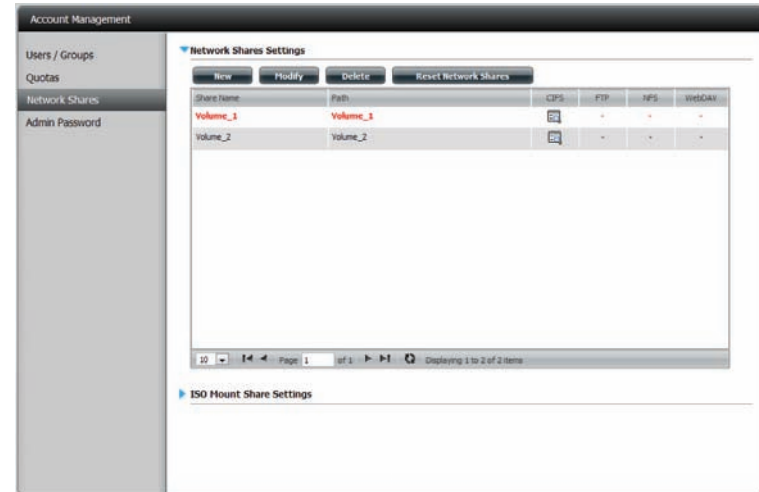

A warning message will appear prompting you to verify if you wish to delete the Share. Click **Yes** to delete or **No** to Cancel.

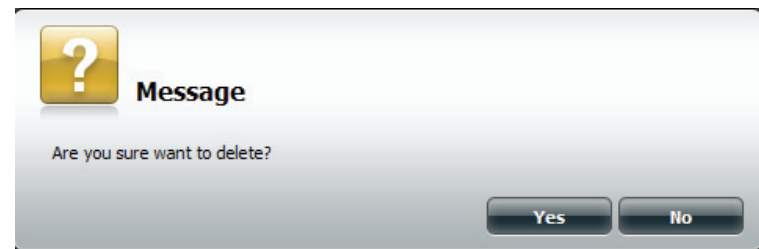

The deleted **Share** will be removed from the **Network Share List**.

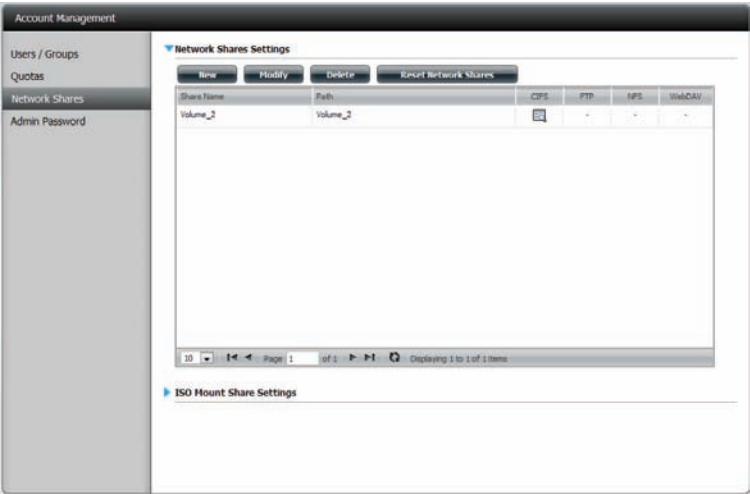


Resetting the Network Shares

Click the **Reset Network Shares** button.



A warning message will prompt you to confirm your selection.


Click **Yes** to confirm or **No** to cancel.

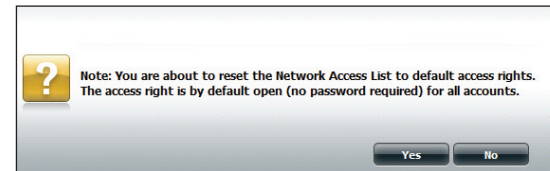

ISO Shares Setup Wizard


The following section will describe how to add a new ISO mount on the ShareCenter™. To add an ISO Mount, click on the **New** button. An easy to configure wizard will launch.

Click **Next** to continue.

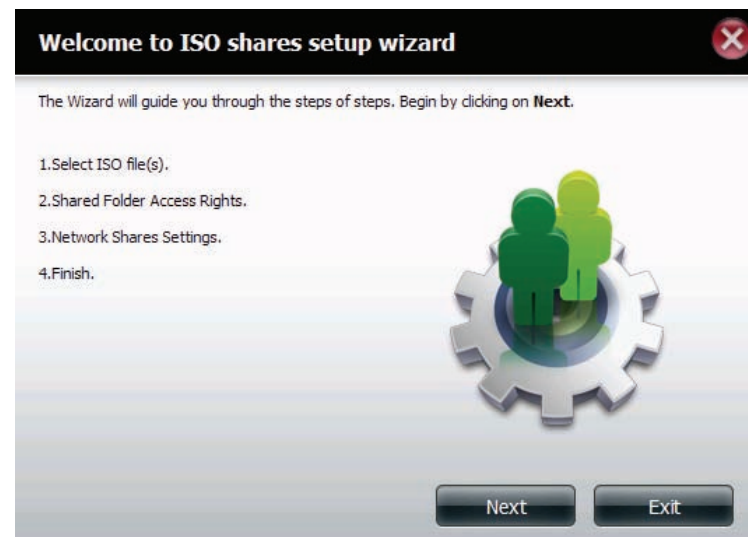

Select the ISO file to mount.

Check the box to the left of the .iso file to select it and click **Next** to continue.

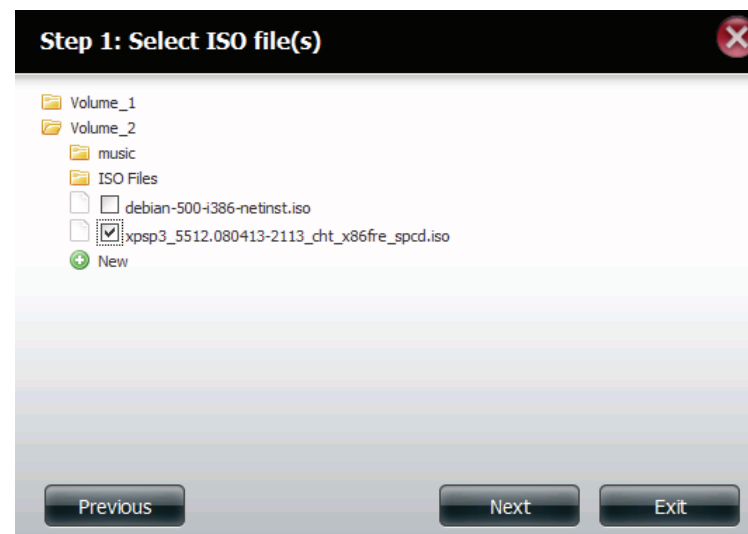


Assign access privileges to this ISO Mount share.

- Select **All Accounts** to assign the ISO Mount share read/deny privileges to all users.
- Select **Specific User/Group** in order to assign read/deny privileges to individual users and groups.

Click **Next** to continue.


You can assign **Read Only** or **Deny Access** privileges to the ISO Mount share here. Click on the appropriate radio button for the privileges you would like to assign.

Click **Next** to continue.

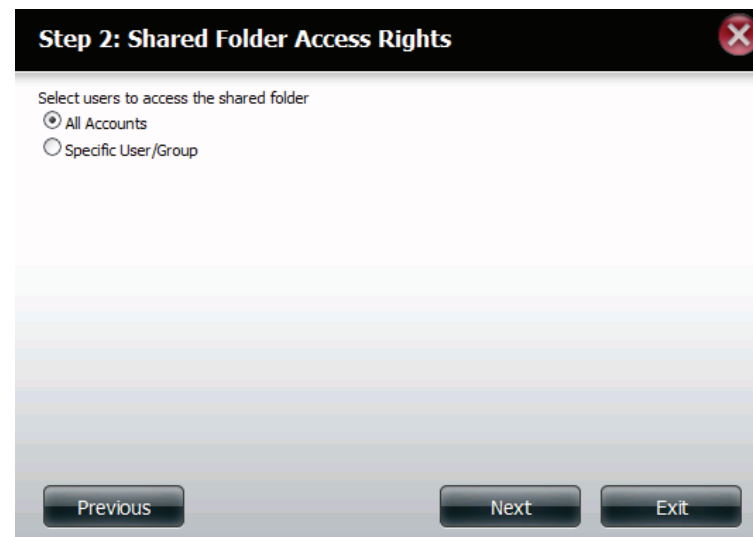

Add a comment that describes the ISO Mount Share.

Click **Next** to continue.

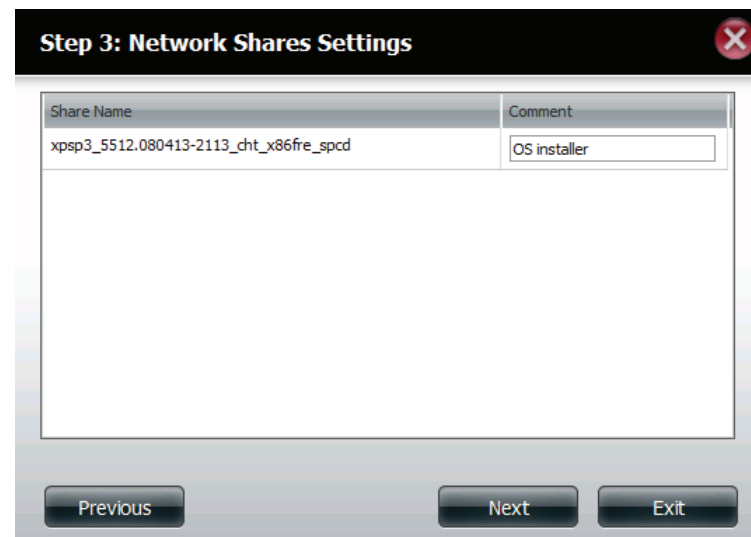


The screenshot shows a window titled "Step 3: Network Shares Settings" with a close button in the top right corner. It contains a table with two columns: "Share Name" and "Comment". The "Share Name" column contains the text "xpsp3_5512.080413-2113_cht_x86fre_spcd". The "Comment" column contains the text "OS installer". Below the table is a large empty text area. At the bottom of the window are three buttons: "Previous", "Next", and "Exit".

Share Name	Comment
xpsp3_5512.080413-2113_cht_x86fre_spcd	OS installer

Assign more protocol privileges that a user can use to access this share. Options to choose from are FTP, NFS and WebDAV. CIFS and AFP are set as default.

- CIFS is short for Common Internet File System.
- AFP is short for Apple Filing Protocol.
- FTP is short for File Transfer Protocol
- NFS is short for Network File System.
- WebDAV is short for Web-based Distributed Authoring and Versioning.


Click **Next** to continue.

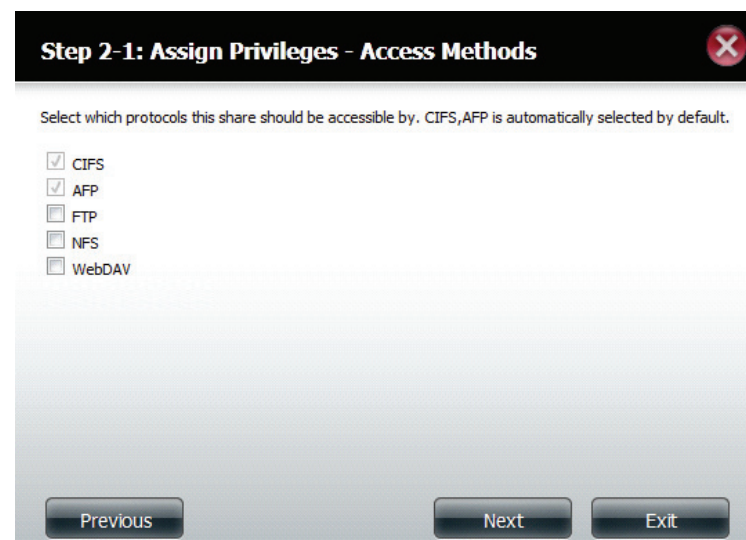


The screenshot shows a window titled "Step 2-1: Assign Privileges - Access Methods" with a close button in the top right corner. Below the title bar is a text label: "Select which protocols this share should be accessible by. CIFS, AFP is automatically selected by default." Below this are five checkboxes with labels: "CIFS", "AFP", "FTP", "NFS", and "WebDAV". The "CIFS" and "AFP" checkboxes are checked, while "FTP", "NFS", and "WebDAV" are unchecked. At the bottom of the window are three buttons: "Previous", "Next", and "Exit".

A summary of the share will be displayed.

Click on the **Finish** button to accept the change and complete the wizard.

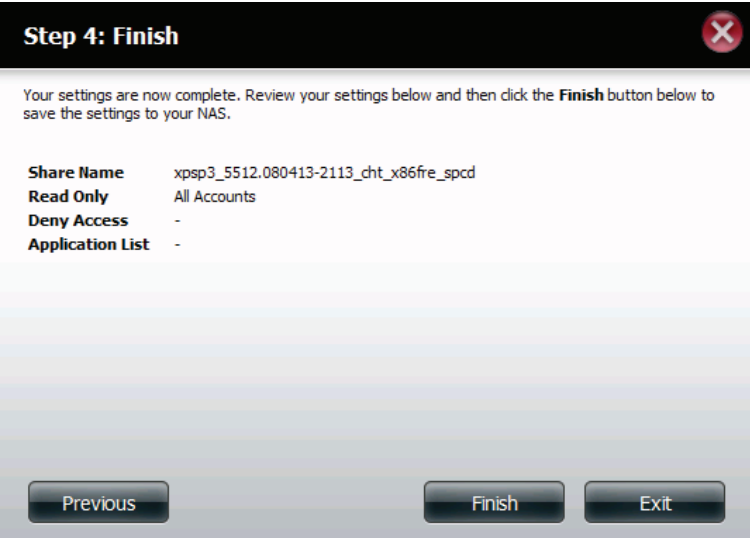

Through the D-Link Storage Utility, the ISO Mount Share can now be mapped to your computer as a normal network share.

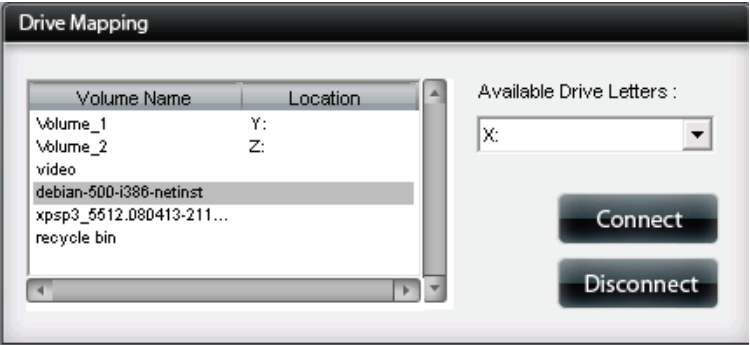


Creating an ISO Image

The following section will describe how to create an ISO image from your NAS, export the data out to your PC.

Click **Account Management > Network Shares > ISO Mount Share Settings**.


Click on the **Create ISO Image** button at the bottom.

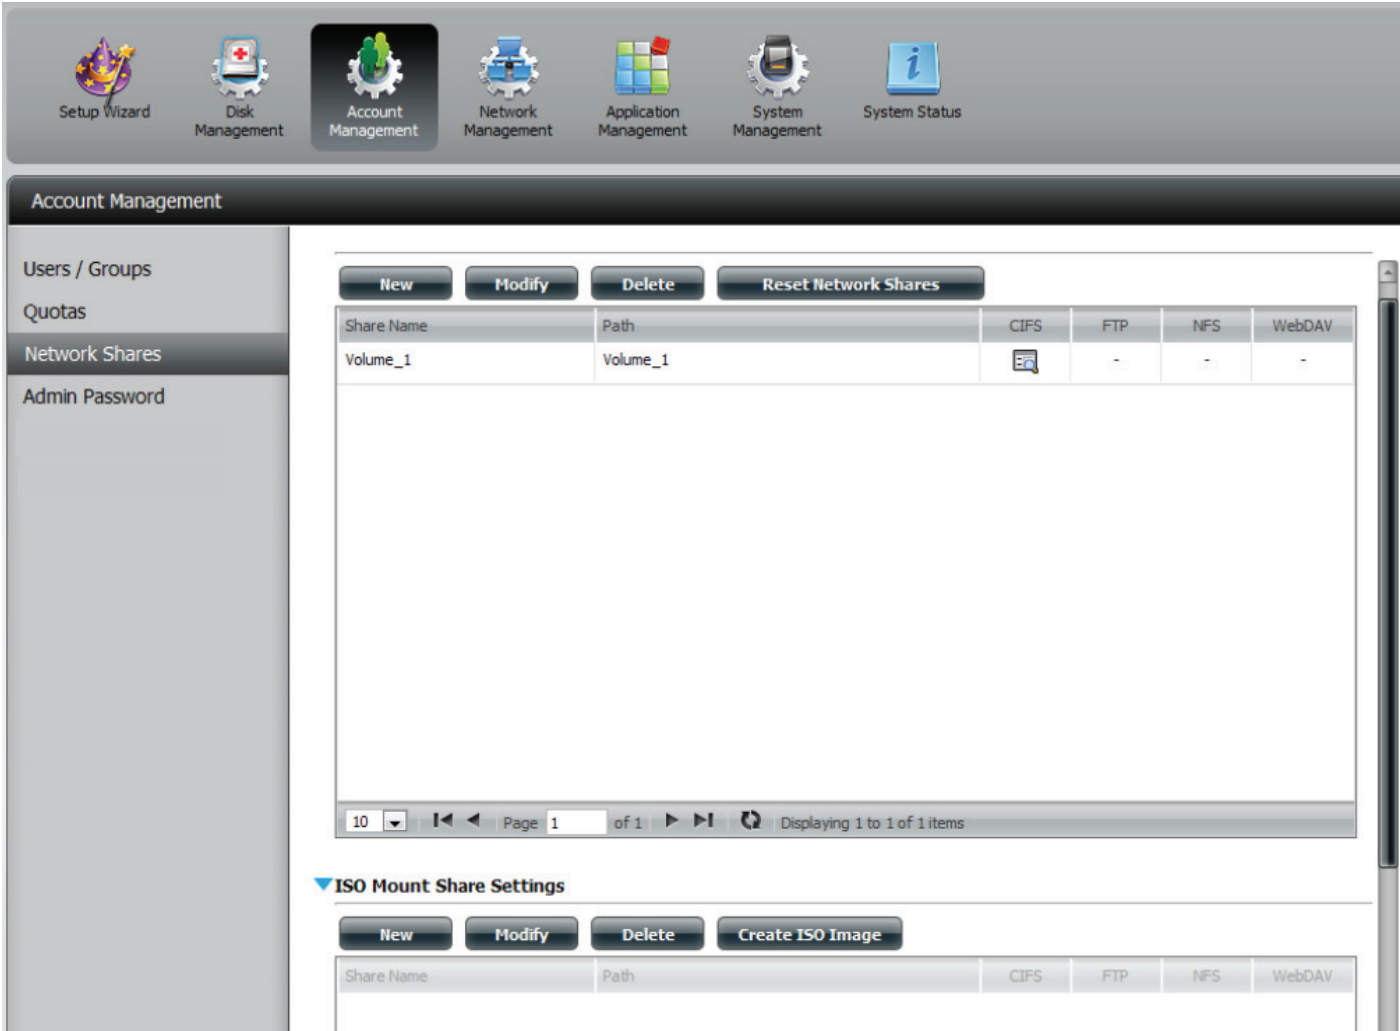

ISO image Creation Wizard

The ISO image wizard helps you create an ISO image on your ShareCenter™.

Read the instructions for the **ISO Image Creation Wizard** and then click **Next** to continue.

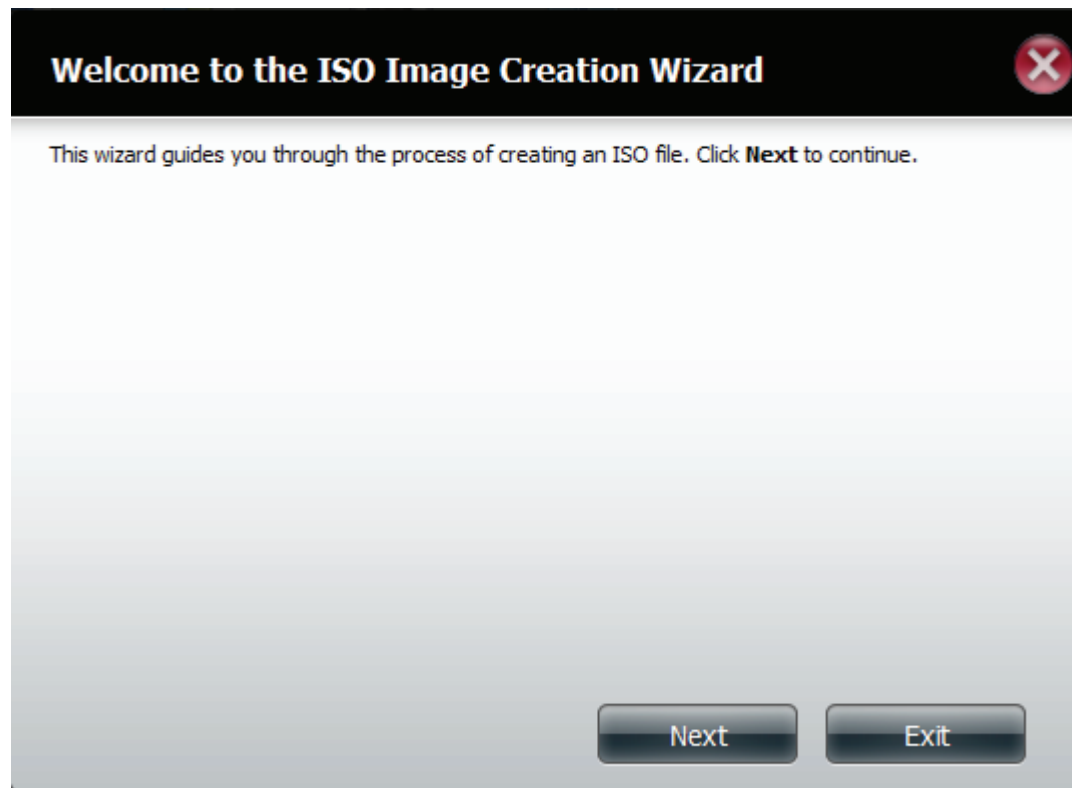


ISO Name and File Path Settings

Select the **Image Size**.

There are three Image Size choices:

- CDROM (650MB/74MIN) - This creates an ISO file 650MB in size ready for burning onto a CDROM at a later stage.
- DVD5 (4.7GB) - This creates an ISO file 4.7GB in size ready for burning onto a single-layer DVD at a later stage.
- DVD9 (8.5GB) - This creates an ISO file 8.5GB in size ready for burning onto a double-layer DVD at a later stage.

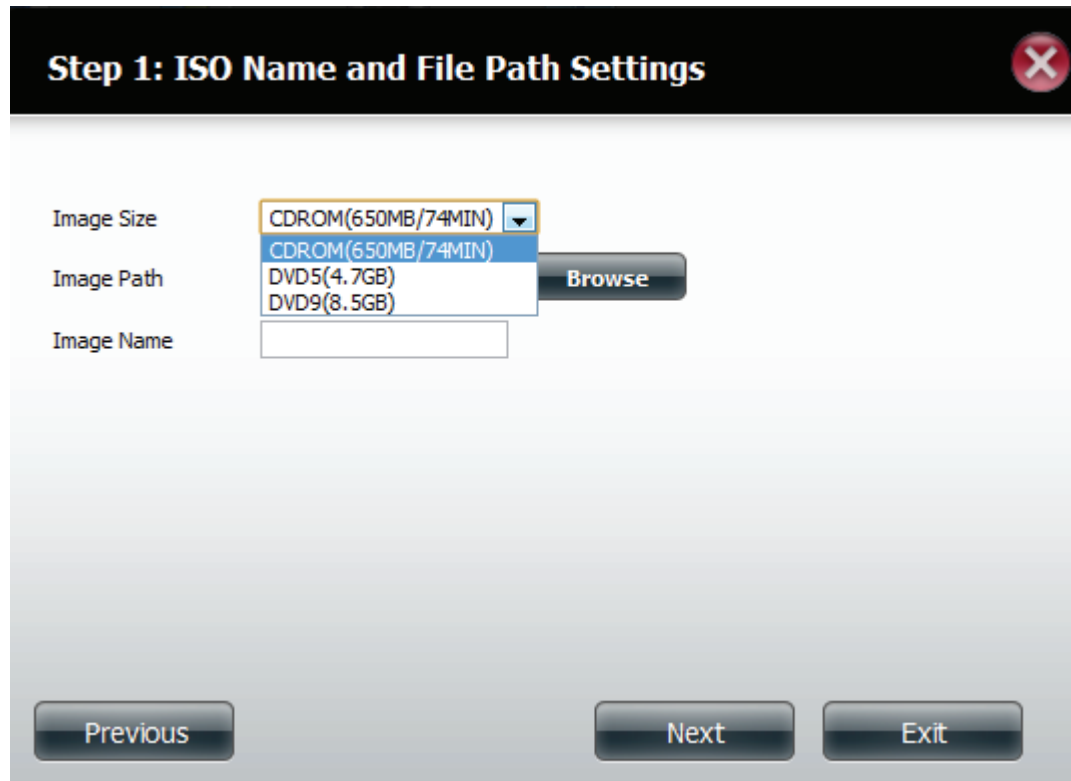

Step 1: ISO Name and File Path Settings

Image Size: CDROM(650MB/74MIN) ▼


Image Path: DVD5(4.7GB) **Browse**

Image Name:

Previous **Next** **Exit**

Select the **Image Path**.

Click the **Browse** button to select the destination folder on your NAS. Click the **Volume** to save it there or click **New** to create a new directory.

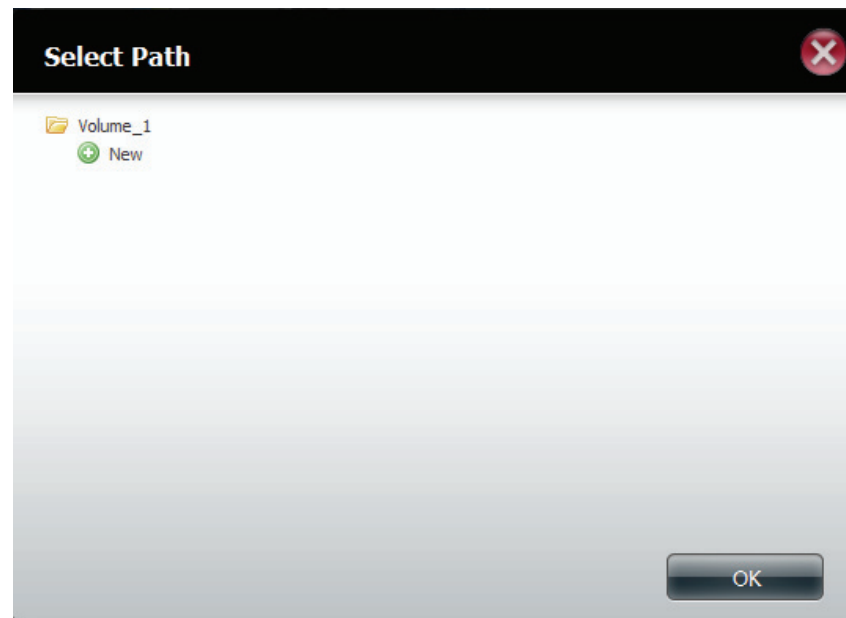


Enter a name that resembles the ISO file you are writing. Click **Next**.



The dialog box is titled "Step 1: ISO Name and File Path Settings" with a red close button in the top right corner. It contains three input fields: "Image Size" with a dropdown menu showing "CDROM(650MB/74MIN)", "Image Path" with a text box and a "Browse" button to its right, and "Image Name" with a text box. At the bottom, there are three buttons: "Previous", "Next", and "Exit".

A warning message appears asking you to confirm your decision. Click **Yes** to continue or click **No** to cancel.

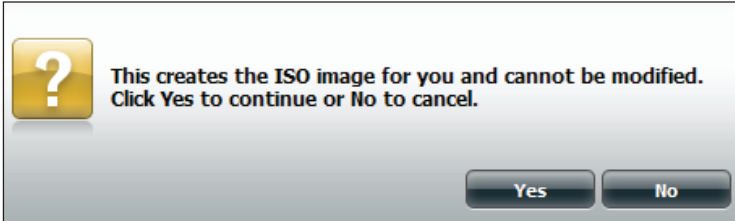

The dialog box features a yellow square icon with a white question mark on the left. To its right, the text reads: "This creates the ISO image for you and cannot be modified. Click Yes to continue or No to cancel." At the bottom right, there are two buttons: "Yes" and "No".

ISO Tree Editing

On the left side of the **ISO Tree Editing** window you have the option to **Overwrite** a previous ISO file or **Skip** it. It also displays the main directory on your NAS. Select the file(s) and click the --> button to add the file(s) to the ISO image. On the right side of the window it displays the total available space of the ISO file and the used space of the ISO. At the bottom of the window it shows the **path** where the ISO file will be saved.


Click **Next** to continue.



The wizard will create the ISO image.



Click the **Auto Mount** checkbox if you want the ISO file to be mounted automatically.

Click **Finish** to close the wizard.

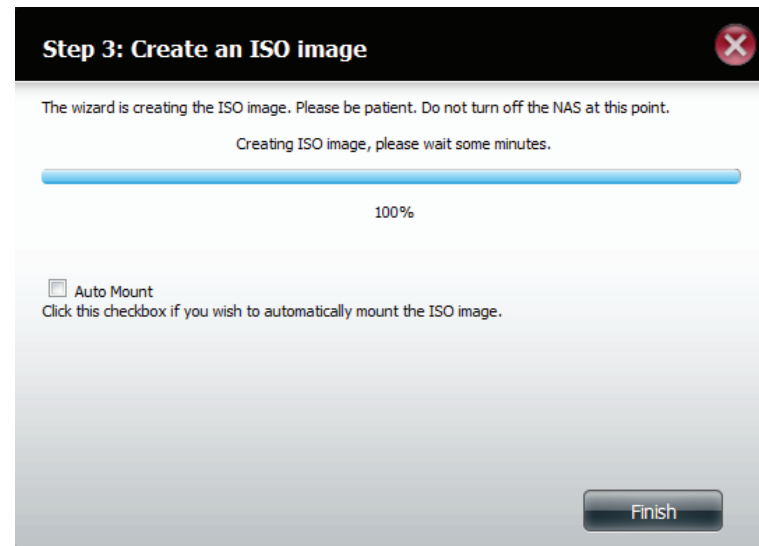

Verifying the ISO image

Open your **Windows Explorer**, click the **Network** icon, **double-click** your **ShareCenter™ NAS**. Double-click the **volume** you saved the ISO. Your **ISO** image should be there.

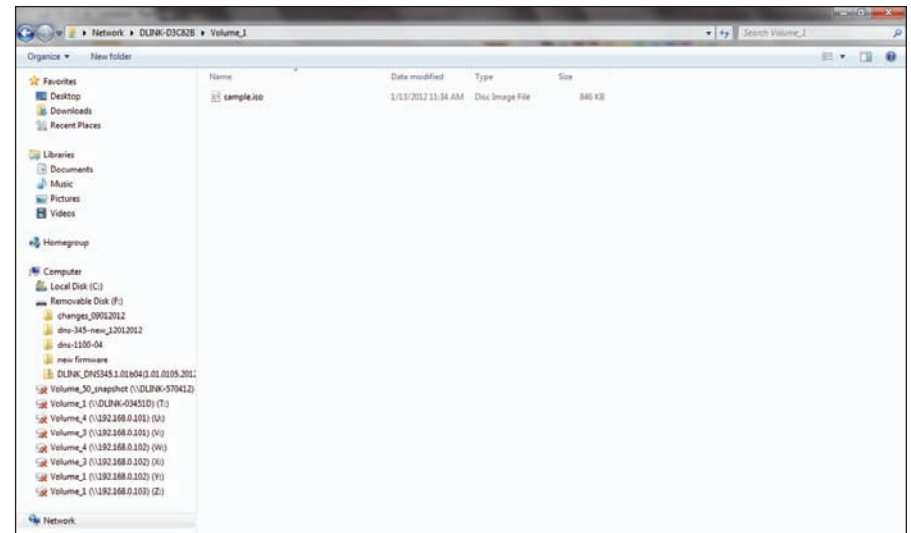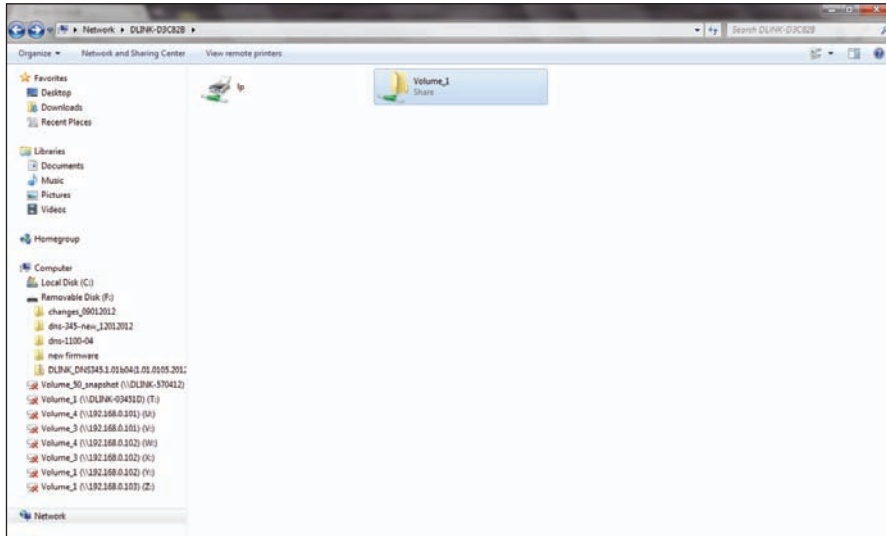


Admin Password

Changes to the administrator username and password can be made here.

The Administrator Settings allows you to change the Username and Password settings.

1. Enter a new **Username**
2. Type the **original Password**
3. Enter a **New Password**
4. Confirm the **New Password**

Click **Save Settings** to accept the changes or **Don't Save Settings** to cancel changes.

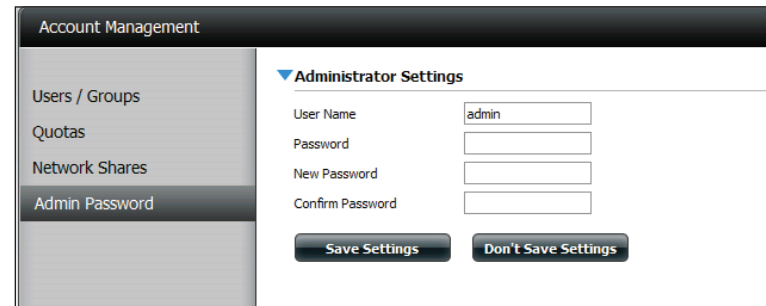

The screenshot shows a web interface titled "Account Management". On the left is a sidebar menu with the following items: "Users / Groups", "Quotas", "Network Shares", and "Admin Password" (which is highlighted). The main content area is titled "Administrator Settings" with a blue downward arrow icon. It contains four input fields: "User Name" (with the text "admin" inside), "Password", "New Password", and "Confirm Password". At the bottom of the form are two buttons: "Save Settings" and "Don't Save Settings".


Network Management

LAN Setup

Network Management controls and manages all issues referring to LAN settings. Even though your LAN settings were configured in the Setup Wizard, it can still be configured here.

Go to **Network Management** and then **LAN Setup**.

Click **Setup**.

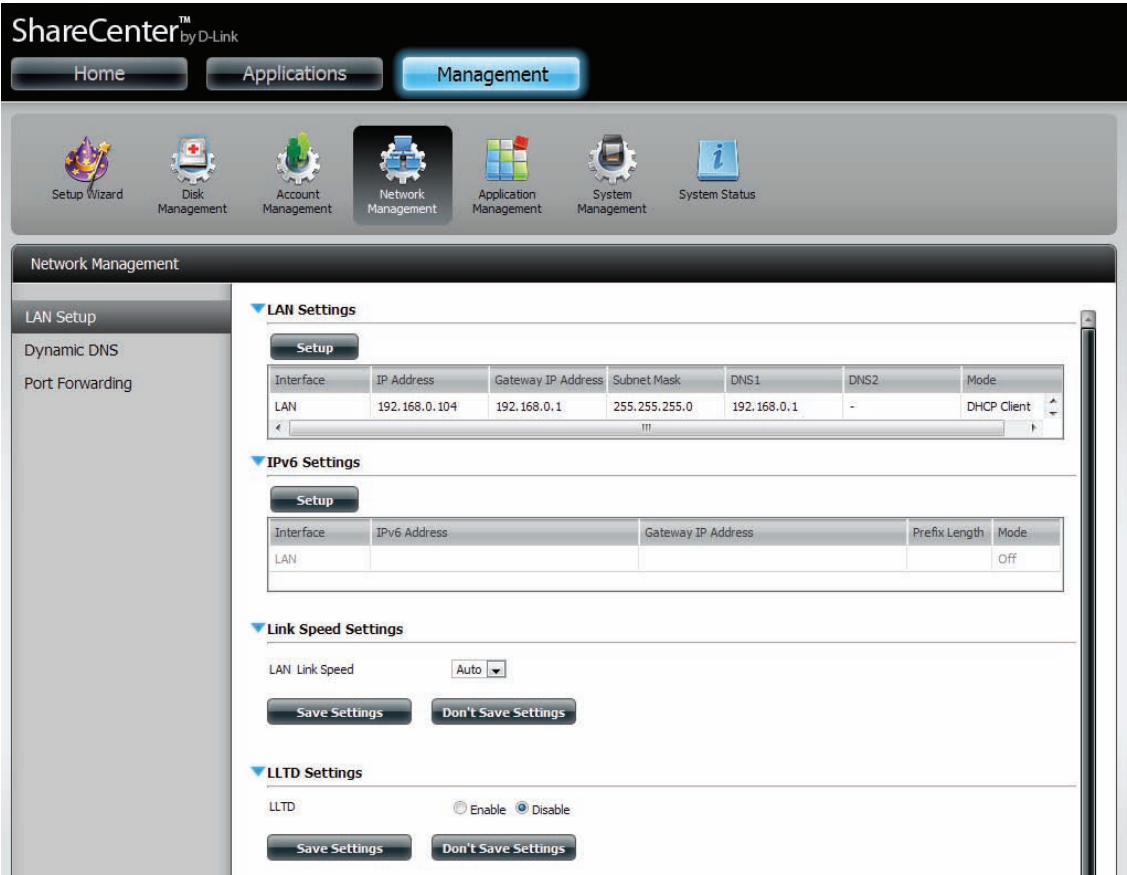


The LAN setup wizard gives you the option to configure the - IP settings.

Click **Next** to continue.




This step allows you to configure your LAN settings. Here you can choose between **DHCP Client** or **Static IP**. If you select Static IP, you will need to manually configure your own IP settings.

Click **Next** to continue.

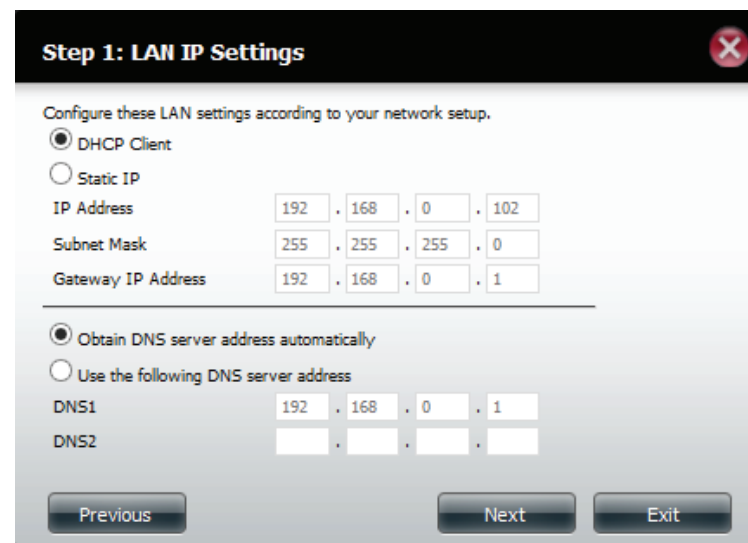

A summary of what you just configured will be displayed.

Click **Finish** to exit the wizard.

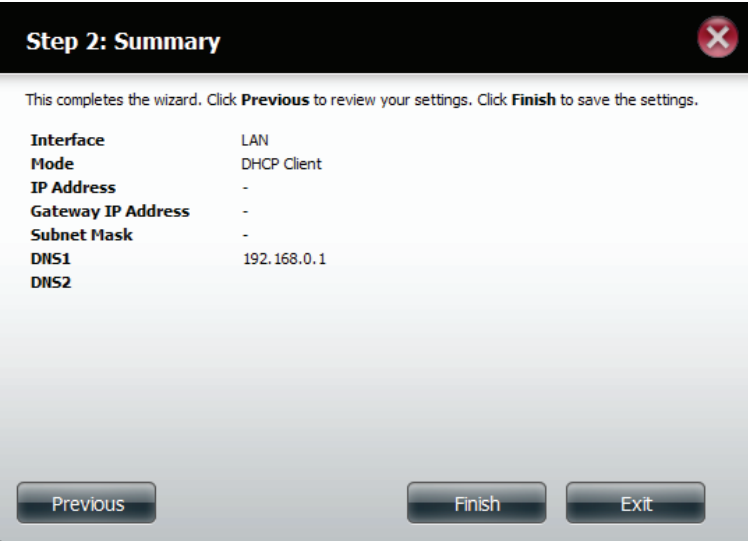

IPv6 Settings

Go to **Management > Network Management > LAN Setup > IPv6 Settings** and click the **Setup** button. An IPv6 setup window will appear.

The screenshot displays the D-Link ShareCenter web management interface. At the top, there are navigation tabs: Home, Applications, and Management (which is selected). Below these are icons for various management functions: Setup Wizard, Disk Management, Account Management, Network Management (highlighted), Application Management, System Management, and System Status.

The main content area is titled "Network Management" and contains a sidebar on the left with options: LAN Setup (selected), Dynamic DNS, and Port Forwarding. The main panel shows the "LAN Settings" section, which includes a "Setup" button and a table of network configurations. Below this is the "IPv6 Settings" section, also with a "Setup" button and a table for IPv6 configuration. Further down are sections for "Link Speed Settings" and "LLTD Settings".

LAN Settings Table:

Interface	IP Address	Gateway IP Address	Subnet Mask	DNS1	DNS2	Mode
LAN	192.168.0.102	192.168.0.1	255.255.255.0	192.168.0.1	-	DHCP Client

IPv6 Settings Table:

Interface	IPv6 Address	Gateway IP Address	Prefix Length	Mode
LAN				Off

IPv6 Setup


There are four connection modes to select from: **Auto**, **DHCP**, **Static** and **Off**.

Auto - Requests information specifically from an IPv6-enabled router and automatically configure your settings.

DHCP - Requests information from a DHCP server.

Static - Enter your own IP configuration

Off - Do not use IPv6

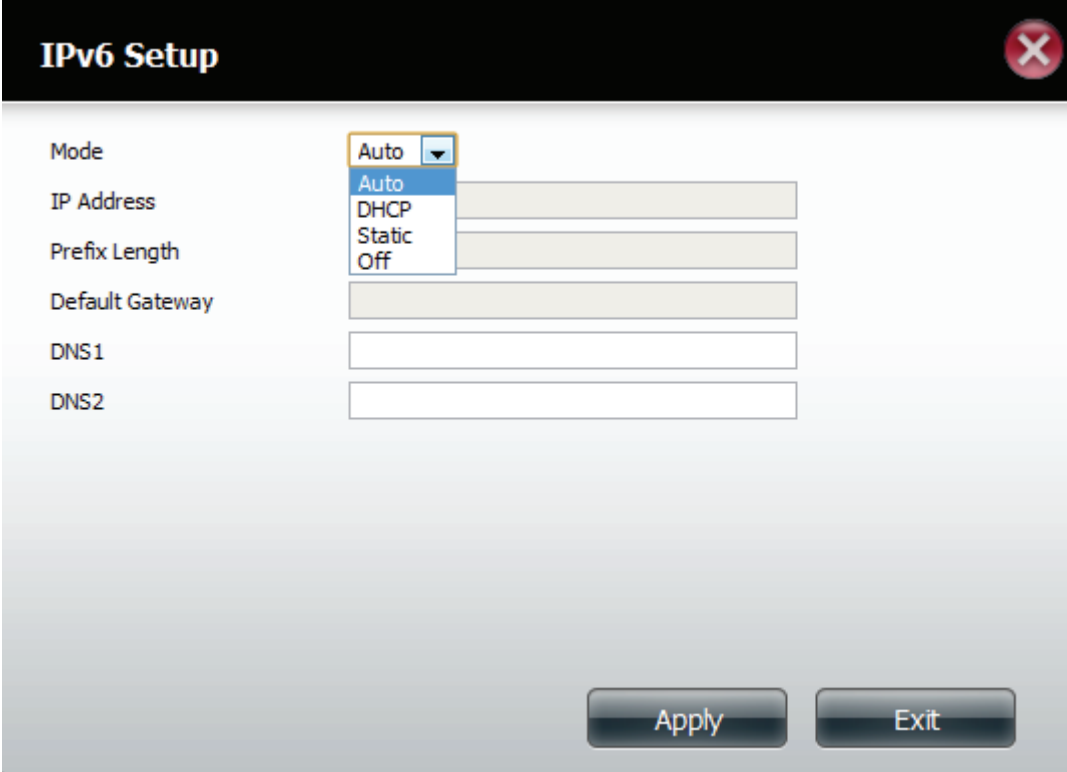

The image shows a screenshot of the 'IPv6 Setup' configuration window. The window has a black title bar with the text 'IPv6 Setup' and a red close button. The main area is light gray and contains several configuration fields. The 'Mode' field is a dropdown menu with 'Auto' selected, and its list is open showing 'Auto', 'DHCP', 'Static', and 'Off'. Below the dropdown are text input fields for 'IP Address', 'Prefix Length', 'Default Gateway', 'DNS1', and 'DNS2'. At the bottom right, there are two buttons: 'Apply' and 'Exit'.

Field	Value
Mode	Auto
IP Address	
Prefix Length	
Default Gateway	
DNS1	
DNS2	

Buttons: Apply, Exit

Section 4 - Configuration

When configuring IPv6 with Static Mode, enter the IP address provided by your system administrator. The prefix length for an IPv6 subnet will always be 64; no more, no less. Enter the Default Gateway, and DNS settings. Click **Apply** when complete. The IPv6 Settings table will now display the settings in table format.

In order for the changes to take effect, you are prompted to re-login. Click **OK** and log in.

You need to re-login to have these settings take effect.

OK

The screenshot displays the D-Link ShareCenter Management web interface. The top navigation bar includes 'Home', 'Applications', and 'Management' (which is selected). Below this, a row of icons represents various management functions: Setup Wizard, Disk Management, Account Management, Network Management (highlighted), Application Management, System Management, and System Status.

The main content area is titled 'Network Management'. On the left, a sidebar lists 'LAN Setup', 'Dynamic DNS', and 'Port Forwarding'. The 'LAN Setup' section is expanded, showing 'LAN Settings' and 'IPv6 Settings'.

LAN Settings

Setup

Interface	IP Address	Gateway IP Address	Subnet Mask	DNS1	DNS2	Mode
LAN	192.168.0.102	192.168.0.1	255.255.255.0	192.168.0.1	-	DHCP Client

IPv6 Settings

Setup

Interface	IPv6 Address	Gateway IP Address	Prefix Length	Mode
LAN				Auto

Link Speed and LLTD Settings

Link Speed: Select either **Auto (Auto-Negotiate)**, **100Mbps**, or **1000Mbps** from the drop-down menu. Click the **Save Settings** button to save the new settings.

LLTD: The device supports LLTD (Link Layer Topology Discovery) and is used by the Network Map application that is included in Windows Vista® and Windows® 7.

Select to enable or disable LLTD.

The screenshot displays the D-Link ShareCenter Management web interface. At the top, there are three tabs: Home, Applications, and Management (which is selected). Below the tabs is a row of icons for various management functions: Setup Wizard, Disk Management, Account Management, Network Management (highlighted), Application Management, System Management, and System Status. The main content area is titled 'Network Management' and contains a sidebar on the left with links to LAN Setup, Dynamic DNS, and Port Forwarding. The main panel shows a table for network interfaces and two sections for configuration: Link Speed Settings and LLTD Settings.

Interface	IPv6 Address	Gateway IP Address	Prefix Length	Mode
LAN				Auto

Link Speed Settings

LAN Link Speed:

LLTD Settings

LLTD: ☐ Enable ☒ Disable

DDNS

The DDNS feature allows the user to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your domain name to connect to your server regardless of your IP address.

Go to **Network Management** and then **Dynamic DNS**.

DDNS: Select Enable or Disable.

Server Address: Select a DDNS Server from the combo box on the right hand-side, or type in the server address manually.



Host Name: Enter your DDNS host name.

Username or Key: Enter your DDNS username or key.

Password or Key: Enter your DDNS password or key.

Verify: Re-enter your password or key.

Status: Displays your DDNS status.

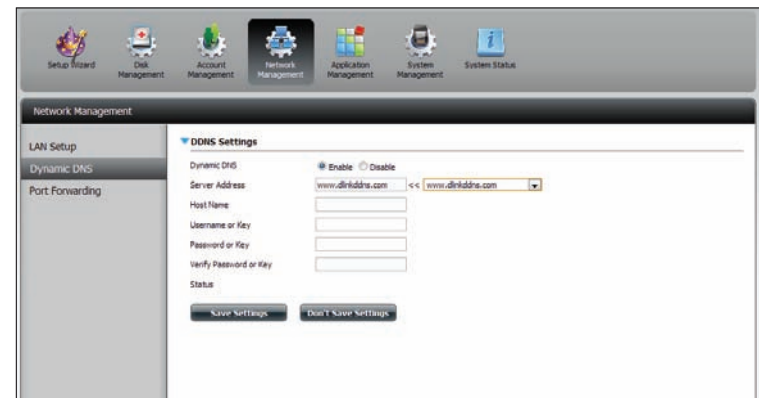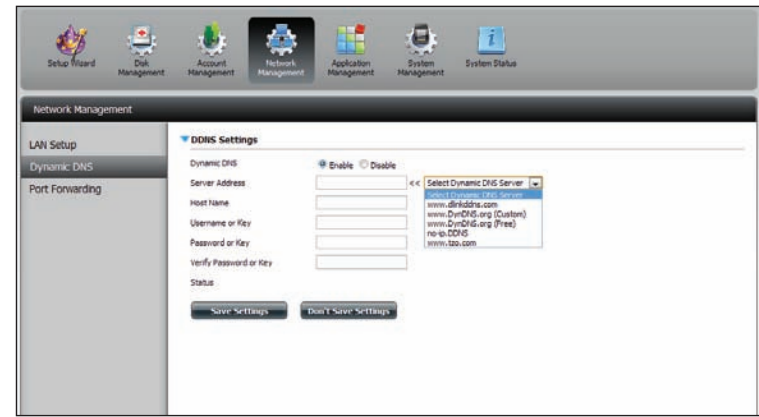

When the user clicks on the "Sign up for D-Link's Free DDNS service at www.DLinkDDNS.com link, the user will be re-directed to the D-Link DDNS page.


Here the user can create or modify a D-Link DDNS account to use in this configuration.

Port Forwarding


The DNS-327L supports UPnP port forwarding which configures port forwarding automatically on your UPnP-enabled router.

Note: *You will need a UPnP router on your network.*

Log in and click **Network Management > Port Forwarding**.
Click **Test** to run a search.

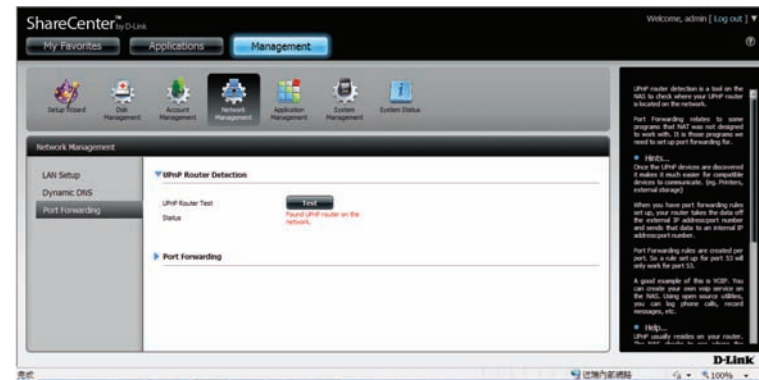

The DNS-327L is searching for a UPnP router. Do not turn off your NAS.

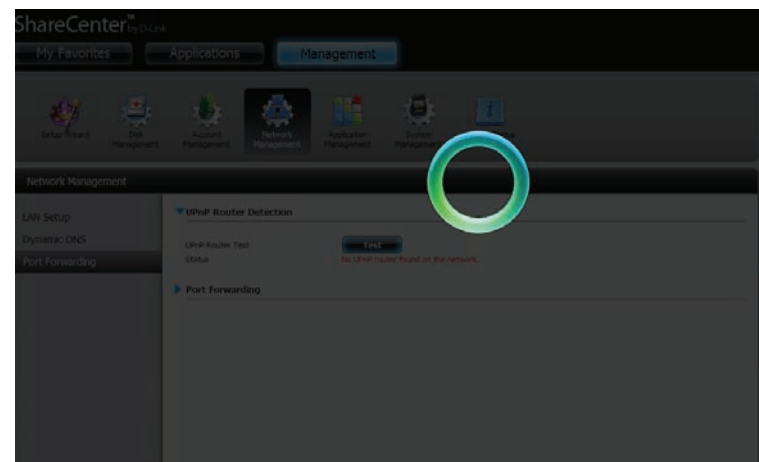


A message will notify you that the wizard has found a UPnP router on the network.


Note that you have to enable UPnP on your router.



Click the blue arrow next to port forwarding to reveal the Port Forwarding options.

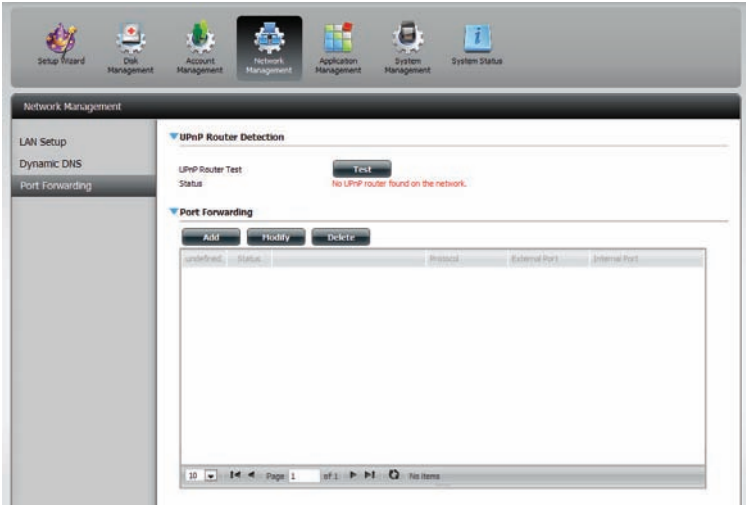


Click **Add**.

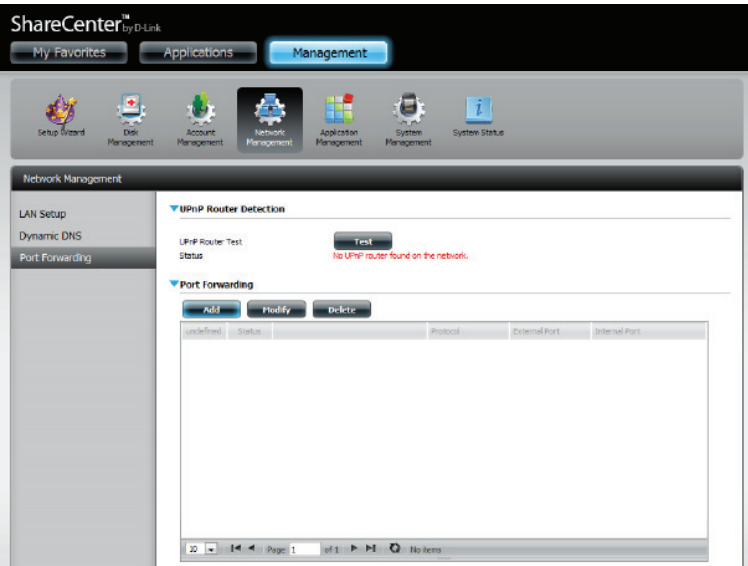

The Port Forwarding wizard will start.

Click **Next** to continue.

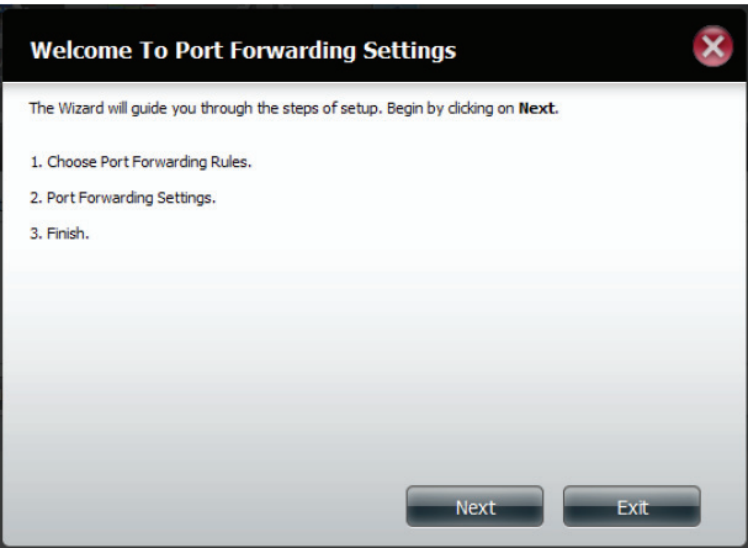


Select **Select default service scan** to select the port forwarding services from a list or select **Custom a port forwarding service** to manually configure your own settings.

Click **Next** to continue.

If you select default service scan, choose the service(s) to be allowed for remote access from the Internet via your UPnP-enabled router.

Note: You can select more than one port.

Click **Previous** to change the Port Forward Rule or **Finish** to configure the port forwarding on the UPnP router automatically.

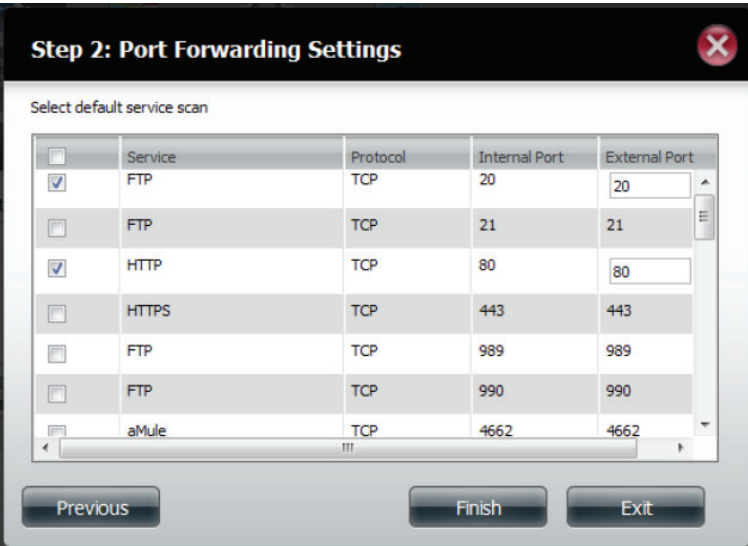

Application Management

FTP server

The Application Management section allows you to configure many services for your DNS-327L. The server and service settings include: FTP server, Add-ons, AFP, NFS, and multimedia services. Let's begin by looking at configuration options for the FTP server.

Max User: Set the maximum amount of users that can connect to the FTP server.

Idle Time: Set the amount of time a user can remain idle before being disconnected.

Port: Set the FTP port. Default is 21. If you are behind a router, you will need to forward the FTP port from the router to the device. Additional filtering and firewall settings may need to be modified on your router to allow FTP Access to the device from the Internet. Once the port has been forwarded on the router, users from the Internet will access the FTP server through the WAN IP address of the router.

Passive Mode: In situations where the device is behind a firewall and unable to accept incoming TCP connections, passive mode must be used.


Client Language: Most standard FTP clients like Windows FTP, only support Western European code page when transferring files. Support has been added for non standard FTP clients that are capable of supporting these character sets.

Flow Control: Allow you to limit the amount of bandwidth available for each user.

SSL/TLS: Here the user can enable the SSL/TLS connection only.


FXP: Enable or Disable File eXchange Protocol to transfer files from one FTP server to another.

Note: In order to use FXP (File Exchange Protocol) for server-to-server data transfer, make sure to change the port from 21 to some other port as listed in the Port section of the Web UI. Also, make sure to open the corresponding port on your router and forward that port from your router to the device.

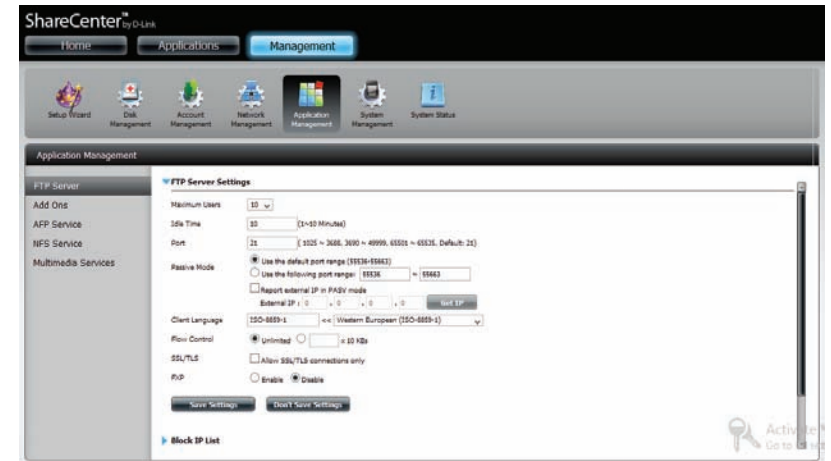

Block IP List

Block IP List allows you to block IP address that you consider threatening to your network. Click the blue arrow to open the configuration window.

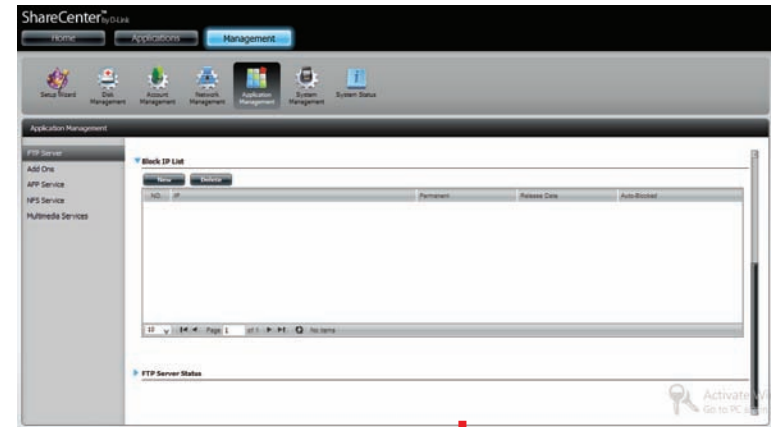


The window expands to include a Blocked IP list and a FTP Server Status report. Click the blue arrow to see the drop-down list.

Click **New** to block a specific IP address.

Select **IPv4** or **IPv6** and then enter the IP address of a machine you wish to block. Select **Permanent** if you wish to block the IP address permanently or **Temporary** if you wish to set a time frame.

If you selected permanent, click **Apply** and continue.

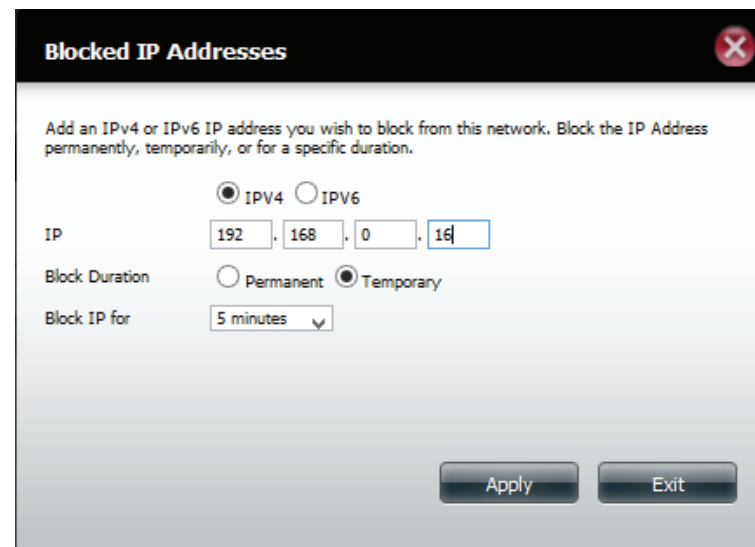

Blocked IP Addresses

Add an IPv4 or IPv6 IP address you wish to block from this network. Block the IP Address permanently, temporarily, or for a specific duration.

☒ IPv4 ☐ IPv6


IP: 192 . 168 . 0 . 16

Block Duration: ☐ Permanent ☒ Temporary

Block IP for: 5 minutes

Apply Exit

If you selected **Temporary**, then select a time frame and click **Apply** to continue.

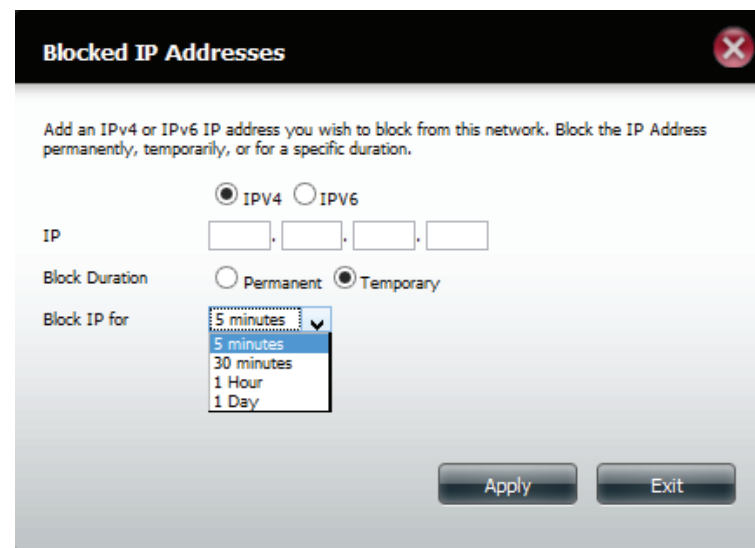

Blocked IP Addresses

Add an IPv4 or IPv6 IP address you wish to block from this network. Block the IP Address permanently, temporarily, or for a specific duration.

☒ IPv4 ☐ IPv6


IP: . . .

Block Duration: ☐ Permanent ☒ Temporary

Block IP for: 5 minutes (dropdown menu open showing: 5 minutes, 30 minutes, 1 Hour, 1 Day)


Apply Exit

The **Blocked IP** list will display the IP addresses you blocked.

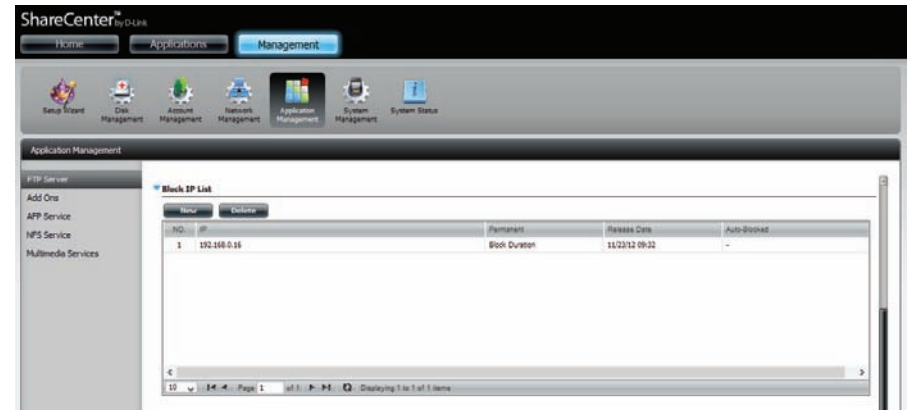


Click the blue arrow next to **FTP Server Status** to reveal the FTP details.


The FTP server is stopped by default. Click **Start FTP Server** to run the process.

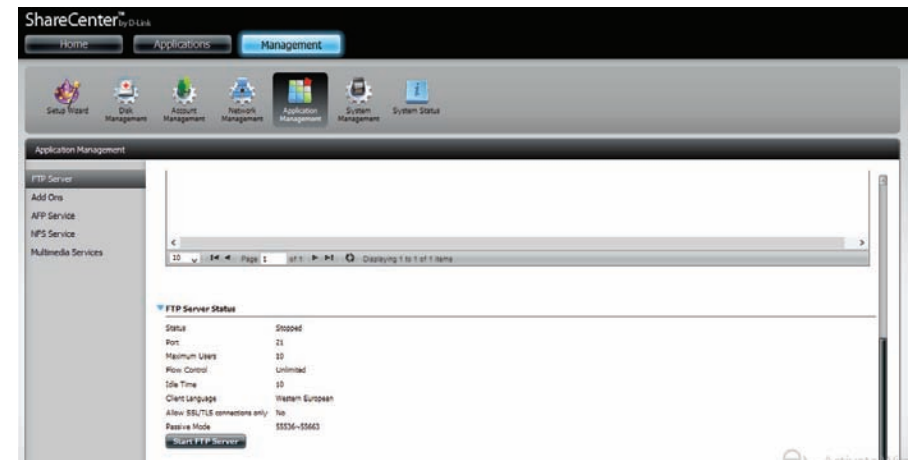

After you have clicked the **Start** button, the **Status** shows **Started**.

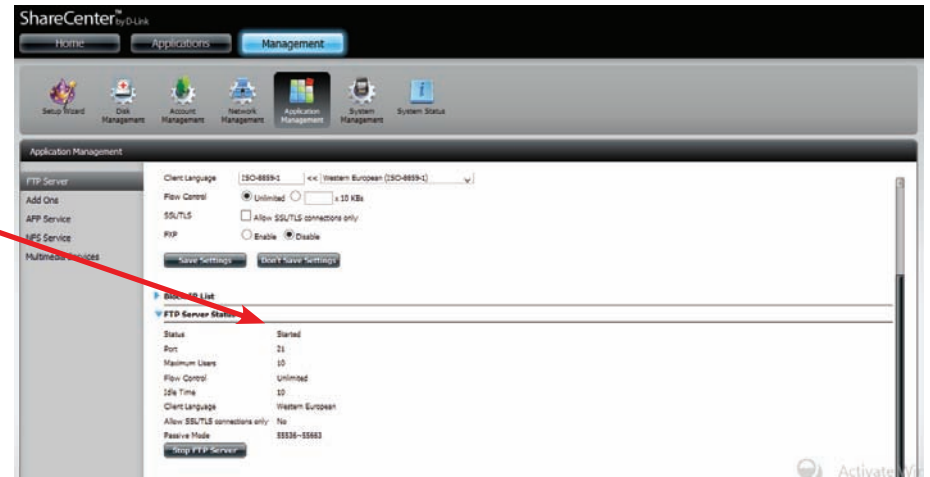

Open your default browser or FTP application and log-in to your FTP server.

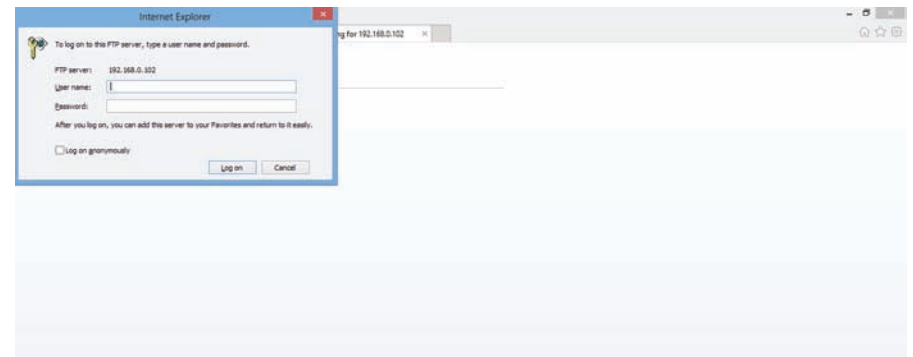

Add-ons

Add-ons add extra services to the DNS-327L. Here is a look at each Add-on service available.

AjaXplorer: Ajaxplorer provides an enhanced “explorer like” interface which can download and upload ShareCenter™ files over the internet. Ajaxplorer also allows a user, on any internet connection, to stream video/audio and view image files that are stored on the ShareCenter™. Set the amount of time a user can remain idle before being disconnected.

Photo Center: The Photo Center add-on sets up your ShareCenter™ to share your photos over the web. It provides a convenient interface from which you can create albums of photos with descriptions. The albums are then accessible over the web using HTTP so that your family and friends can then view your ShareCenter™ stored photos from any internet connection.

Squeeze Center:

Blog (Wordpress): Use the SqueezeCenter add-on to connect your Logitech Media Squeezebox player so that it can play music files stored on your ShareCenter™.

Audio Streamer: Create your own ShareCenter™ based customized Blog. Using the ShareCenter's™ internet connection the Blog created using WordPress can be accessed and commented on from any internet connection.

aMule: Turn your ShareCenter™ into an Internet Streaming Music site. From your ShareCenter,™ the Audio Streamer add-on can transmit multiple streams of playing music files to any internet connection.

Joomla: aMule is a P2P application for finding a variety of different media. It enables users to search for P2P files over networks. It works on all major platforms..

phpBB: Create your own ShareCenter™ based customized CMS(Content Management System). Using the ShareCenters™ internet connection the CMS can be accessed and commented on from any internet connection.

phpMyAdmin: Create your own ShareCenter™ based customized Forum. Using the ShareCenters™ internet connection the Forum can be accessed and commented on from any internet connection.

Transmission: Manage your own ShareCenter™ MySQL database by phpMyAdmin. Using the ShareCenters™ internet connection the phpMyAdmin can be accessed and used from any internet connection.

The ShareCenter's P2P functionality is enhanced with the Transmission add-on by downloading P2P files. Transmission also provides a full featured P2P Web UI interface can be launched to work with your ShareCenter P2P functionality.


Caution: The ShareCenter's CPU resources get used up quite a bit depending on the number of Add-ons you have enabled. For optimal performance make sure to disable any add-ons not in use.

Note: To check the complete list of Add-on application software available consult your local D-Link support page


Add-Ons

The ShareCenter™ features a list of Add-Ons that is available on your installation CD. These Add-Ons can be installed from this location. They include, Photo Center, aMule, AjaXplorer, Audio Streamer, Blog, Joomla, phpBB, phpMyAdmin, Squeeze Center and Transmission. The Add-Ons panel provides a version number, Signature, Status, Start/Stop, and Delete options. The Add-On packages can also be installed using the Setup Wizard.

Installing Add-Ons from the Setup Wizard

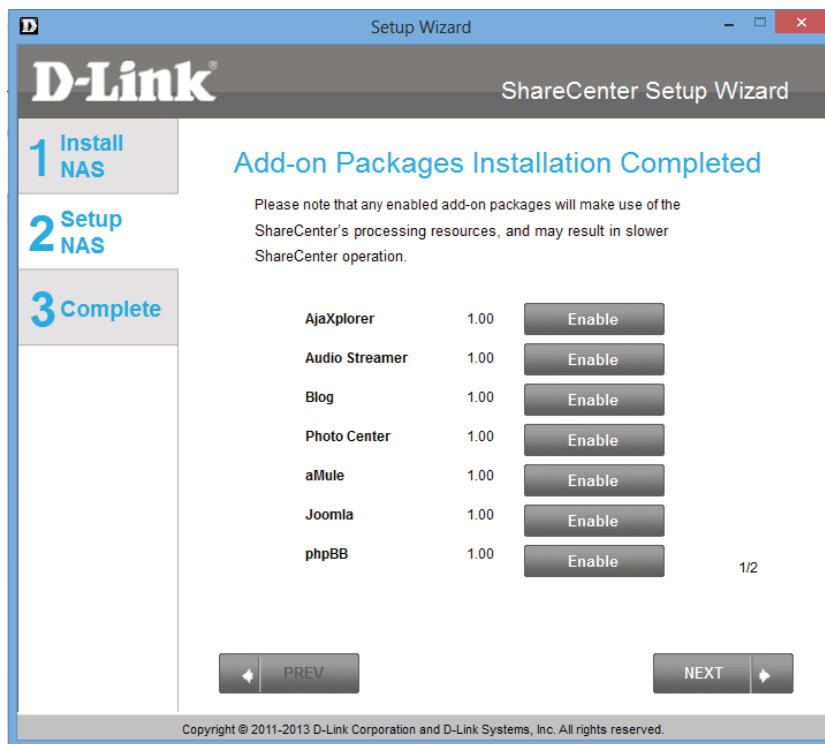


Click on each of the buttons of the **Add-On** you wish to enable. This installs the Add-On packages.

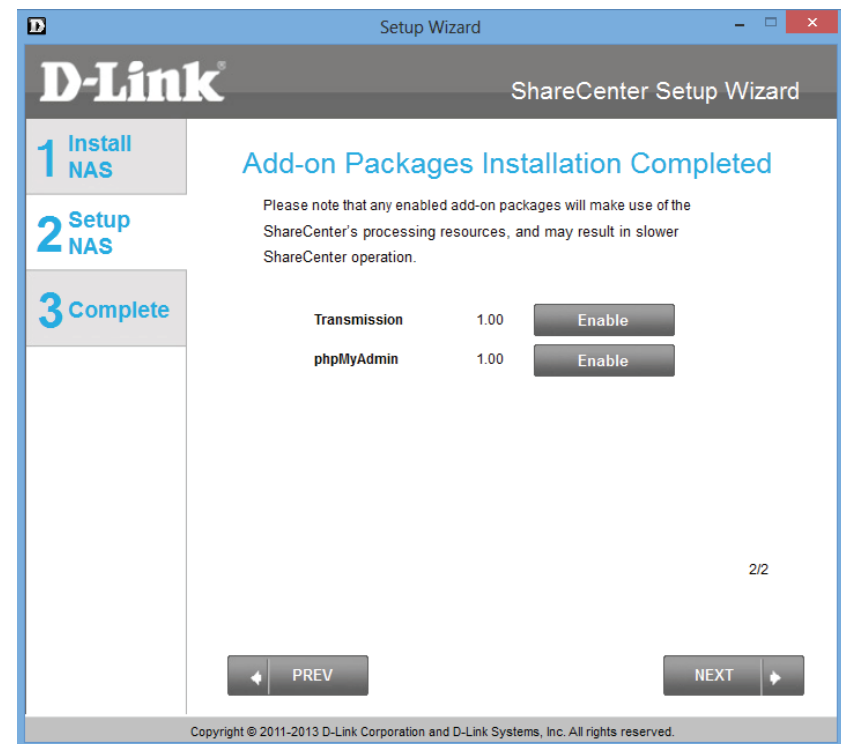


Click on each of the buttons of the **Add-On** you wish to enable. This installs the Add-On packages.


The wizard installs the selected packages.

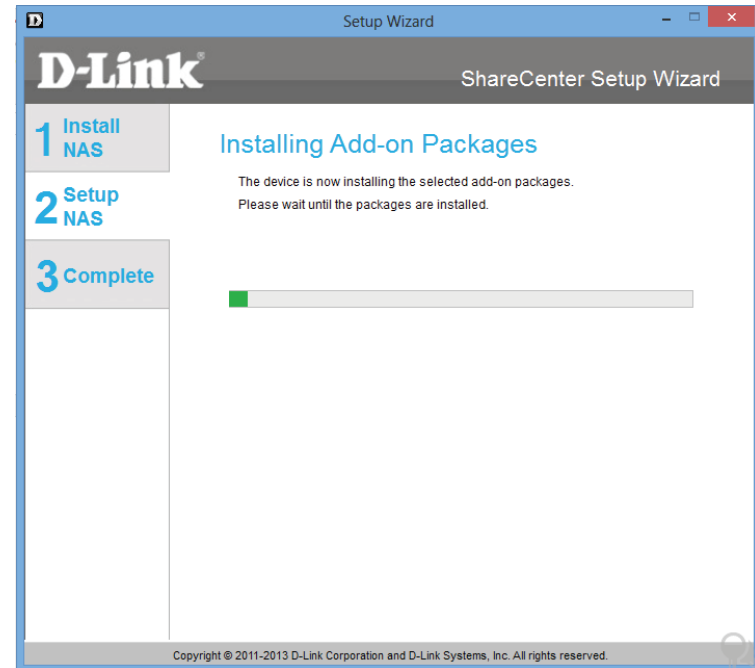

When the installation is complete click **Next**.

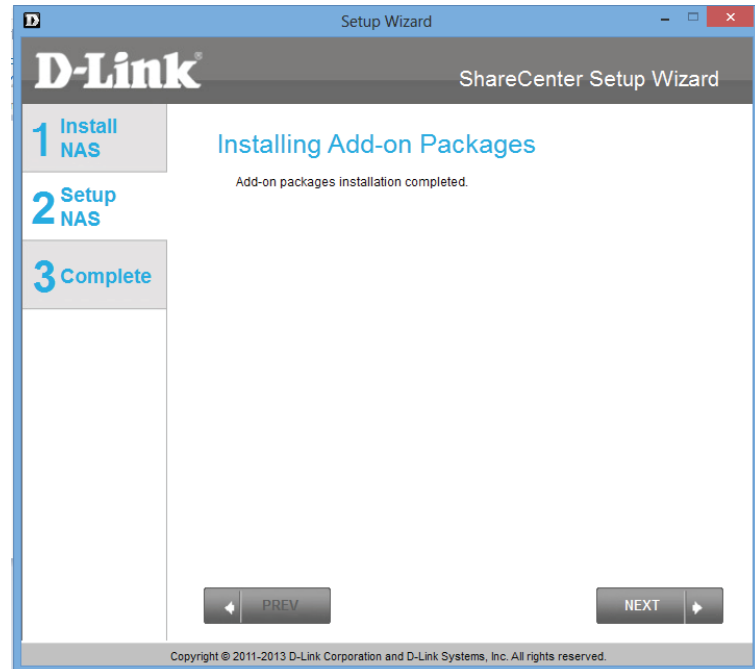

The next two windows shows the packages installed. You can also disable it from this location.

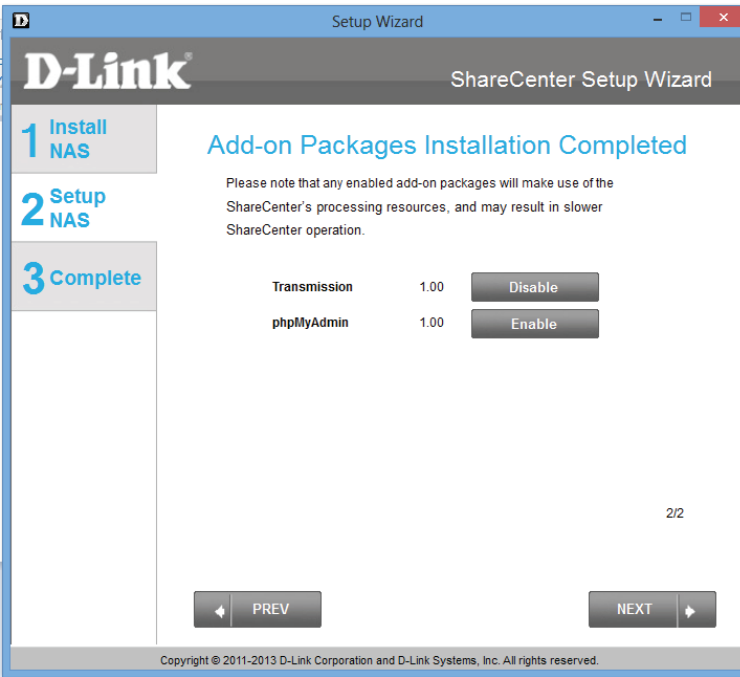

Installing Add-ons from the Web UI

Open your default browser and go to **Management, Application Management, Add-Ons**.

The screenshot displays the D-Link ShareCenter web interface. At the top, the 'ShareCenter™ by D-Link' logo is visible. Below the logo are three navigation buttons: 'Home', 'Applications', and 'Management'. The 'Management' button is highlighted. Underneath these buttons is a row of icons for various management functions: Setup Wizard, Disk Management, Account Management, Network Management, Application Management (highlighted), System Management, and System Status.

The main content area is titled 'Application Management'. On the left side, there is a sidebar menu with the following items: FTP Server, Add Ons (highlighted), AFP Service, NFS Service, and Multimedia Services.


The 'Add-Ons' section is active, showing a 'File Path:' input field with a 'Browse...' button and an 'Apply' button. Below this is a table listing installed add-ons:

No.	Module Name	Version	Signature	Status	Start/Stop	Delete
1	Photo Center	1.00				
2	aMule	1.00				
3	AjaXplorer	1.00				
4	Audio Streamer	1.00				
5	Blog	1.00				
6	Joomla	1.00				
7	phpBB	1.00				
8	phpMyAdmin	1.00				

At the bottom of the table, there is a pagination bar showing 'Page 1 of 1' and 'Displaying 1 to 9 of 9 items'.


The target program is available on the ShareCenter™ CD. Alternatively, you can download the program from D-Link's support site and install it.

Click Browse to locate the add on packages on your local hard drive. Once you have located the file, select it and click Open.

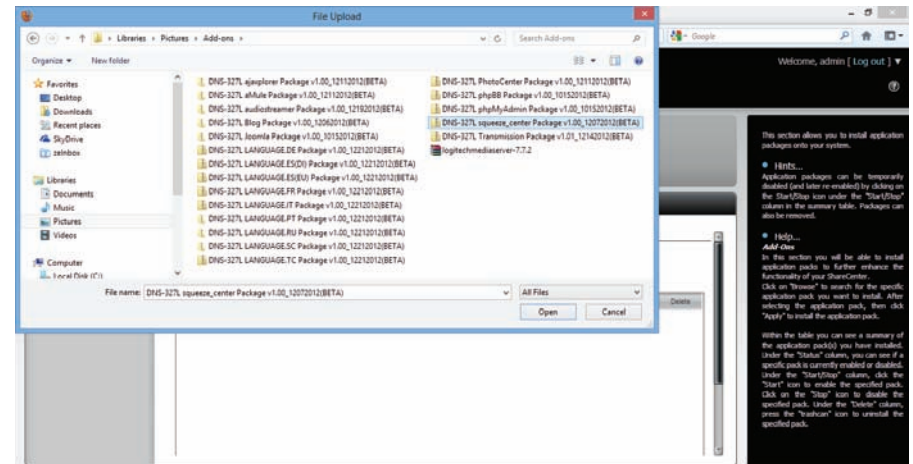

Once the path of the package you want to install has been located, click Apply to add the package.

Under Add-ons, a red message will appear to show that the installation of the package was successful.

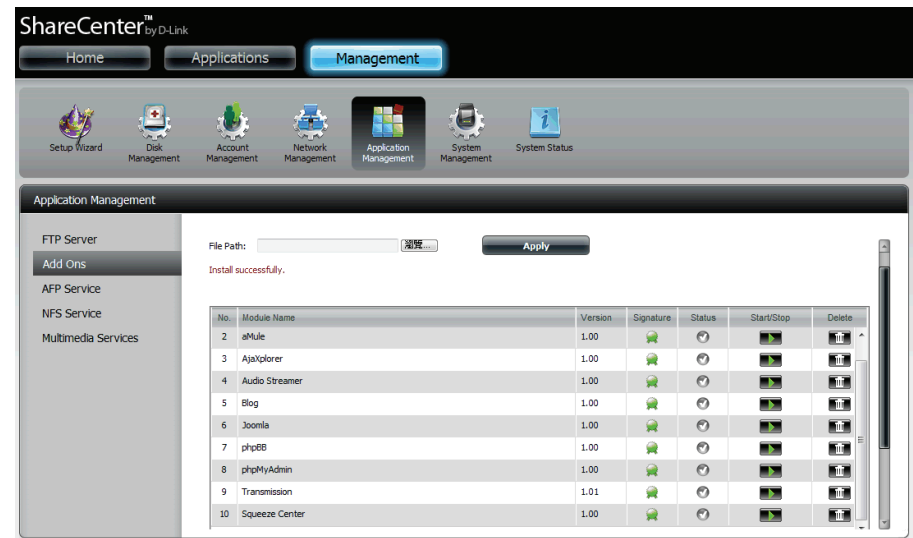

Click the **Start** button under **Start/Stop** to enable the add-on.


AFP Service

The ShareCenter™ supports Apple Filing Service for connectivity with Mac OS® based computers. If you need to use AFP service enable it here otherwise leave it disabled to reduce CPU resource overhead.

Click **Application Management > AFP Service**.

Click the **Enable** radio button to turn AFP service on.

Click **Save Settings**.

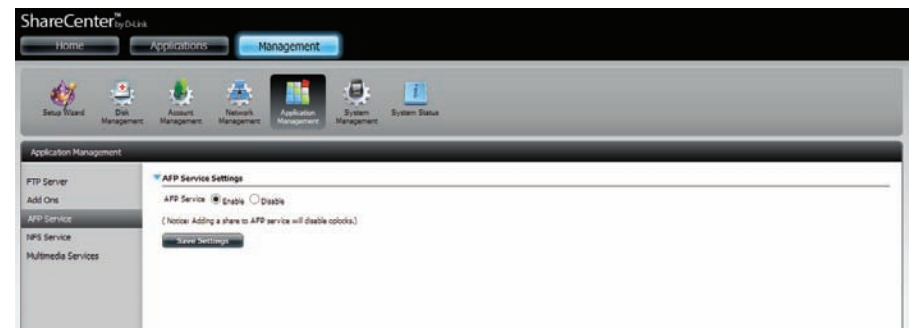


NFS Service

The ShareCenter™ supports Network File System (NFS) service. To enable this multi-platform file system on your ShareCenter™ enable it here. Otherwise disable the option to prevent unnecessary CPU overhead.

Click **Application Management > NFS Service**.


Click the **Enable** radio button to turn NFS service on.

Click **Save Settings**.

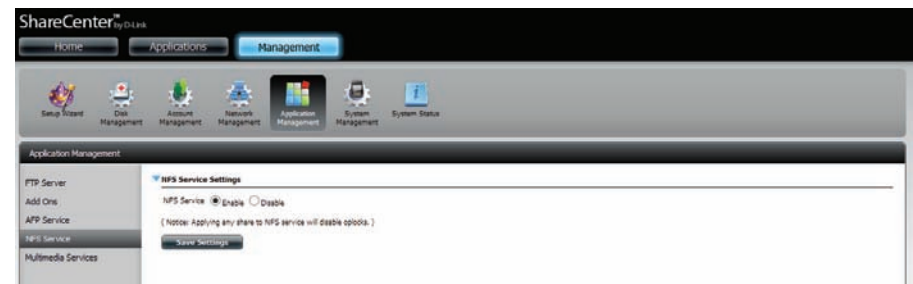

Multimedia Services

The Multimedia Share Settings creates a media library from the photos, videos, and audio files. Users can upload files to the designated “Media Share” folders on the DNS-327L and have the multimedia services collate, organize and publish the data in one library. Once these photos, videos, and music files are uploaded to the “Media Shares” folders, the system will generate the media library. Users can see thumbnail views from the MyMusic and MyPhoto panel. The My Music service provides detailed information on the genres, file size and cover art. My Photo creates automatic albums and collates them according to your collection.

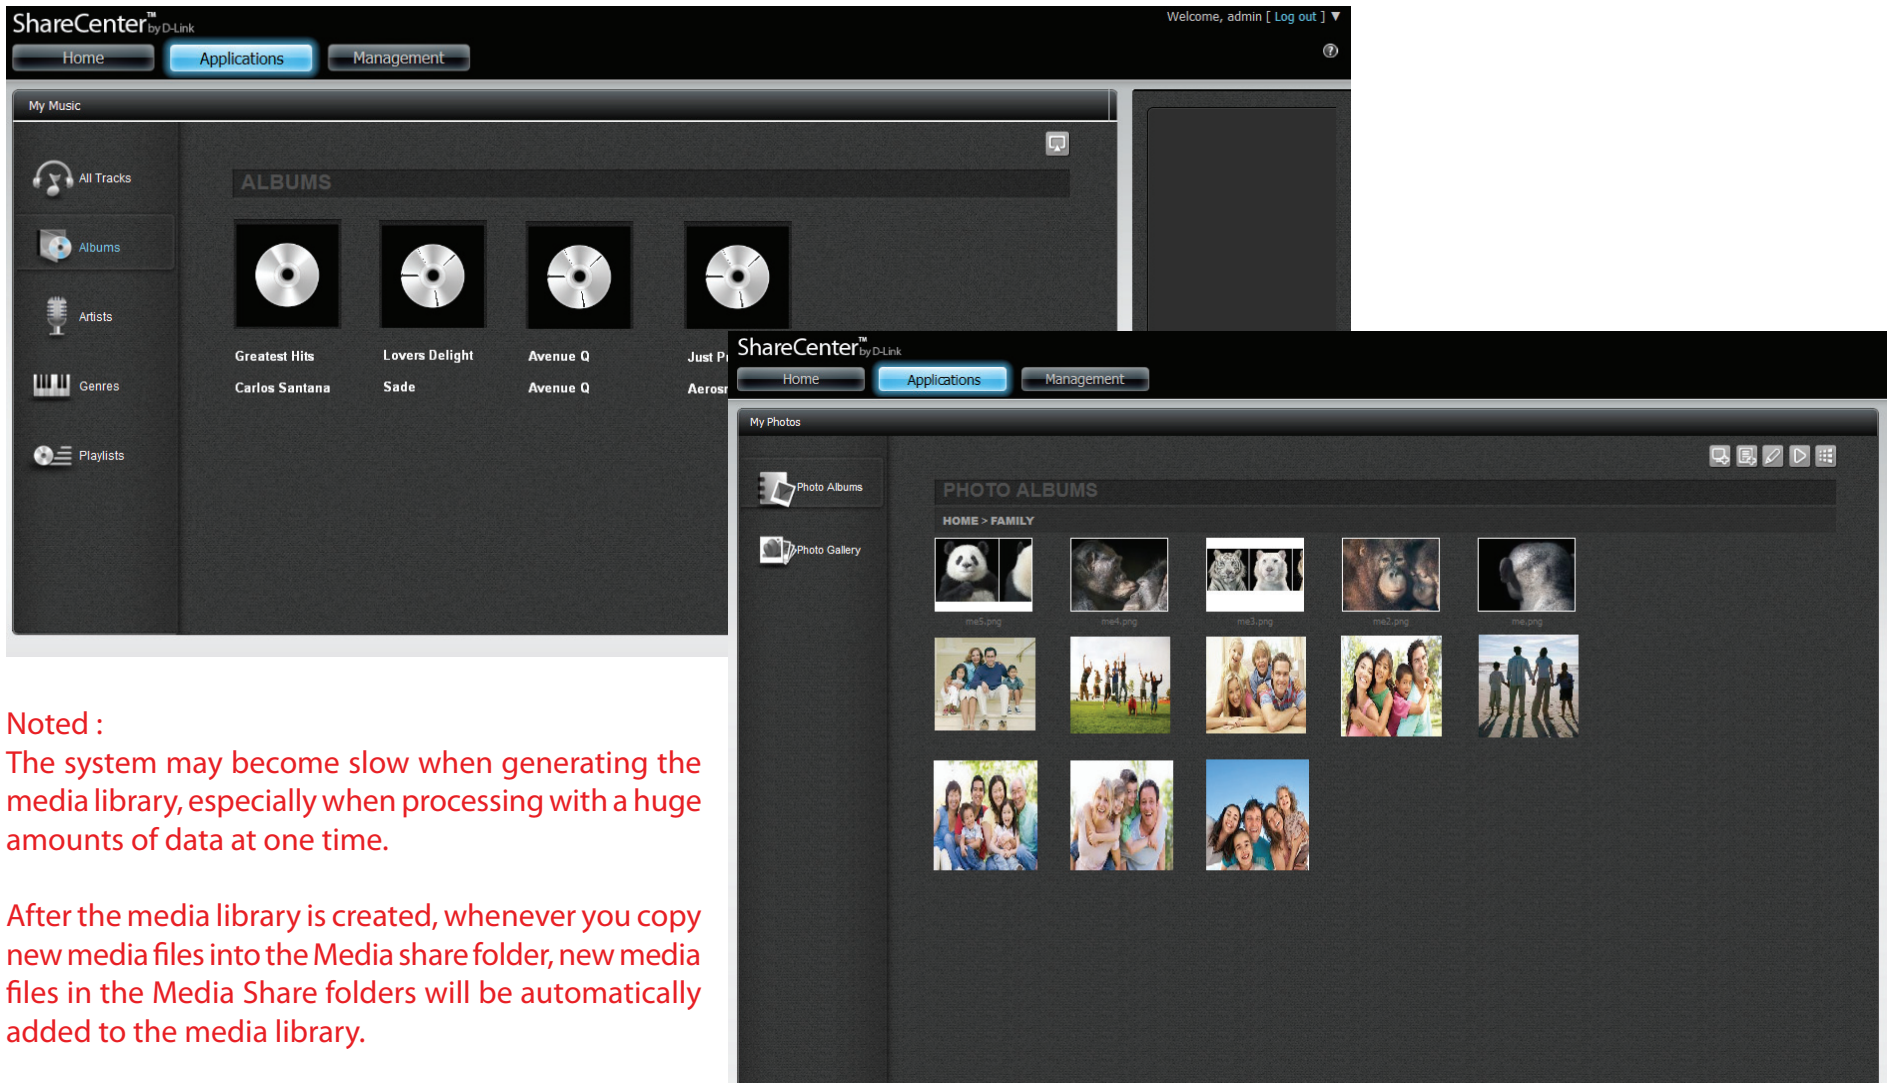


Noted :


The system may become slow when generating the media library, especially when processing with a huge amounts of data at one time.

After the media library is created, whenever you copy new media files into the Media share folder, new media files in the Media Share folders will be automatically added to the media library.


Go to Application Management, Multimedia Services.

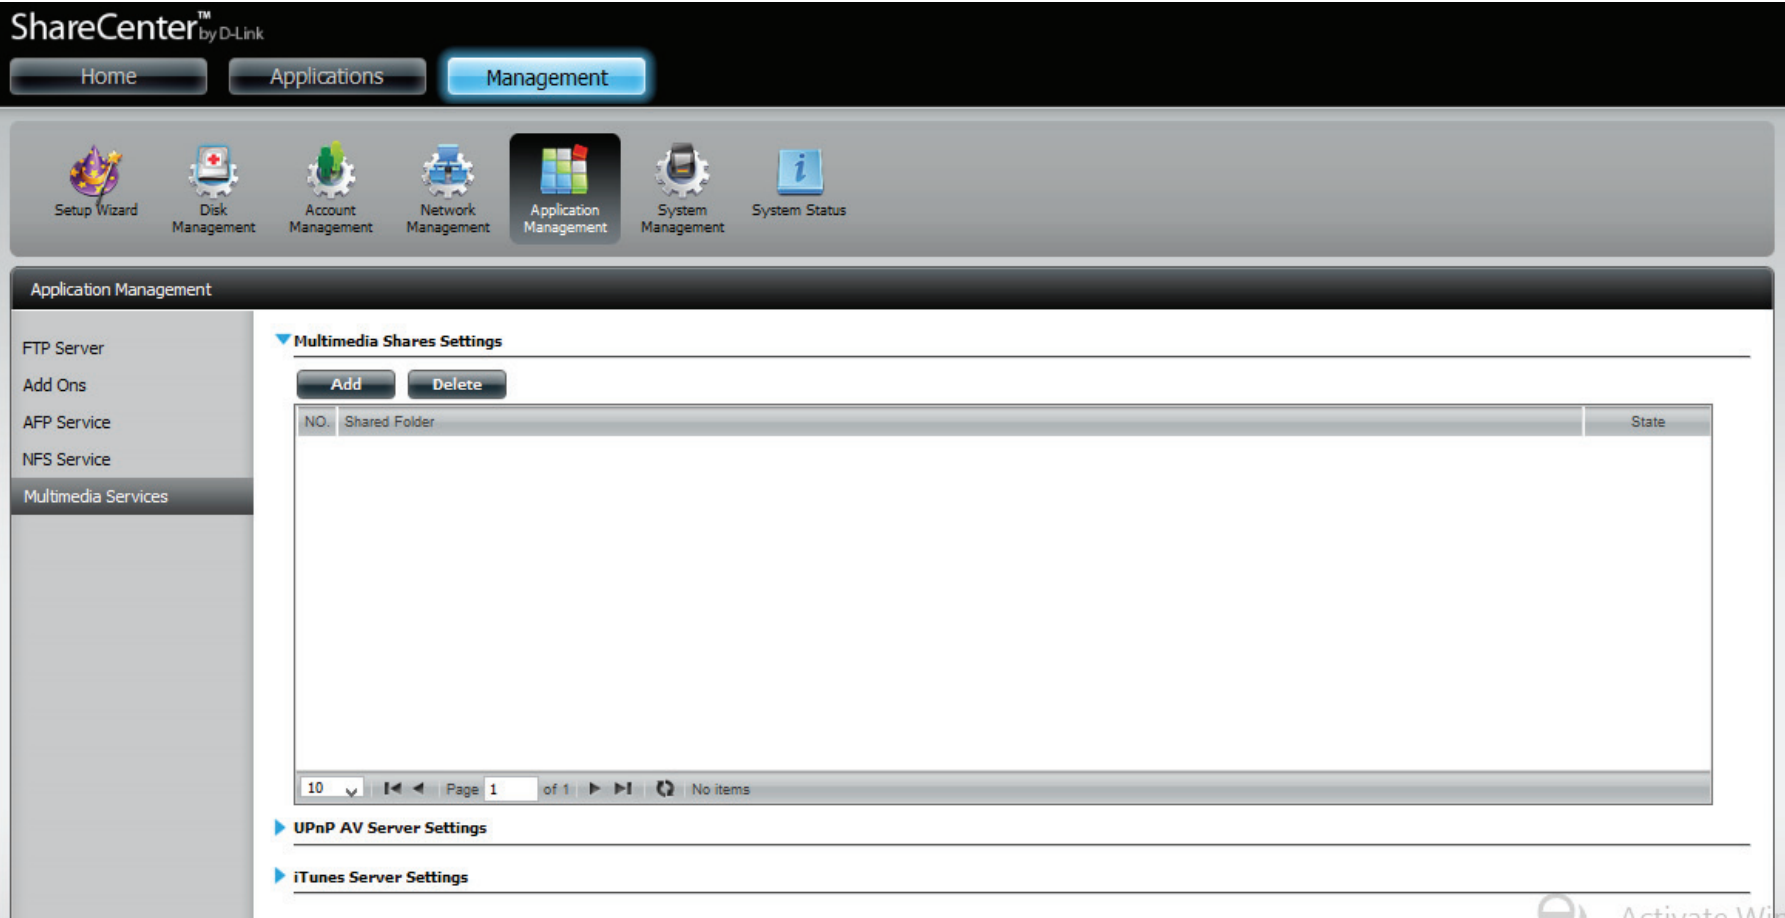


Click the **Add** button to connect Multimedia Shares to a Volume.
Select the Volume or folder and click **Apply**.

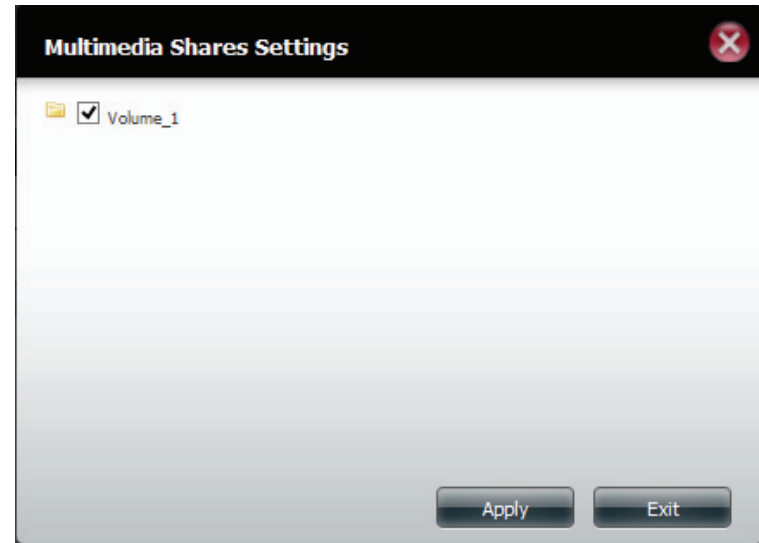

The wizard initializes the process and compiles the data.

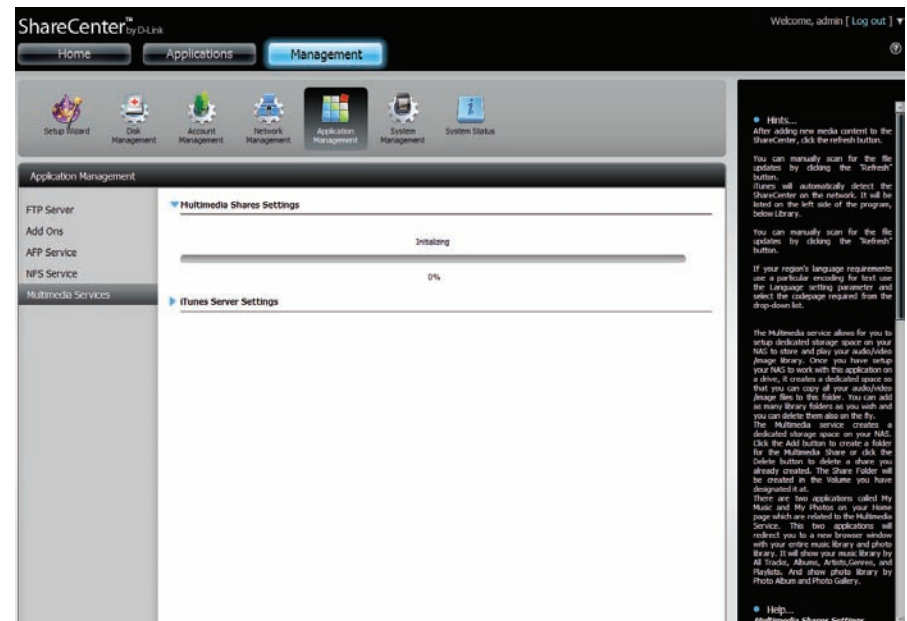


ShareCenter builds the library automatically

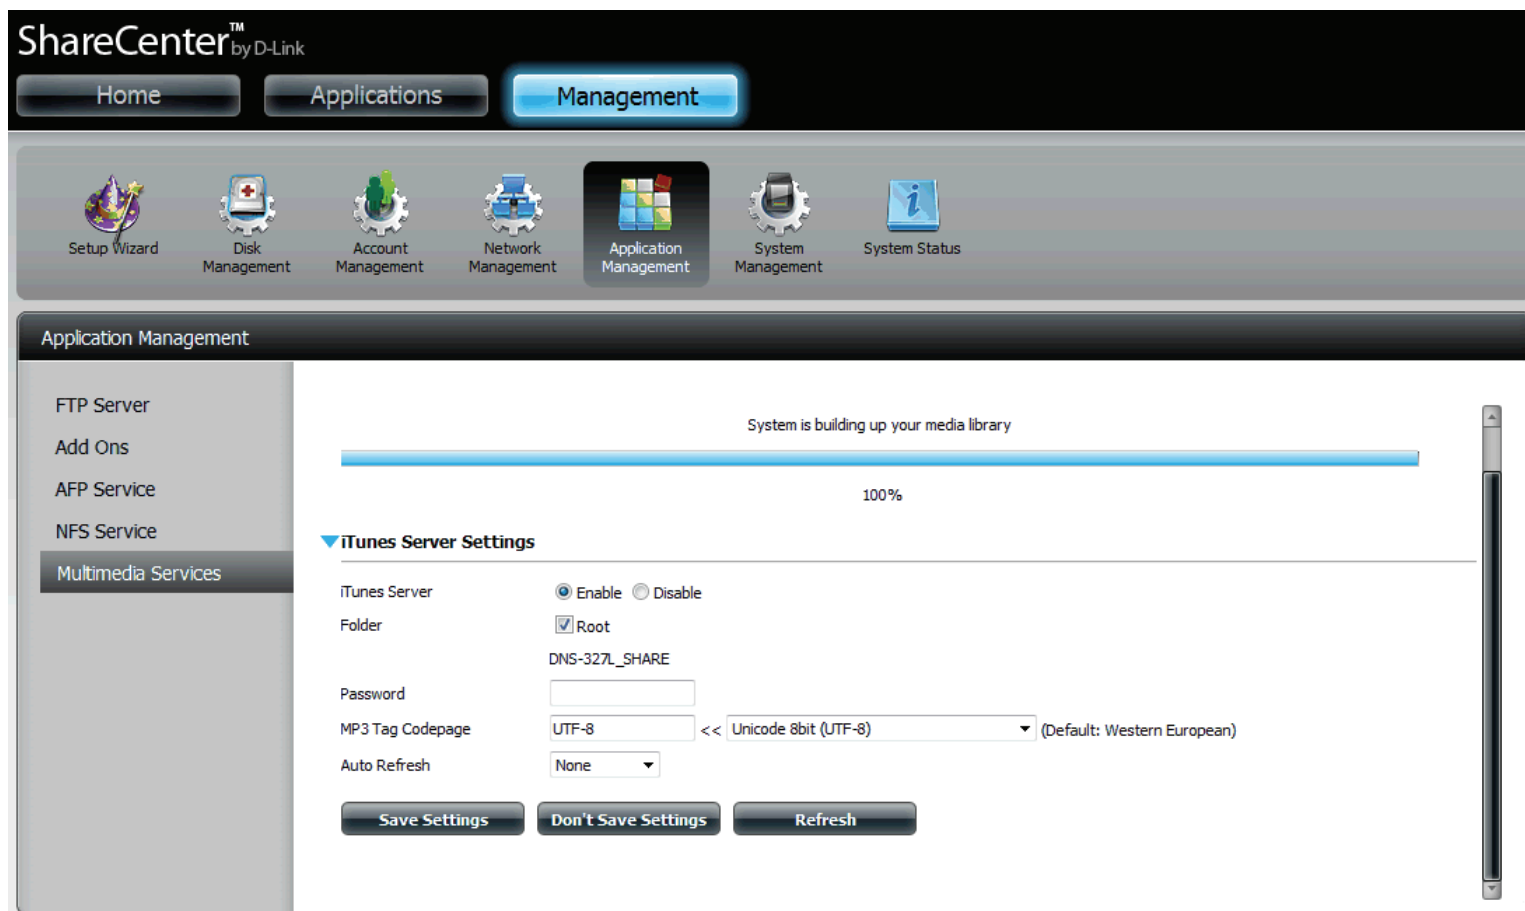

When the system has finished building the media library, a success message will appear.

Click **Yes** to continue.

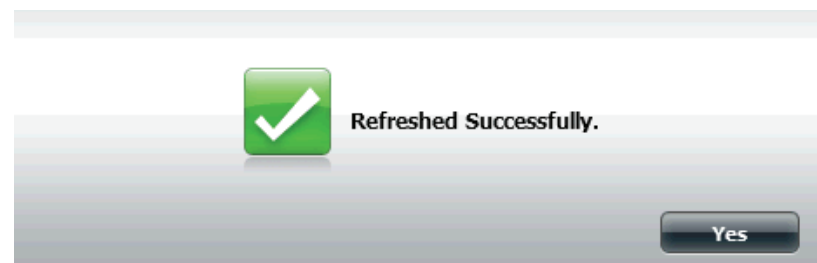

UPnP AV Server


The ShareCenter™ features a UPnP AV Server. This server provides the ability to stream photos, music and videos to UPnP AV compatible network media players. If the server is enabled, the ShareCenter™ will be automatically detected by UPnP AV compatible media players on your local network. Click the **Refresh All** button to update all the shared files and folder lists after adding new files/folders.

Click **Application Management, Multimedia Services**, then **UPnP AV Server**.

Click the **Enable** radio button to enable the UPnP AV server.

Click **Save Settings** to configure the UPnP AV share.

Click **Refresh** to build up media library

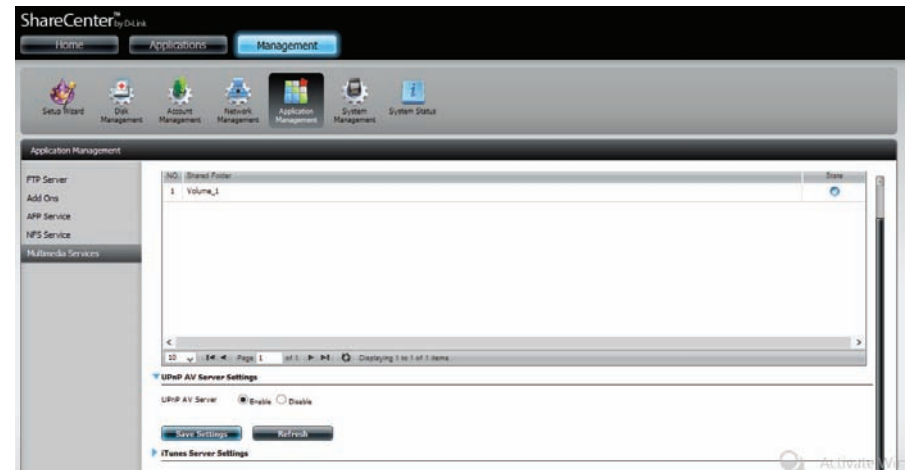

iTunes Server

The DNS-327L features an iTunes Server. This server provides the ability to share music to computers on the local network running iTunes. If the server is enabled, the device will be automatically detected by the iTunes program and the music contained in the specified directory will be available to stream over the network. Click the **Refresh** button to update all the shared files and folder lists.


iTunes Server: Select to enable or disable the iTunes Server.

Folder: Specifies the folder or directory that will be shared by the iTunes server. Select root to share all files on all volumes, or click **Browse** to select a specific folders.



Password: Sets password for the iTunes server. (Optional)

MP3 Tag Codepage: Here the user can select the MP3 Tag Codepage used by this device. Currently the Codepage is set to Western European.

Auto Refresh: Here the user can select the Automatically Refresh time.

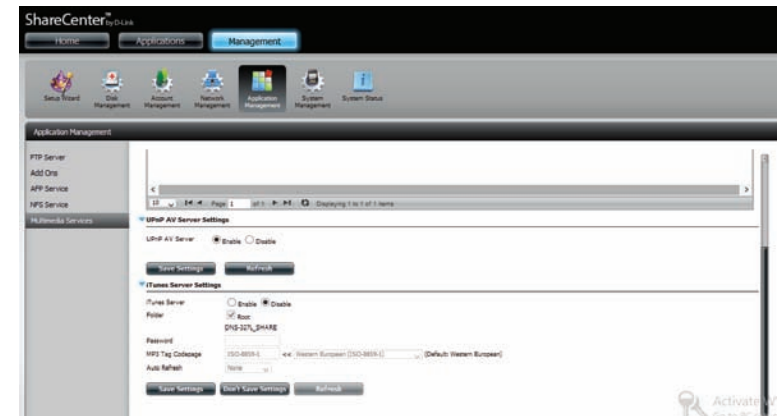

After enabling the iTunes server on the ShareCenter™, launch iTunes. In your iTunes utility, select the ShareCenter™ and enter the iTunes server password if required.

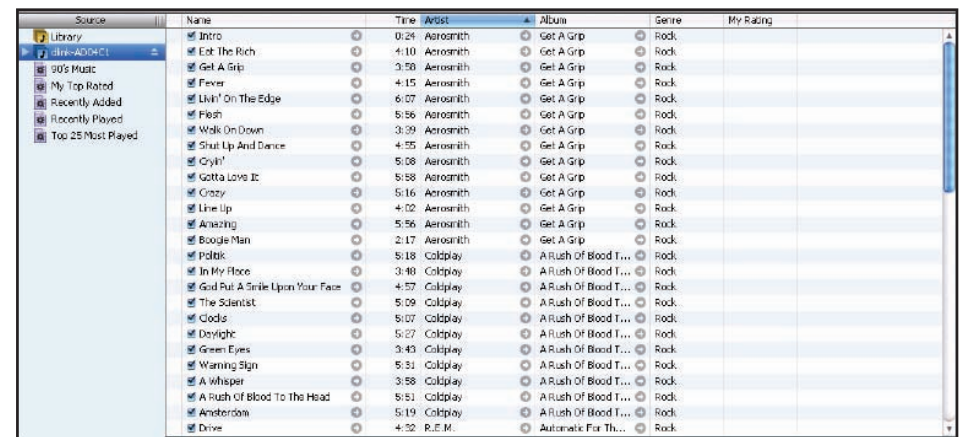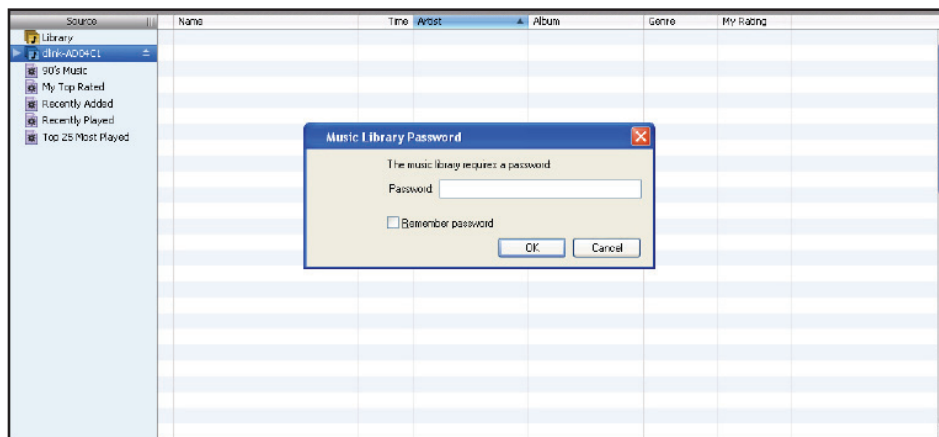

Select the ShareCenter™. When prompted, enter in the iTunes server password. Click **OK**.

Media stored on the ShareCenter™ will then be available for use in iTunes.


System Management

Language

The language packs help users customize the DNS-327L to their specific region. Download your language pack from the D-Link website or the CD and follow the instructions below. When you disable the language pack, the GUI will return to English.


Click **System Management** and then **Language** to install a new language.

Click on **Browse** to search for the specific language pack you want to install. After selecting the language pack, click **Apply** to install the language pack.

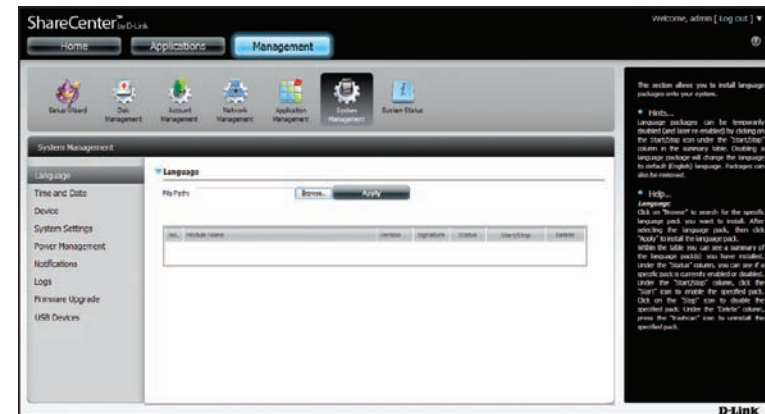

If you have not selected a language package, a message will prompt you to locate one.


Click **Yes** to continue.

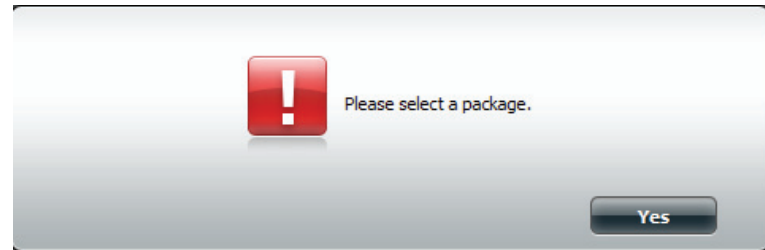


Time and Date

The Time and Date configuration option allows you to configure, update, and maintain the correct time and date on the internal system clock. In this section you can set the time zone that you are in, and set the NTP (Network Time Protocol) Server in order to periodically update your system time from the NTP Server. You can also sync the time and date of your computer as the system time.

Click **System Management**, then **Time and Date**. Select the **Set Time from My Computer** button if you want to use the time and date of your computer. When a confirmation message appears, click **Yes** to continue.

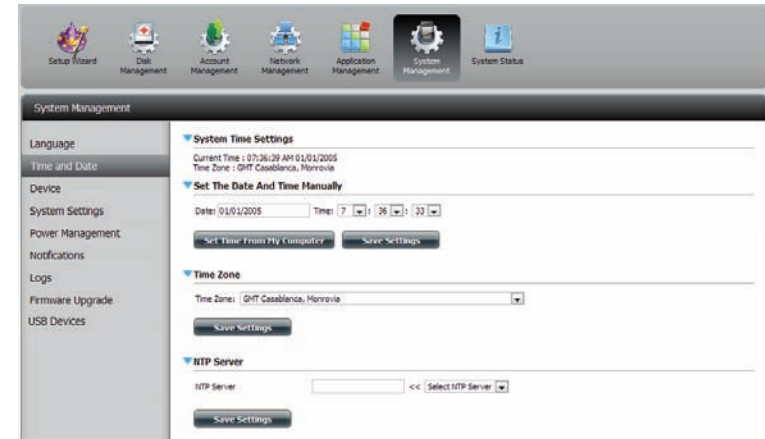

Select your time zone from the drop-down menu. Click **Save Settings**.

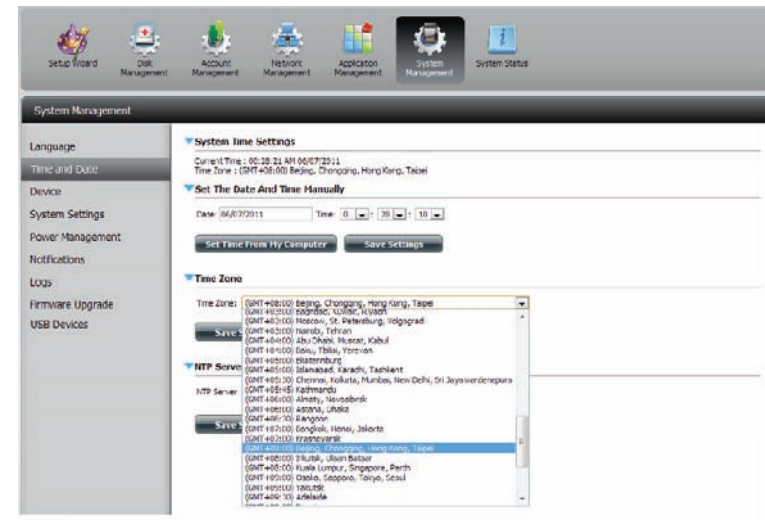

You can also select a NTP server from the drop-down menu to sync the time and date with an online server. Then click **Save Settings**.


Device

The device settings page allows you to assign a workgroup, name and description to the device. You can access this device by typing the host name in the URL section of your web browser. For example: `http://dlink-d10001`.

Workgroup: Enter your Workgroup name here. The workgroup name should be the same as the computers on the network. Devices using the same workgroup will have additional file sharing methods available.

Name: Enter your device name here. This name is what the device will appear as on the network. By default, the device name is `dlink-xxxxxx`, where `xxxxxx` is the last six digits of the MAC address.

Description: Assign a device description to the device.

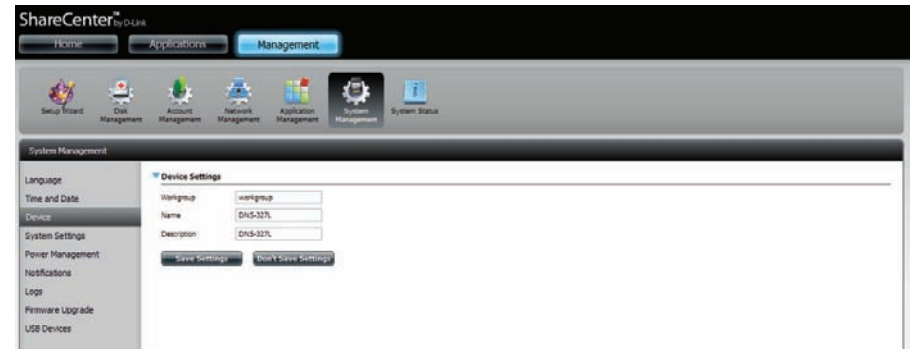


System Settings

System Settings provides features to control your DNS-327L. Users can restart the NAS, restore the system to it's original state, set idle times, shutdown the system, configure settings, and configure system temperature settings.

Restart: Click to reboot the DNS-327L.

Default: Click to restore the device back to the factory default settings. All previous settings that have been configured will be erased.


Shutdown: Click to turn off the DNS-327L.

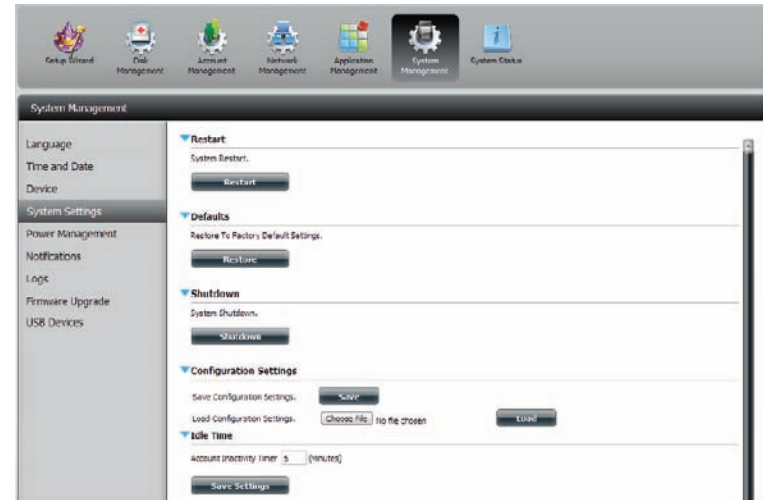

Configuration Settings: Click on the **Save** button to save the current configuration settings to a file on your computer. If at a later time you need to reload this configuration after a system reset, browse to the file and click **Load**.

Idle Time: Enter the time (in minutes) that the administrator and users will be allowed to remain idle while accessing the web UI.

System Temperature Threshold: Here you can configure the system temperature threshold value. This value can be set in Fahrenheit or Celsius. The device will automatically shutdown when it reaches the temperature set here.

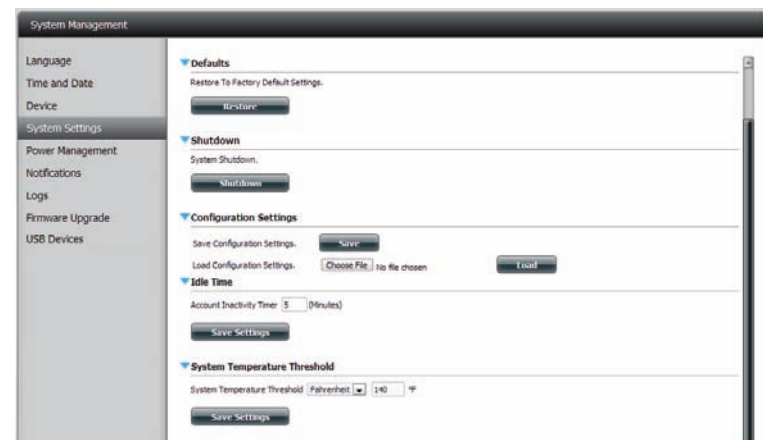


Power Management

The device Power Management feature allows you to configure the drives to shut down while power remains constant to the device. The drives will power up again when data is accessed.

HDD Hibernation: Click **Enable** or **Disable**.

Turn Off Hard Drives: Set the amount of idle time before the drives go into hibernation.

Power Recovery Settings: Click **Enable** or **Disable**. The Power Recovery feature will automatically restart your device from a previously unexpected shutdown due to a power failure.

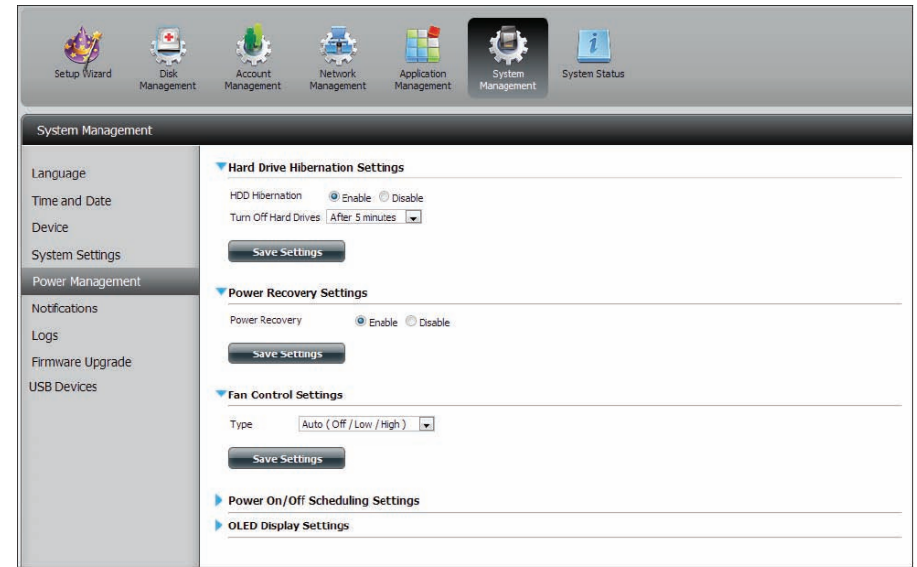



You can control the speed of the fan using three different settings and you can power off the device at scheduled times for each day of the week.

Fan Control: The speed of the fan can be controlled from this section.

If you select **Auto** mode, the speed of the fan will change (Off/Low/High) depending on the internal temperature of the enclosure.

Power On/Off Scheduling: Click **Enable** to turn on this function.

Enable or disable the power on/off days using the check box and configure the time for each day that the power on/off will occur.

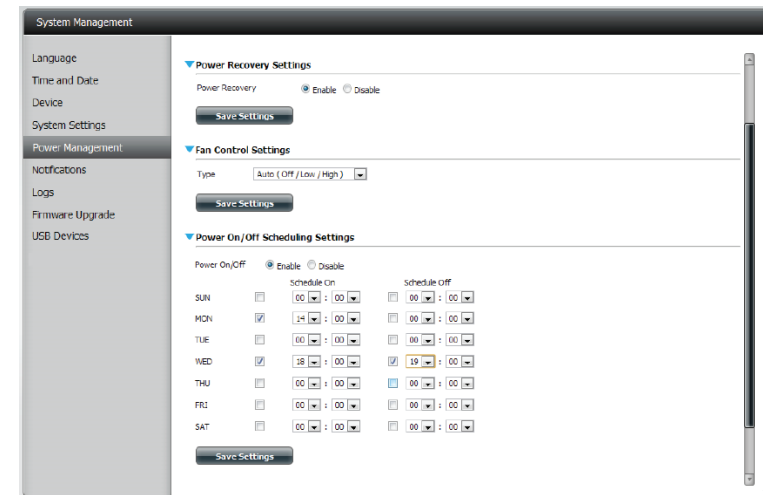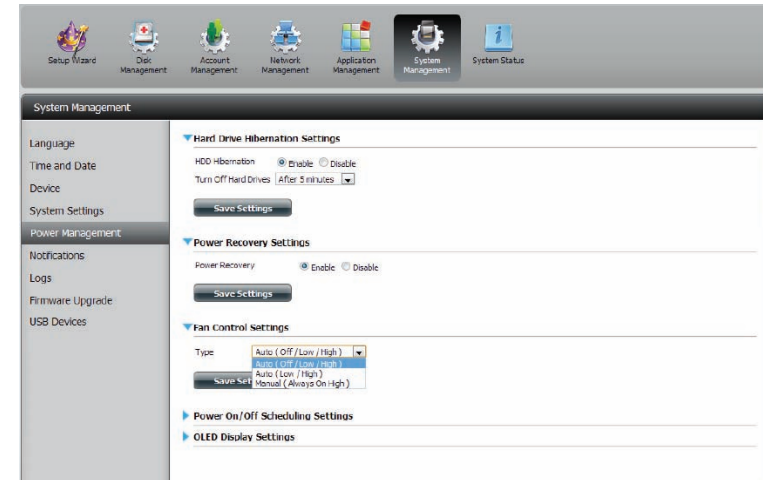

Notifications

Email Settings

Login Method: Select either **Account** or **Anonymous**. Choosing Anonymous does not require a User Name or Password.

Username: Enter the appropriate user name for your e-mail account.

Password: Enter the appropriate password for your e-mail account.

Port: Enter the SMTP port number used here.


SMTP Server: Enter the IP address or domain name of your outgoing mail server. If you are unsure of this value, contact your e-mail provider.

Sender E-mail: Enter the "from" e-mail address (e.g. alerts@share.com). This field does not require a valid e-mail address. However, if your e-mail client is filtering spam, make sure you allow this address to be received.

Receiver E-mail: Enter the e-mail address you want to send the alerts to. This address must correspond with the SMTP server configured above.

Secure Connection: Select **STARTTLS** or **SSL** from the drop-down menu if it is required by your SMTP server, or select **NONE**.

Test E-Mail: Click the **Test E-Mail** button to send a test alert and confirm your settings are correct.

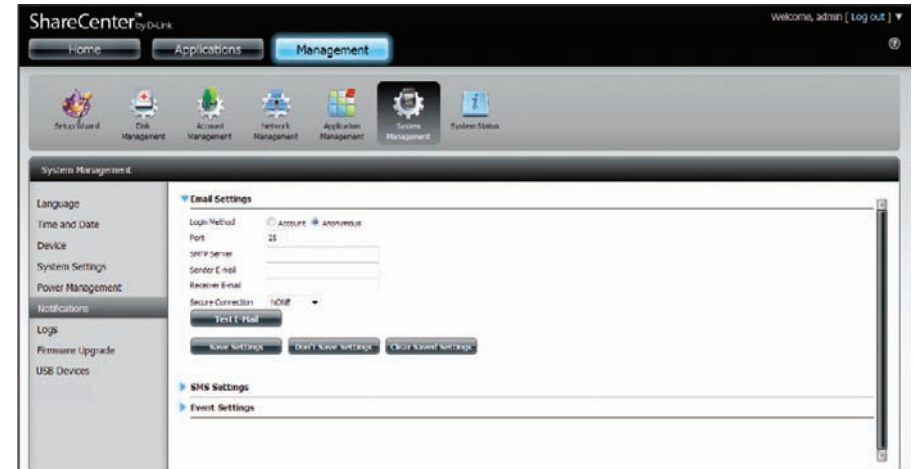

SMS Settings

The same alerts of system conditions that can be sent to an email box can also be sent to a mobile phone or by SMS text messages. You need to have an agreement with a SMS service gateway that the device can then be configured to send the alerts to. The service provider then sends the received alerts to the configured mobiles as text messages.

Enable SMS Notifications: Check this box to enable SMS alerts to be sent to your mobile phone.

SMS Service Provider: Select from the drop-down list your SMS service provider you would like to use (these are added with the **Add** button)

Add button: Click on the **Add** button and enter the information into the appropriate fields that your provider has given you to use for the configuration.

Delete button: Remove the selected Service Provider from the configuration.

URL: The specific service provider URL provided and added in the Add procedure.

Replace space character with: If required by your service provider enter a character that will be used for the space.

Phone Number 1: Automatically populated from the **Add** button function.

Phone Number 2: Enter a second mobile telephone number. Verify that the number input is according to the configuration instructions from your Mobile Service Provider.

Test SMS button: Click this button to send a test message to your mobile phone to verify the settings are correct and the API URL is functioning with your provider.

The screenshot displays the 'System Management' web interface. The top navigation bar includes icons for Setup Wizard, Disk Management, Account Management, Network Management, Application Management, System Management (active), and System Status. The left sidebar lists various system settings: Language, Time and Date, Device, System Settings, Power Management, Notifications (selected), Logs, Firmware Upgrade, and USB Devices. The main content area is titled 'System Management' and contains the following fields and buttons:

- SMTP Server:** mail.company.com
- Sender E-mail:** job@company.com
- Receiver E-mail:** jim@noble.com
- ☒ **SMTP Authentication**
- Test E-Mail** button
- Save Settings**, **Don't Save Settings**, and **Clear Saved Settings** buttons.

Below these fields is the **SMS Settings** section:

- ☒ **Enable SMS Notifications**
- SMS service provider:** A dropdown menu with **Add** and **Delete** buttons.
- URL:** A text input field.
- Enter the required special character from your service provide:** Radio buttons for ☐ and ☒ **Use default**.
- Phone number1():** A text input field.
- Phone number2():** A text input field.
- Test SMS** button.
- (Note: Click Save Settings to confirm your service provider information.)
- Save Settings** and **Don't Save Settings** buttons.

Adding an SMS Service Provider

Once you have a SMS Service provide you with a HTTP API URL, enter it into the Add SMS Service Provider wizard. Enter the URL in the first window with an appropriate Provider Name. In the next window select the appropriate HTTP API URL parameter types definitions from the drop-down menus next to the parsed fields of the URL.

Enter your SMS Provider name here.

Enter the HTTP API URL provided to you.

Choose the appropriate type parameter in the drop-down menu for the parsed parameters of the URL on the left.

Event Settings

You can limit which events are sent as alerts to the Email or SMS settings by checking the events here.

Event Settings: Select the information you want e-mailed to the above address or sent over SMS messages to the above mobile number. The items checked will be sent when necessary.

The screenshot displays the 'System Management' interface of a D-Link ShareCenter DNS-327L. The top navigation bar includes icons for Setup Wizard, Disk Management, Account Management, Network Management, Application Management, System Management (active), and System Status. The left sidebar lists various system management options: Language, Time and Date, Device, System Settings, Power Management, Notifications, Logs, Firmware Upgrade, and USB Devices. The main content area is titled 'System Management' and contains the following sections:

- URL:** A text input field for the service provider's URL.
- Special Character:** A dropdown menu with 'Use default' selected.
- Phone number 1:** A text input field.
- Phone number 2:** A text input field.
- Test SMS:** A button to test the SMS service.
- Note:** A red text note stating: '(Note: Click Save Settings to confirm your service provider information.)'
- Save Settings / Don't Save Settings:** Two buttons to save or discard changes.
- Event Settings:** A section with a list of events and checkboxes to select which ones to send alerts for:
 - ☐ The Administrator Password Has Been Changed
 - ☒ Space Status
 - Frequency: Daily (dropdown)
 - Time: 00 (dropdown) : 00 (dropdown)
 - ☐ One Of The Volumes Is Full
 - ☐ The Volume/Disk Status Has Been Changed
 - ☐ The System Temperature Is Over User Defined Threshold
 - ☒ The Firmware Has Been Upgraded
 - ☐ Send Log File
 - ☐ One Torrent Download Is Finished
 - ☒ Send The S.M.A.R.T. Test Result
 - ☒ Recover From Power Failure
- Save Settings / Don't Save Settings:** Two buttons to save or discard changes.

Logs



Within the Logs menu you can setup your ShareCenter™ to send the ShareCenter's™ log events to the SysLog server. You can also view the NAS system logs and the FTP logs here.

Enable Syslog: Click to activate the Syslog client functionality of your device to be able to send the ShareCenter's™ log events to the Syslog server.

Syslog Server IP: Enter the IP address of an external Syslog server that you wish to send the logs of this device to.

Clear Log: Click **Clear Log** to delete all the existing logs.


Backup Log: Click **Backup Log** to save the existing logs to a text file on your computer.

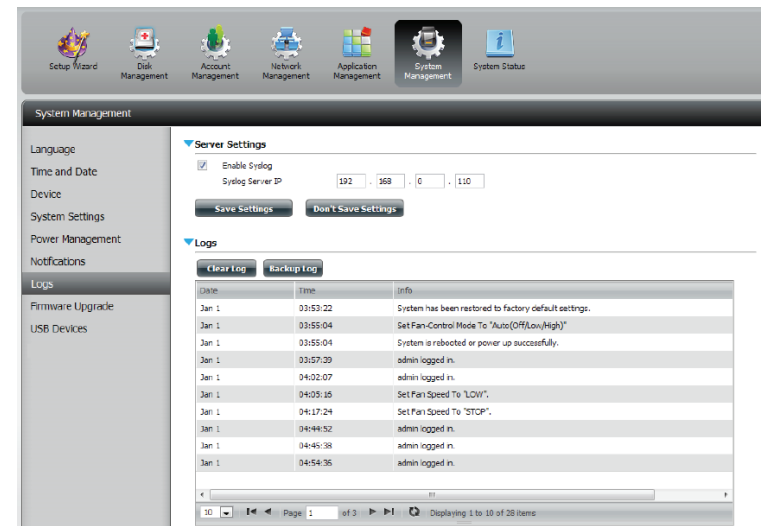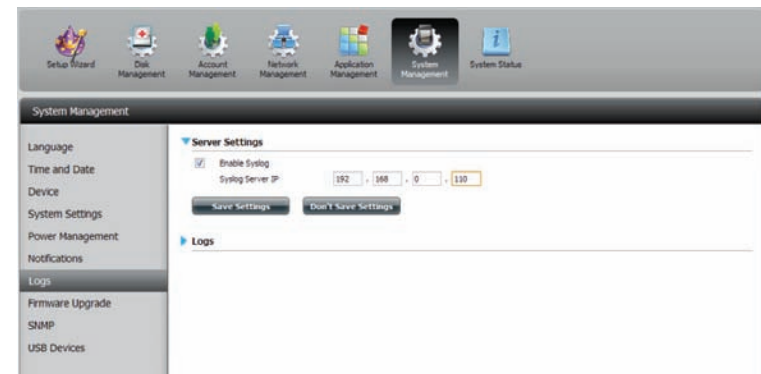

Firmware Upgrade

The Firmware Upgrade Page makes it simple to upload new firmware releases to the device. Please check for new firmware on the D-Link support website. If new firmware is available, download the file to your local computer.

- Current Firmware Version:** Displays the current firmware version on your ShareCenter™ device.
- Firmware Date:** Displays the date of when the firmware was created.
- Firmware Upload:** When upgrading the firmware, click **Browse** to select the new firmware file on your local computer and then click **Apply** to begin the firmware upgrade process.

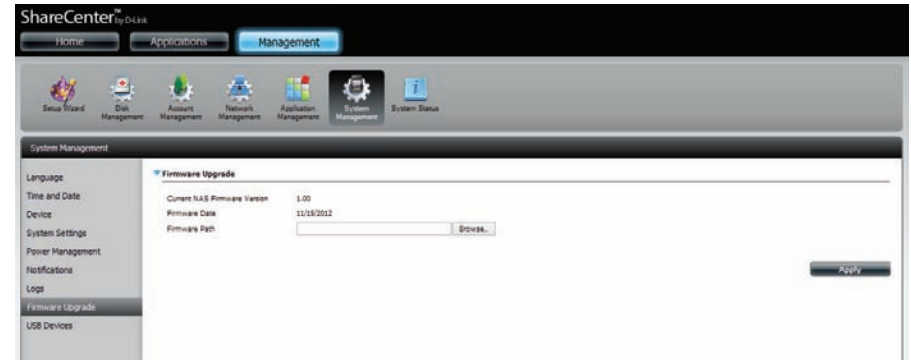

USB Devices UPS Settings


Network UPS is a system management feature that uses a local UPS to protect your NAS from an abnormal shutdown due to a power failure.

To enable Network UPS to your NAS (Network Slave Mode):

1. Click to enable the Network UPS.
2. Enter an IP address of the Network UPS Master.
3. Click **Save Settings** to receive the critical power status from the network UPS master.

The UPS Status will display the current status of your UPS.

Note: Make sure that the ShareCenter™ is in the same network as the network UPS master.

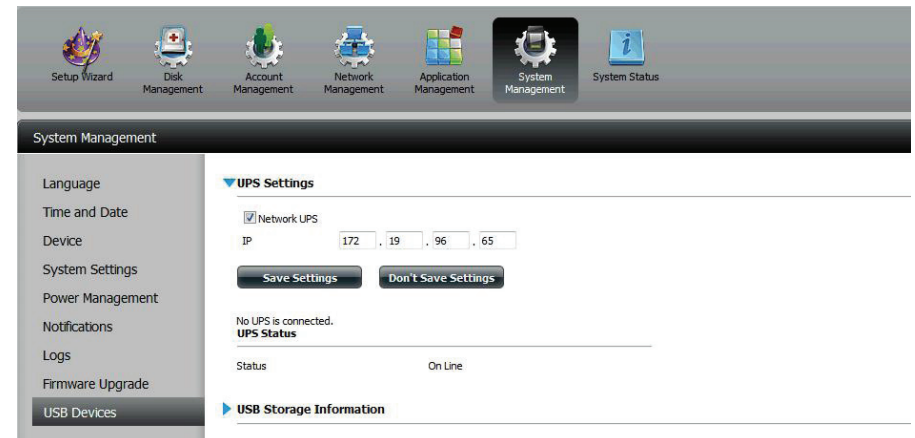


If a UPS device is connected to the USB port on your NAS, you can select either Stand-Alone or Master mode. If you select Master mode, you will have to enter the IP address(es) of the network UPS slaves to notify them in the event of a power failure. For more details, refer to the **UPS Connectivity** section.

USB Storage Information

Click the blue arrow to reveal the USB storage Information.

It displays information on the manufacturer, product name, and size (capacity).

Click the Unmount button to eject the USB device.

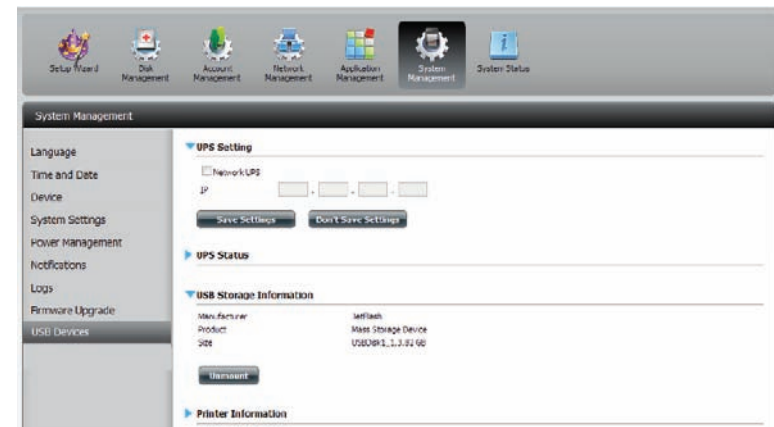


Printer Information

Click the blue arrow to reveal Printer Information.

It displays information on the manufacturer, product type, and connection details.

Click **Clear Print Queue(s)** to remove all active print jobs.

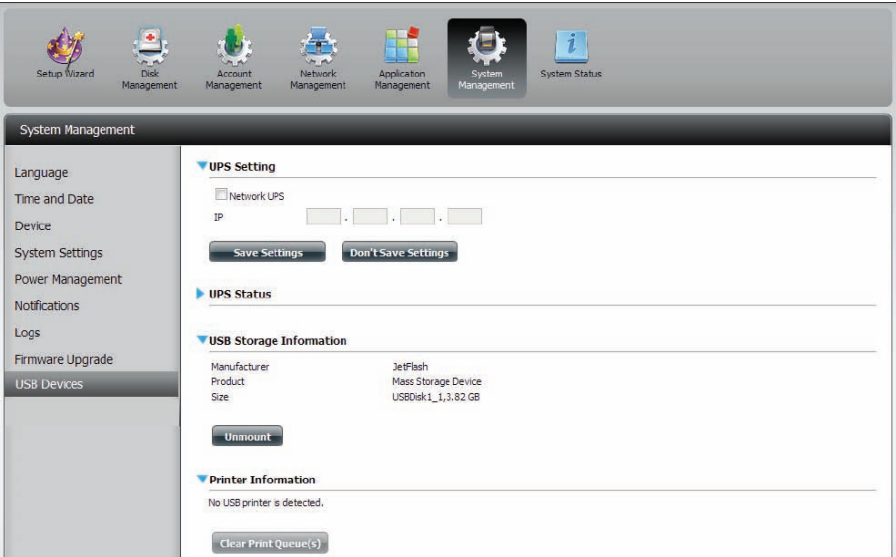

System Status


System Info

The System Status information screen provides information on the DNS-327L. System Info provides information on the LAN port, Device Information, and Volume information. Hard Drive Info displays information on all hard drives including the manufacture details, temperatures, size, and status. Resource Monitor offers more detailed information on the CPU, Memory, Bandwidth, and Processes.

Click **System Status** and then **System Info**


Click the blue arrow from each of the headings to reveal information on each segment.

LAN Information, Device Information, and Volume Information.

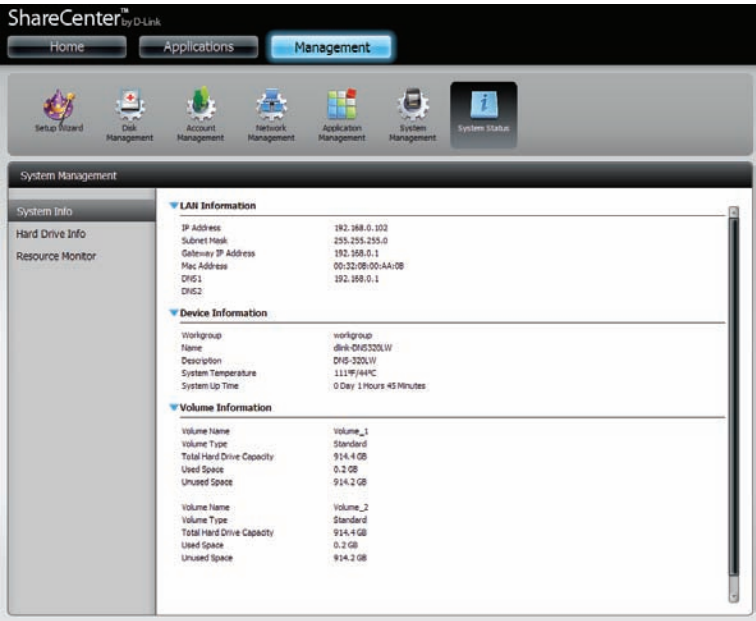




Click **System Status** and then **Hard Drive Info**.

Click the blue arrow to reveal a table of hard drive information.

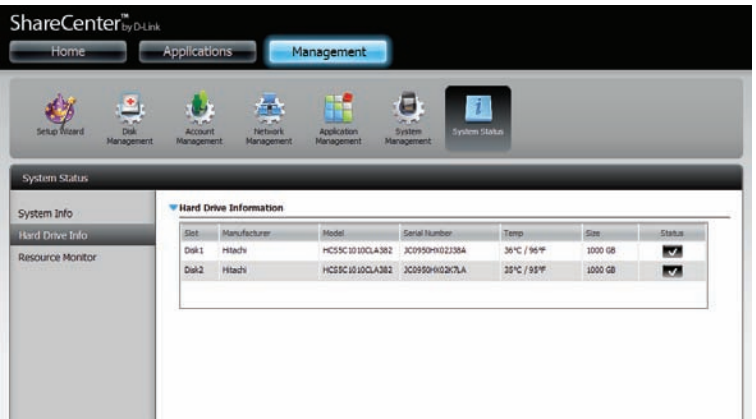


Click **System Status > Resource Monitor**, then click the blue arrow to reveal the resource details.

It provides information on the CPU, memory, bandwidth, and processes in action.

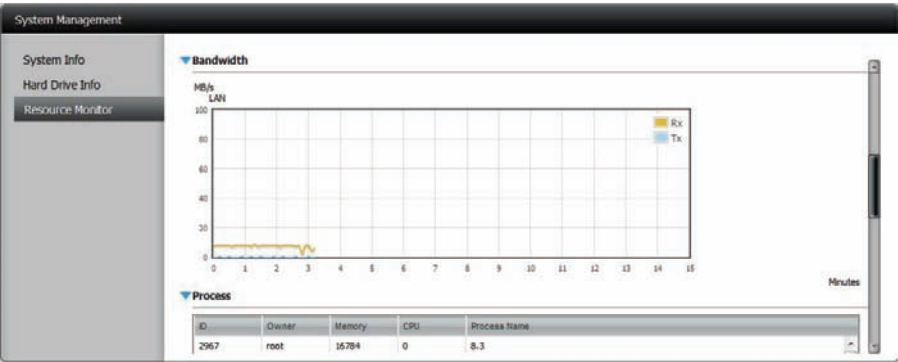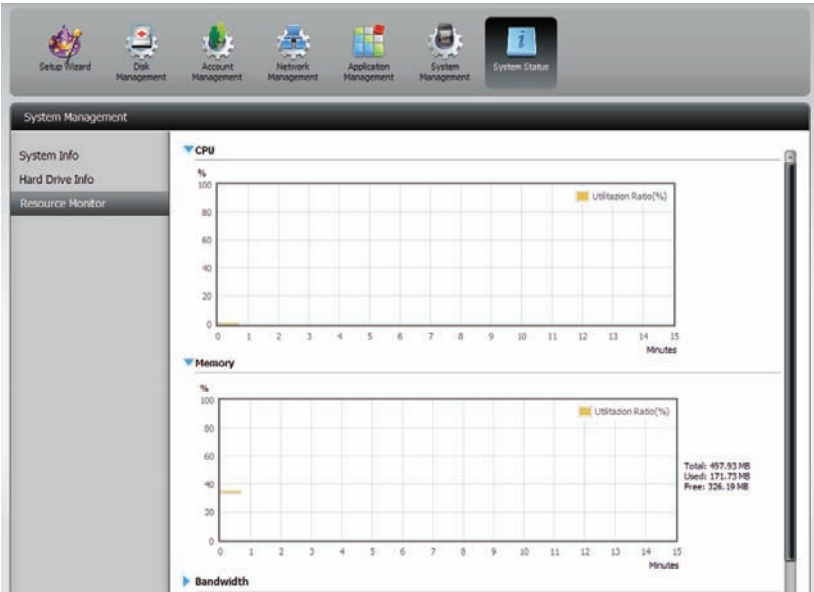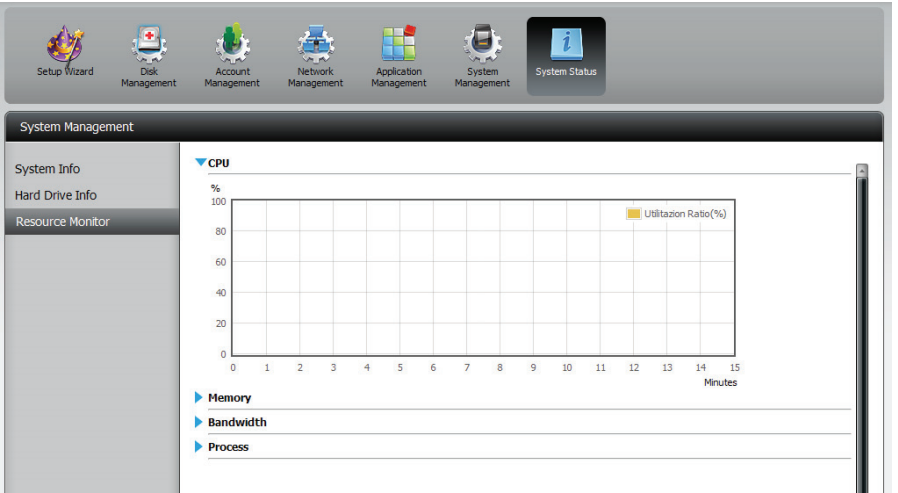

Home


The Home tab is the center for all files on your ShareCenter™. Home is divided into one main subfolder called My Folder. Under My Folder resides four main apps, My Photos, My Files, My Music, and My Surveillance. Let's take a closer look at all four apps independently.

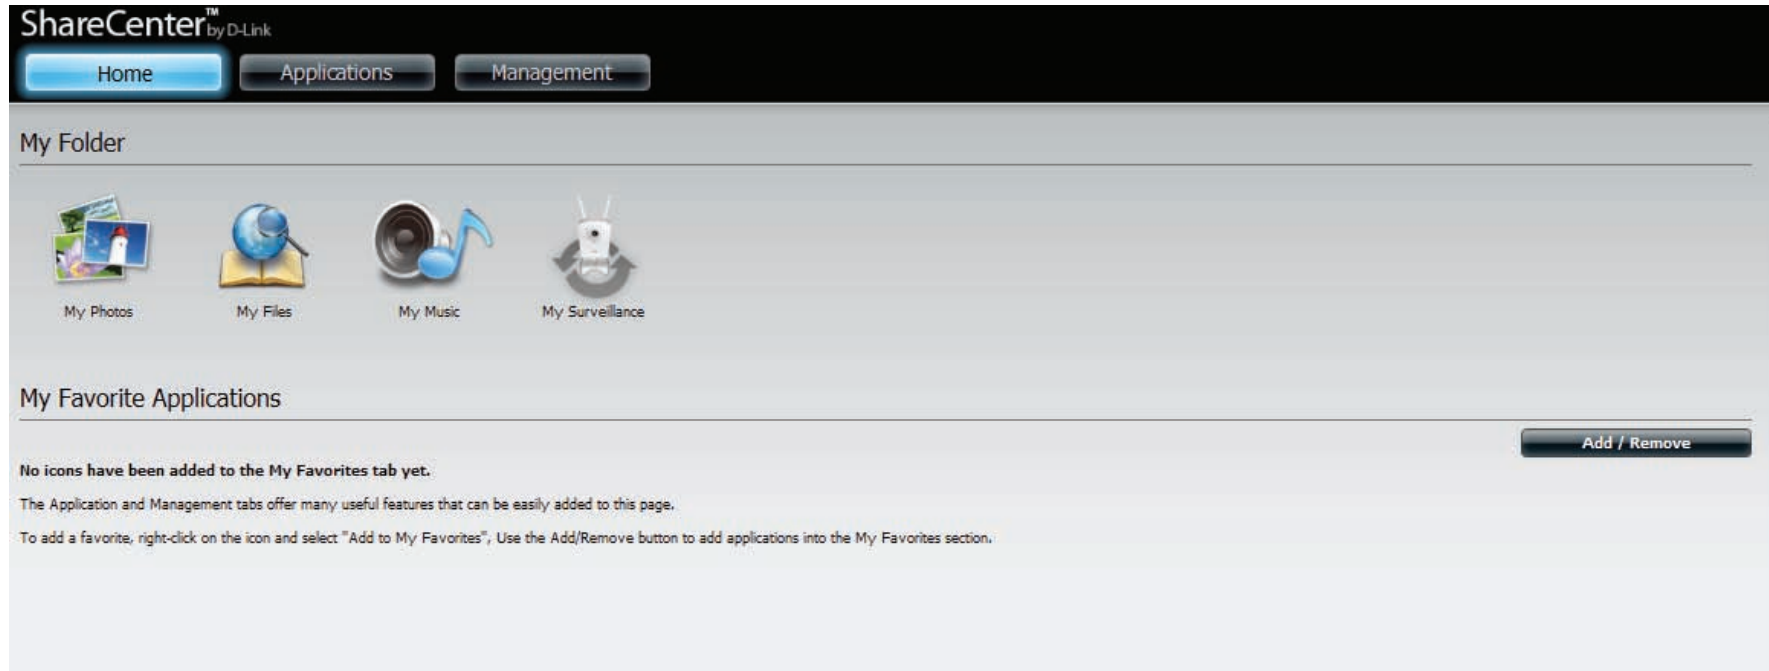


My Photos

My Photos is an app to create albums on the ShareCenter™ and share photos via Picasa, Facebook, Flickr and Cooliris. Click the My Photos icon to open the window (displayed below).


When you click the **My Photo** app, you are transferred to the **Applications** section. There are two sections in the **My Photos** app - **Photo Albums** and **Photo Gallery**.

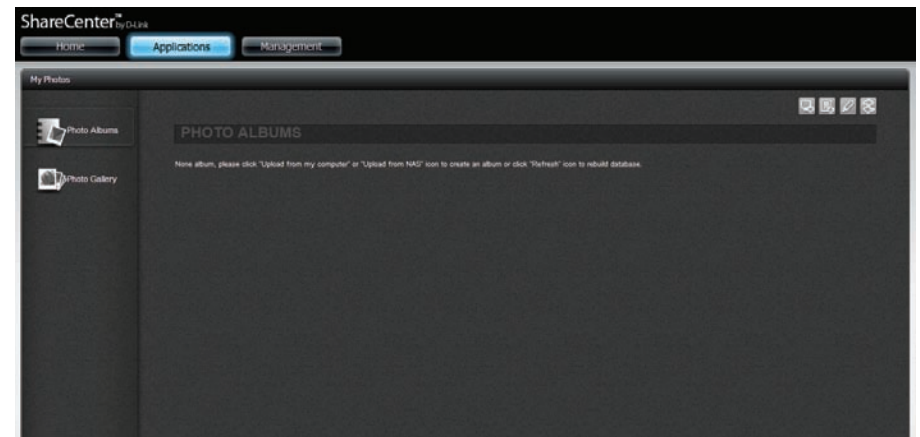


On the right-hand side of **My Photos** there are 4 main icons. The icons turn blue when you roll your mouse over it. The first icon is **"Upload from my computer"**

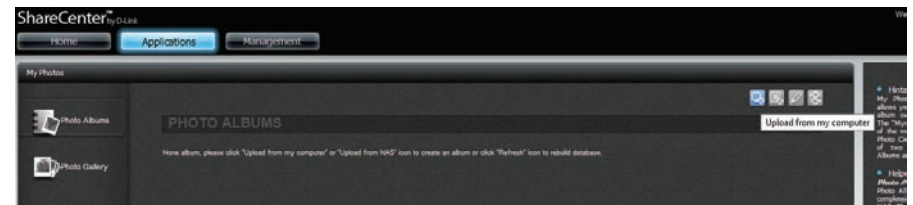


The second icon is “**Upload from NAS**”

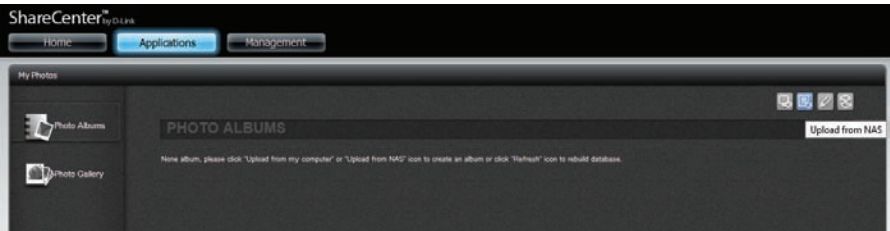

The third icon is “**Edit**”

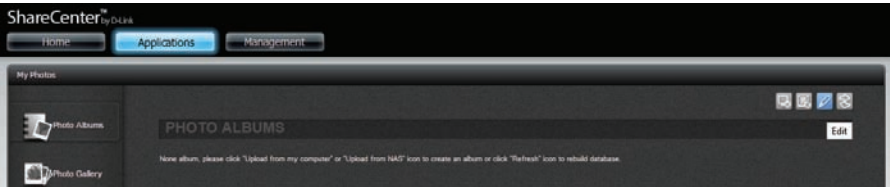

The fourth and last icon is “**Refresh**”

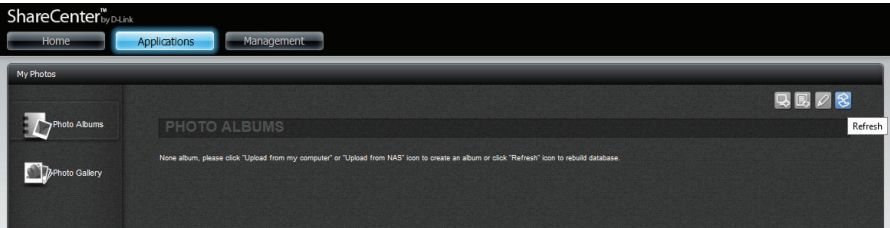

Creating an Album

Click **Upload from my computer**. A **Create Album** window pops up.


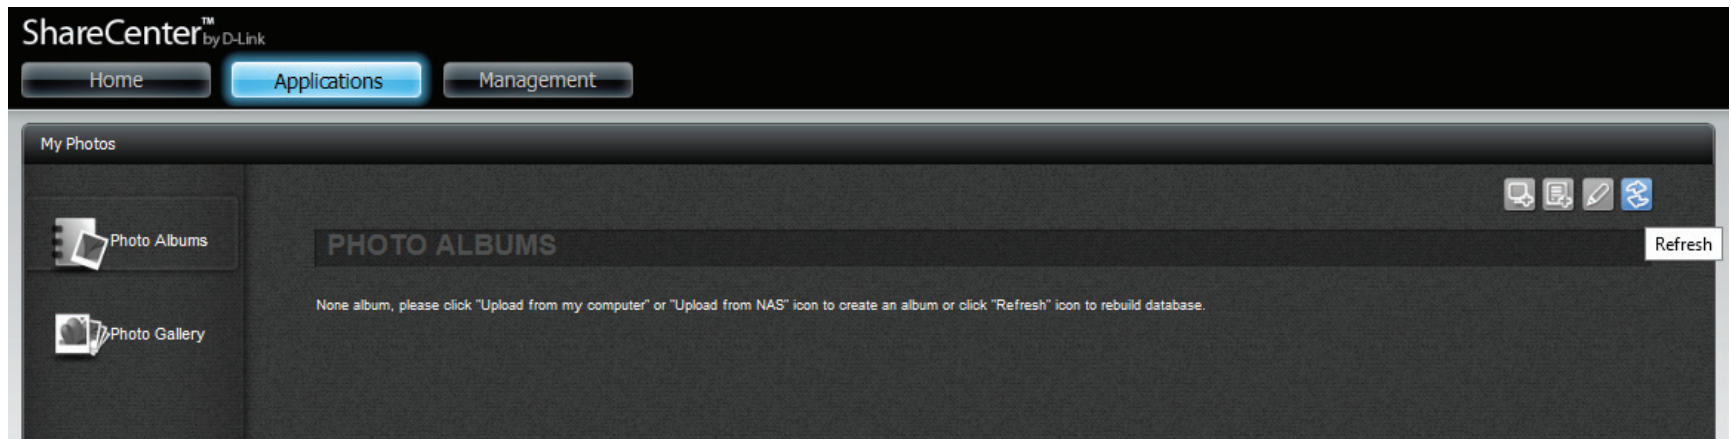


Photo Album Wizard

The **Photo Album Wizard** will assist you with uploading photos from your computer to the ShareCenter™. The first step is to create an **Album**.

In the **Album Name** field, enter your desired name and then enter a description in the **Description** field. Click **Next** to continue.

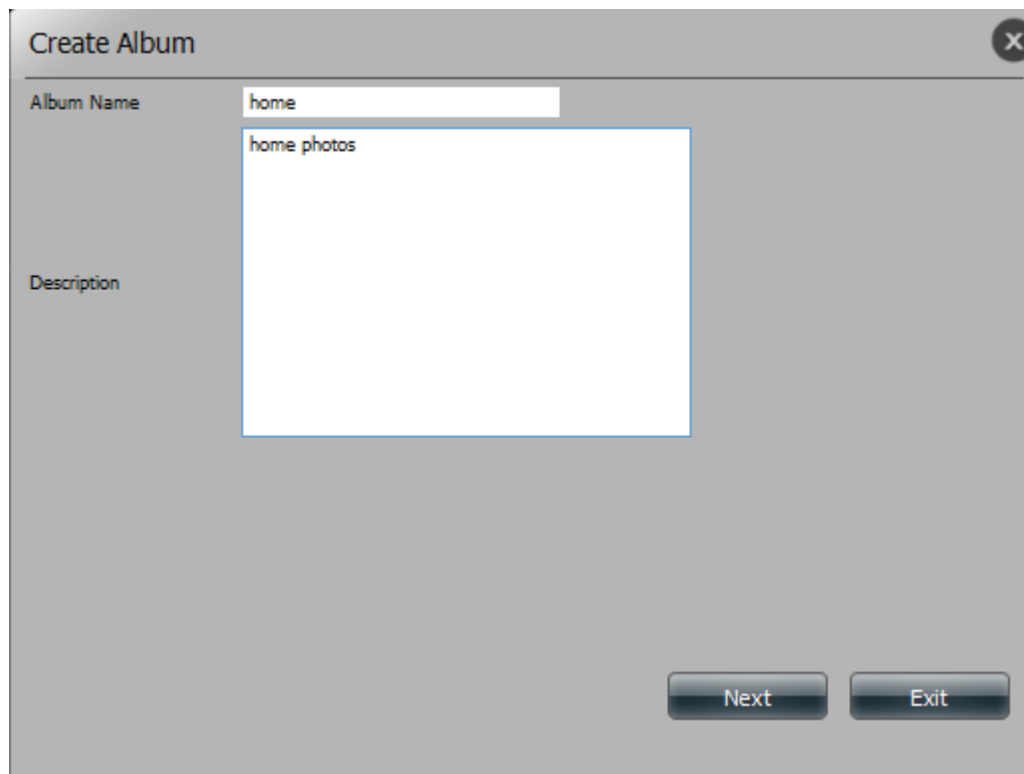



The screenshot shows a 'Create Album' dialog box with a gray background and a standard window title bar. The title bar contains the text 'Create Album' and a close button (X). The dialog has two main input areas: 'Album Name' and 'Description'. The 'Album Name' field is a text box containing the word 'home'. Below it, a dropdown menu is open, showing a list of suggestions, with 'home photos' selected. The 'Description' field is a larger text area that is currently empty. At the bottom right of the dialog, there are two buttons: 'Next' and 'Exit'.

Section 4 - Configuration

Under the **Select Photo** section, click the **browse** button to search your computer for your photos.



If you wish to add more than one photo repeat the process or hold the **Shift/Control** button on your keyboard and select the photos to add.

Click the **Open** button to add them to the **Album**.

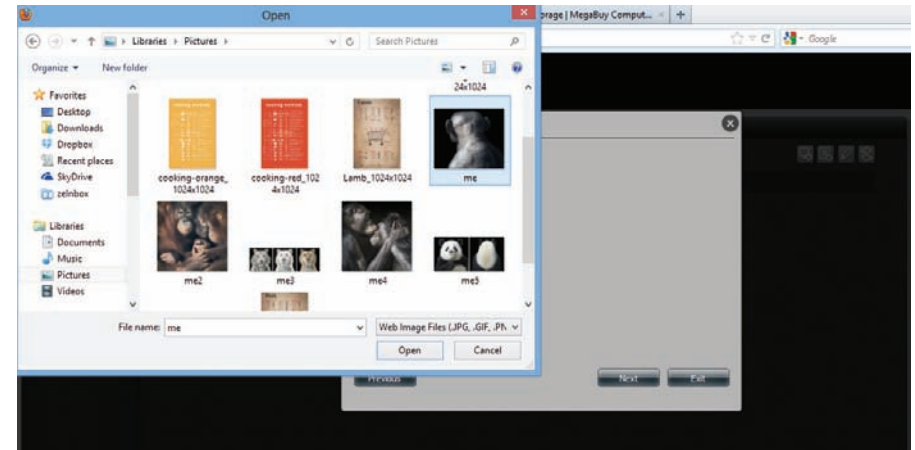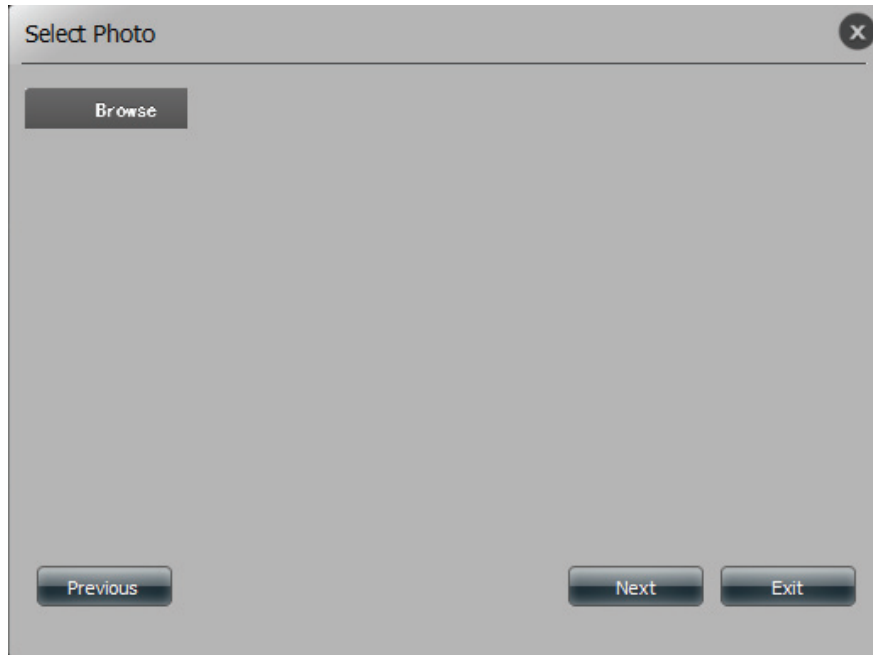


The **Photo Album Wizard** is now populated with the photos you have selected. Click **Next** to upload the photos.

ShareCenter™ automatically updates the photos to the NAS.

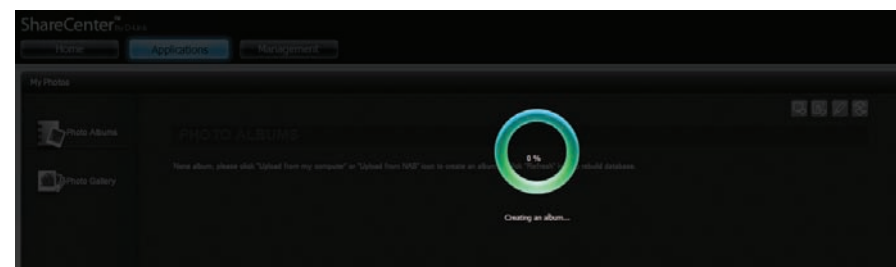
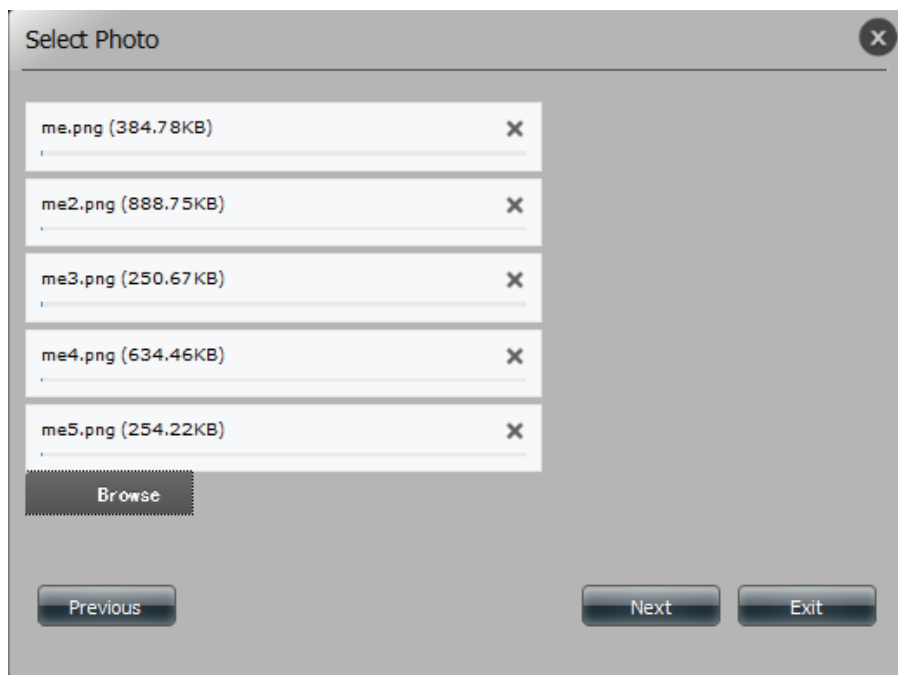


The **Photo Album** now features your Album.

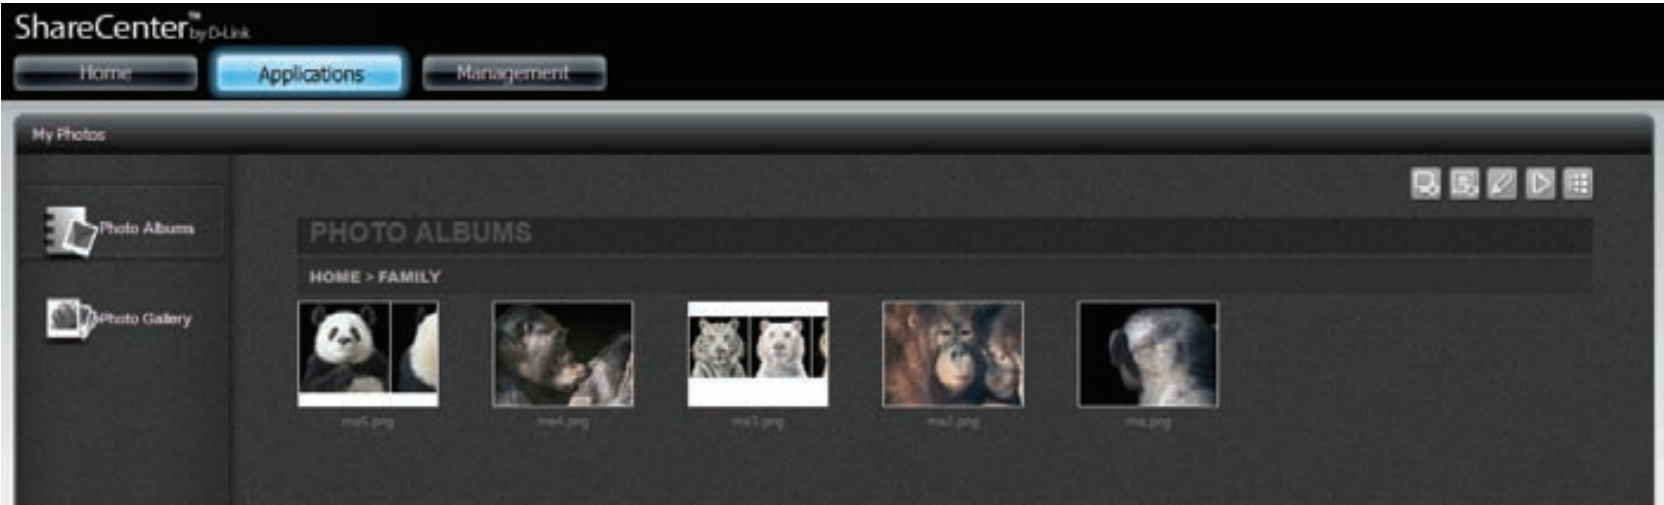


Editing Photos in an Album


Click the **Album**. Click **Edit**. The screen changes. A **Back** button appears above **Photo Gallery**, to go back. A **Select All** checkbox appears below the **Album's** name, to select all the photos to edit. The icon panel changes on the right-hand side of the screen.

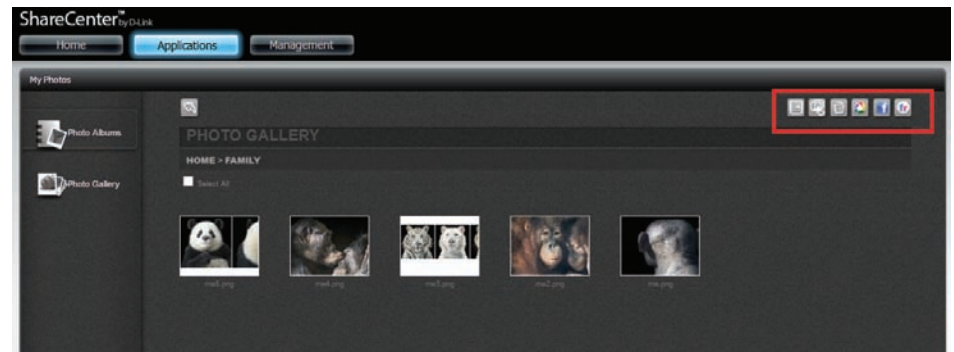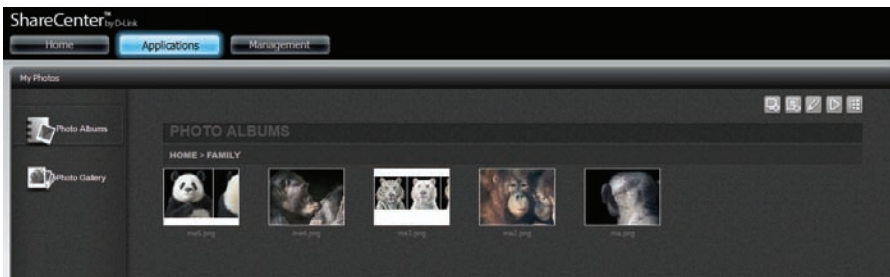


Select a **Photo** to edit. A **green check mark** emphasis that it's been selected.

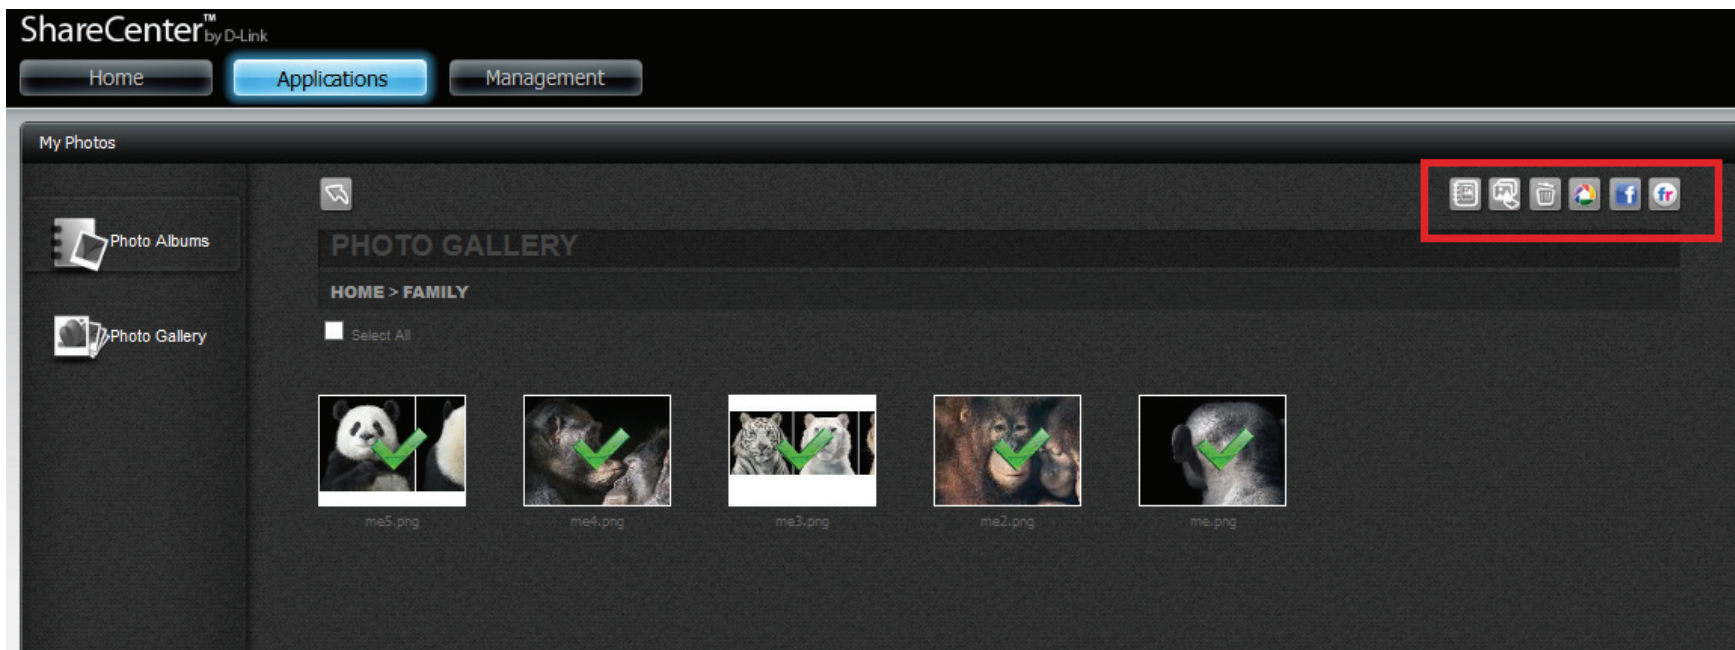


Moving your mouse over each icon presents a different action. Let's go over them.

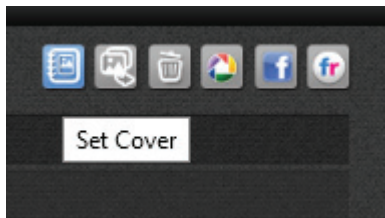


Select this icon if you wish to **set** the current photo as the **Photo Album cover**.

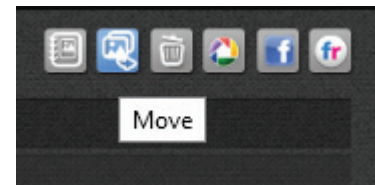


Select this icon if you wish to **Move** the current photo to a different location.

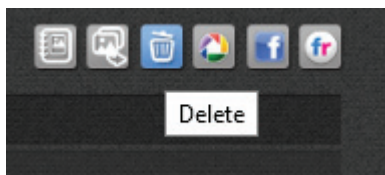


Select this icon if you wish to **Delete** the current photo from the **Photo Album**.

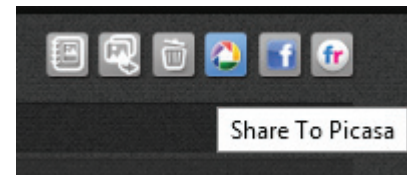

Select this icon if you wish to **Share** the current photo to **Picasa**.

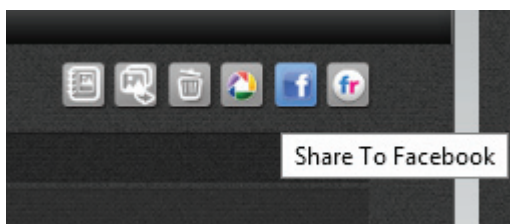


Select this icon if you wish to **Share** the current photo to **Facebook**.

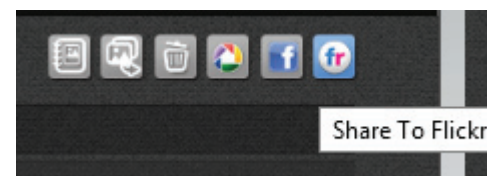


Select this icon if you wish to Share the current photo to **Flickr**.

Select a Photo as a Cover image


Click the **Set Cover** icon.

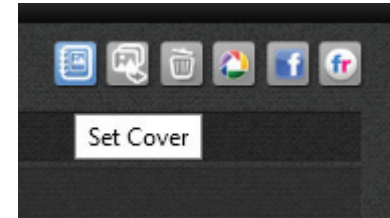


You are asked to verify your instruction. Click **Yes** to continue, **No** to exit.

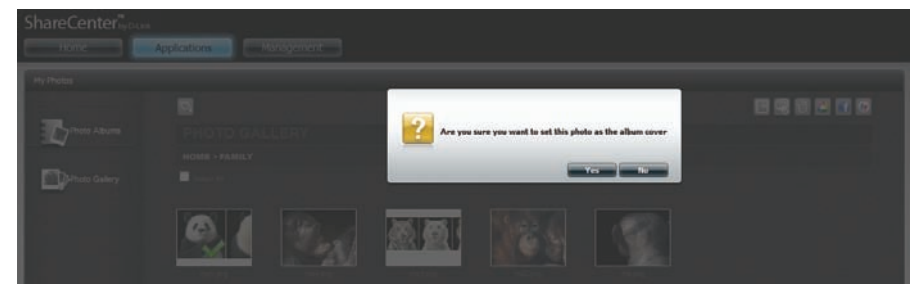

The NAS configures the changes.

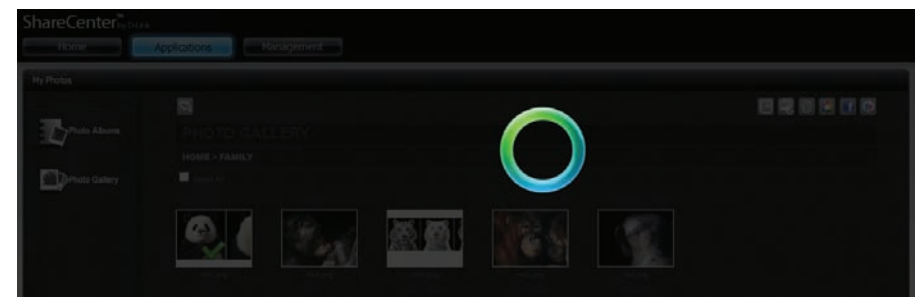


The configuration is updated and saved. Click Yes, to continue.

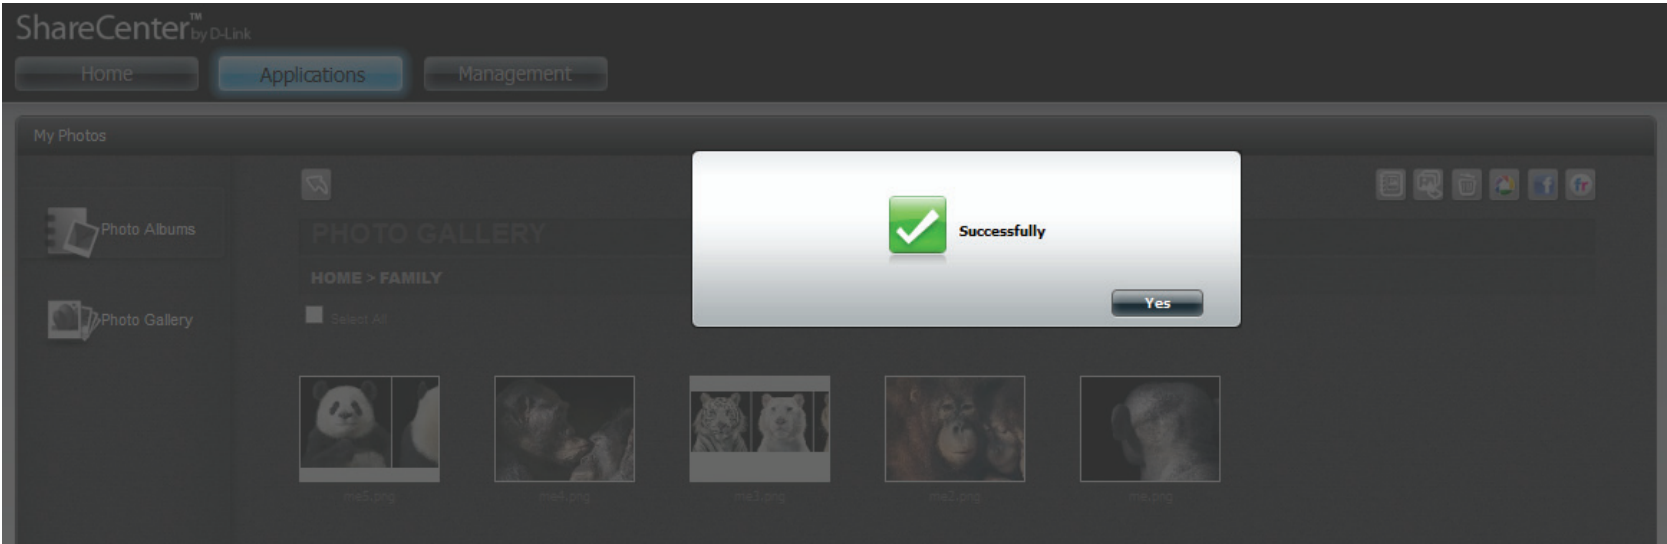


Select a Photo to Move


Click **My Photos**, **Photo Albums**, the **Photo Album** you wish to select the **Photo** from.

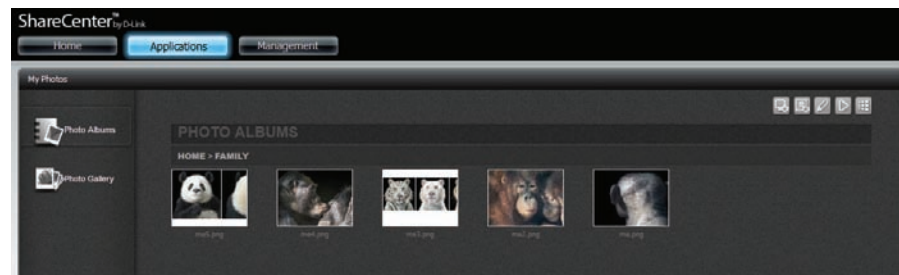


Select the **Photo** and click **Move**.

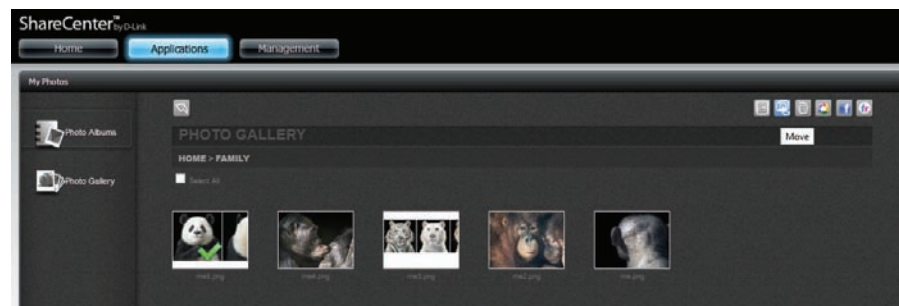

The **Select Album** window opens.

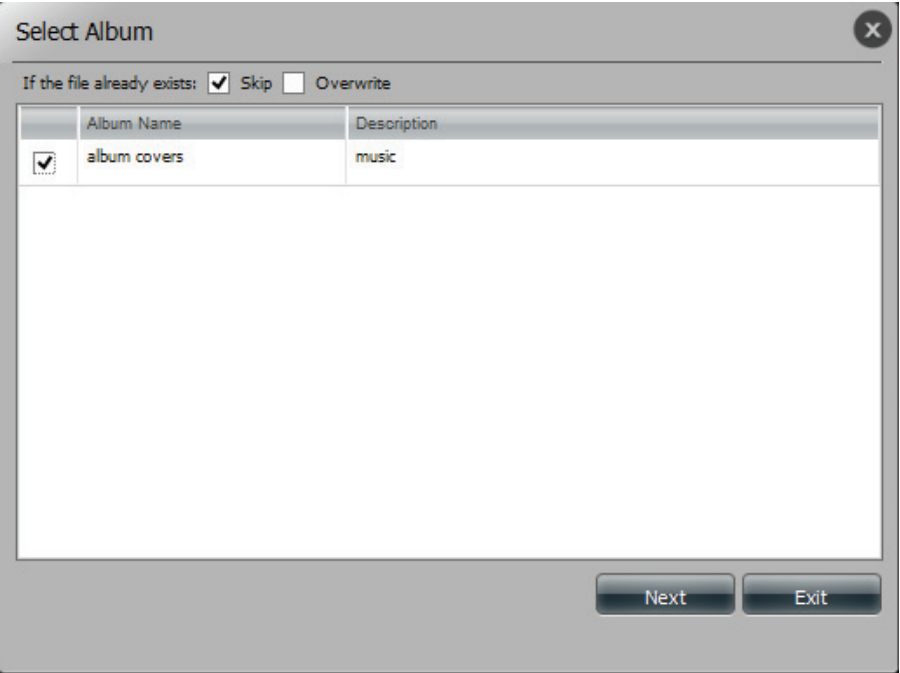


Select the **Album** you wish to transfer the Photo to. Click the checkbox. The Photo disappears from the Album.

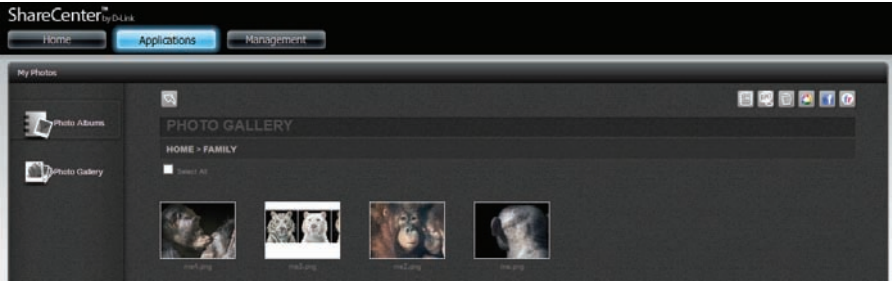


Delete a Photo


Click **My Photos**, **Photo Albums**, the **Photo Album** you wish to select the **Photo** from.

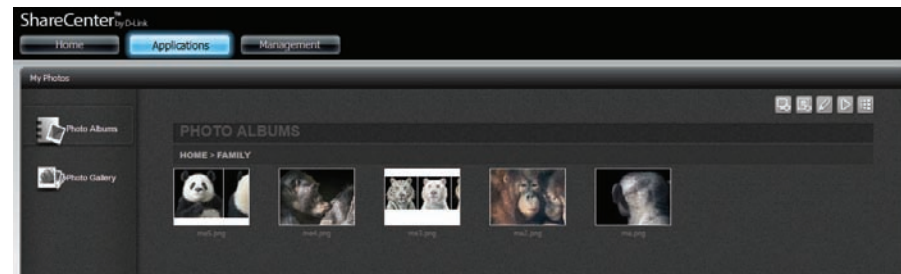

Select the **Photo** and click **Delete**.

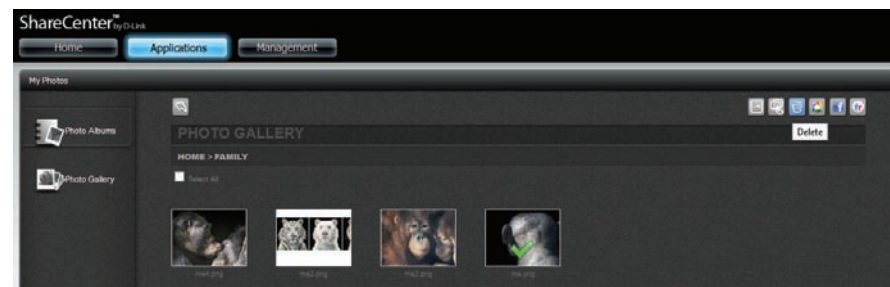


The System automatically deletes the file without verification.

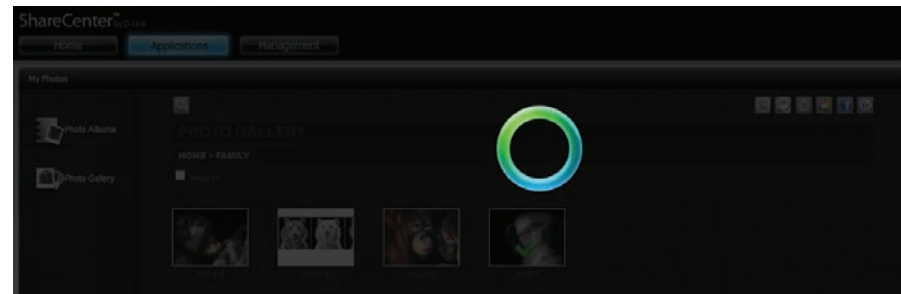


Share a Photo to Picasa

Click **My Photos**, **Photo Albums**, the **Photo Album** you wish to select the **Photo** from.

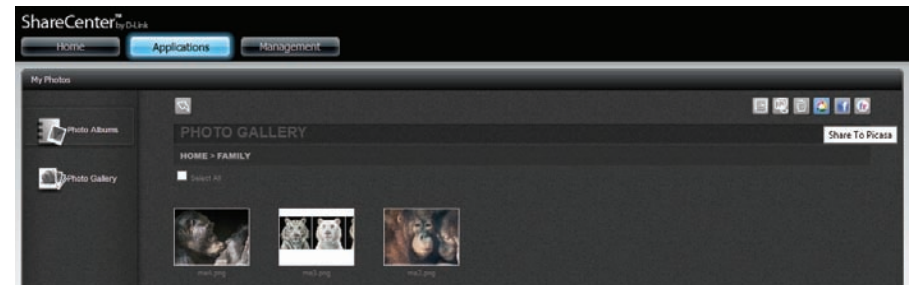


Select the Photo you wish to share on **Picasa**. A green check-mark highlights your selection and click **Share to Picasa**.

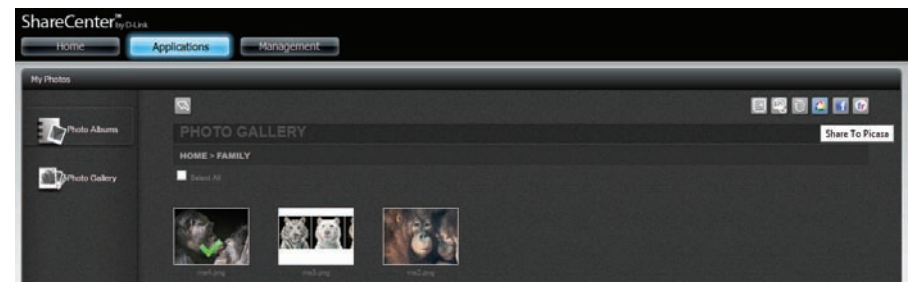


Section 4 - Configuration

Google requests you log-in to your **Google account**. You are unable to use the **Picasa** feature if you do not have a Google account.

Enter your **Email Address**, **Password** and **Sign In** to proceed.


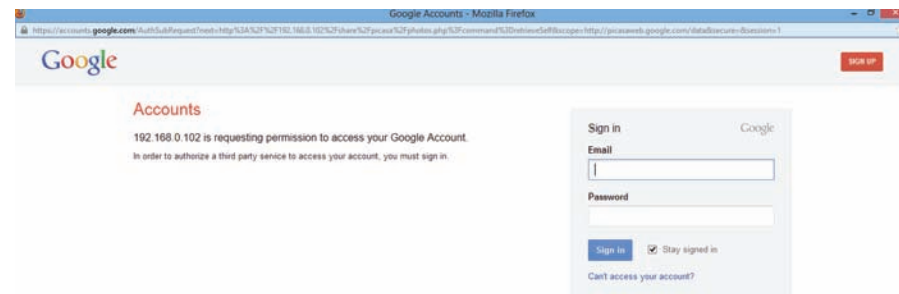


Google requests you to grant access to **Picasa Web Albums**. Click **Grant Access** to proceed.

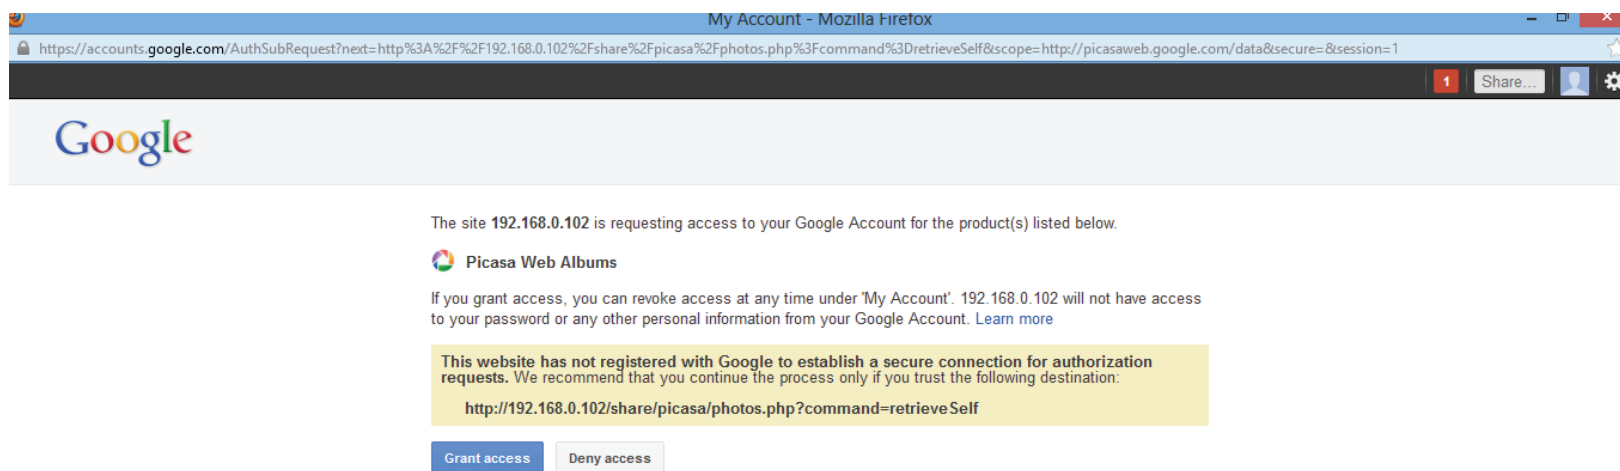


If you select **Grant access**, you will be directed to the **ShareCenter™ Photo Manager**. Here you can share photos to the album you already have in Picasa Web or create a new web album to share. **Under Albums**, select an album from the drop-down list and click **Share**. Alternatively, enter the new album name and click the **Share** button. When you click the **Share** button your files are uploaded to your Picasa Web Albums and another window will pop-up to confirm its success.

Note: You will have to enable Photos (Picasa Web Albums) with your Google account.

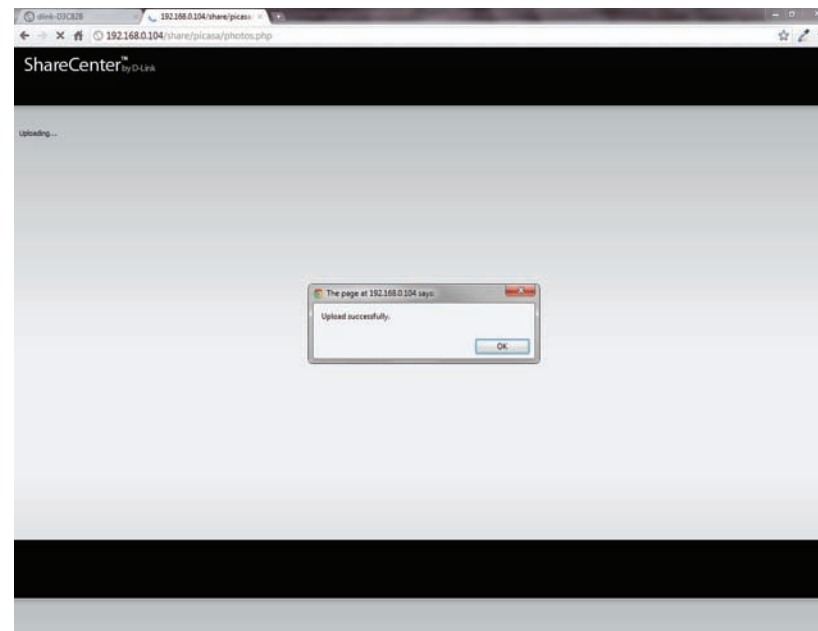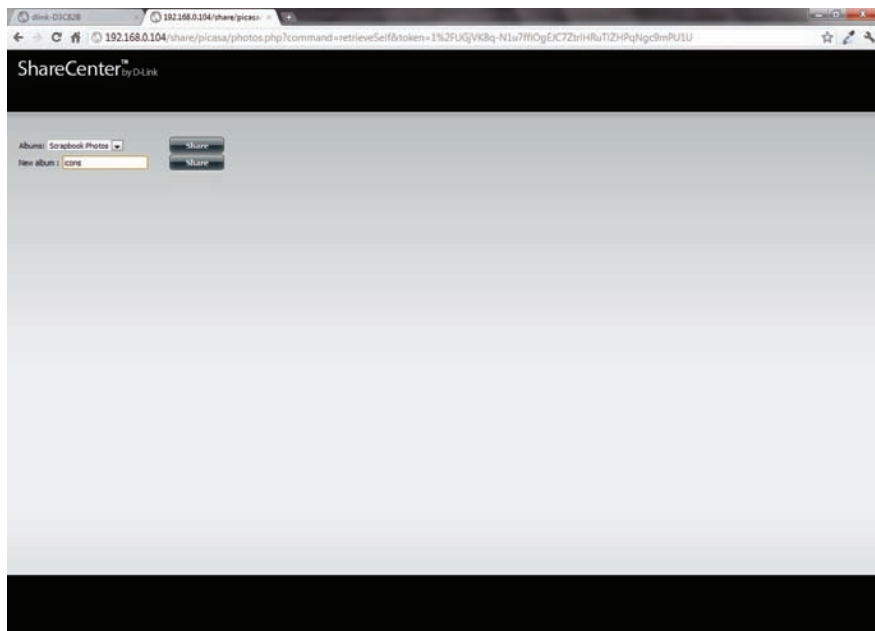


Share a Photo to Facebook

Click **My Photos**, **Photo Albums**, the **Photo Album** you wish to select the **Photo** from.

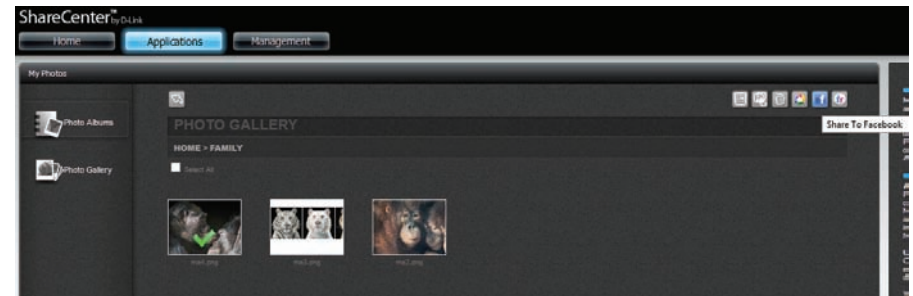


Select the **Photo** you wish to share on **Facebook**. A green check-mark highlights your selection and click **Share to Facebook**. A pop-up window appears directing you to log-in to Facebook. Enter your details and log-in.

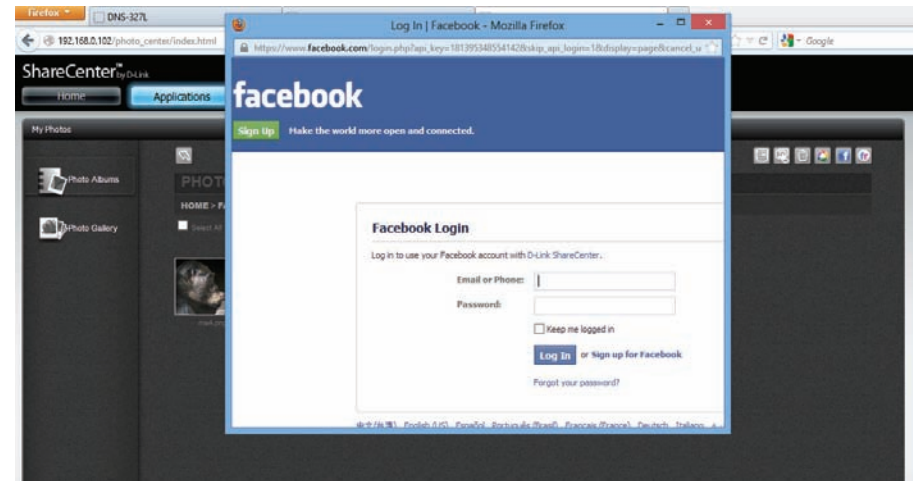

Facebook requests you to access and get their **D-Link ShareCenter™ App**. Click **Go to App** to proceed.




The **D-Link ShareCenter™ App** also requests permission to post images on your behalf. Click **Allow** to continue.

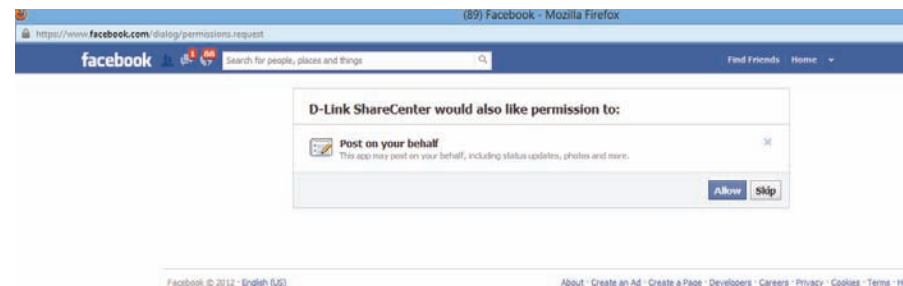


Section 4 - Configuration

If you select **Allow**, you will be directed to the ShareCenter Photo Manager. Here you can share photos to the album you already have in Facebook or create a new web album to share. Under Album Name, select an album from the drop-down list and click **Share**. Alternatively, enter the new album name and click the **Share** button.

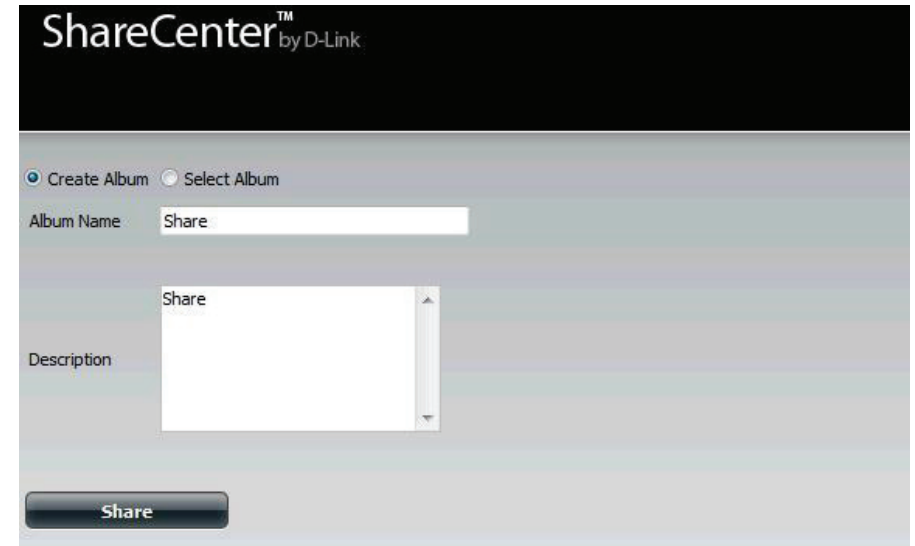


The screenshot shows the 'ShareCenter™ by D-Link' web interface. At the top, there are two radio buttons: 'Create Album' (selected) and 'Select Album'. Below this is an 'Album Name' field with the text 'Share' entered. Underneath the name field is a description box, also containing the text 'Share'. At the bottom of the form is a dark 'Share' button.

When you click the **Share** button your files are uploaded to your Facebook account and another window will pop-up to confirm its success.

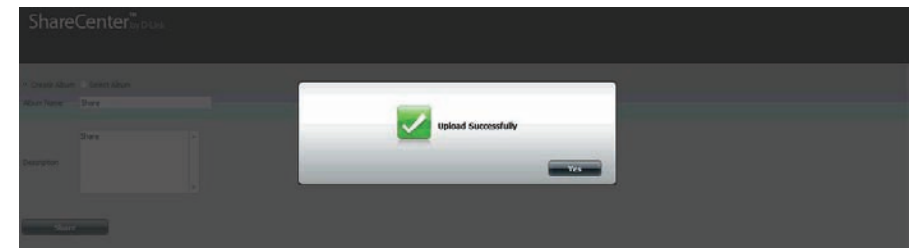


Share a Photo to Flickr

Click **My Photos**, **Photo Albums**, the **Photo Album** you wish to select the **Photo** from.

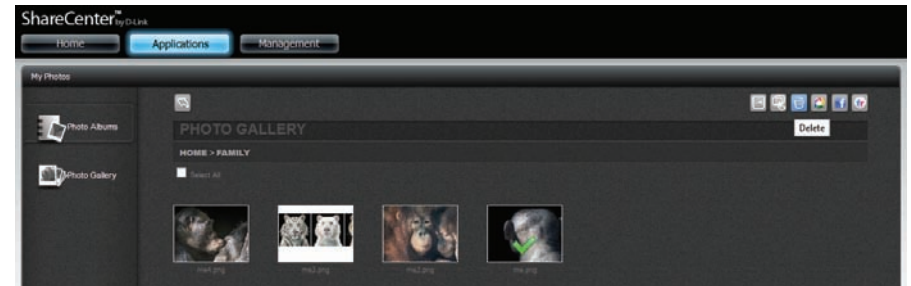

Select the **Photo** you wish to share on **Flickr**. A green check-mark highlights your selection and click **Share to Flickr**. A pop-up window appears directing you to log-in to **Yahoo Flickr**. Enter your details and log-in.

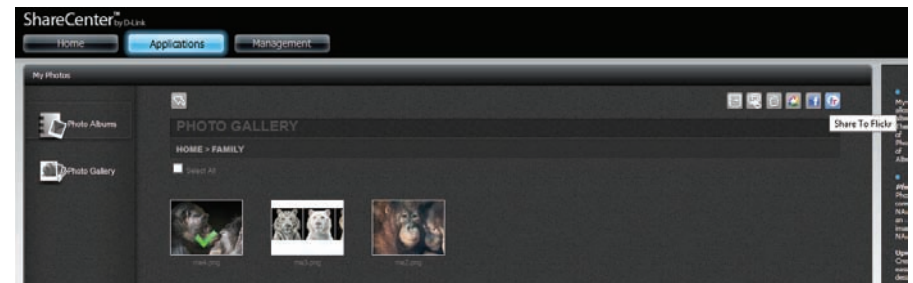


Section 4 - Configuration


A pop-up window appears directing you to log-in to **Yahoo Flickr**. Enter your details and click Sign-in.




Create a name for your **Album** on **Flickr**.

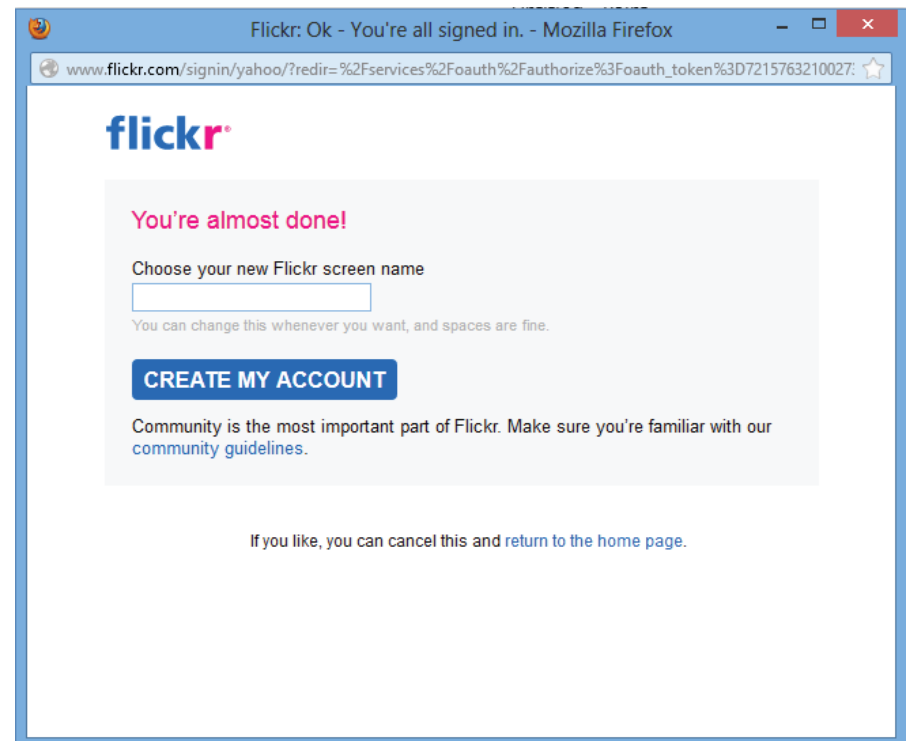

The **D-Link ShareCenter™** asks to link to the Flickr account. Click **OK, I'LL AUTHORIZE IT**, to proceed.

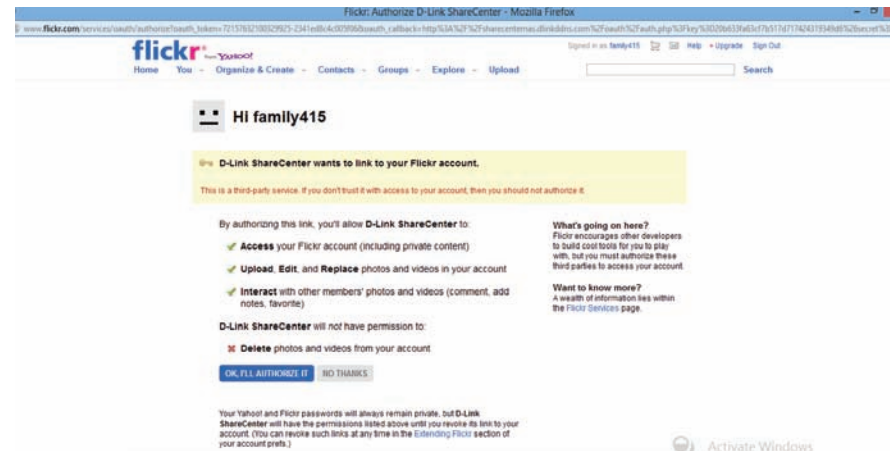


Use your **DNS-327L** to access and upload files to **Flickr**.

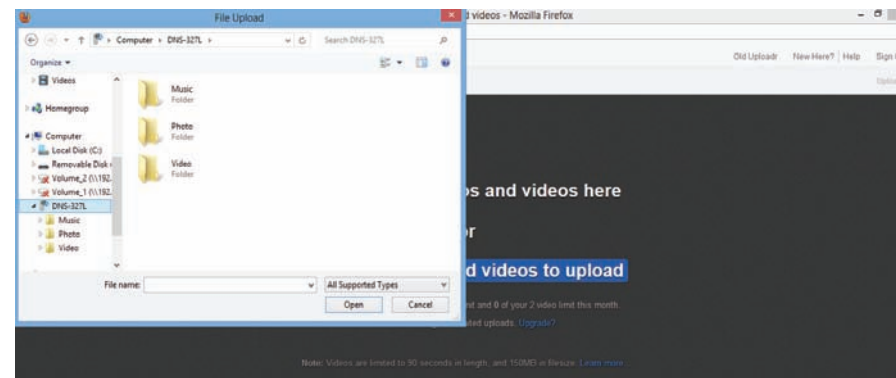


Deleting an Album

Click the **Edit** button. Click **Delete** to delete an **Album**.

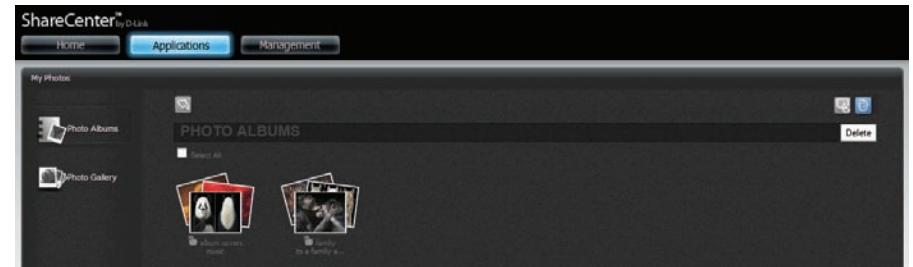


If you do not select an album, you are prompted to select an item. Click **Yes** to continue.

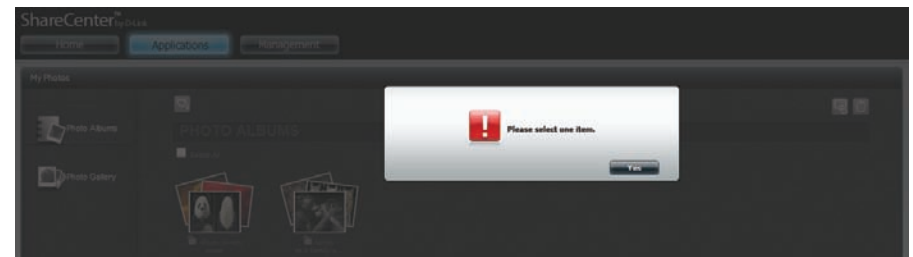


Section 4 - Configuration

Select an **album**, a **green checkmark** will indicate the selection, click the **Delete** icon. A warning message will ask you to verify your choice. Click **Yes**, to continue or **No** to exit.

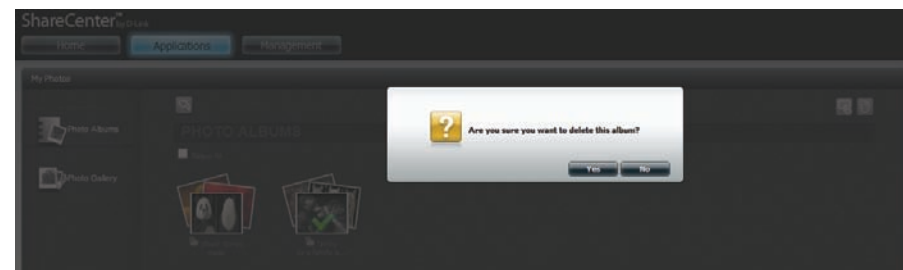


The **Album** is now deleted from the **Photo Albums** menu.

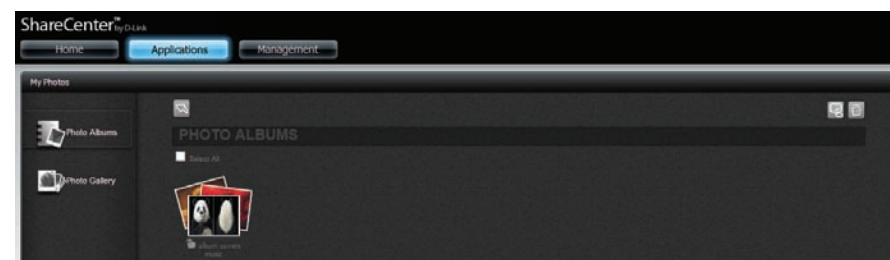


Refreshing the Album Database


Click **My Photos**, **Photo Albums**, and click the **Refresh** icon to refresh the entire database.

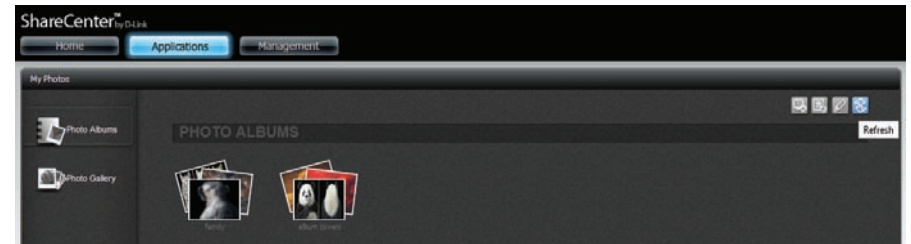

Before the screen is refreshed, you are prompted to verify your decision to refresh the database. Click **Yes**, to continue, **No** to exit.

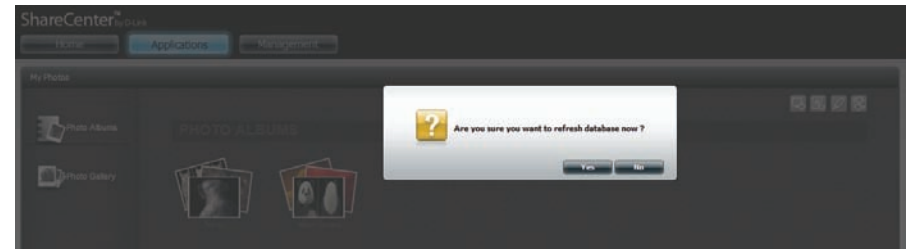


The DNS-327L refreshes the system and is ready.

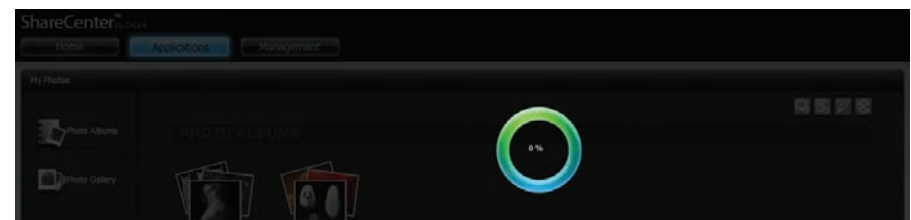


Managing Photos

My Photos contains all your photos on the DNS-327L. Click **My Photos** from the **Home** panel to manage all photos.

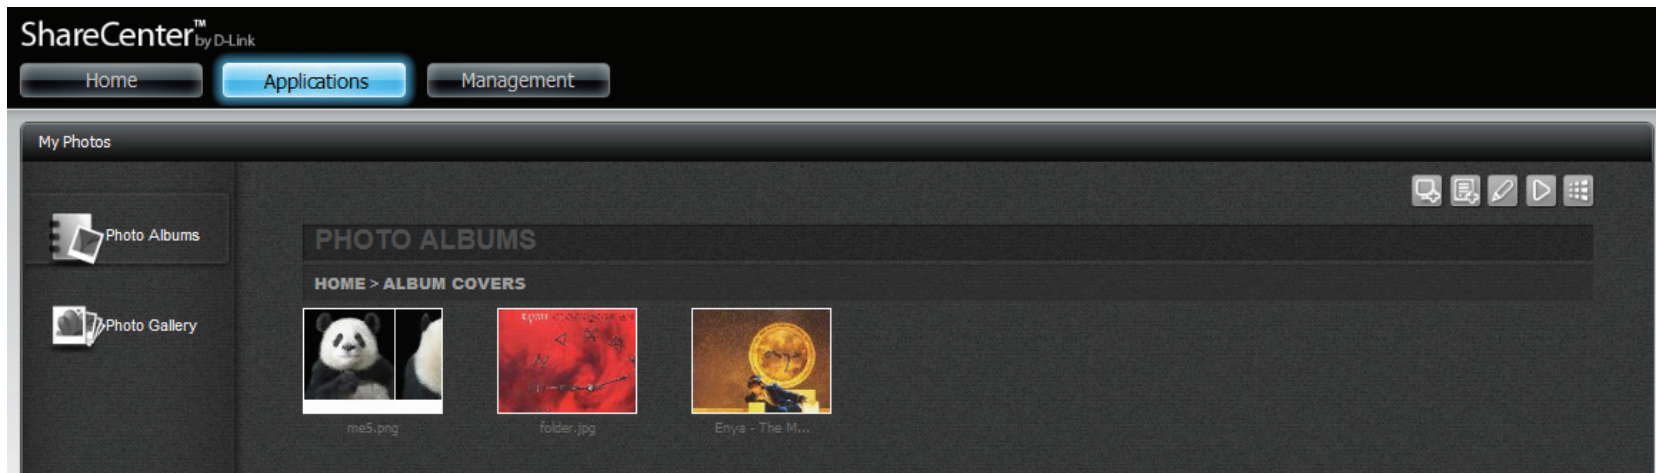

Management Panel: Upload from my computer, Upload from NAS, Edit, Slideshow, Cooliris.

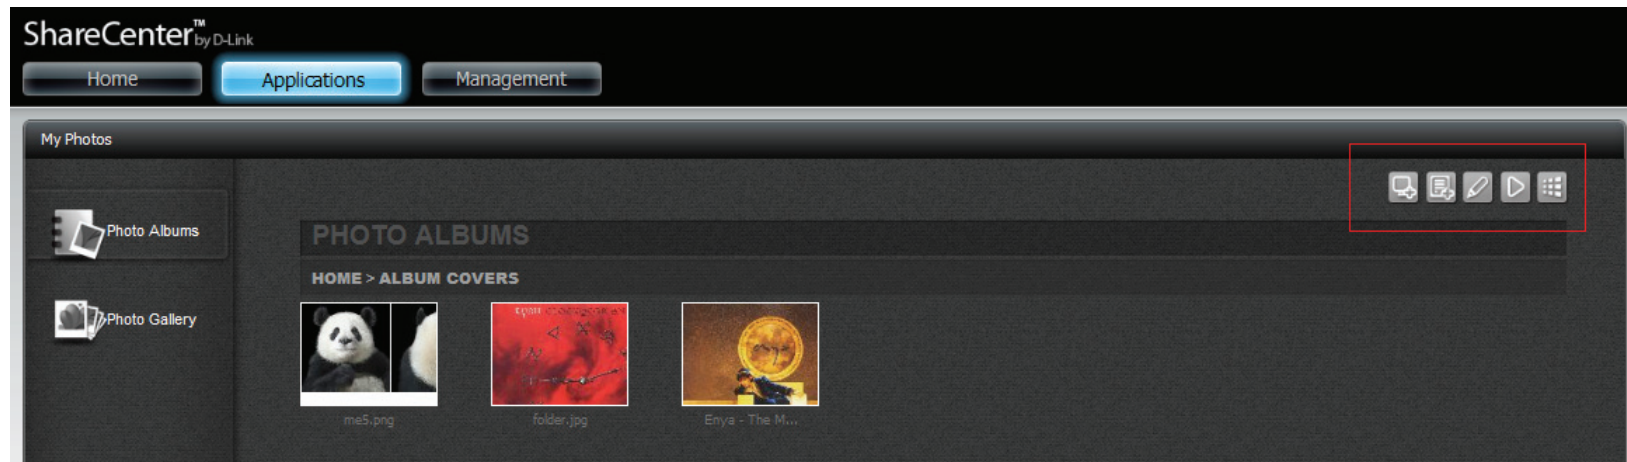

Slideshow Toolbar

The **toolbar** consists of the:


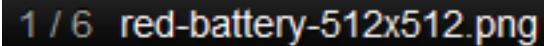

Play button: Press this button to play the Gallery images. 


Photo information: View the image name and file format. 


Gallery speed slider: Toggle the slideshow speed between slow and fast. 

GPS information: Click this button to get GPS information about the image (if your camera supports this function). 

Cooliris link: Click this button to display your images on the Cooliris website. 


EXIF: View detailed information about the image (File Name, Size, Image Date, Resolution, Camera, Camera Model, ISO, Exposure Time, & Aperture). 

Rotation button: This rotates the image at 90 degree angles. 

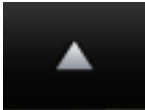Gallery Navigation: This provides a pop-up display of all the images in the gallery. 


Section 4 - Configuration

Click a photo to go in **full screen** mode. This is similar to clicking the fourth icon in the icon list, to the right, the **Slideshow** icon. The screen opens in a new tab.

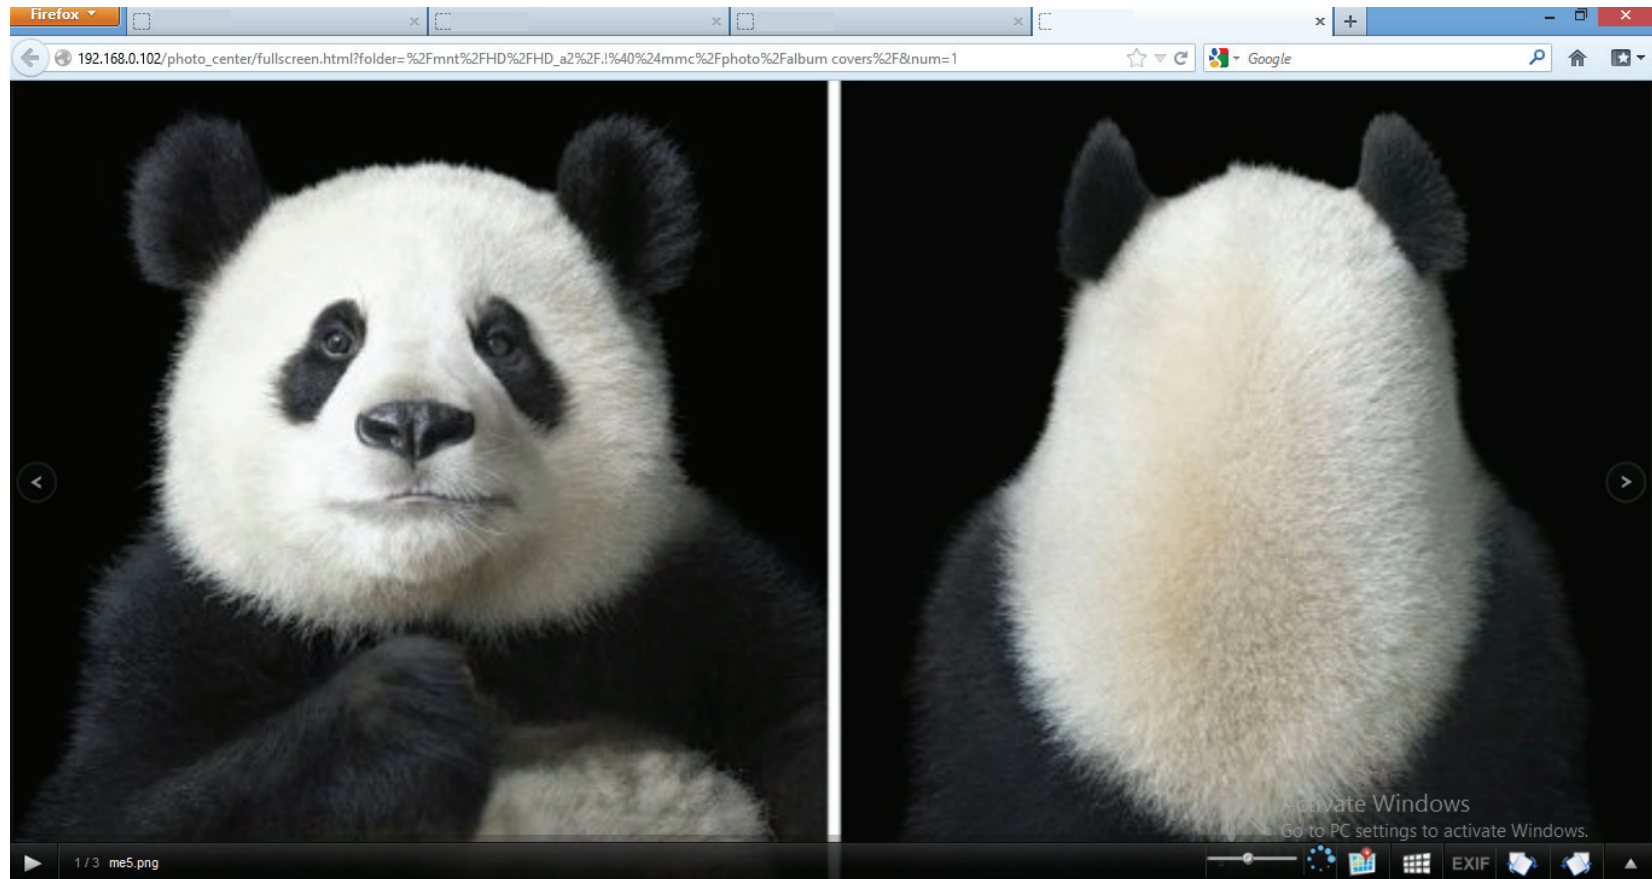

This feature plays the **Slideshow**.


This feature adjusts the speed of the **Slideshow**.

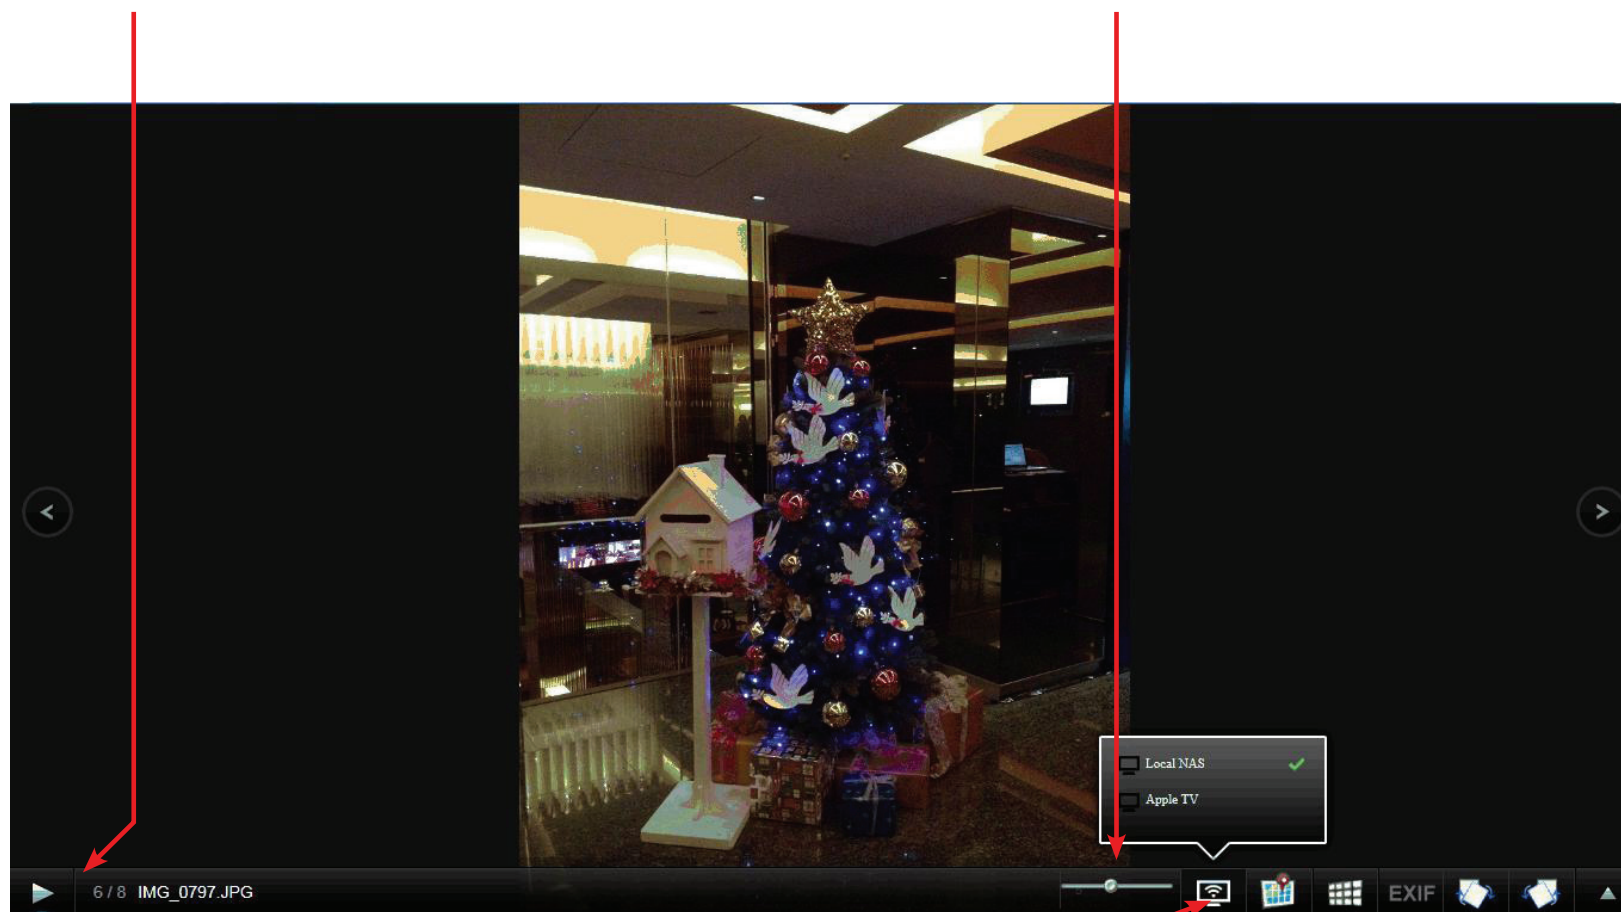

This feature beams your Slideshow to a Local Device or to a TV via AirPlay enabled Apple Device.

This feature provides **GPS** information of the **Slideshow**.


This feature transfers the **Slideshow** to **Cooliris** mode.

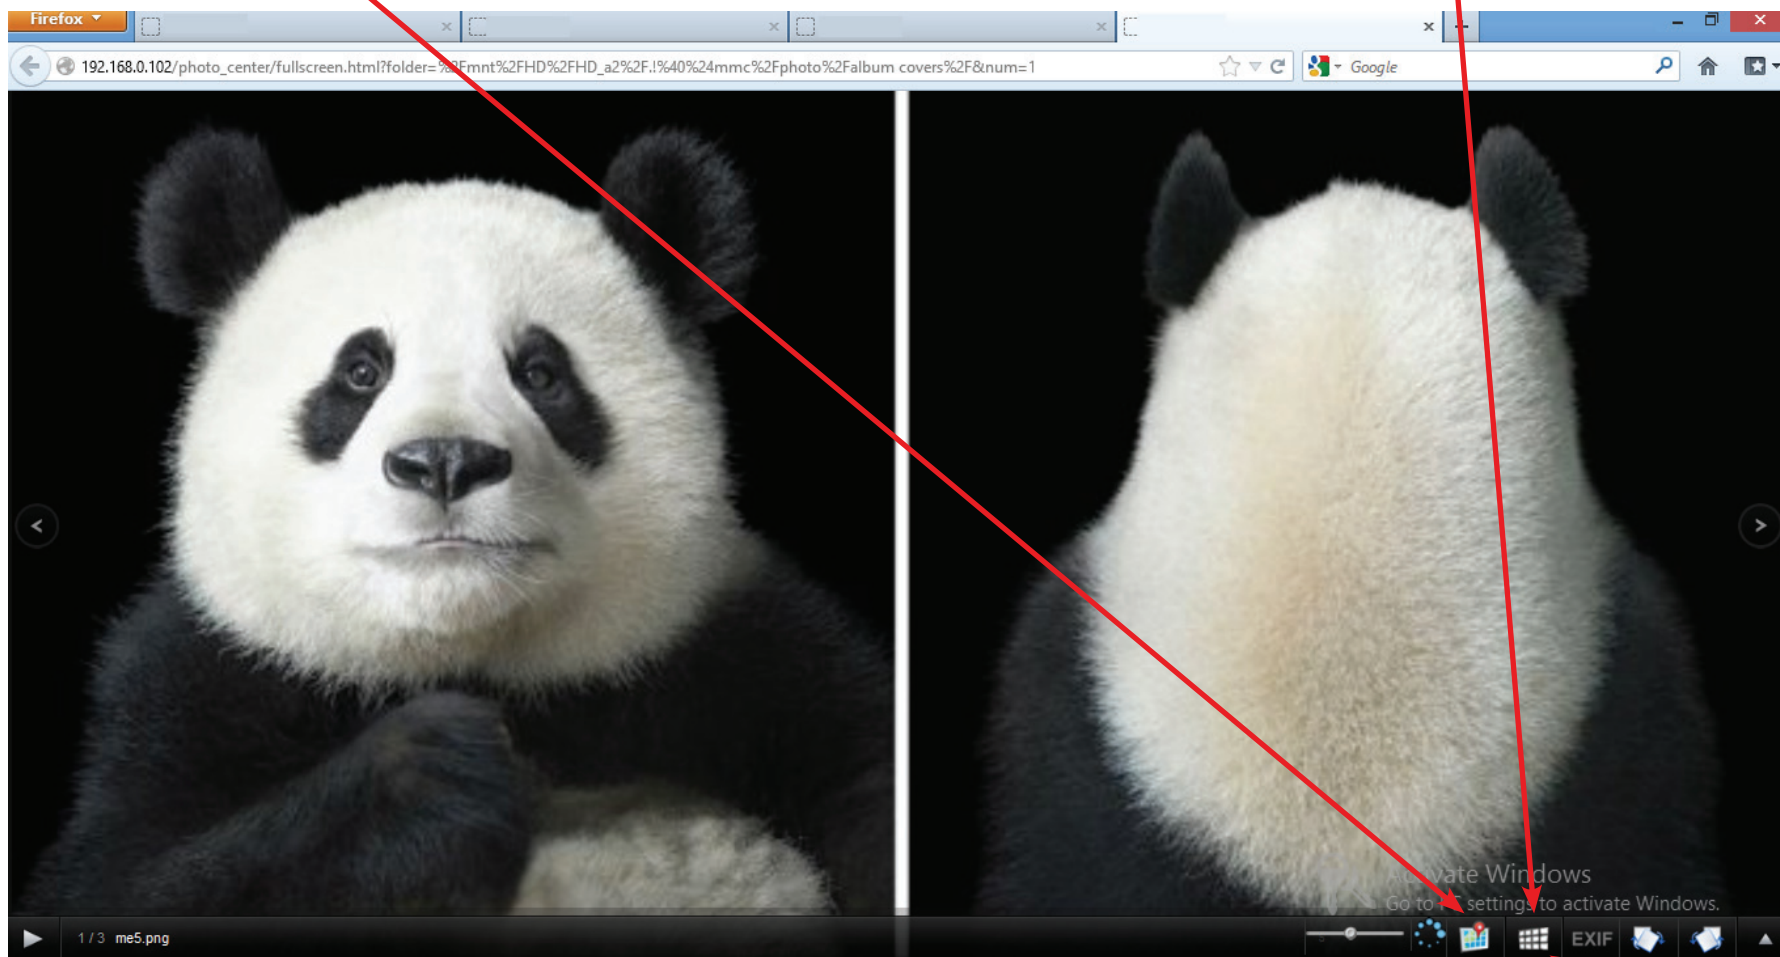

This feature **EXIF** information of your **Slideshow**.

This feature **rotates** the image of the **Slideshow**.

This feature pops up the browser window of the **Slideshow**.

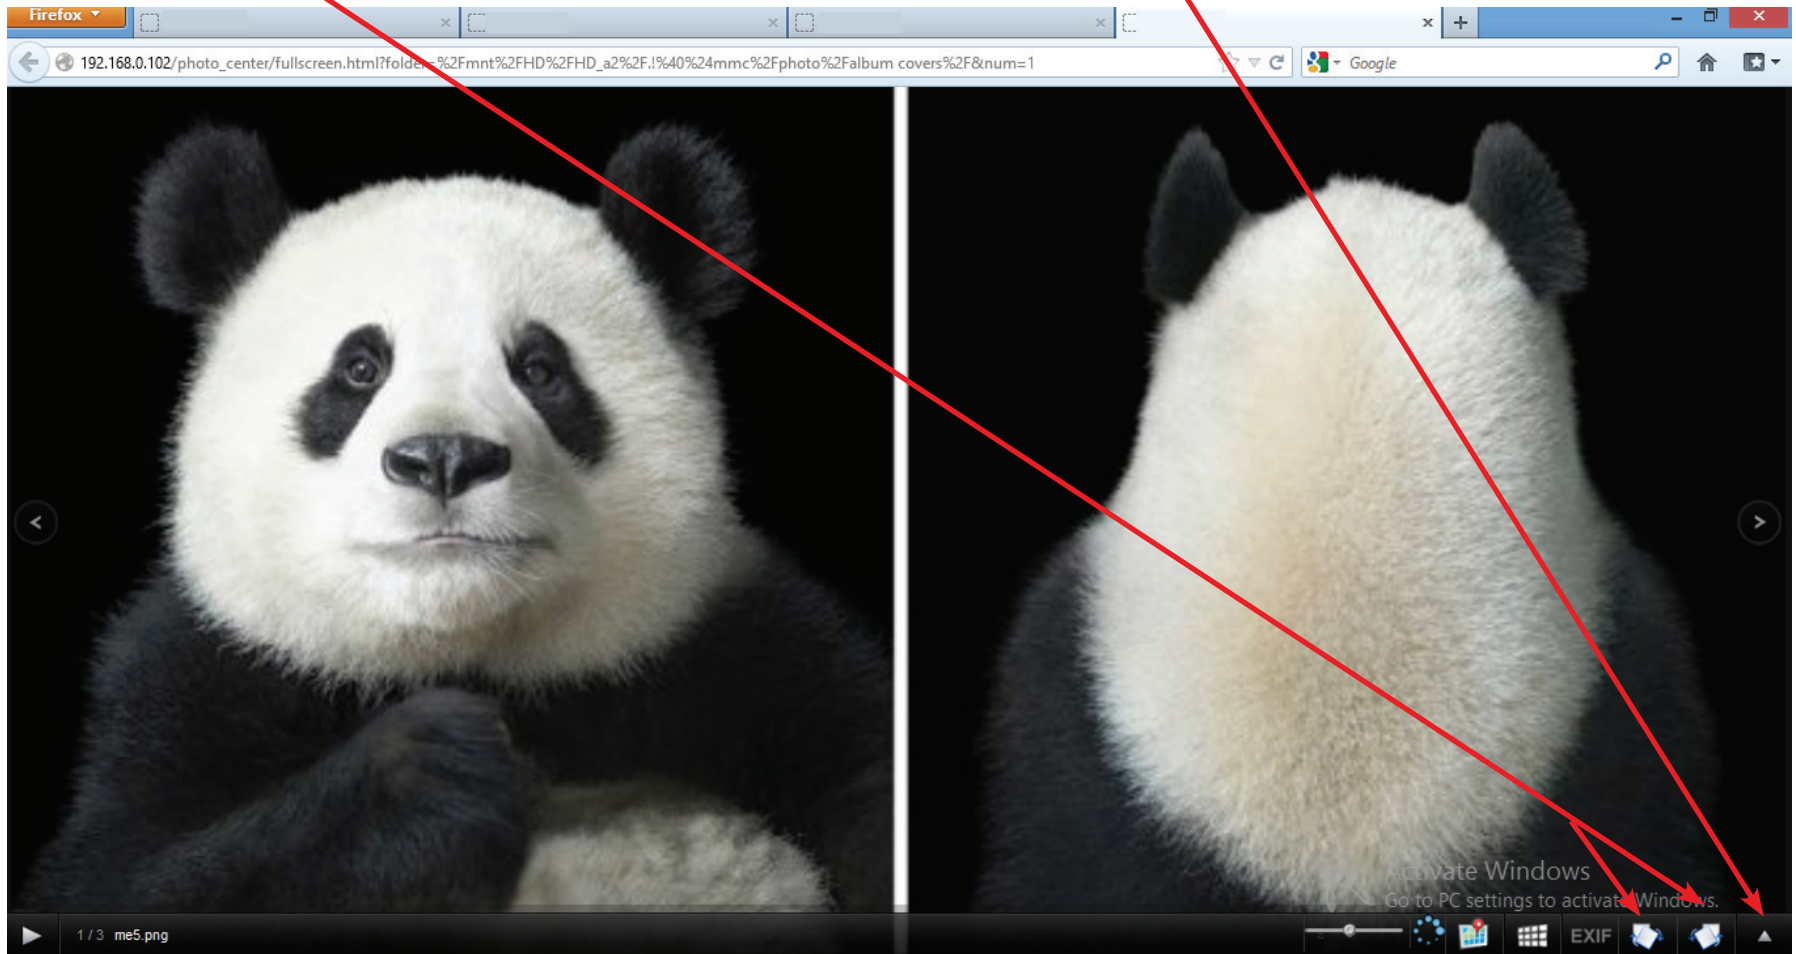


This feature **EXIF** information of your **Slideshow**.

Section 4 - Configuration


Click the **Cooliris** icon. This opens **Cooliris** in a new tab.

Click the **arrows** on each side of the **Cooliris** window to scroll between images.

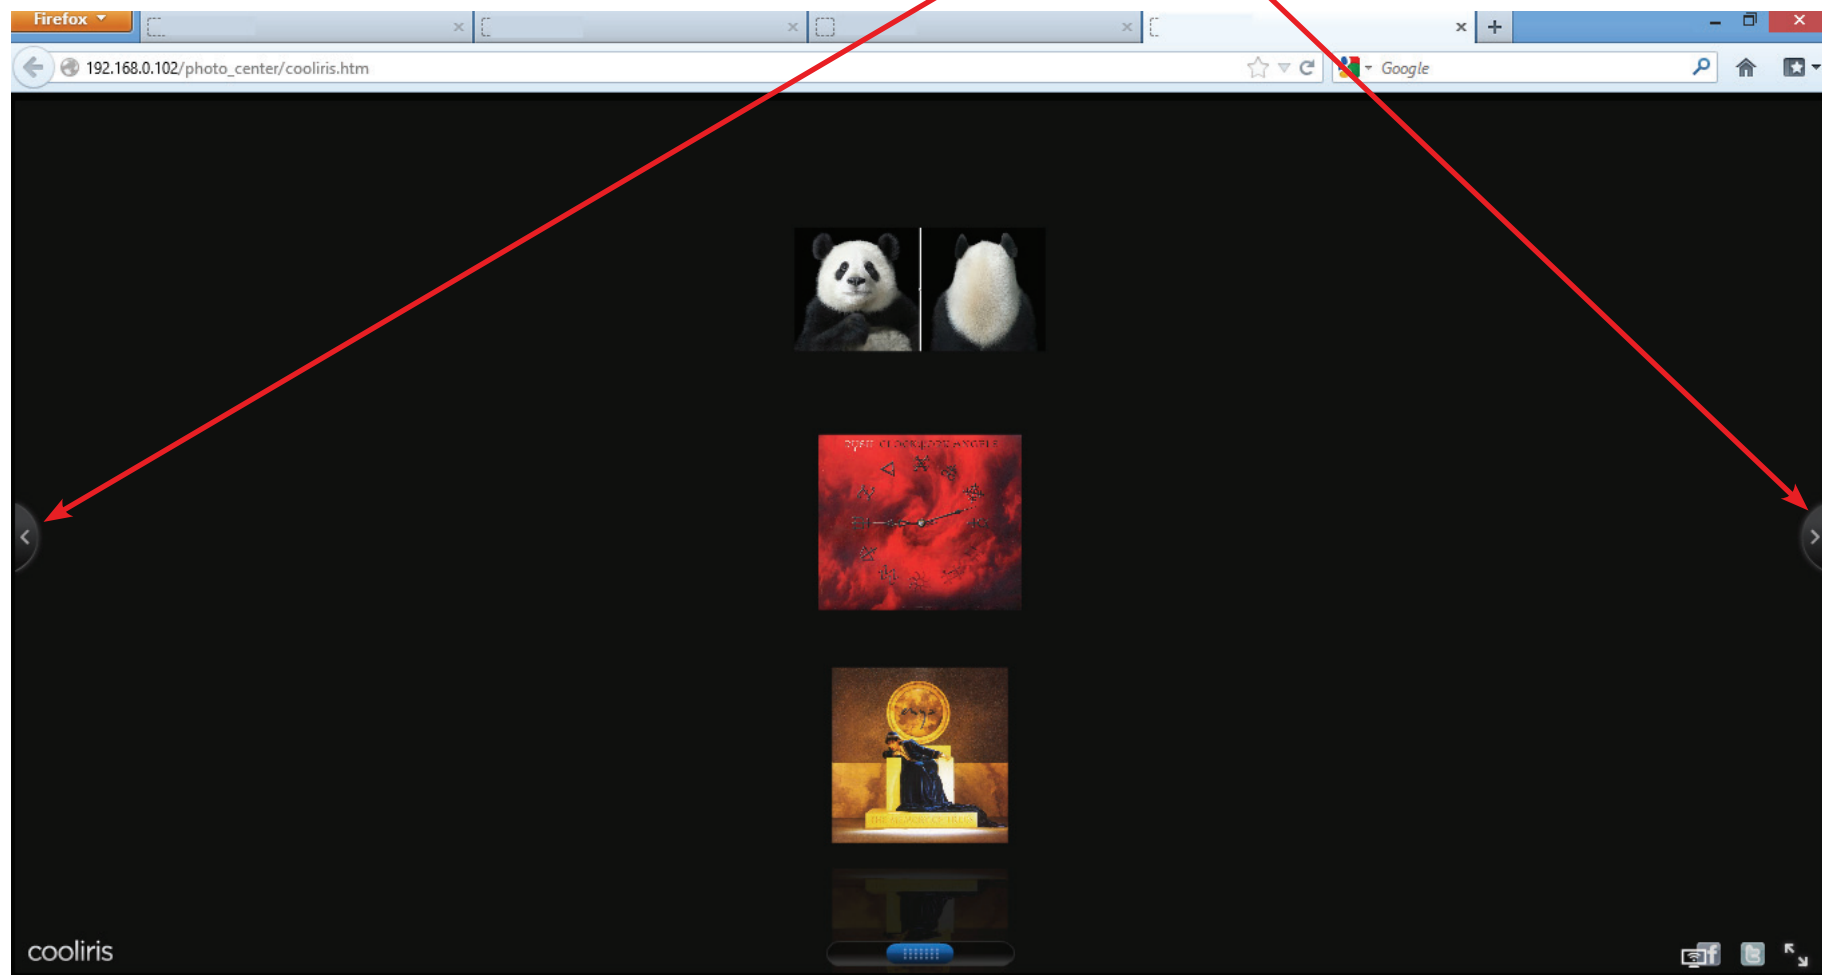

Click here to activate **Facebook** in **Cooliris**.

Click here to activate **Twitter** in **Cooliris**.

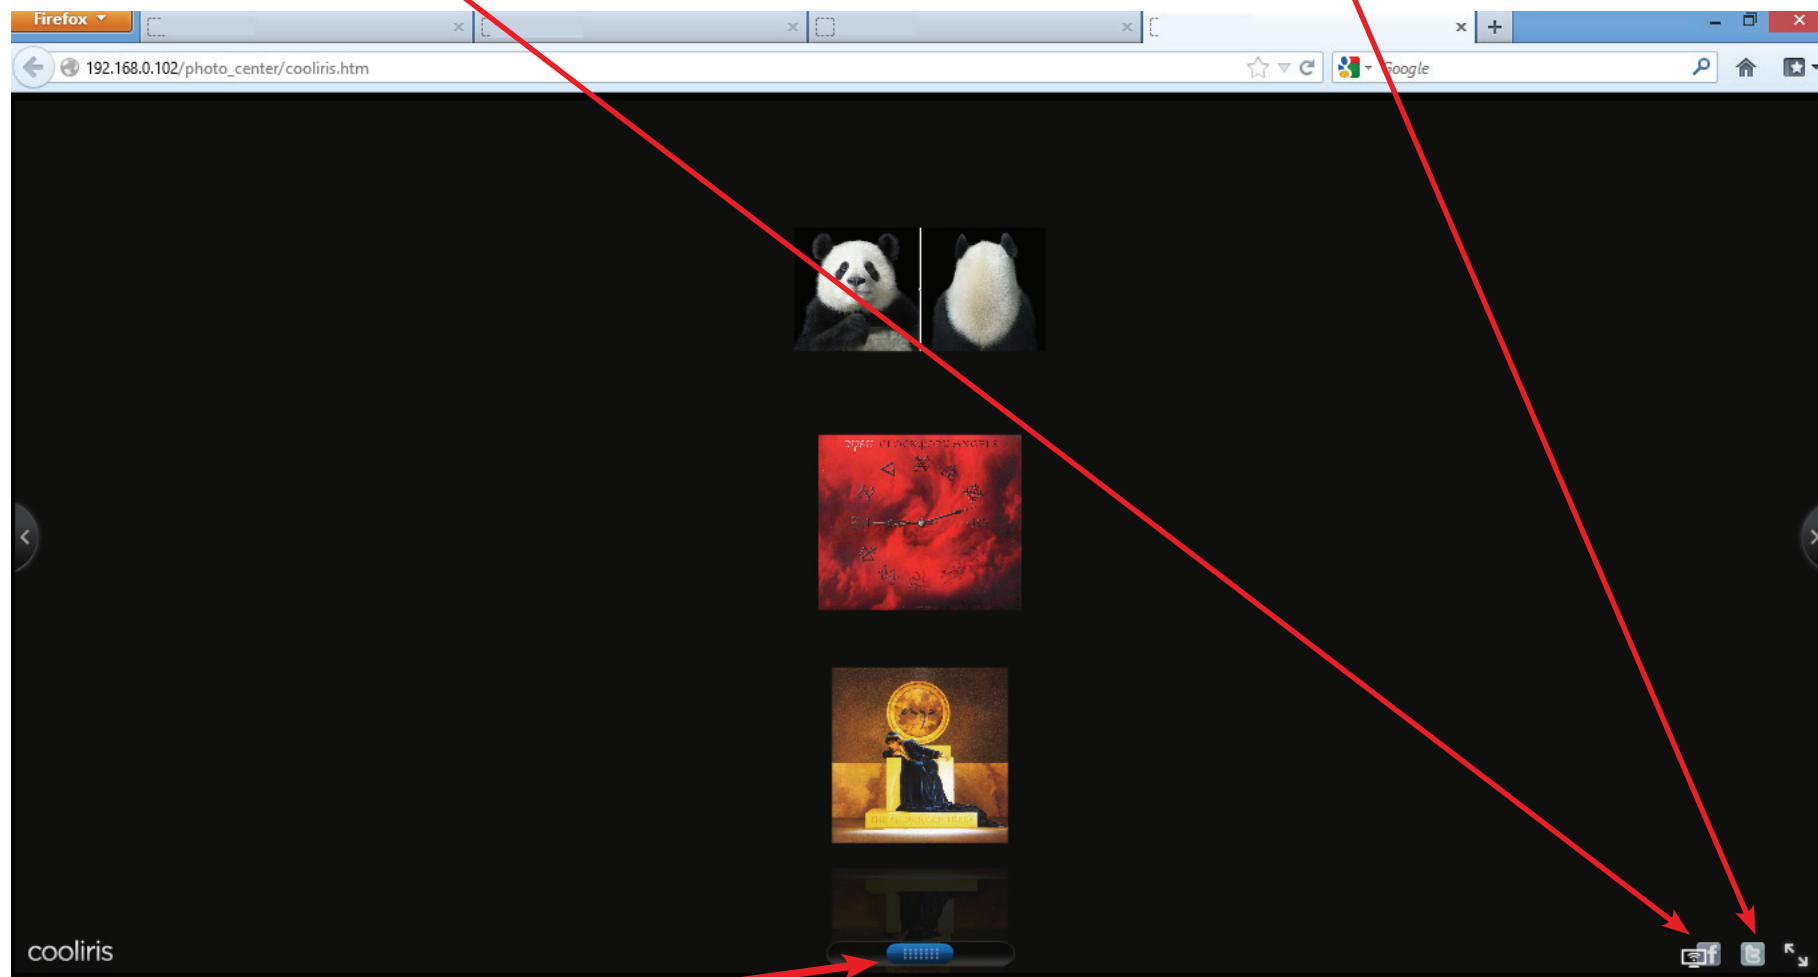


Click here to **slide** between photos.

Click here to activate **Full Screen mode**.

Section 4 - Configuration

Click on each photo to view separately. The photo is enlarged. On the right-hand side of each image are the social network links.



Click here to close **Single-Image view**. Click here to enlarge into **Full-screen mode**.

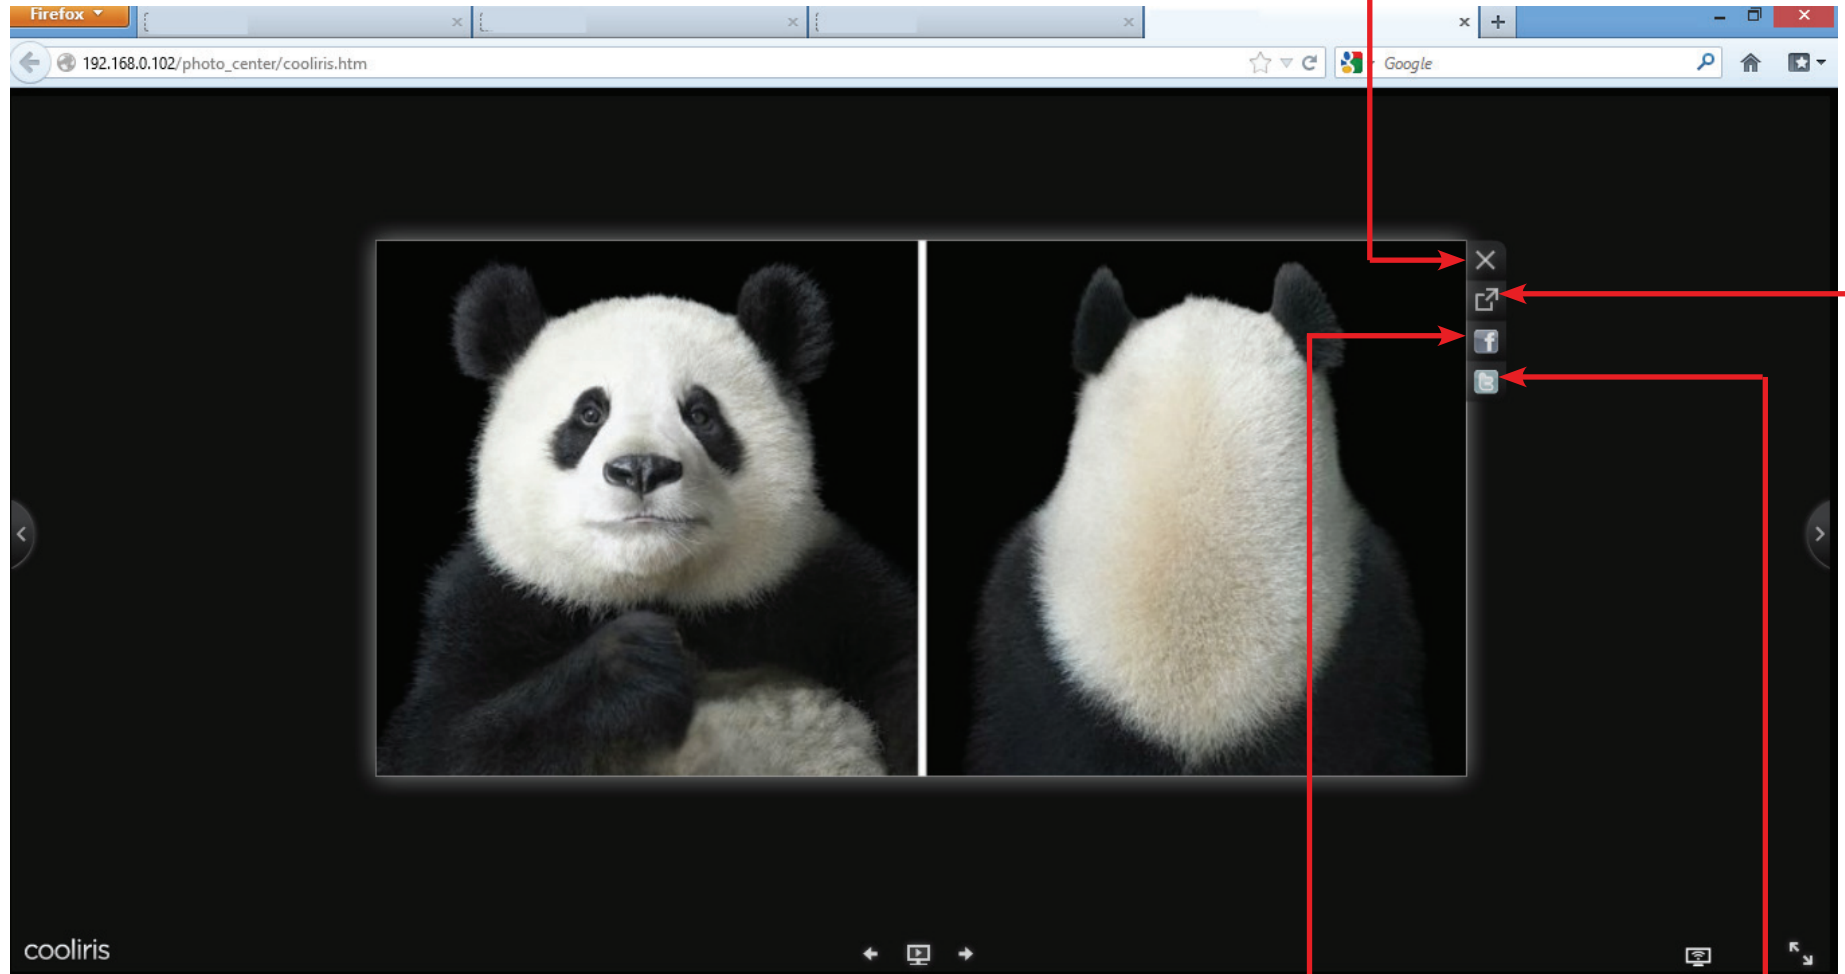

Click here to connect to **Facebook** or click here to connect to **Twitter**.

Click the **Facebook** link to connect your images to your **Facebook account**.

Click the **Twitter** link to connect your images to your **Twitter account**.

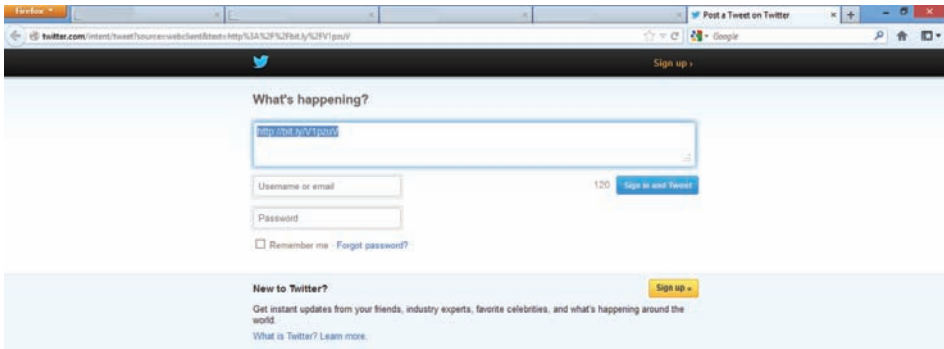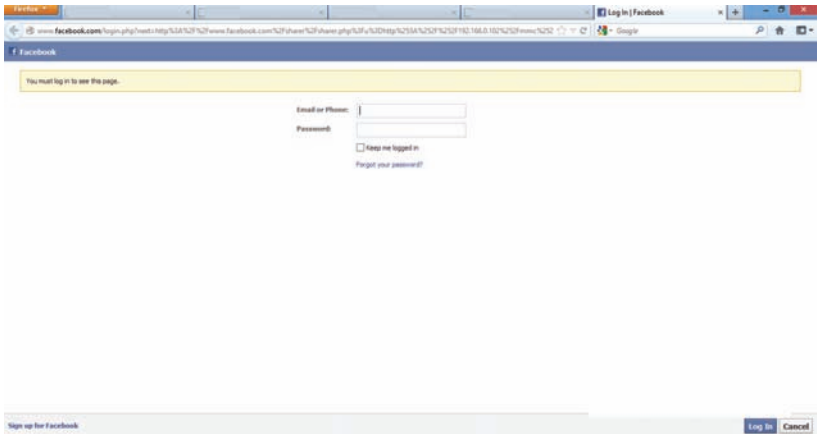

Beam a Slideshow to your TV

Click Apple Device, the ShareCenter will connect to a shared Apple Device on the Network, a message will pop-up after connecting successfully. Press **Yes** to continue.

Now you can enjoy your slideshow on your TV via the Apple Device and your DNS-327L


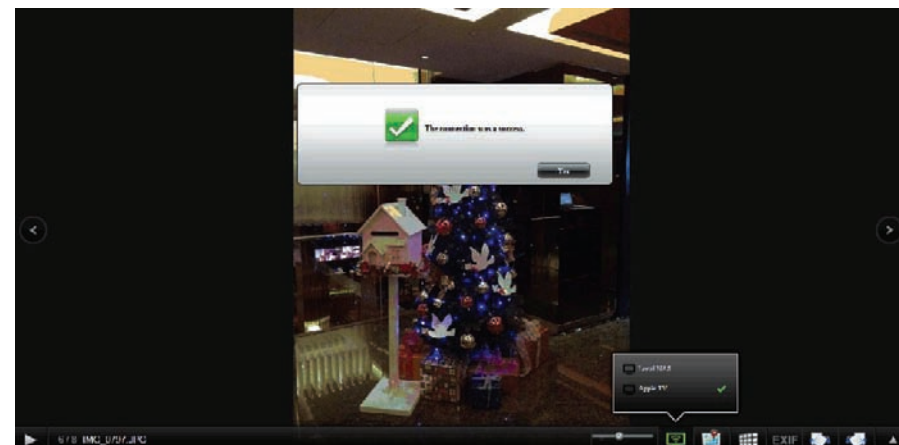


Photo Gallery

Click **Photo Gallery** to view the images in your gallery.

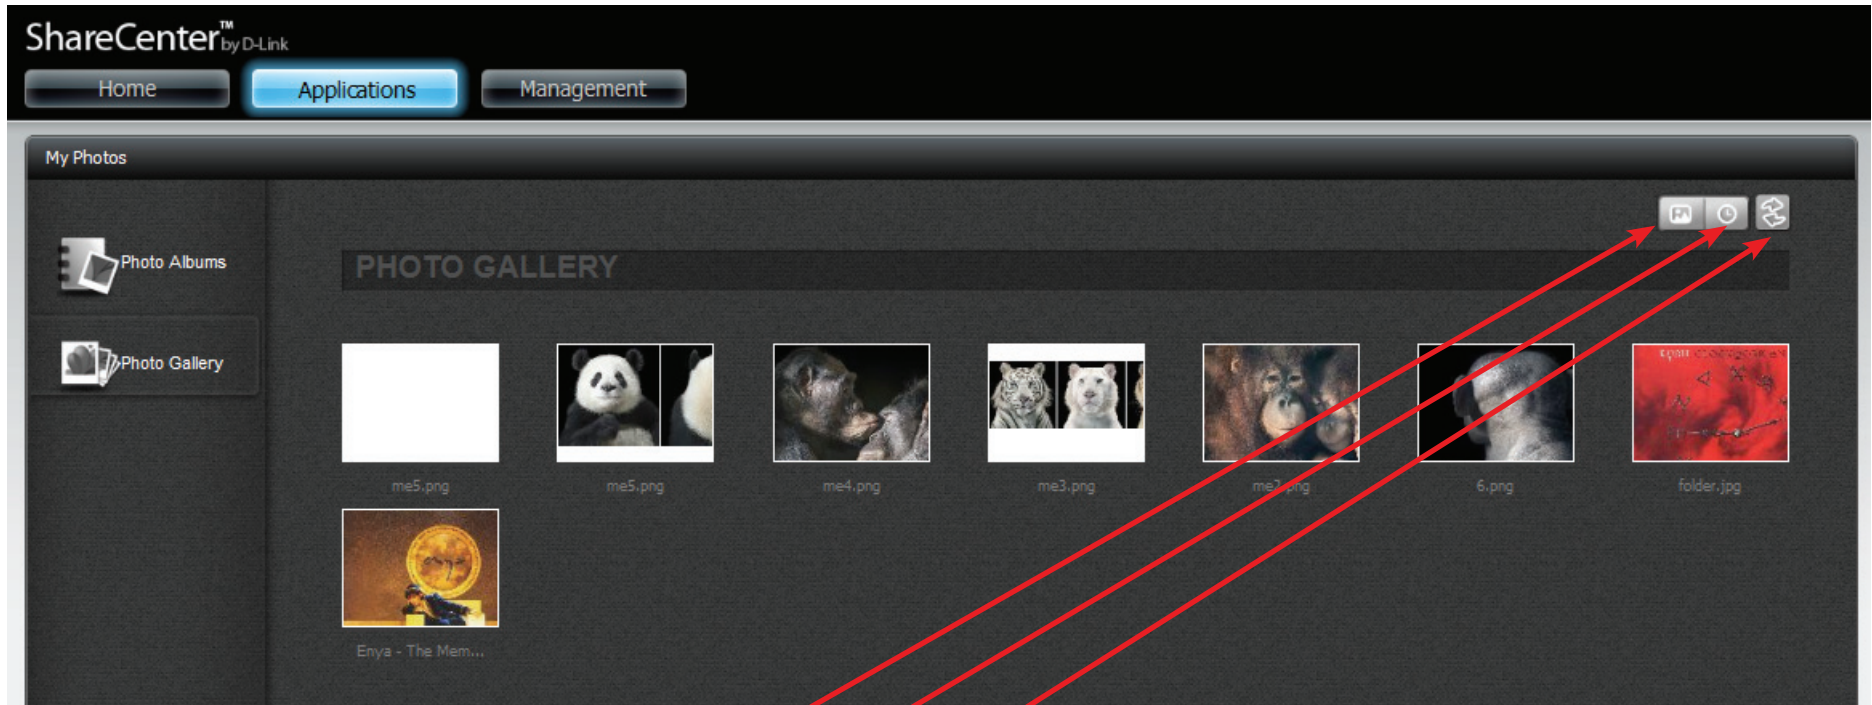

Near the top right-hand corner there are three main icons.

Click here to view **All Photos**.


Click here to view **By Calendar**.

Click here to **Refresh** the page.




Section 4 - Configuration


Click the **All Photos** icon to view all your photos in your **Photo Gallery**.

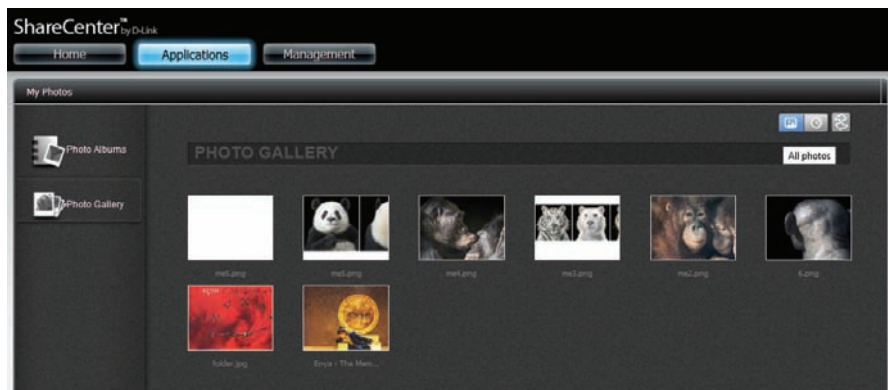

Click the **By Calendar** icon to view your **Photo Gallery** by date.

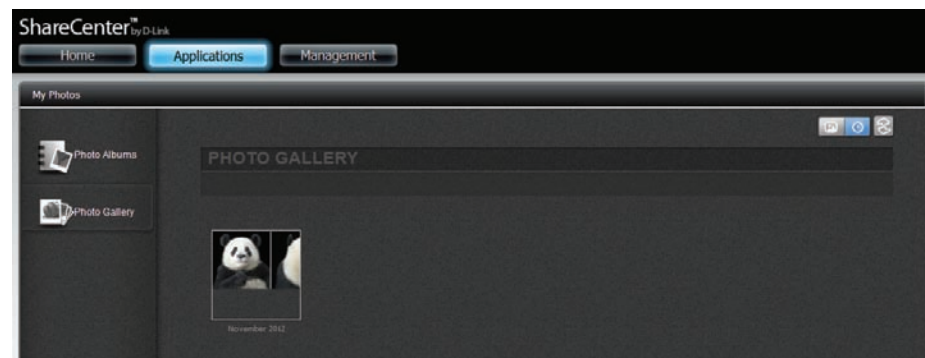

Click the **Refresh** icon to refresh the database.


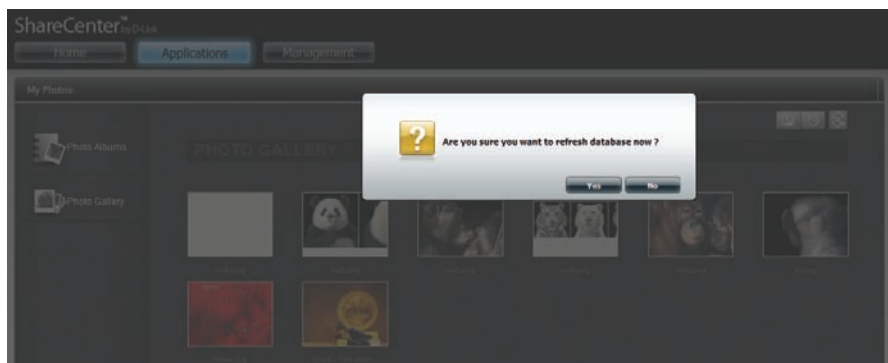


My Files

Users can access files on their ShareCenter™ by clicking the **My Files** icon in the **My Folder** window under **Home**. **My Files** provides access to all your files on the NAS.


Click **My Files**.

The **My Files** window provides a list of all the **Volumes** created on the NAS. Click on any **Volume** you created to see a directory listing of the files.

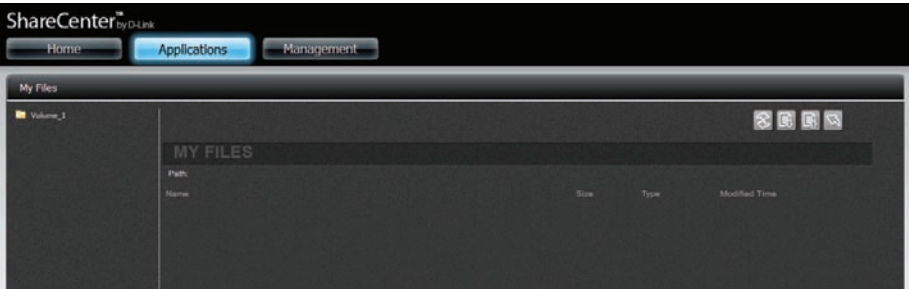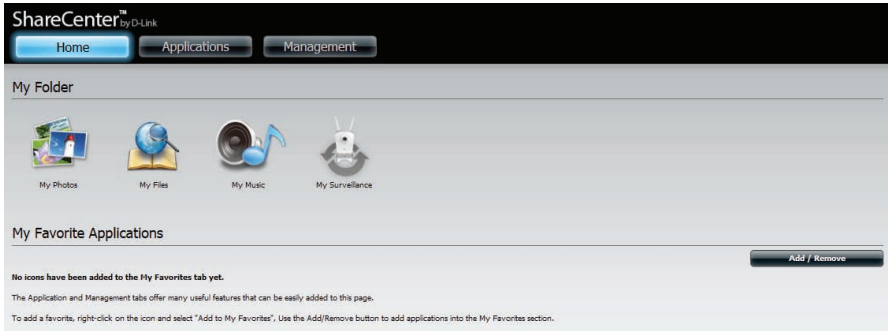


My Files - Icons


Click the **icons** near the right-hand side of the panel to access the **My Files** features. Click this button to **Refresh** the view.

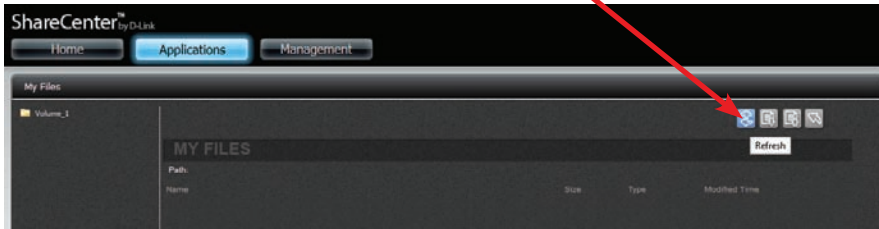


Click the **icons** near the right-hand side of the panel to access the **My Files** features. Click this button to **Download** files to your local PC.

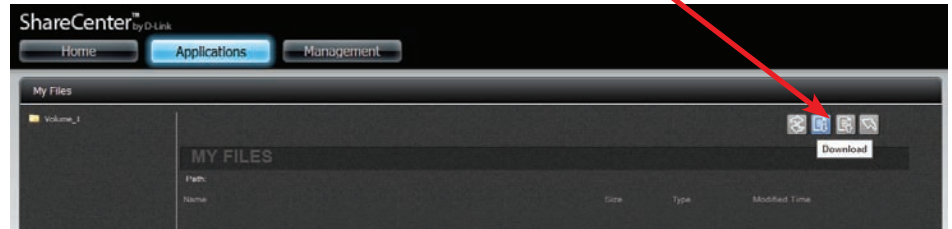

Click the **icons** near the right-hand side of the panel to access the **My Files** features. Click this button to **Upload** files to the NAS.

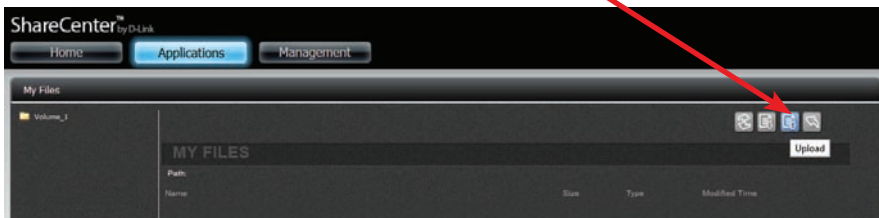


Click the **icons** near the right-hand side of the panel to access the **My Files** features. Click this button to **Return** to the previous screen.


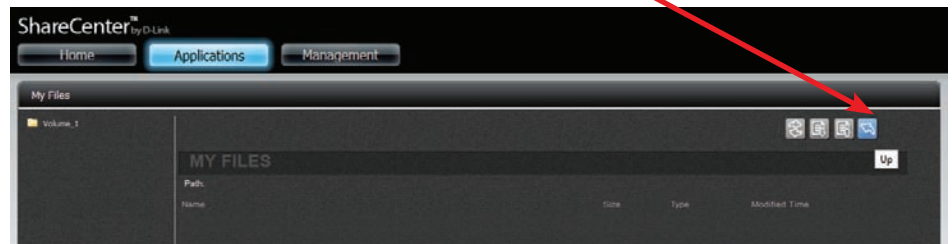


Upload

To upload more files to the volume you have selected, click the **Upload** button. Click the **Browse** button to find files on your computer to upload to the NAS. Locate the path of the file you want to upload and click **Open**.

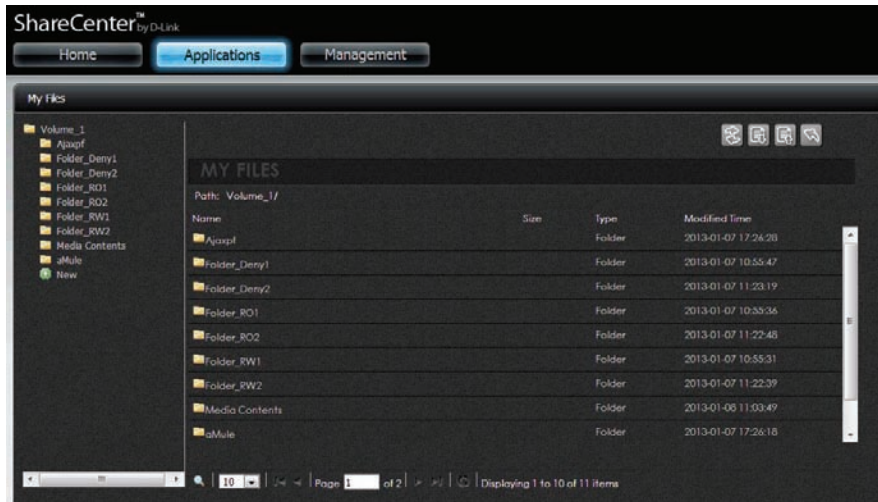


Click **Upload** to start the uploading process. Then click **Exit** to close the upload window. The file updates to the NAS and is displayed on the directory table.

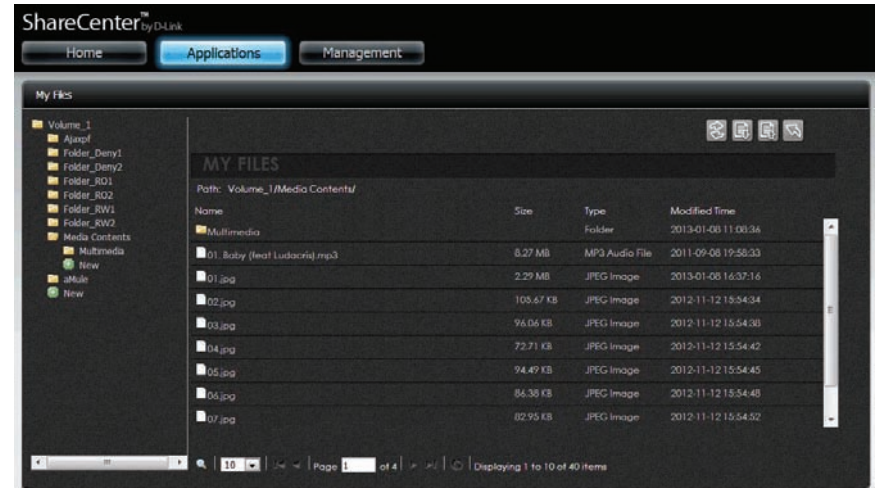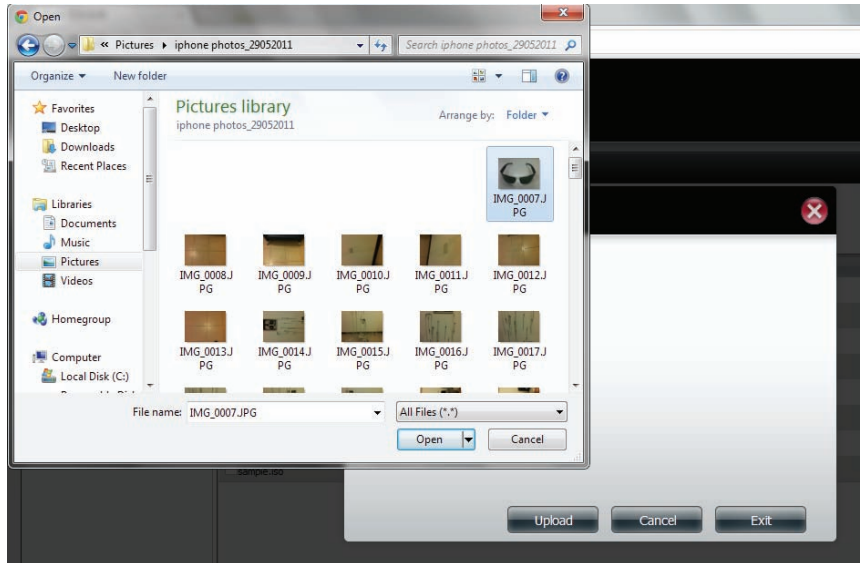


Download

To download files from the NAS to your computer, select the file you want to download (highlighted in red) and click the **Download** button. Depending on your browser download settings, the browser automatically downloads the file to your saved location.

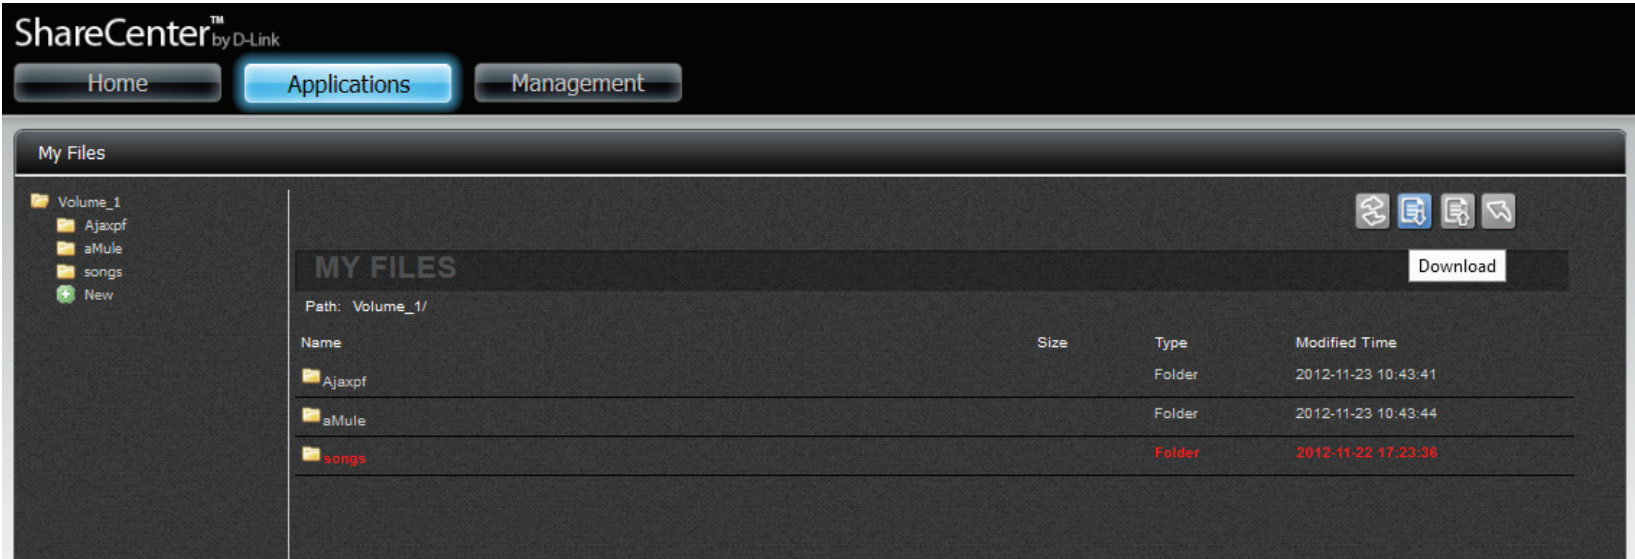


Alternatively, click the **Save File** button and **OK** to continue.

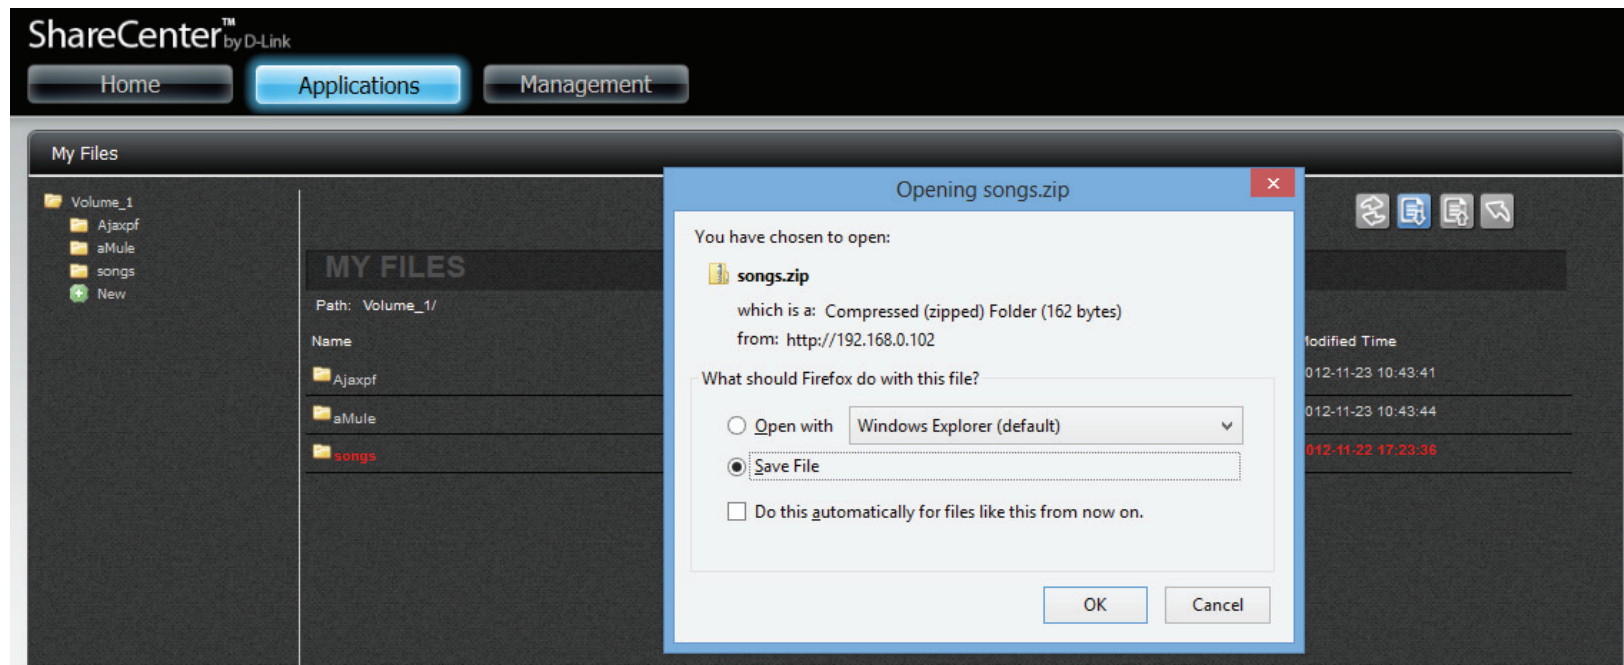

Copy

To Copy files from one folder to another folder of the NAS, select the file you want to copy (highlighted in red) and right-click. From the drop-down list click Copy.

Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Copy** (it turns blue).

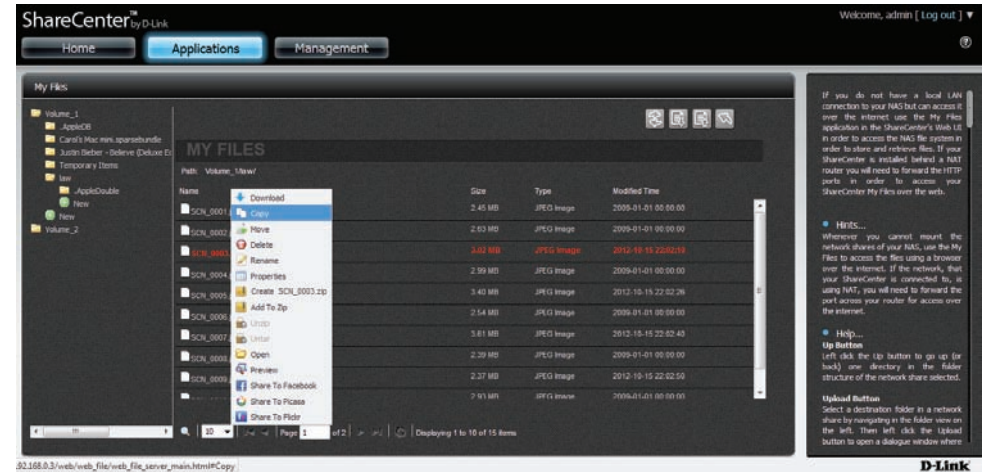


Under **Copy**, select a Destination **Path** or create a new **Path**.




Section 4 - Configuration


Enter a name for the new **Folder**. Click **OK**.

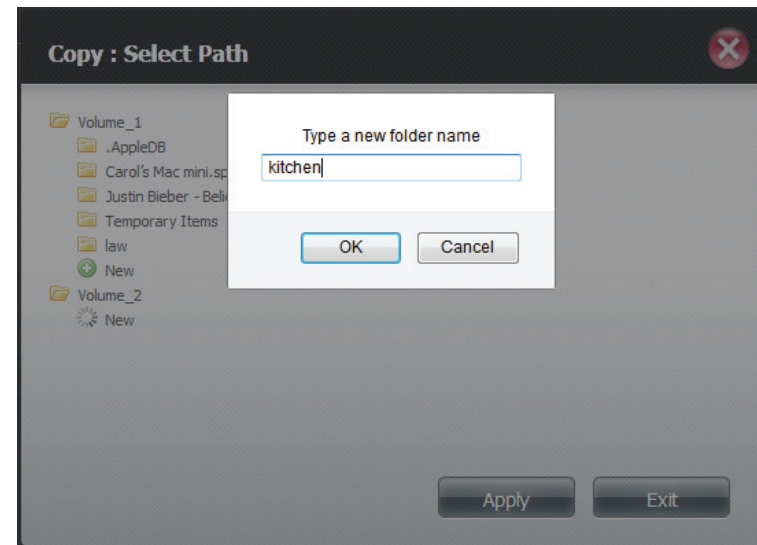

Select the newly created folder and click **Apply**.

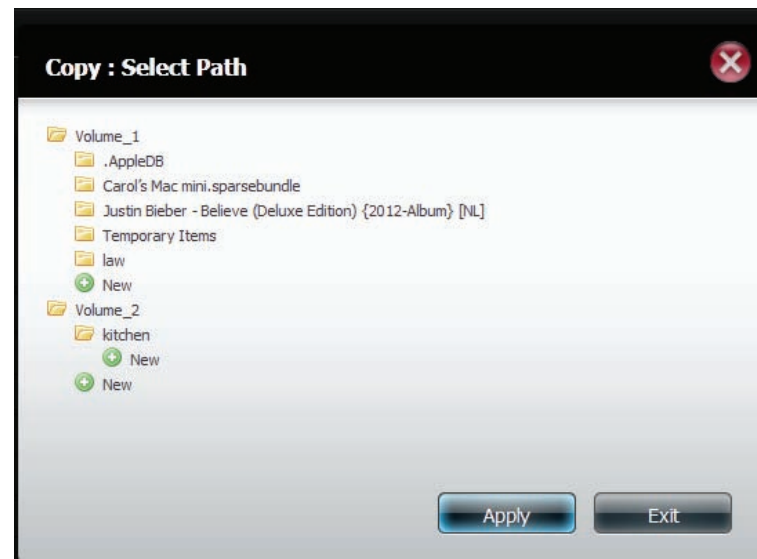


To verify that the file did copy to the destination, browse to the folder in question.

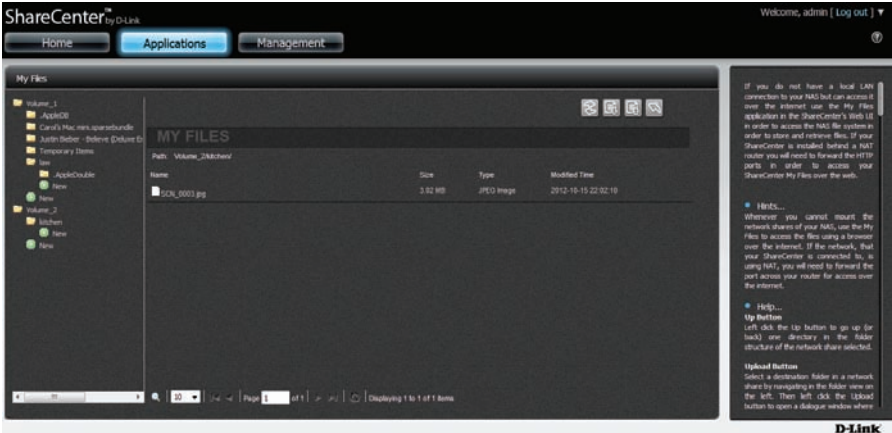


Move

To Move files from one folder to another folder of the NAS, select the file you want to move (highlighted in red) and right-click. From the drop-down list click Move.


Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Move** (it turns blue)

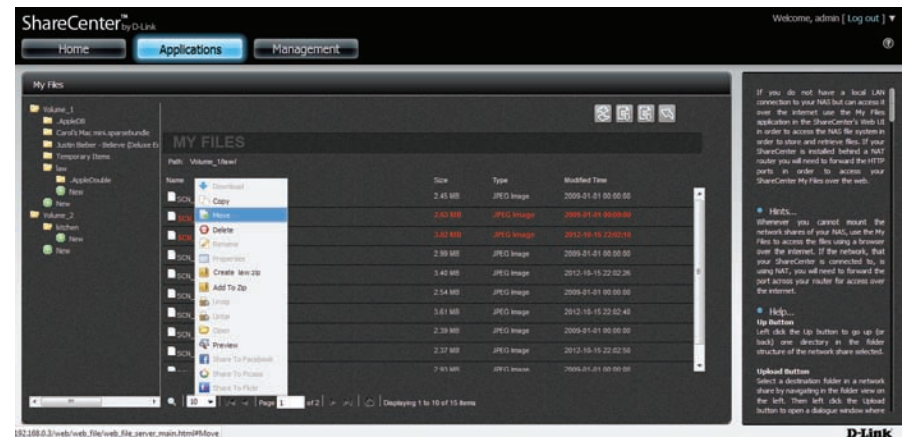


Under **Move**, select a Destination **Path** or create a new **Path**.

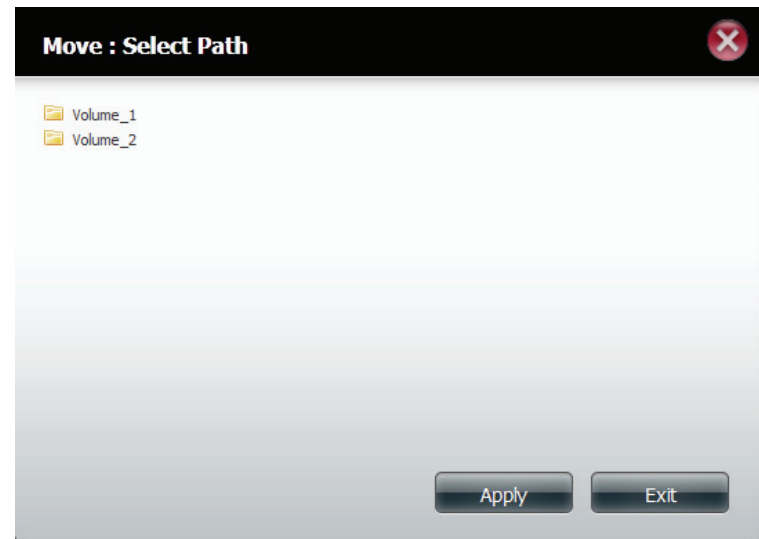

Selct a folder from one of the **Volumes** and click **Apply**.

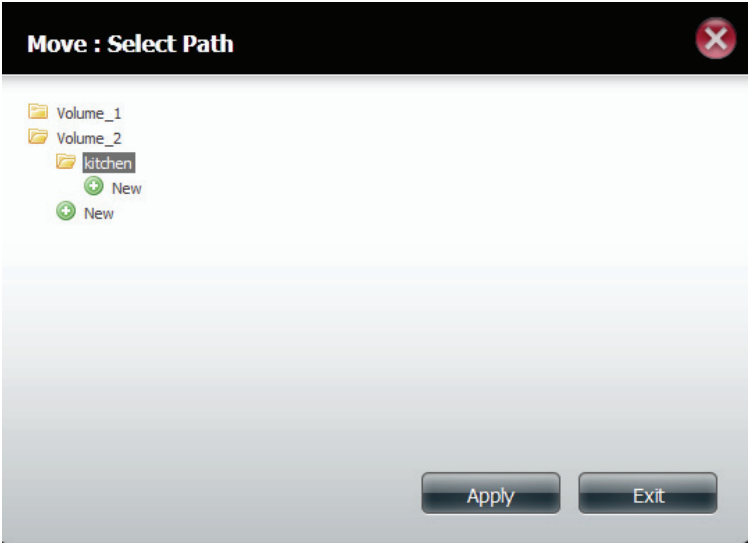


Browse to where you moved the file.

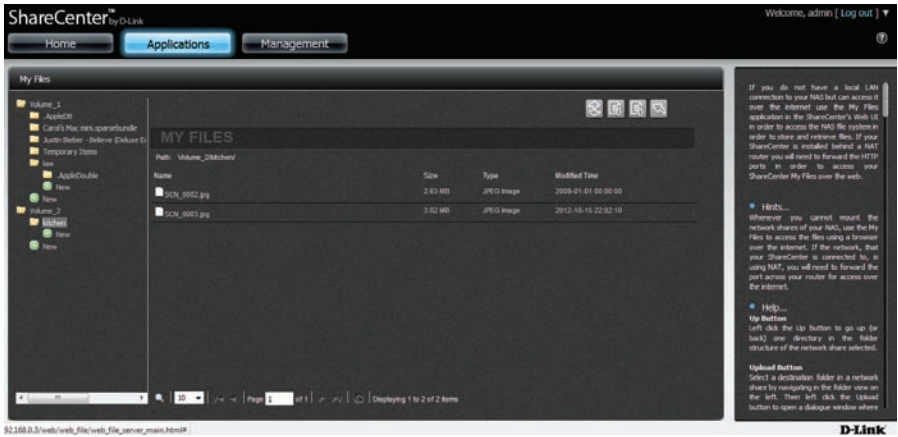


Delete

To Delete files from the NAS using your computer, select the file you want to delete (highlighted in red) and right-click. From the drop-down list click Delete.


Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Delete** (it turns blue)

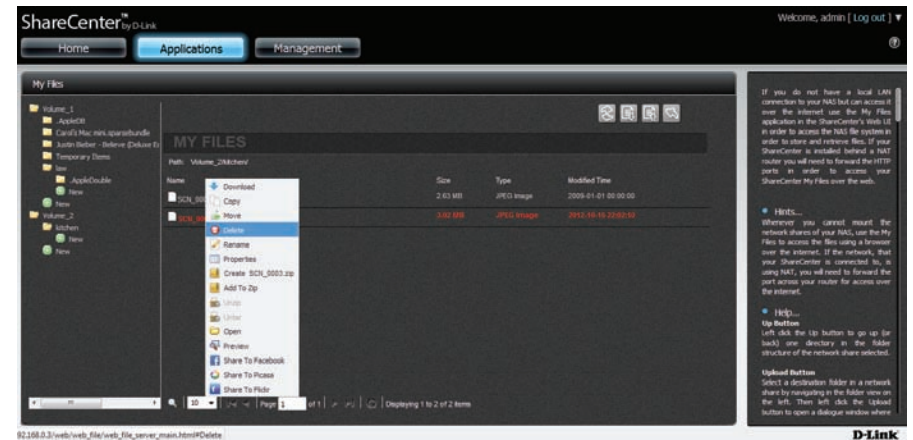

A verification message appears asking for you to verify your selection. Click **OK** to confirm.

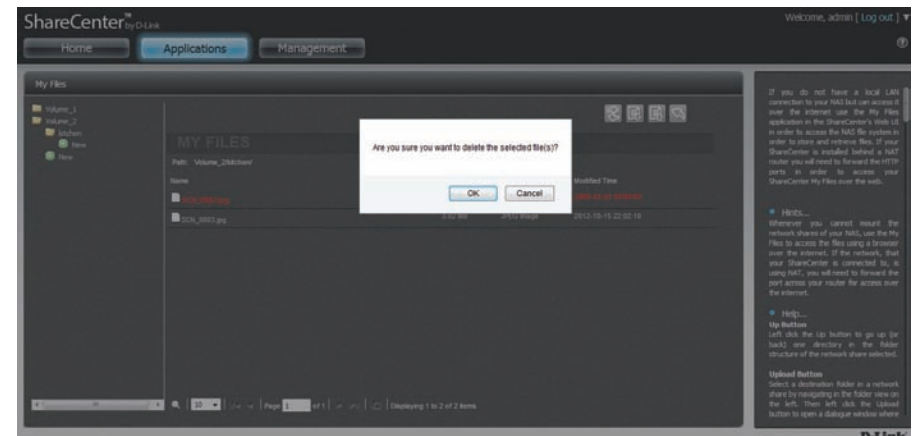


The file no longer exists in the folder.

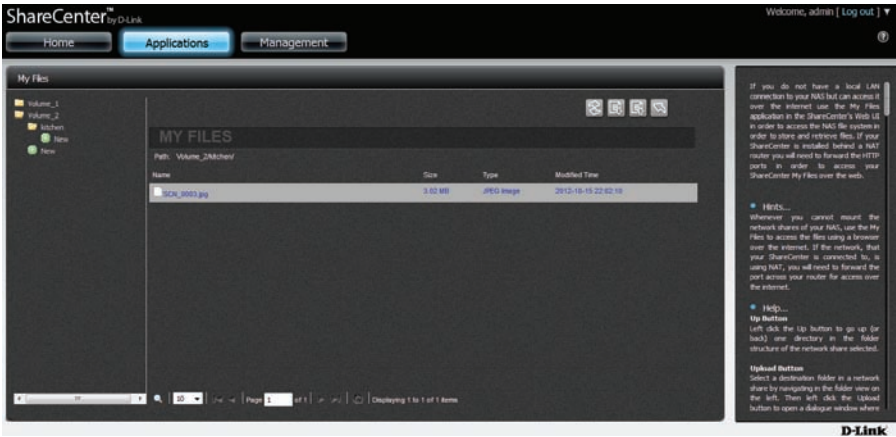

Rename

To Rename files from the NAS, select the file you want to rename (highlighted in red) and right-click. From the drop-down list click Rename.


Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Rename** (it turns blue)

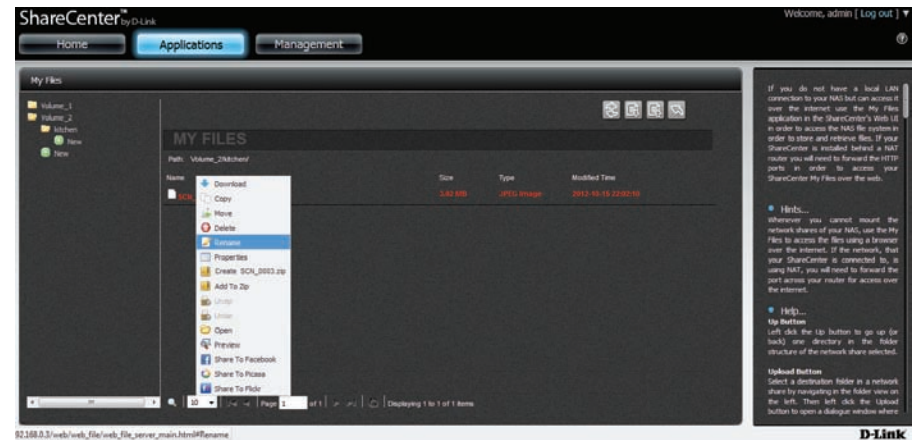


The Rename window displays the original name.



Enter a new name for the file. Click **Apply**.

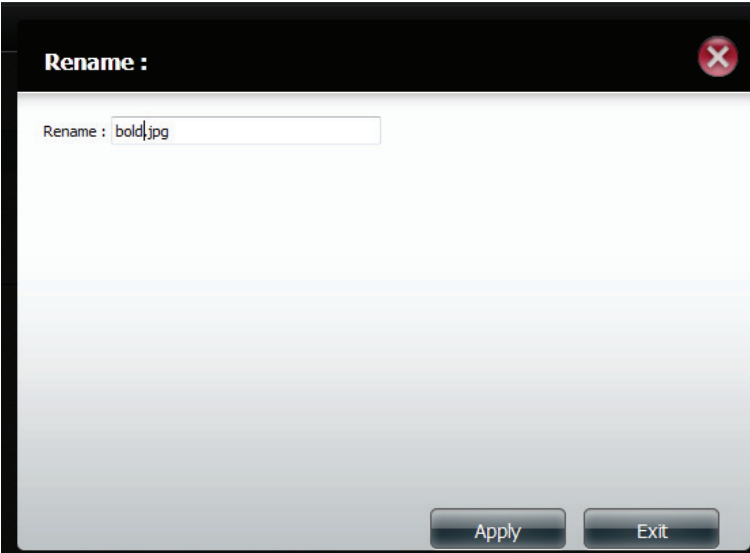


The **Renamed** file is now accessible from its original location.

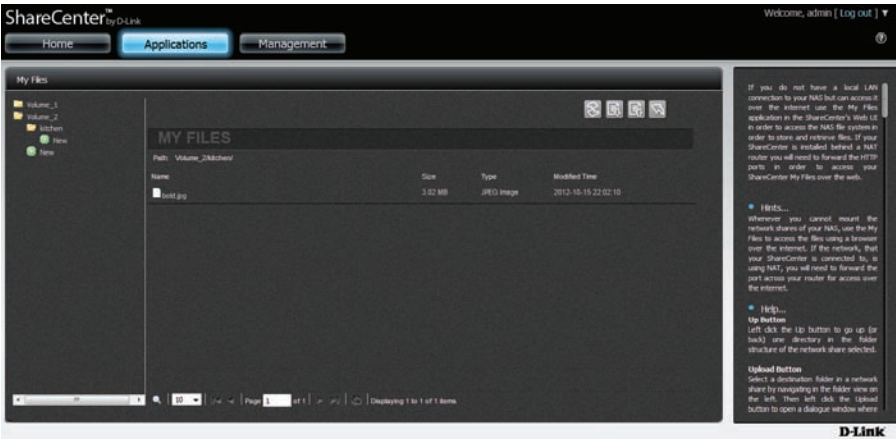

Properties

To get general information about a file(s) from the NAS, select the file (highlighted in red) and right-click. From the drop-down list click Properties.


Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Properties** (it turns blue)

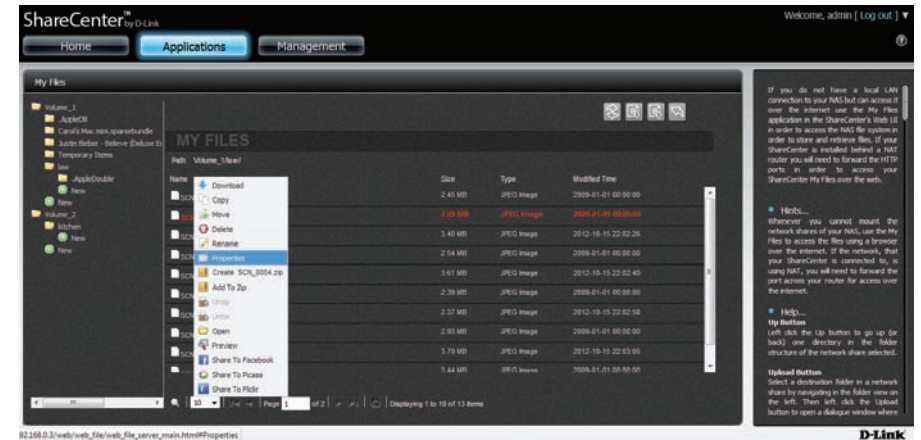

The Properties window displays the **Properties, Privileges, and Owner and User Group**.

Under **Privileges**, you are allowed to change the ownership settings. The **Owner, User Group, and Other** users have **Read, Write, and Execution** settings.


Click **Apply** once you have made the changes for it to take effect.

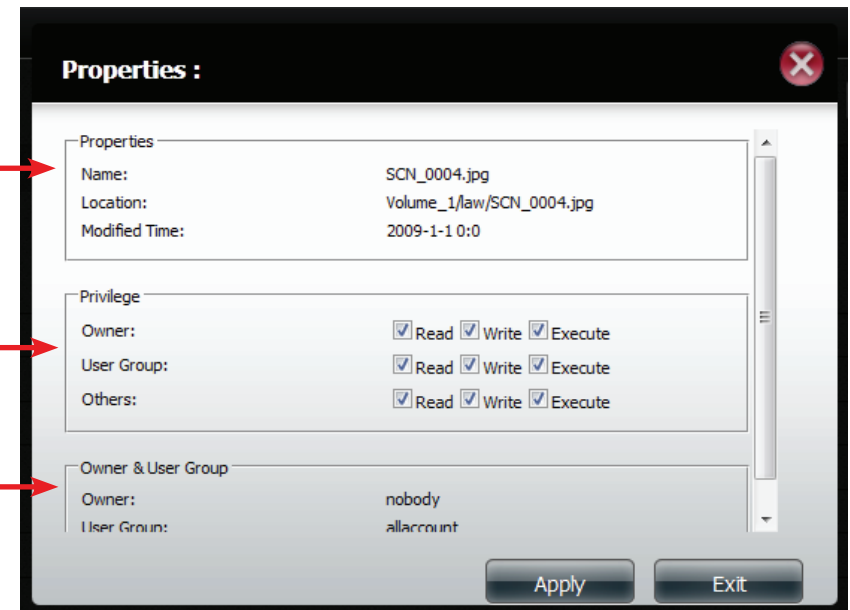


Create a Zip file from the Selected Folder

To Zip a file(s) from the NAS, select the file you want to zip (highlighted in red) and right-click. From the drop-down list click The Selected File to Zip.

Go to **Applications**, **My Files**. Browse any of the folders on the left pane, right click any of the files in the right pane. Select **Create (file name) .zip** (it turns blue)

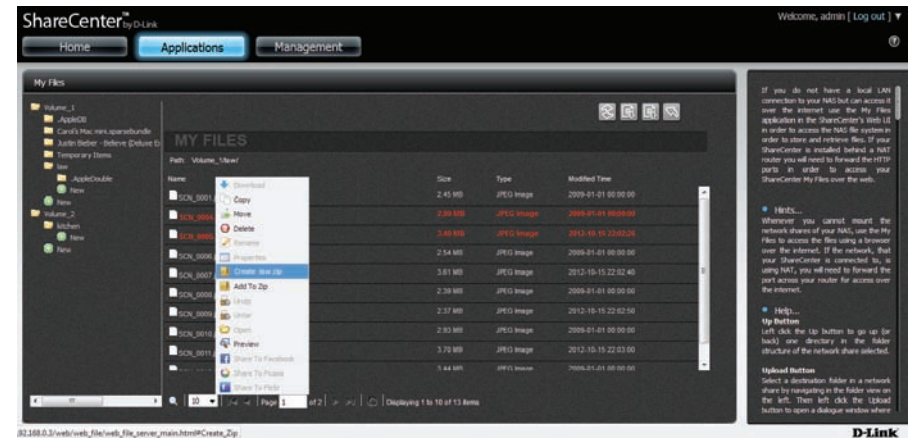


The Wizard creates a zipped file in the same folder.

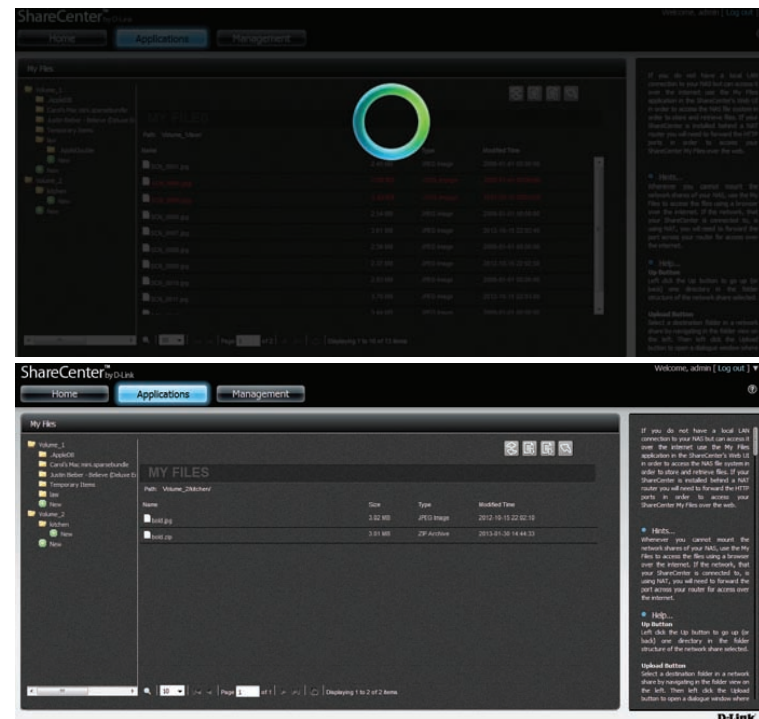


Add to Zip

To make a file zipped from the NAS, select the file you want to zip (highlighted in red) and right-click. From the drop-down list click Add to Zip.


Add to zip allows you to add to an existing zipped file. So, take an existing zip (look at the file size). In our example, “bold.zip” (the original file size) is 3.01MB

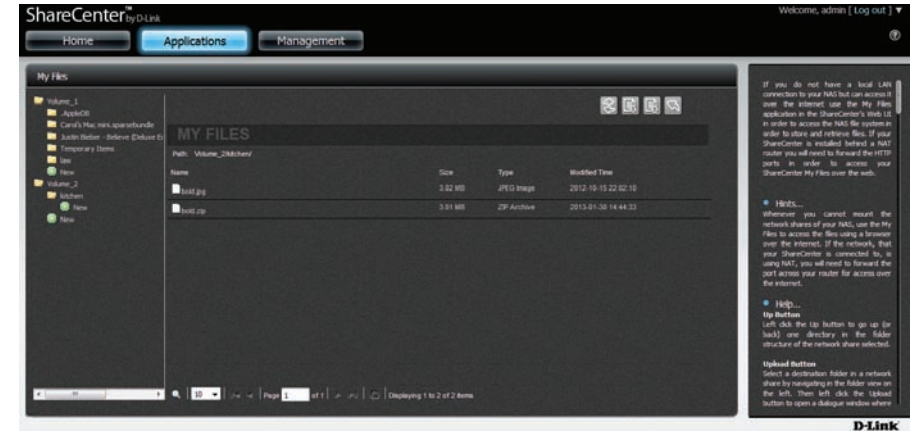


Right click the file you want to “Add to zip”

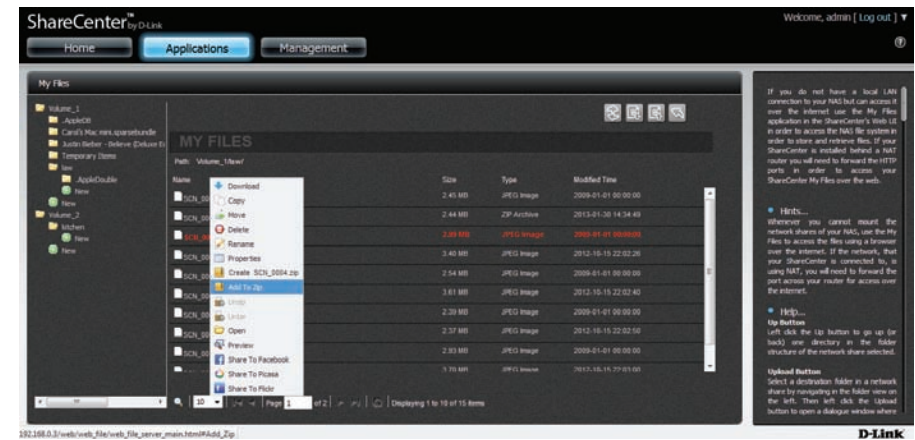

Under **Add to Zip**, select the zipped file you want to have the file added to. Click the checkbox and click **Apply**.

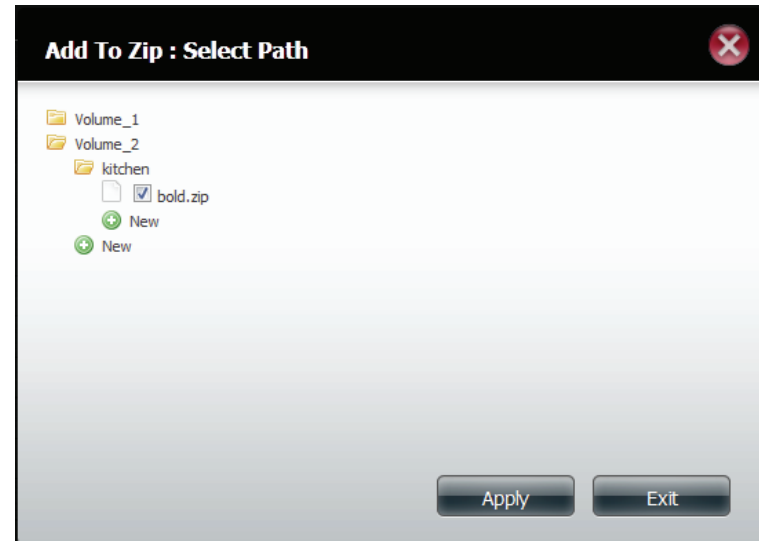


The Wizard adds the new file to the zipped file. In the example, you can see the new file size.

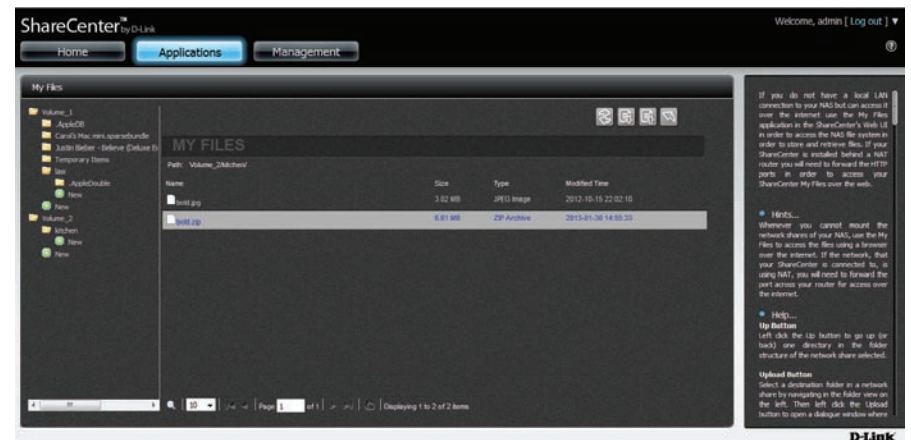

Unzipping a Zipped File

To unzip a zipped file on the NAS, select the file you want to unzip (highlighted in red) and right-click. From the drop-down list click Unzip.


Go to **Applications, My Files**. Browse any of the folders on the left pane, right click any zipped files in the right pane. Select **Unzip** (it turns blue)

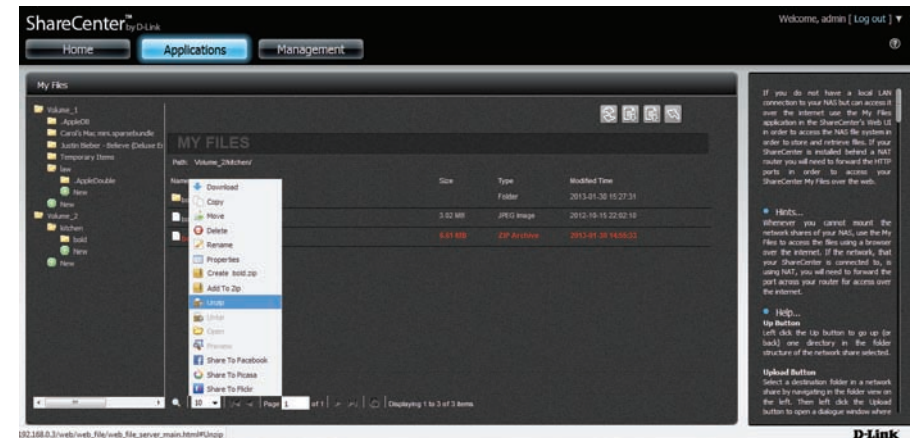

The Wizard unzips the zipped file.



A new folder is created from the unzipped file.

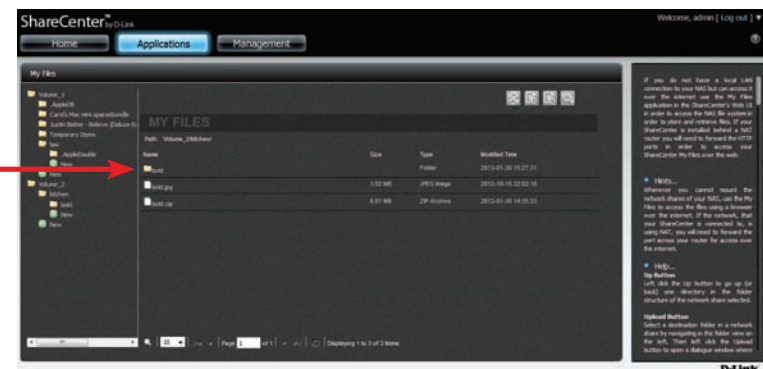

Unzipping a Tar File


To unzip a tar file on the NAS, select the file you want to untar (highlighted in red) and right-click. From the drop-down list click Untar.

An unzipped TAR file works when your workstation is Linux-based. The unzipping process works similar to unzipping a normal file.


Opening a File

To open a file on the NAS, select the file you want to open (highlighted in red) and right-click. From the drop-down list click Open.

Select the file you want to open, right-click it.

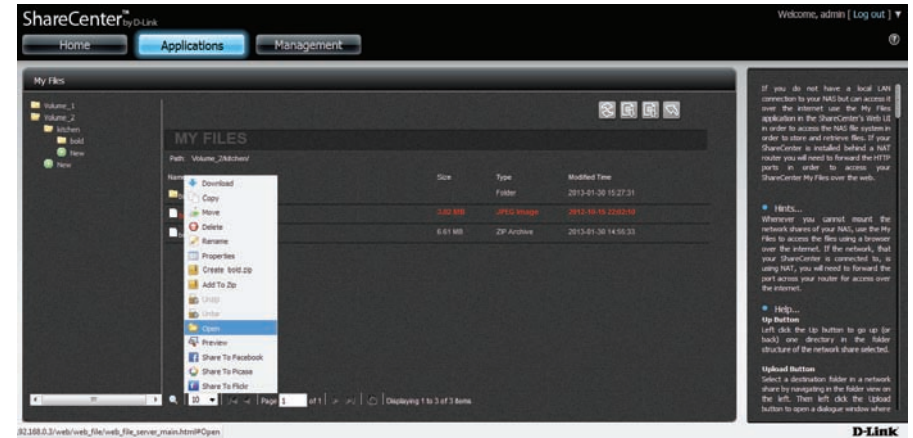


The file opens in a new browser window.

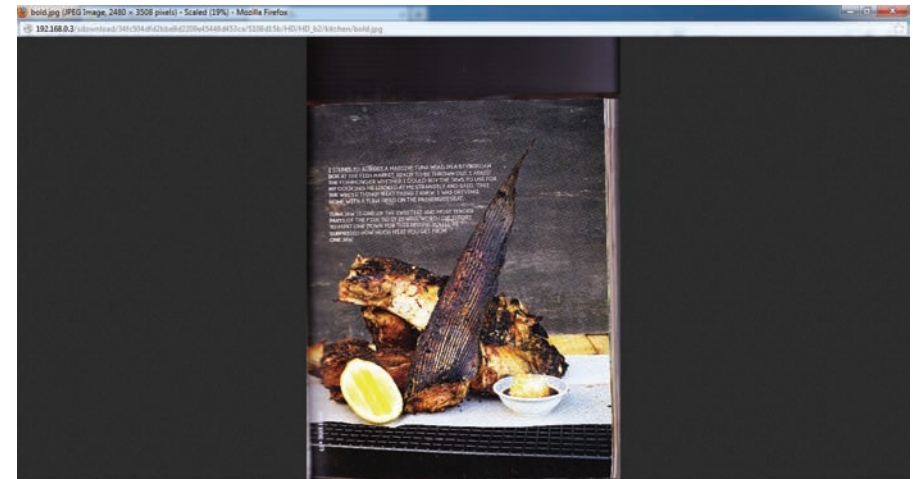

Previewing a File

To Preview a file (bmp, gif, ico, j2k, jiff, jpeg, jpg, jpg2, pdf, png, ps, psb, psd, webp, doc, docx, xls, xlsx, mp3, txt) on the NAS, select the file you want to preview (highlighted in red) and right-click. From the drop-down list click Preview.

Select the file you want to Preview, right-click it.

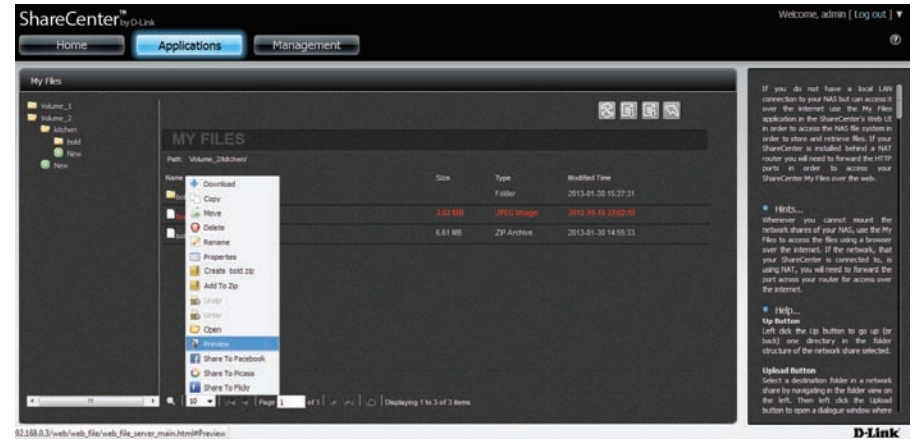


The file opens in a new Gallery-like window. Use the left/right slider to view the image or resize the image from the corner points.




Share to Facebook

To Share an image file on the NAS to Facebook, select the file you want to share (highlighted in red) and right-click. From the drop-down list click Share to Facebook.

Select the file you want to Share to Facebook, right-click it.

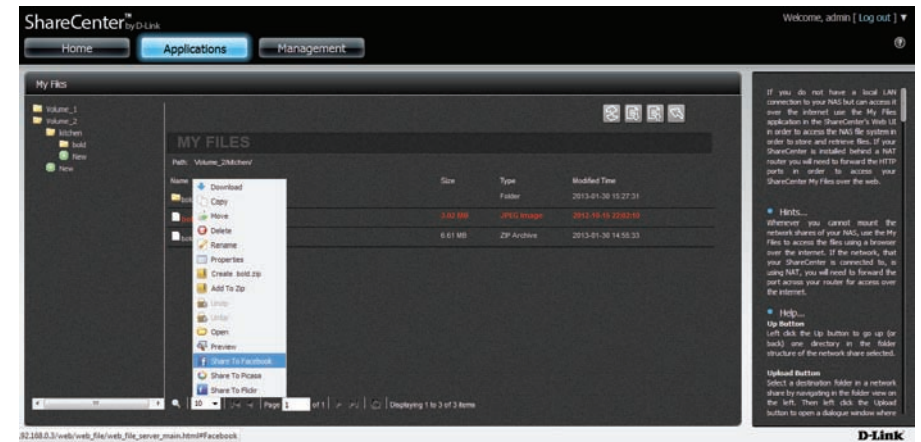


The browser opens a new Window and redirects you to Login with your Facebook account to automatically upload files to Facebook.

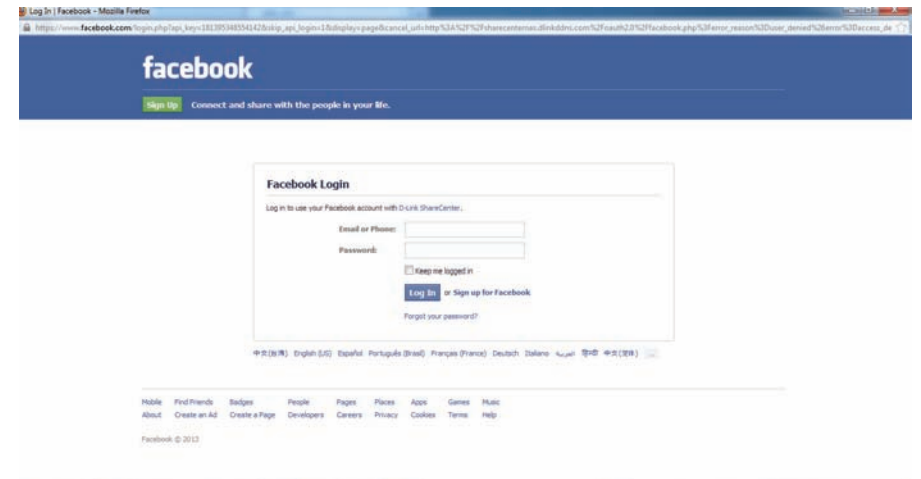


Share to Picasa

To Share an image file on the NAS to Picasa, select the file you want to share (highlighted in red) and right-click. From the drop-down list click Share to Picasa.

Select the file you want to Share to Picasa, right-click it.

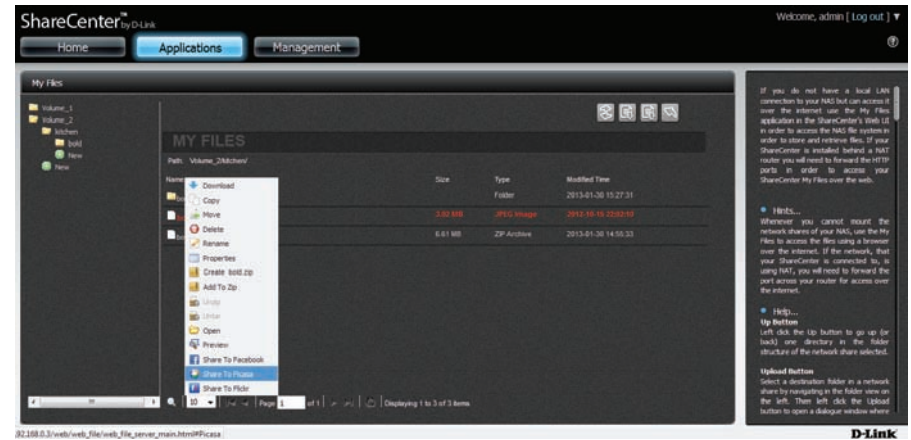


The browser opens a new Window and redirects you to Login with your Google account to automatically upload files to Picasa.

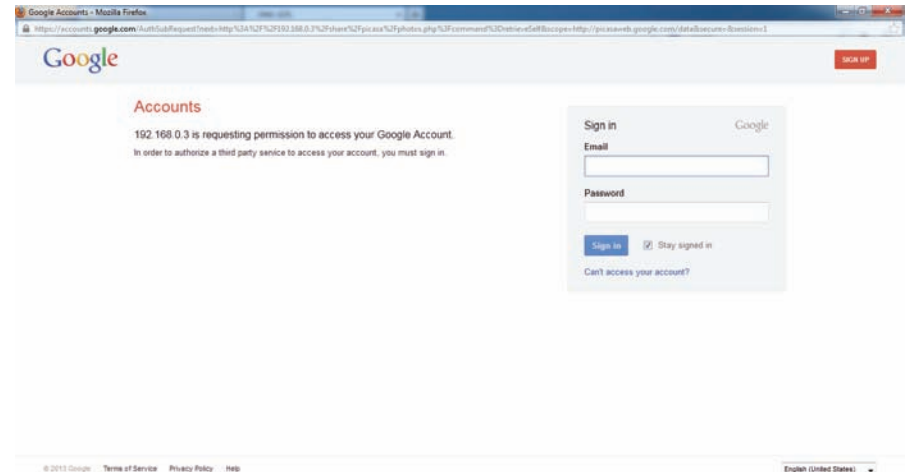

Share to Flickr

To Share an image file on the NAS to Flickr, select the file you want to share (highlighted in red) and right-click. From the drop-down list click Share to Flickr.

Select the file you want to Share to Flickr, right-click it.

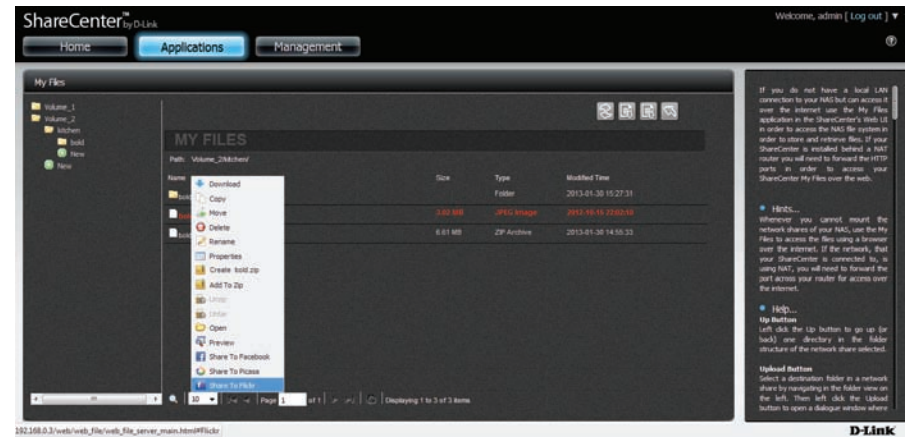


The browser opens a new Window and redirects you to Login with your Yahoo account to automatically upload files to Flickr.




My Music

My Music allows users to add music to the DNS-327L. Using this application, users can view, edit and play music straight from the NAS. Access music files on the network.

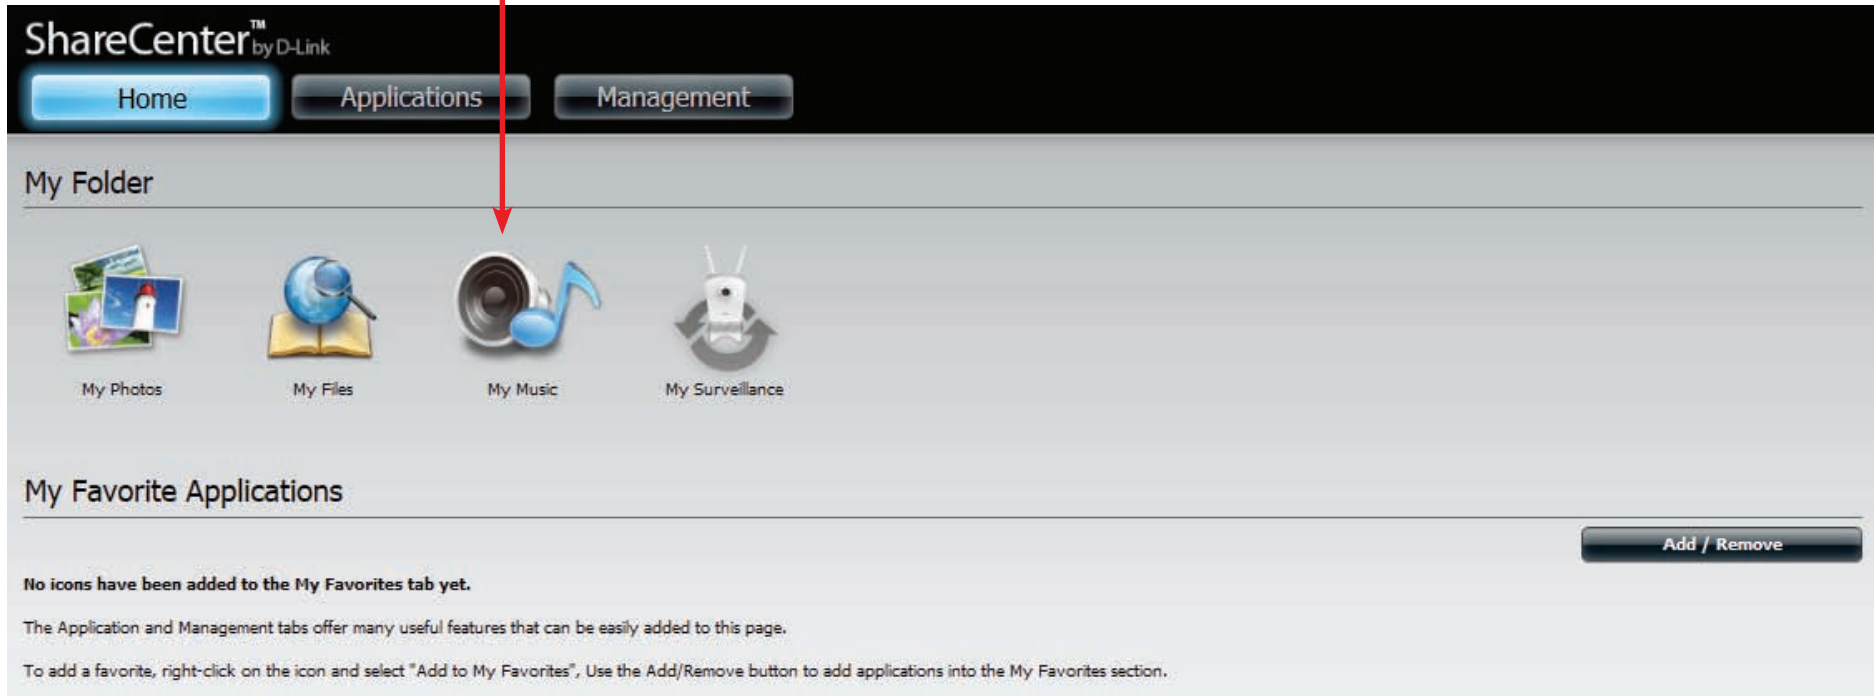



Click **My Music** to view the **My Music** features

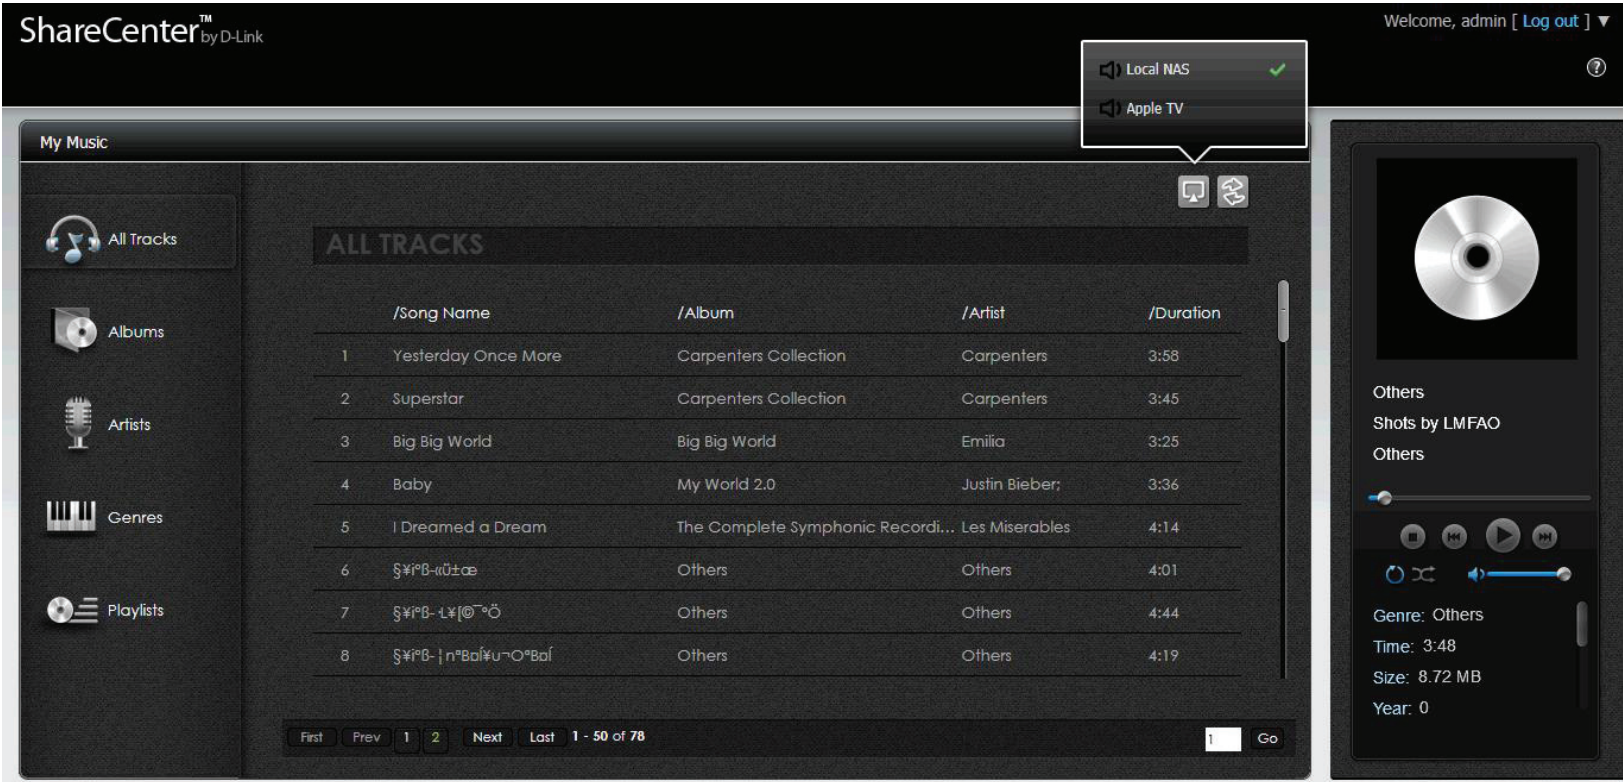



My Music - The Interface

Click here to playback music to a Local Device or to an AirPlay enabled Apple Device.

Click here to **Refresh** the screen.

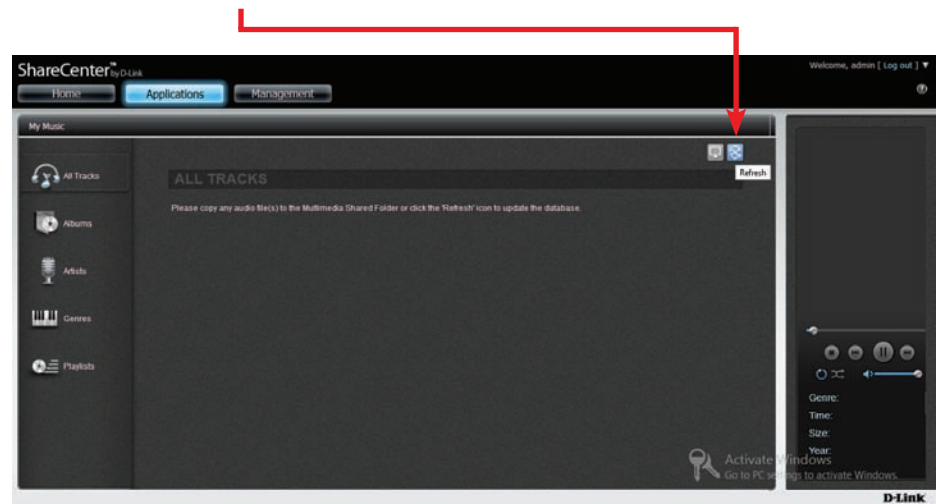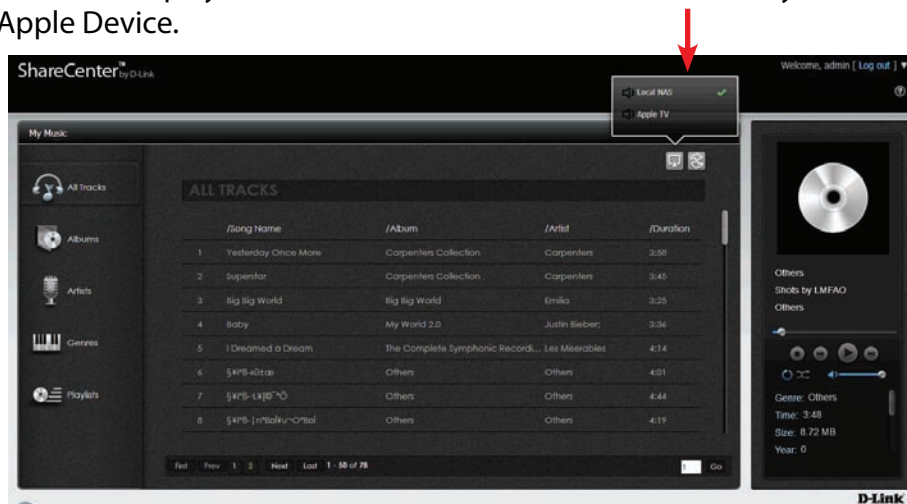


The **Music Player** plays tracks directly off the DNS-327L

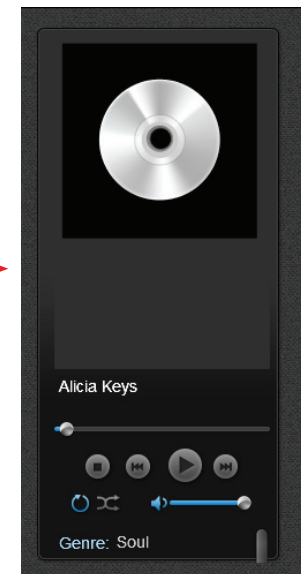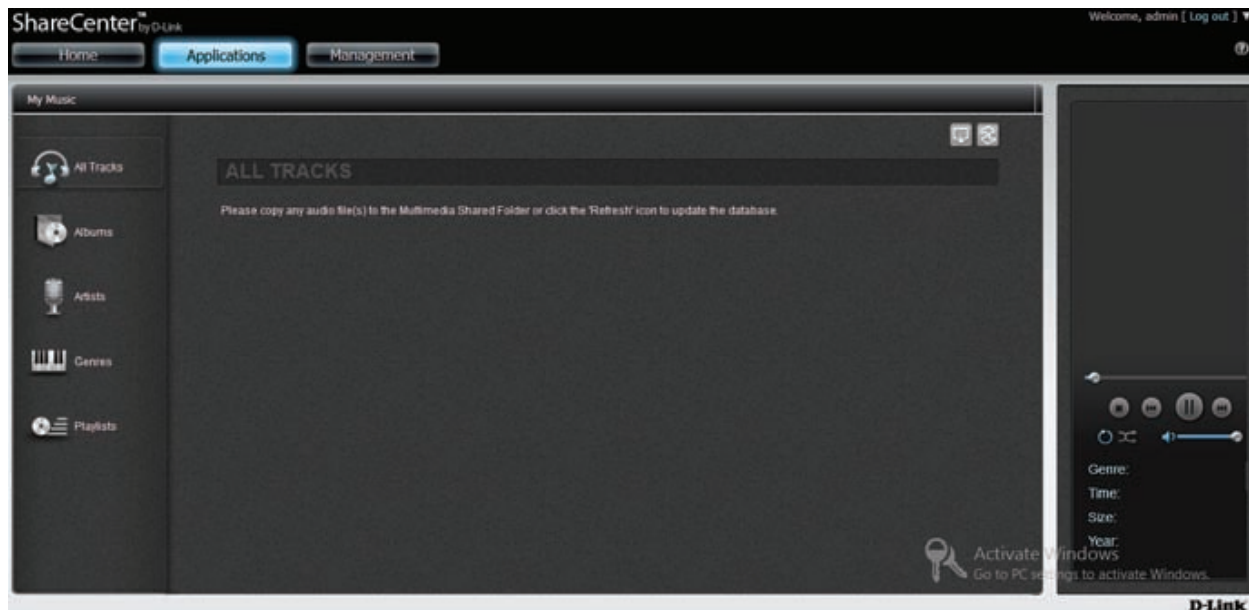


My Music - The Categories


Click **All Tracks** to view all the audio tracks on the DNS327L.

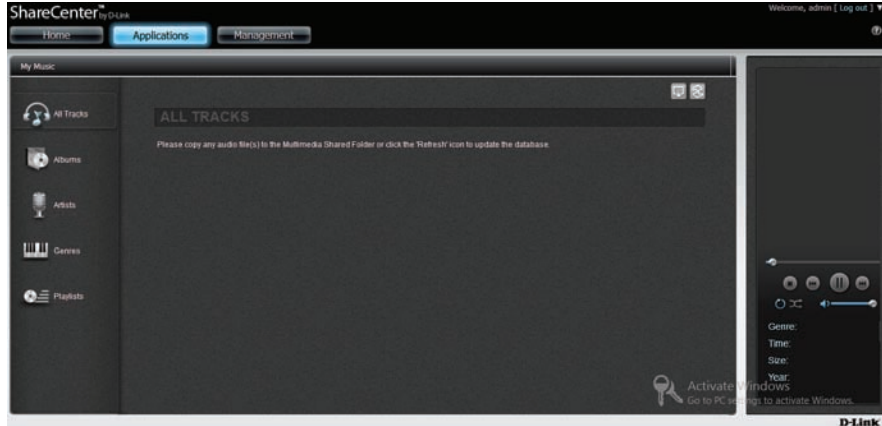


Click **Albums** to view all the albums on the DNS327L.

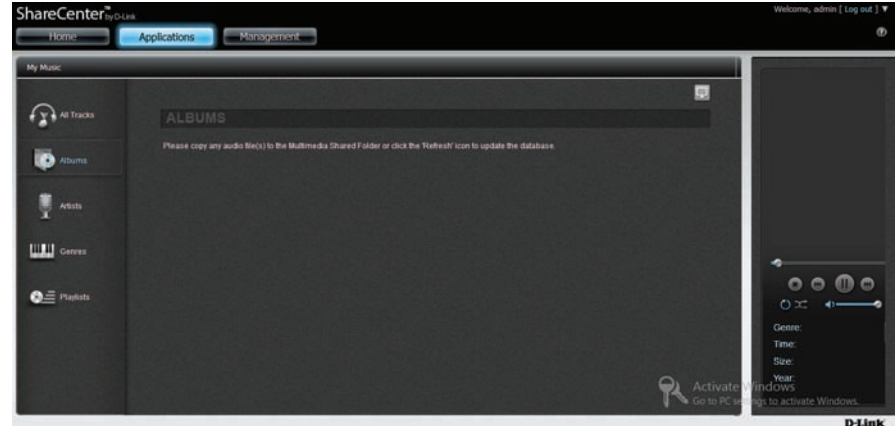

Click **Artists** to view the playlist by artist on the DNS327L.

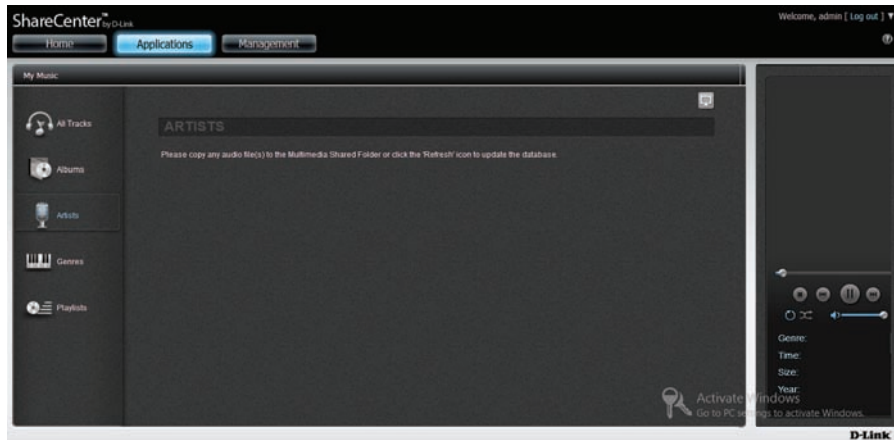


Click **Genres** to view the playlist by genre on the DNS327L.

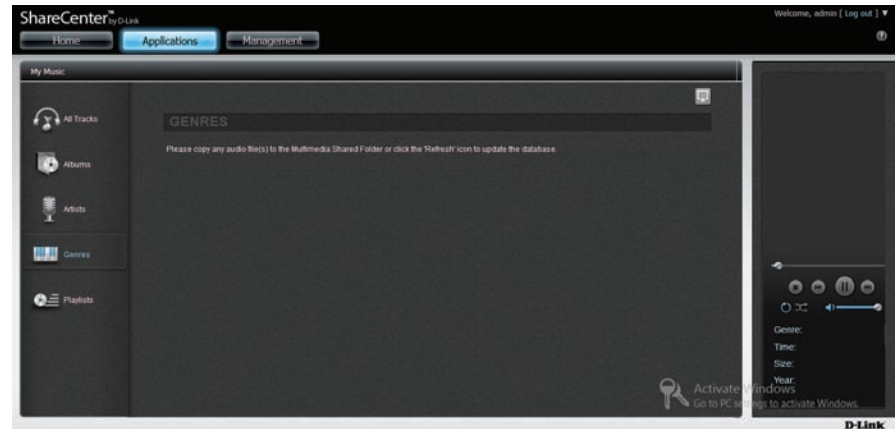


My Music - The Categories

Click **Playlists** to view all playlists and create new playlists on the DNS327L.

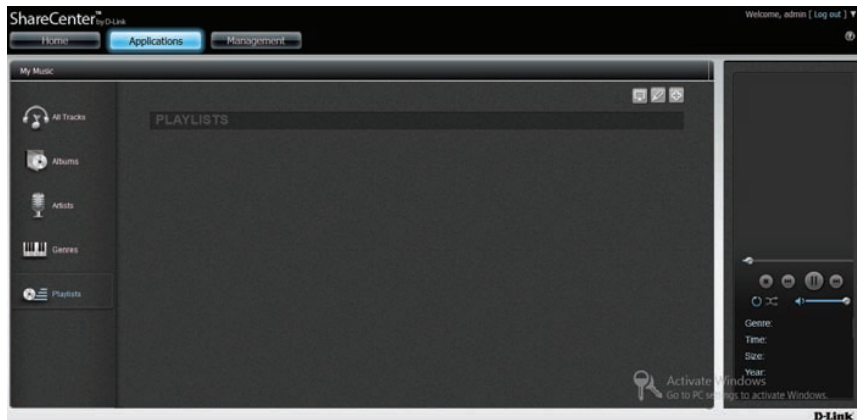


My Music - Music on your DNS-327L

Access your DNS-327L from your network. Click the NAS Volume directly. Copy music directly from your local drive to the MultiMedia Shared Folder of the DNS-327L. Make sure the files are only MP3 format. The NAS does not accept .flac

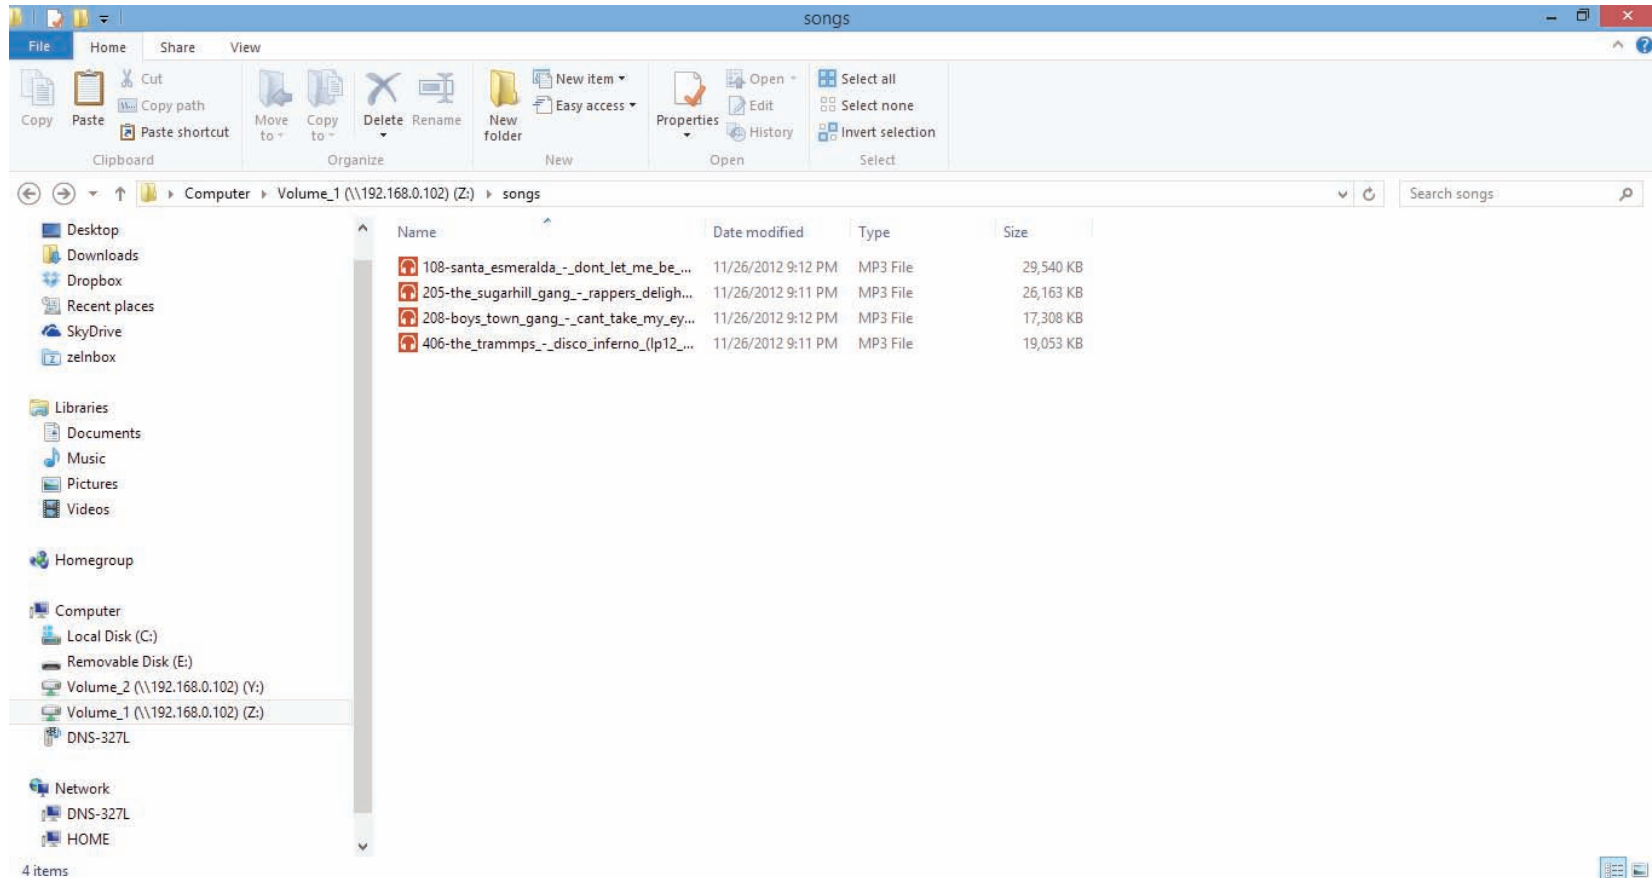


Section 4 - Configuration


View your **All Tracks** window and click the **Refresh** button.

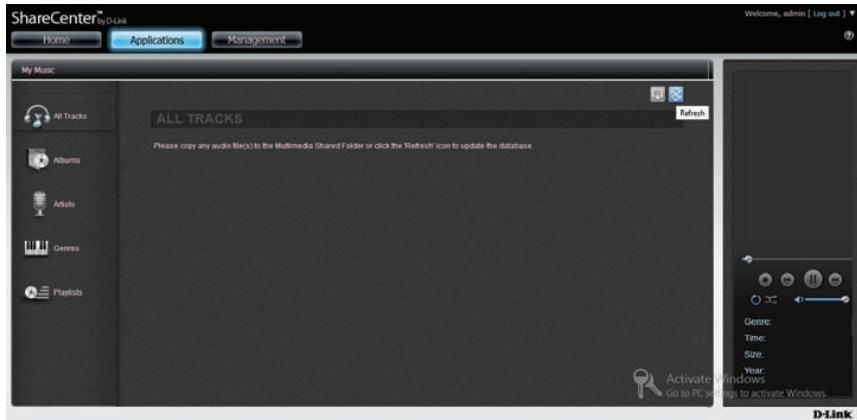


The Playlist is populated with the same tracks you copied and pasted to before.

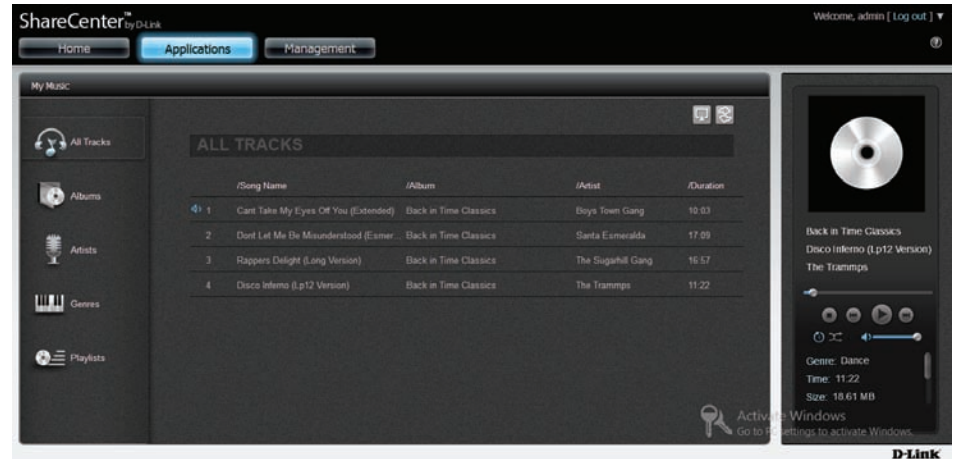

Click **Albums** to view it in album view.

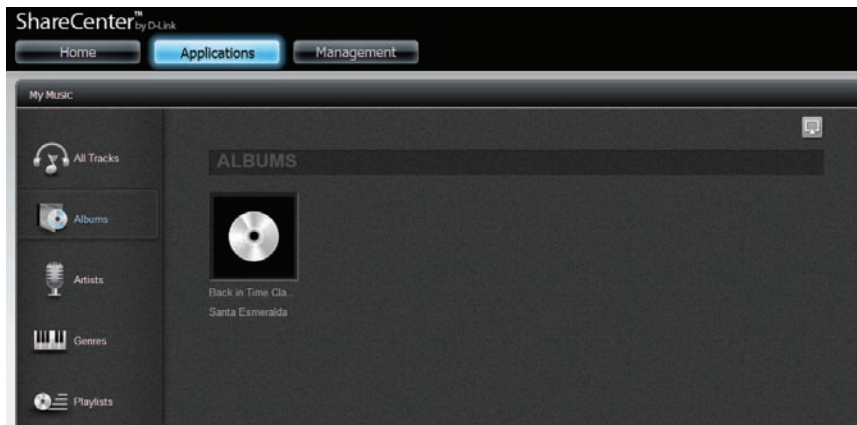

Click **Artists** to view all the artists in your playlist.

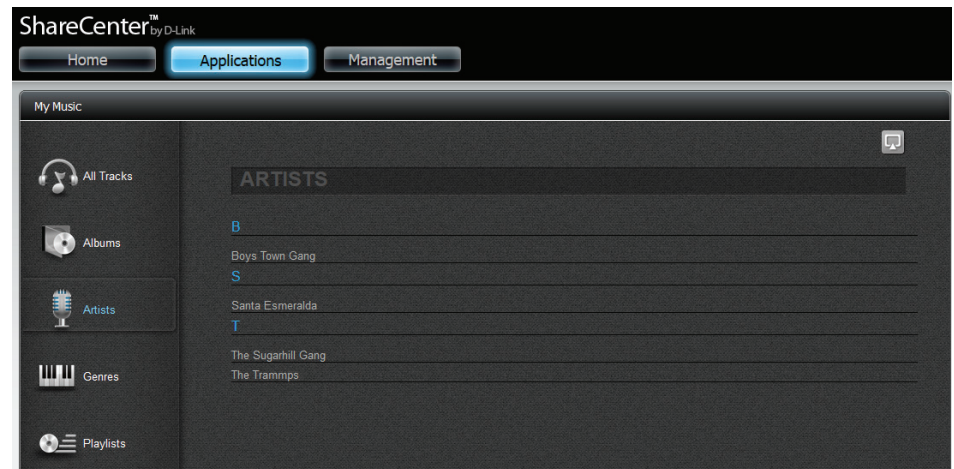

My Music - Playback Music on an Apple device

Click the Apple Device, the ShareCenter will connect to the Apple Device on the Network. A message will pop-up after connecting successfully. Press **Yes** to continue. Now you can enjoy your music on your Apple Device.

ShareCenter™ by D-Link

Welcome, admin [Log out]

Local NAS
Apple TV ✓

My Music

ALL TRACKS

The connection was a success.

Yes

	/Song Name			/Duration
1	Yesterday Once More	Carpenters Collection	Carpenters	3:58
2	Superstar	Carpenters Collection	Carpenters	3:45
3	Big Big World	Big Big World	Emilia	3:25
4	Baby	My World 2.0	Justin Bieber;	3:36
5	I Dreamed a Dream	The Complete Symphonic Recordi...	Les Miserables	4:14
6	§¶¹²³-«»±œ	Others	Others	4:01
7	§¶¹²³-¼½[®°Ö	Others	Others	4:44
8	§¶¹²³- n°Bøl\$u~O°Bøl	Others	Others	4:19

First Prev 1 2 Next Last 1 - 50 of 78 1 Go

Genre: N/A
Time: 3:14
Size: 5.46 MB
Year: 2003

D-Link

My Music - The Player

The Player is a remote control-like UI that displays the Album art (only available if its in the music folder), the Genre, Artist name(s) and disk.

The Player menu consists of:

A Scrollable music timeline

A Stop button

A rewind button

A Play/Pause button


A Fast Forward button

A Replay button

A Shuffle button

A Volume control


You can also view the Genre, duration of the song, size of the file.

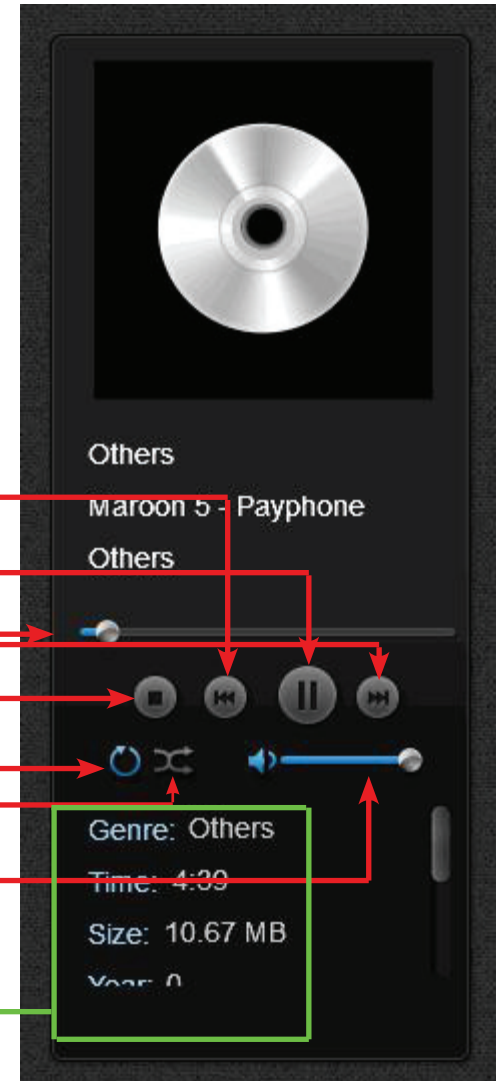


My Music - Create a Playlist

Click the **Playlist** tab at the bottom of **My Music**.


Click the **Plus** icon at the top right-hand corner.

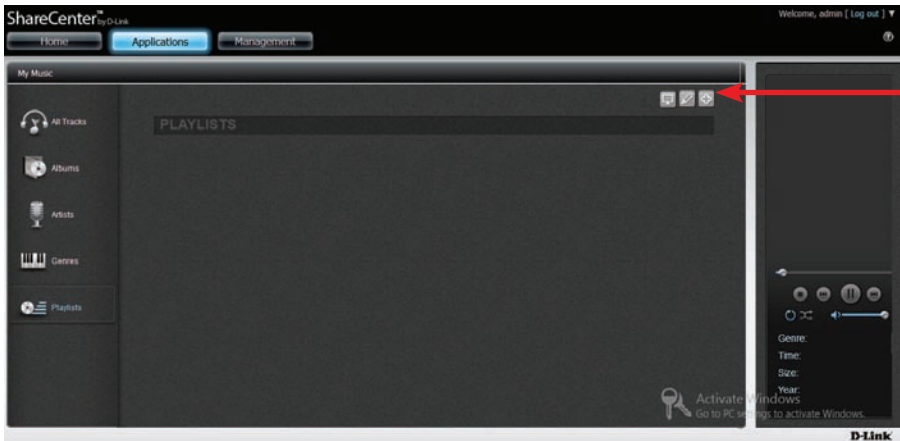

The **Create a New Playlist** menu appears. Enter a name under **Playlist Name** and click the songs you wish to add to the playlist. Click **Apply** to add them to the list.

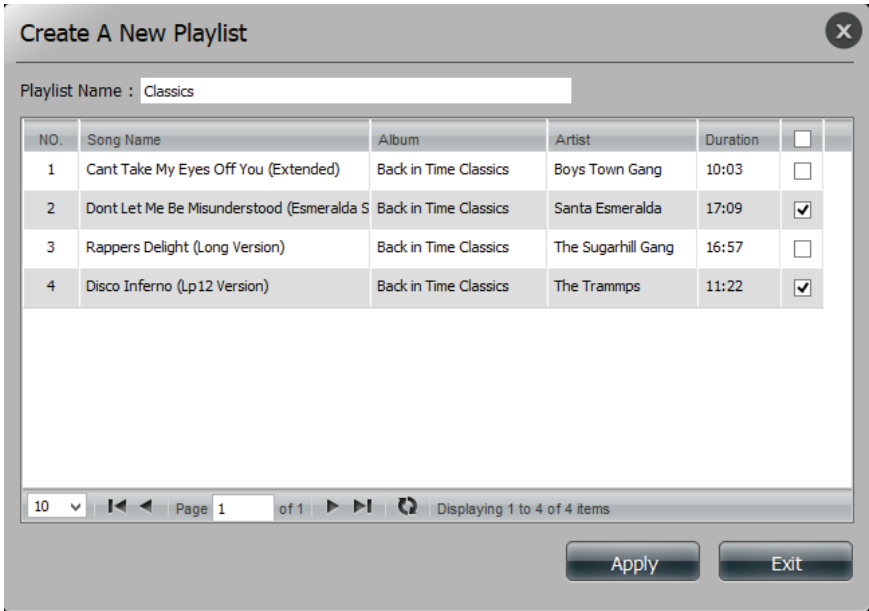


The new playlist is created under the **Playlists** window.

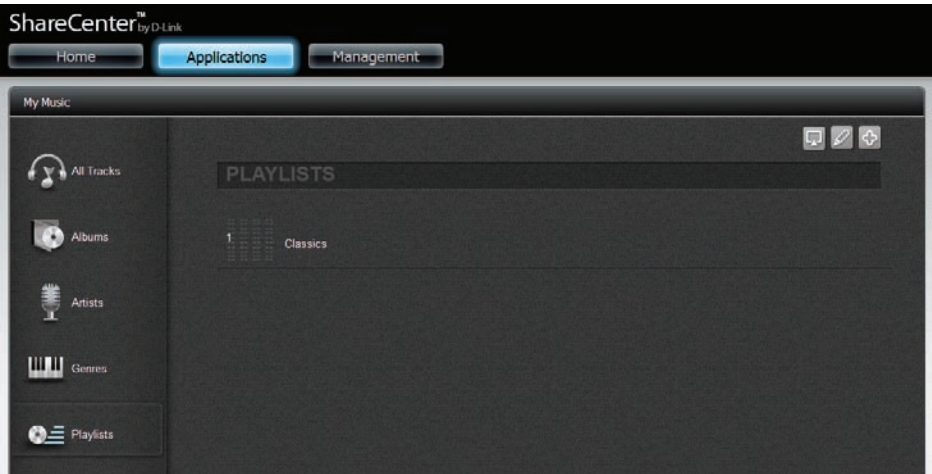


Section 4 - Configuration

Click on the **Playlist** to view its contents. Click the **Back** icon to return to the **Playlist** menu or click the **Edit** icon to add delete songs from the playlist.

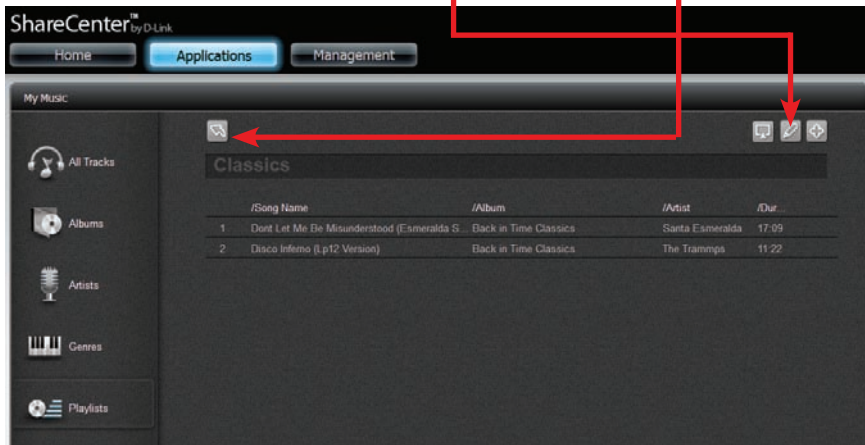


Once you are in **Edit** mode, click the track you want to delete and click the **Delete** icon.

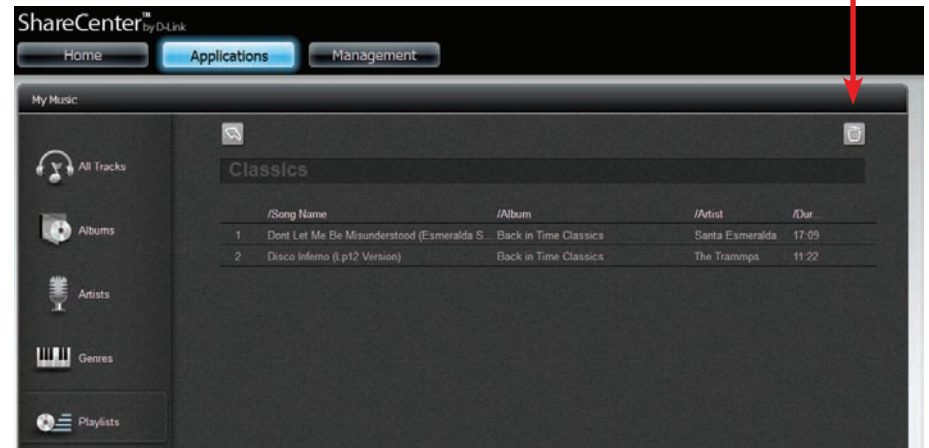


My Surveillance

The **My Surveillance** app works with D-Link Cloud cameras. It manages your IP cameras from the NAS and allows all streaming data to be saved to the NAS. **My Surveillance** can connect up to 4 cameras. Click the **My Surveillance** icon under the **My Folder** window in the **Home** tab. By default, **My Surveillance** is **disabled**. To **enable** it, right-click the icon and click enable. Right-clicking only applies to this app and icon.

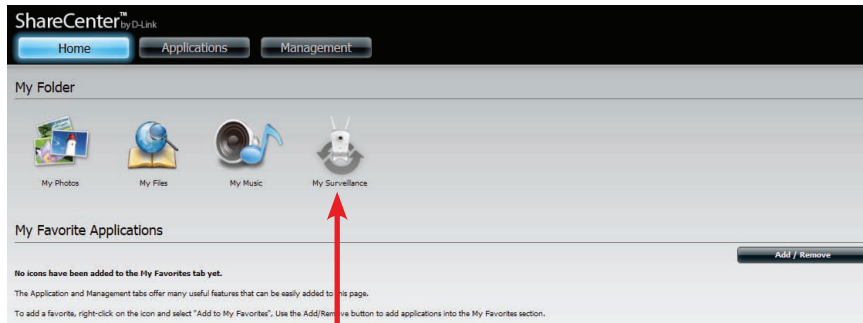


Disabled

Right-click to Enable

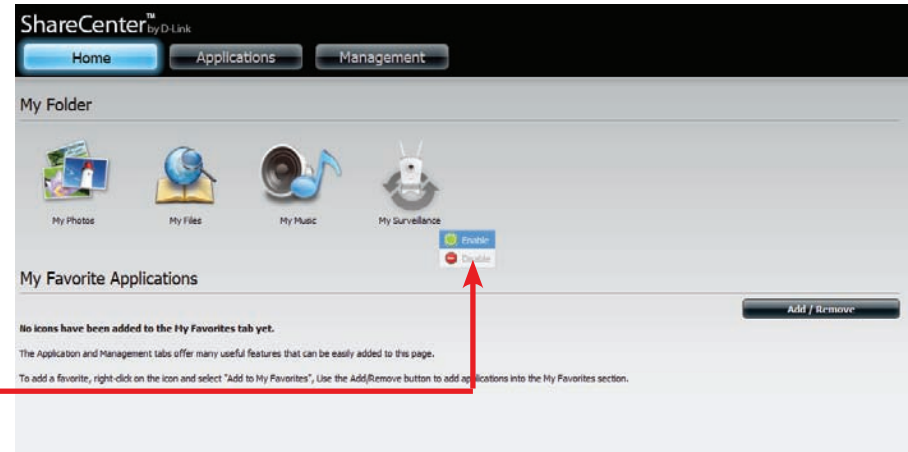

The **Blue** arrows indicate its enabled.

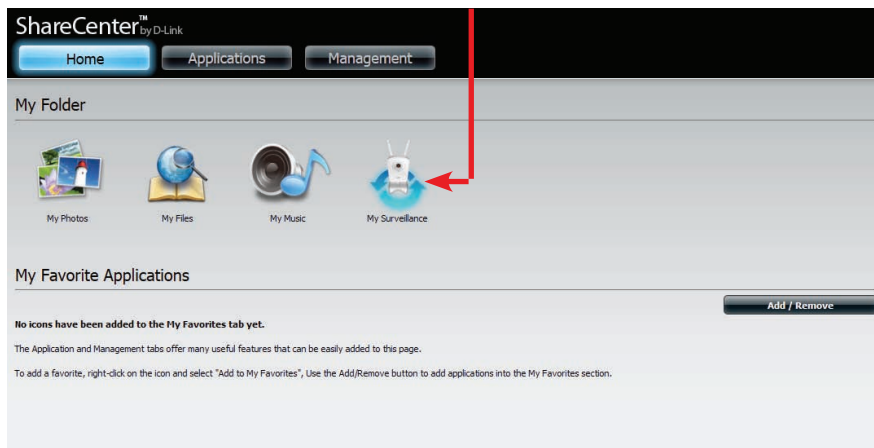


Please Note: My Surveillance is compatible with the following D-Link cameras:

DCS-930/930L, DCS-932/932L, DCS-1100/1100L, DCS-1130/1130L, DCS-5230/5230L, DCS-942L, DCS-2103/2130, DCS-2210/2230, DCS-5222L/5211L

More cameras will be supported in the future. Please visit your local D-Link support site, for an updated list of supported cameras.


Section 4 - Configuration

After you have enabled **My Surveillance**, it opens up in a new browser window. Before you can proceed, you want to make sure you have the correct browser plug-ins to view the streaming video. The browser prompts you to install the new plug-in. Click the plug-in advisory to continue.

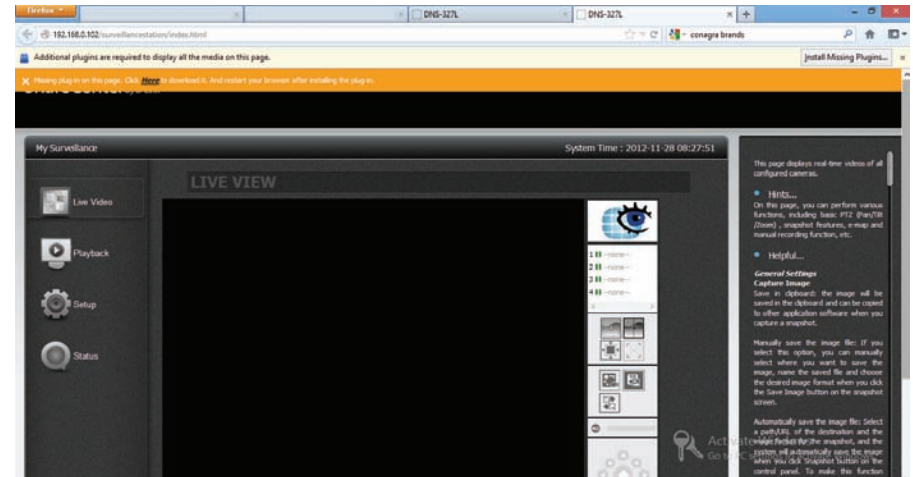


Note: My Surveillance supports the following web browsers:
Internet Explorer 8+
Mozilla Firefox 4+
Apple Safari 4+ (Windows)
Google Chrome 13+.

Click **Save File** to accept the **SurveillanceCenterRealInstall.msi** file.

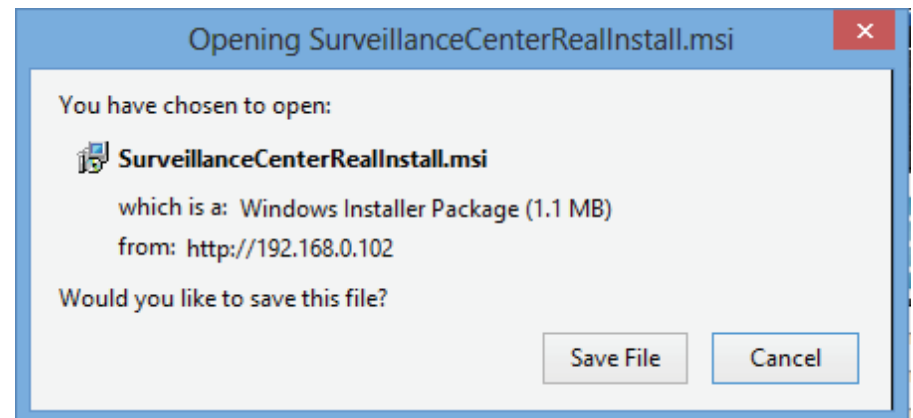


Section 4 - Configuration

Once the file is downloaded, **double-click** or **right-click**, select **Open** and install the program.

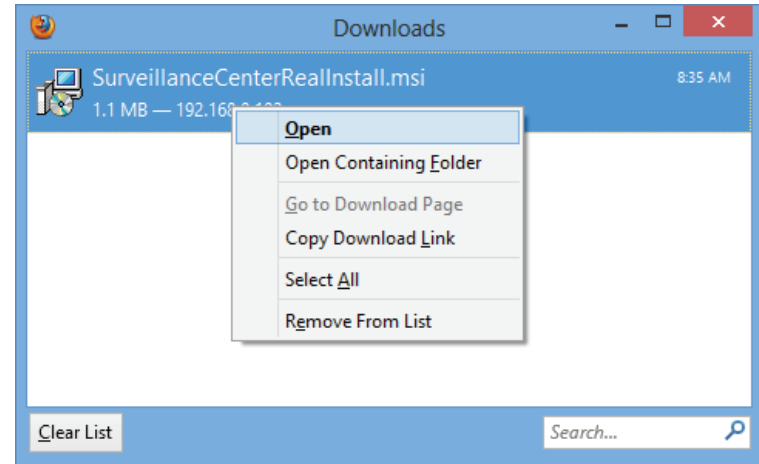

The **Surveillance Center Real Install** setup wizard begins.


Click **Next** to continue.

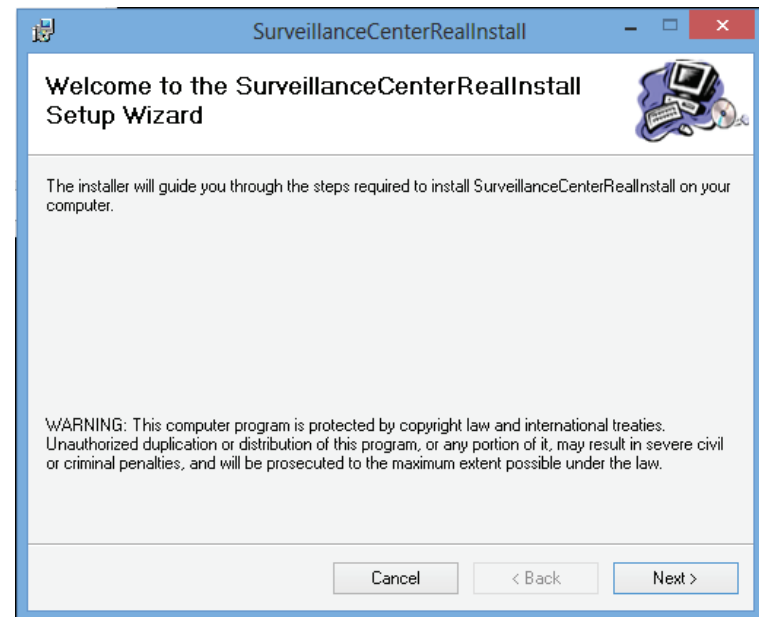

Section 4 - Configuration


Select an **Installation Folder** location.

Click **Next** to continue.

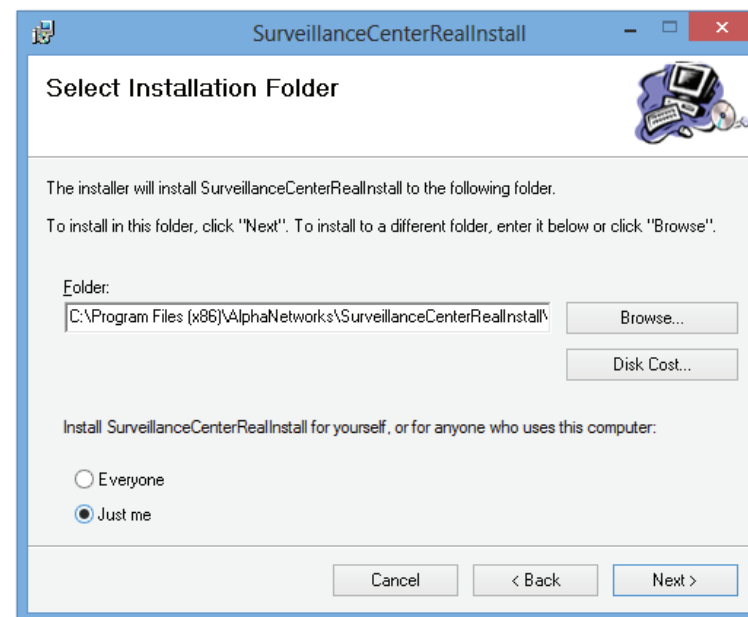

Confirm the **Installation** is complete.

Click **Next** to continue.

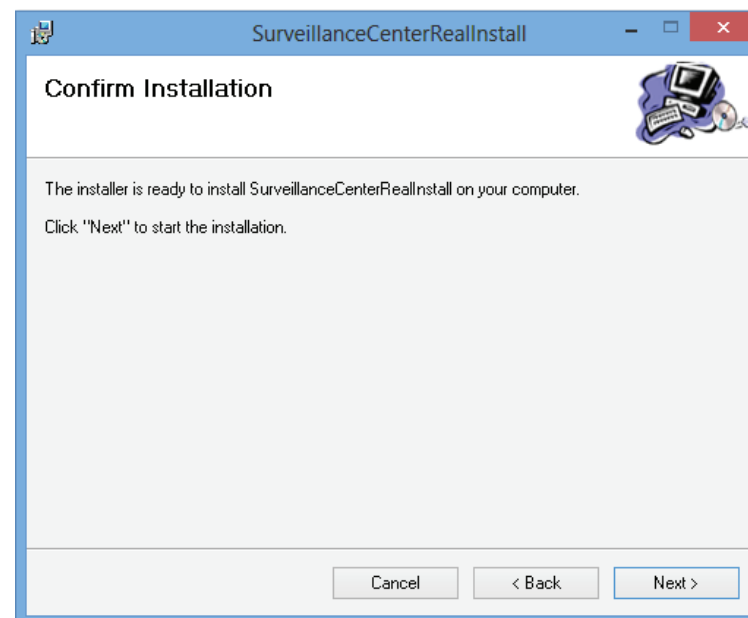


Section 4 - Configuration


The Installation is complete.

When you connect one of the supported cameras to the network, the My Surveillance software detects the camera automatically. The software is able to recognize the IP address, model number and bit rate speed

Click **Close** to continue.

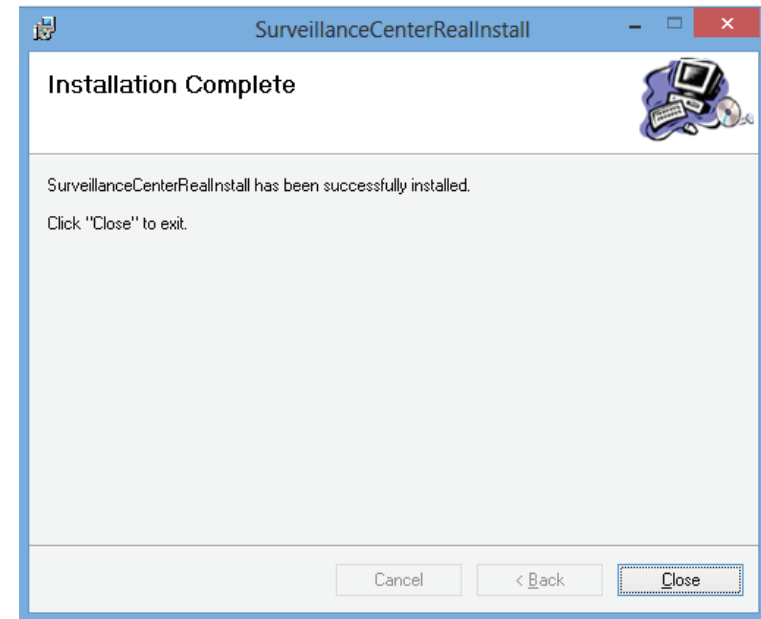


To view the **Surveillance** utility in a browser, open **Internet Explorer**. When you log in, you can view the **My Surveillance** icon under the **Home, My Folder** screen.

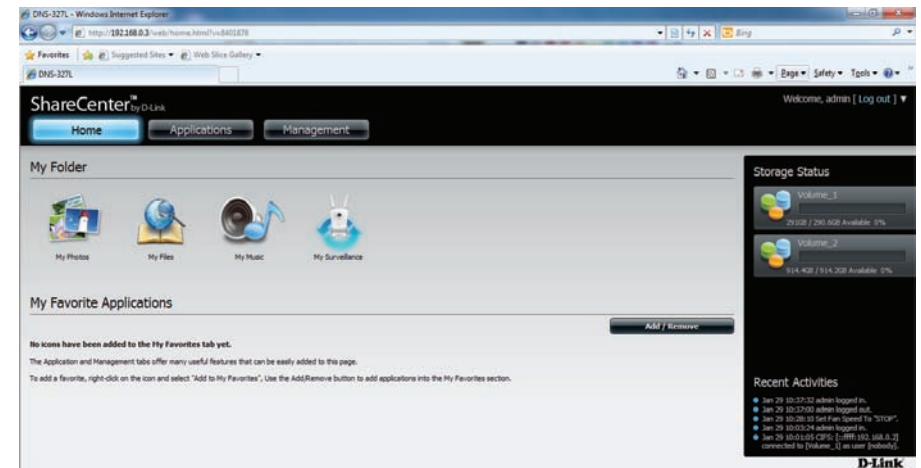


Section 4 - Configuration


Logging into My Surveillance for the first time using Internet Explorer, requires an add-on. The add-on pops up at the top of the browser.

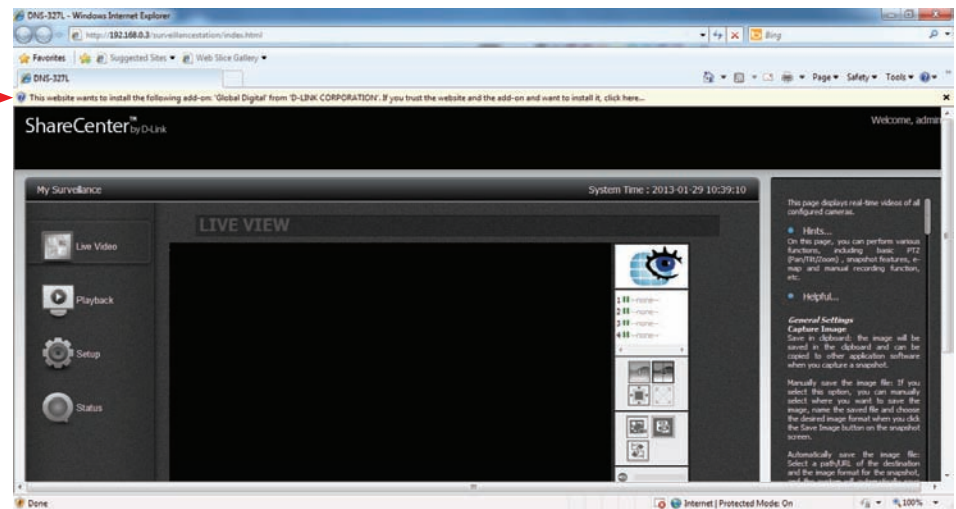


Click the pop up and click **Install This Add-on for All Users on This Computer.**

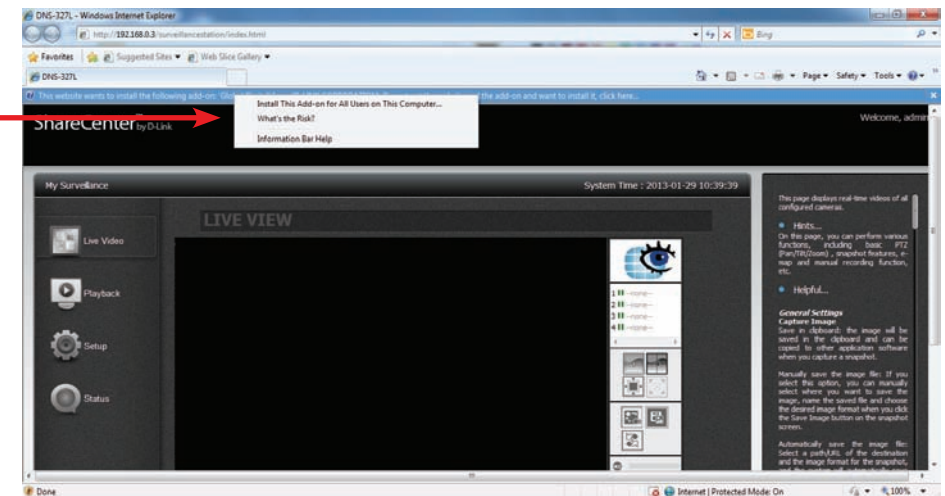

The **Global Digital, D-Link Corporation** add-on warning message pops up. Click **Yes** to confirm the installation.

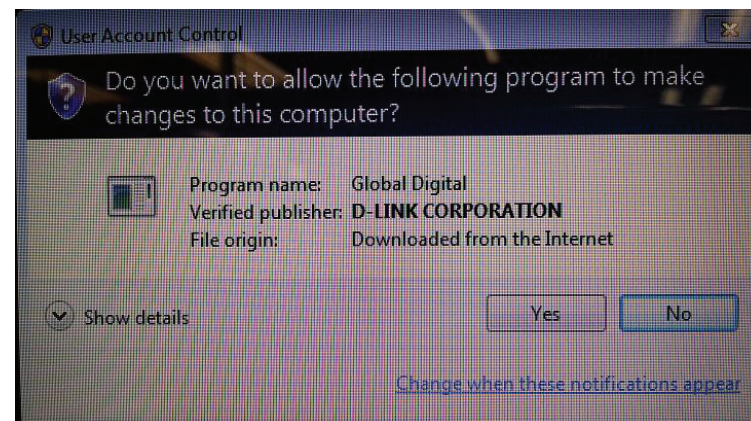

Once confirmed, Internet Explorer displays the live camera feed.

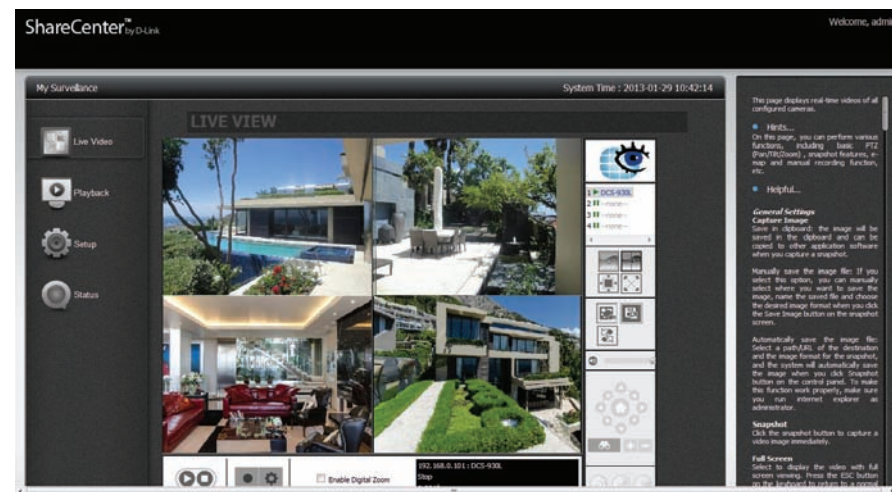


After the program is installed, the **Surveillance Center Camera Configuration** window automatic camera detection wizard searches for any known cameras. The program is launched by default and automatically when you access the Live Video Page.

A red notification appears if you do not have any detected cameras. Read the **Auto Install Camera** instructions to configure cameras for later use.

If you wish to disable autoinstall click the **Disable Autoinstall** button.

Click **Exit** to continue.


Please Note: The Auto Install Camera function will not work if you modify the password on the IP cameras.

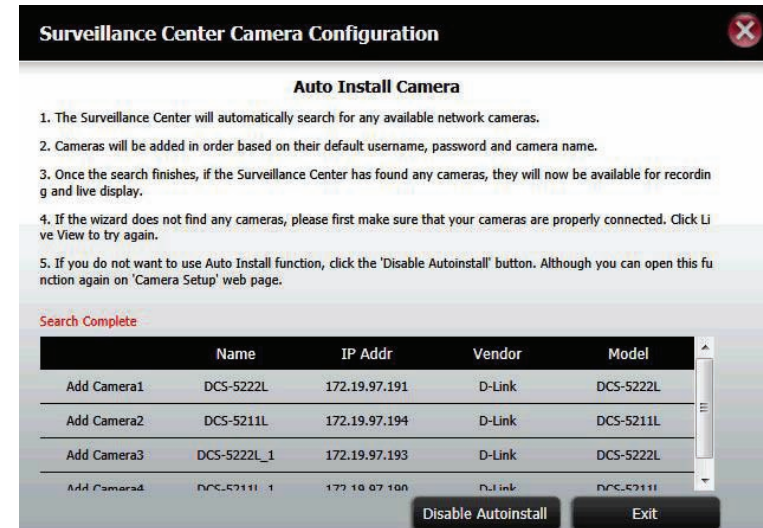

Section 4 - Configuration


Configuration is complete.

Click **Yes** to continue.

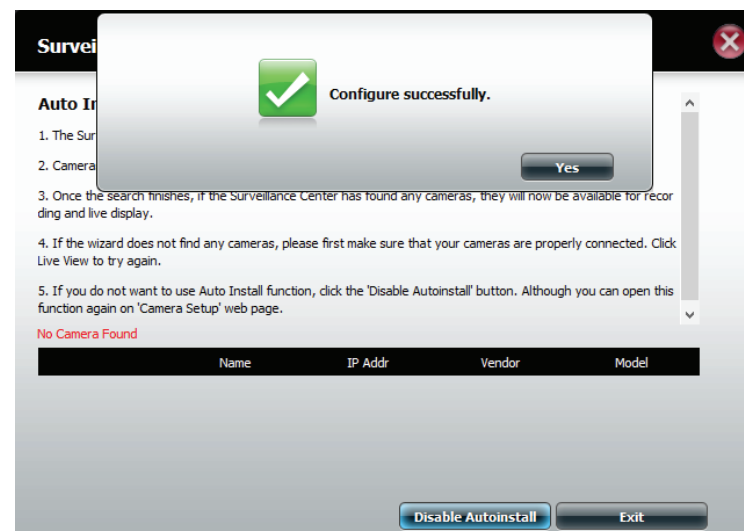

The browser now displays the **Live View**. However, if you do not have any cameras connected, the view finder will have no video stream to show.

Close the browser tab to exit.

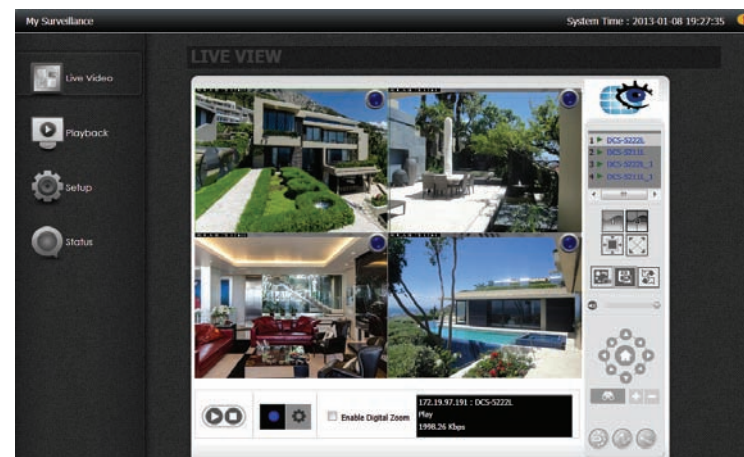

My Surveillance


The My Surveillance interface is based on the surveillance and camera features. Normal operation is also dependable upon the camera functionality. Let's take a closer look at the interface.

Click on this link to get a **Live View** of your camera(s)

Click on this link to enter **Setup** mode

Click on this link to access **Playback**.


Click on this link to check the **Status** of the **My Surveillance Application**.

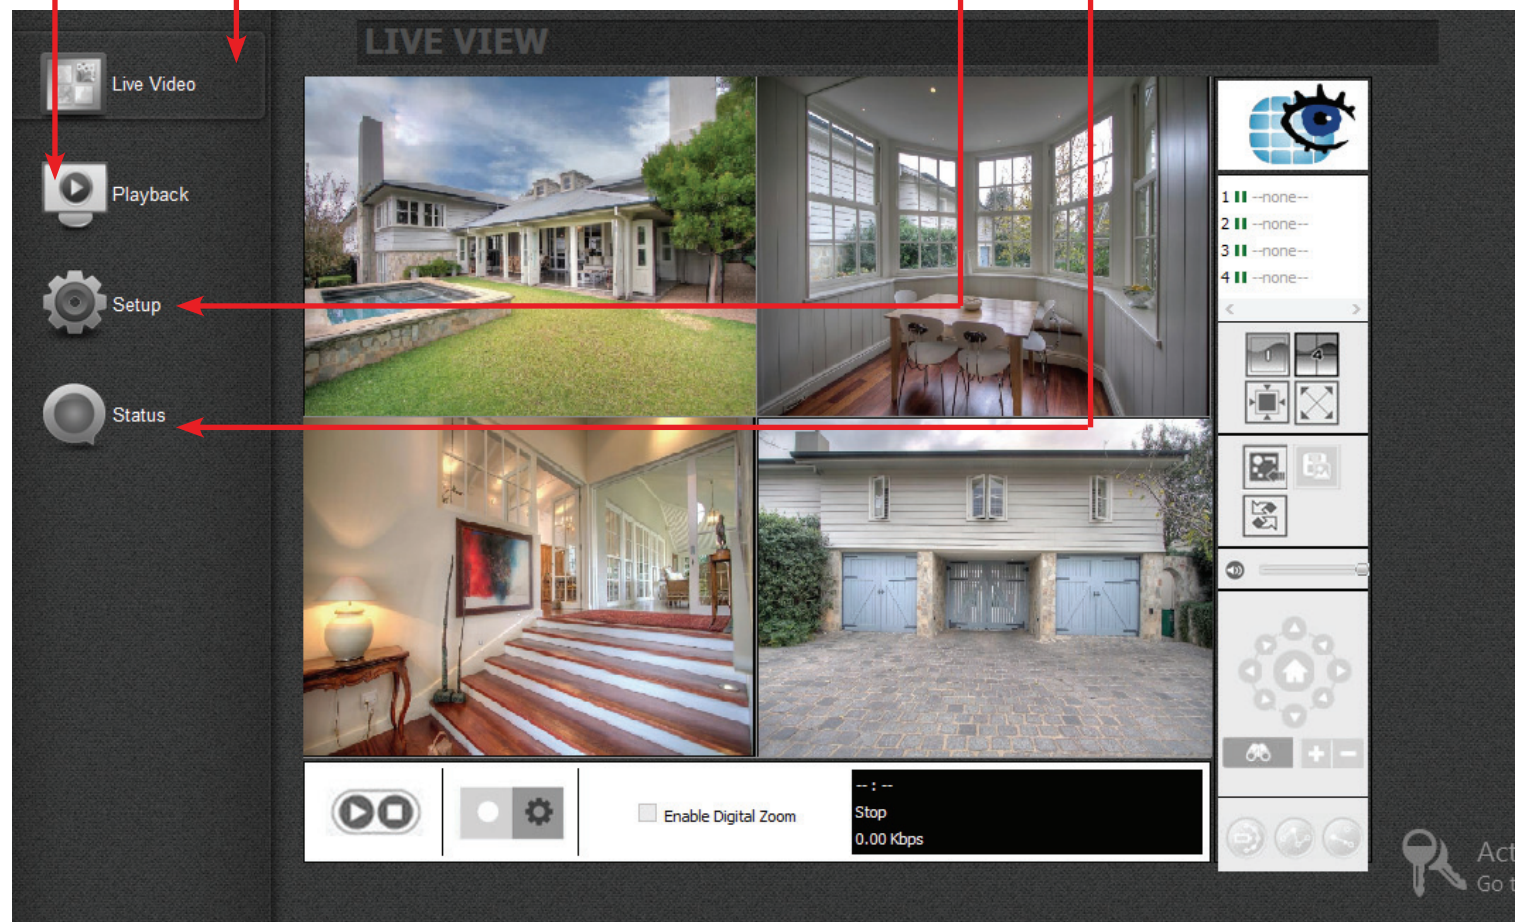

My Surveillance - Live View

Note: See descriptions later in this Manual.

Live Video

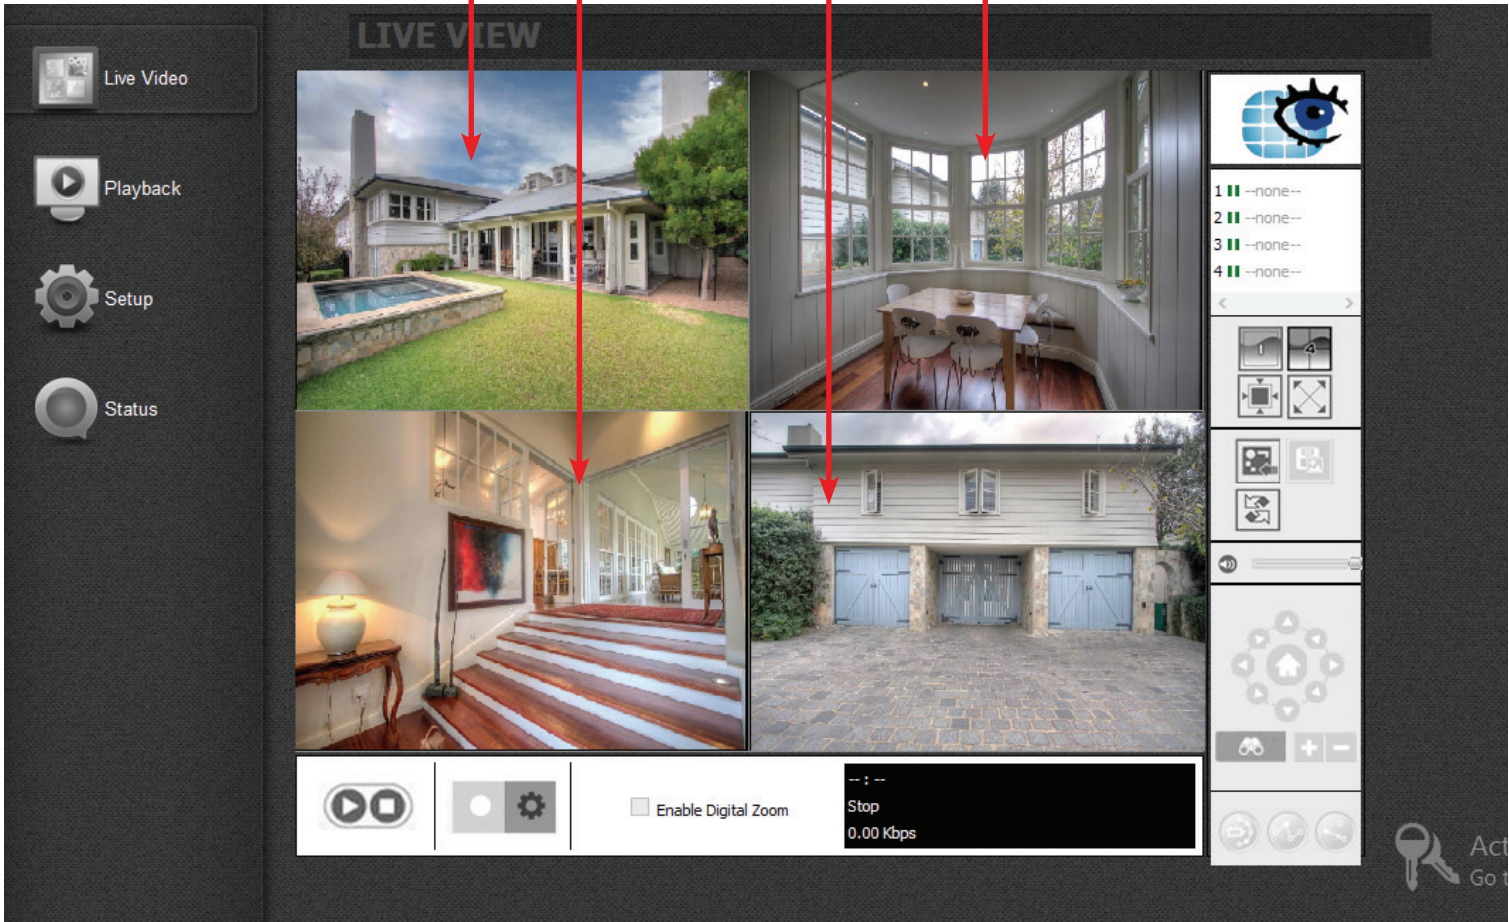

My Surveillance - Live View

The screenshot displays the 'My Surveillance - Live View' interface. On the left, a sidebar contains icons for 'Live Video', 'Playback', 'Setup', and 'Status'. The main area shows four camera feeds: a backyard with a pool, an interior dining room, a staircase, and a garage. A right-hand control panel includes a 'My Surveillance' logo, a list of cameras (all labeled '--none--'), view mode icons, E-map, Snapshot, and Auto Scan buttons, a Mute and Volume Slider, Pan-Tilt-Zoom Control buttons, Zoom buttons, and a Patrol Mode for PTZ Cameras button. At the bottom, there are buttons for 'Stop/Start Live Camera View', 'Manual Recording & General Settings Tab', a 'Digital Zoom' checkbox, and a 'Camera details' section showing 'Stop' and '0.00 Kbps'.

My Surveillance logo

Camera Name & IP Address

Camera View Mode

E-map, Snapshot, and Auto Scan

Mute and Volume Slider

Pan-Tilt-Zoom Control

Zoom

Patrol Mode for PTZ Cameras

Stop/Start Live Camera View

Manual Recording & General Settings Tab

Digital Zoom

Camera details

Note: See descriptions later in this Manual.


My Surveillance - Live View

COMPONENT	DESCRIPTION
Live Video	View the live video of cameras connected to the DNS-327L via the network
Stop/Start	To Stop or Start Camera Live View
Manual Recording & General Settings Tab	Click the "Manual Recording" to Stop or Start camera Manual Recording Click the "gear cog" to setup basic configuration
Digital Zoom	Enable this on individual cameras
Camera Details	This screen indicates, the currently selected camera's IP address, name, status and bit rate
Patrol Mode	Displays the current Patrol Radius, sets Preset Point, and directs you to the Preset Point.
Pan-Tilt-Zoom Control	Used for cameras that support Pan-Tilt-Zoom controls. You can use these controls to control the direction of the camera.
Zoom	Click the + or - button to zoom in or zoom out. This option is only available when enabling Digital Zoom
Mute and Volume Slider	The mute button can be used to mute the sound from the camera and the slider bar used to adjust the volume.
E-map	Use the E-map button to toggle between the live camera view and the E-map display
Snapshot	Take a live snapshot of the live streaming video
Auto Scan	Activate auto scan to rotate the channels on the screen display
View as 1x1	View one screen at a time
View as 2x2	View four cameras at a time
Actual Size	The bottom lets you view cameras with the actual size
Full Screen	View a live video stream of any camera in full screen mode, press Escape to return to the user interface.
Camera Name and IP Address	These icons show the status of each camera and allows you to double-click to toggle the status of each camera.

My Surveillance - Live Camera Panel Explained II



Use these buttons to stop or start the operation of the selected camera.

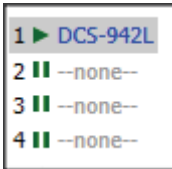

These icons show the status of each camera and allow you to double-click to toggle the status of each camera.



These icons allow you to switch the camera view to display a single camera view or up to 4 network cameras. The bottom two icons let you display the actual image size and make the image full screen on your monitor. In full screen mode, press Escape to return to the user interface.



The mute button can be used to mute the sound from the camera and the slider bar to adjust the volume.



 
For cameras that support Pan-Tilt-Zoom control, you can use these controls to direction of the camera.




Use the E-map button to toggle between the live camera view and the E-map display. The snapshot button can be used to take a snapshot of the current frame on the selected camera.



These buttons allow you to begin a manual recording or access the camera settings.

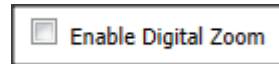

Enables digital zoom on the selected camera.

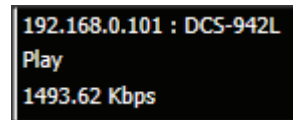
 



Displays the currently selected camera's IP address, name, status and bit rate.



Displays the current Patrol Radius, sets Preset Point, and directs you to the Preset Point.

My Surveillance - Single Camera Live Video Mode

Click  this button to enter **Single Camera Mode**. The viewing angle expands to cover all other camera real estate. Click  this button to return to **Split Camera Mode**.





2011/01/02 03:10:44 YAKT DCS-942L

1 ► DCS-942L
2 ► DCS-942L_1
3 || --none--
4 || --none--

192.168.0.100 : DCS-942L_1
Play
2517.56 Kbps

Enable Digital Zoom


My Surveillance - Full Screen Live Video Mode

Click  this button to enter **Full Screen Camera Mode**. The viewing angle expands to cover the entire screen. Click this button  to return to **Split Camera Mode**. This can be done in **Split Level Mode** and **Single Camera Mode**.




My Surveillance - Digital Zoom Video Mode

When **Enable Digital Zoom** is checked, the software allows you to zoom in and out on an area of the image. You can place the mouse pointer in the bottom right corner of the image to click and drag the box around to view different parts of the video. You can also click directly on the part of the main image you want to focus on. Use the mouse wheel to control the level of zoom.

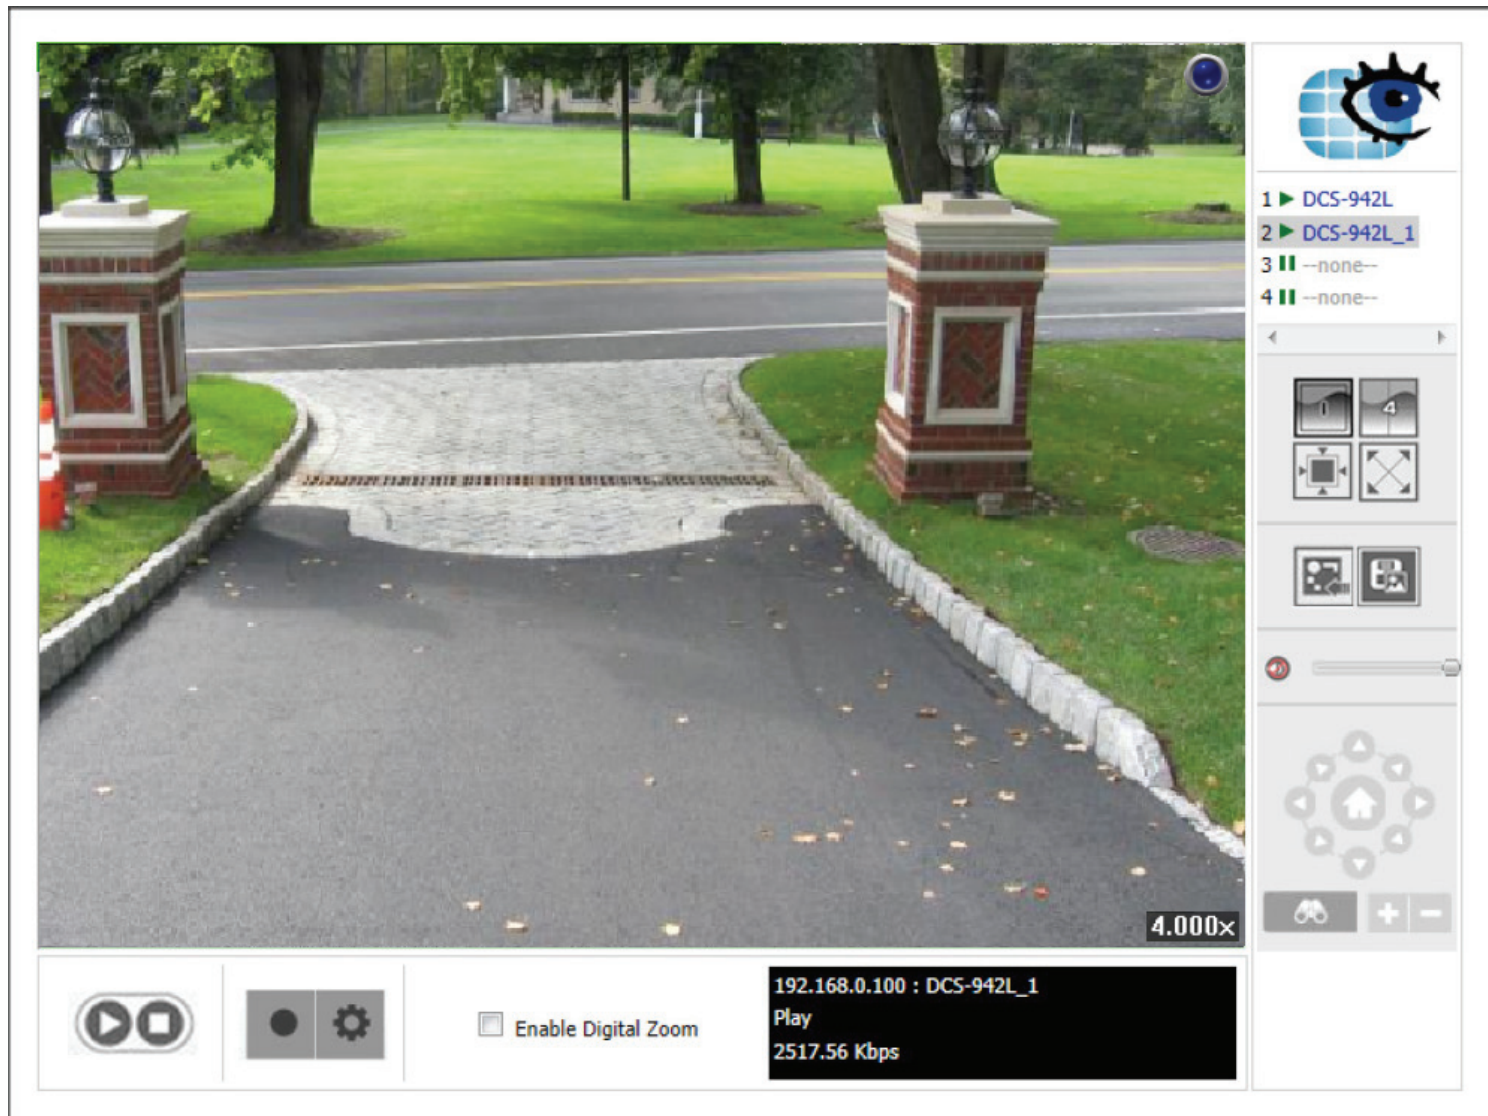


My Surveillance - E-Map View

You can access the E-map from the Live Video screen by clicking the  button. Note: you must have installed e-map JPEG files in order to use this feature. Click the E-map Upload button to upload images into the database. When you click this button




E-map Upload

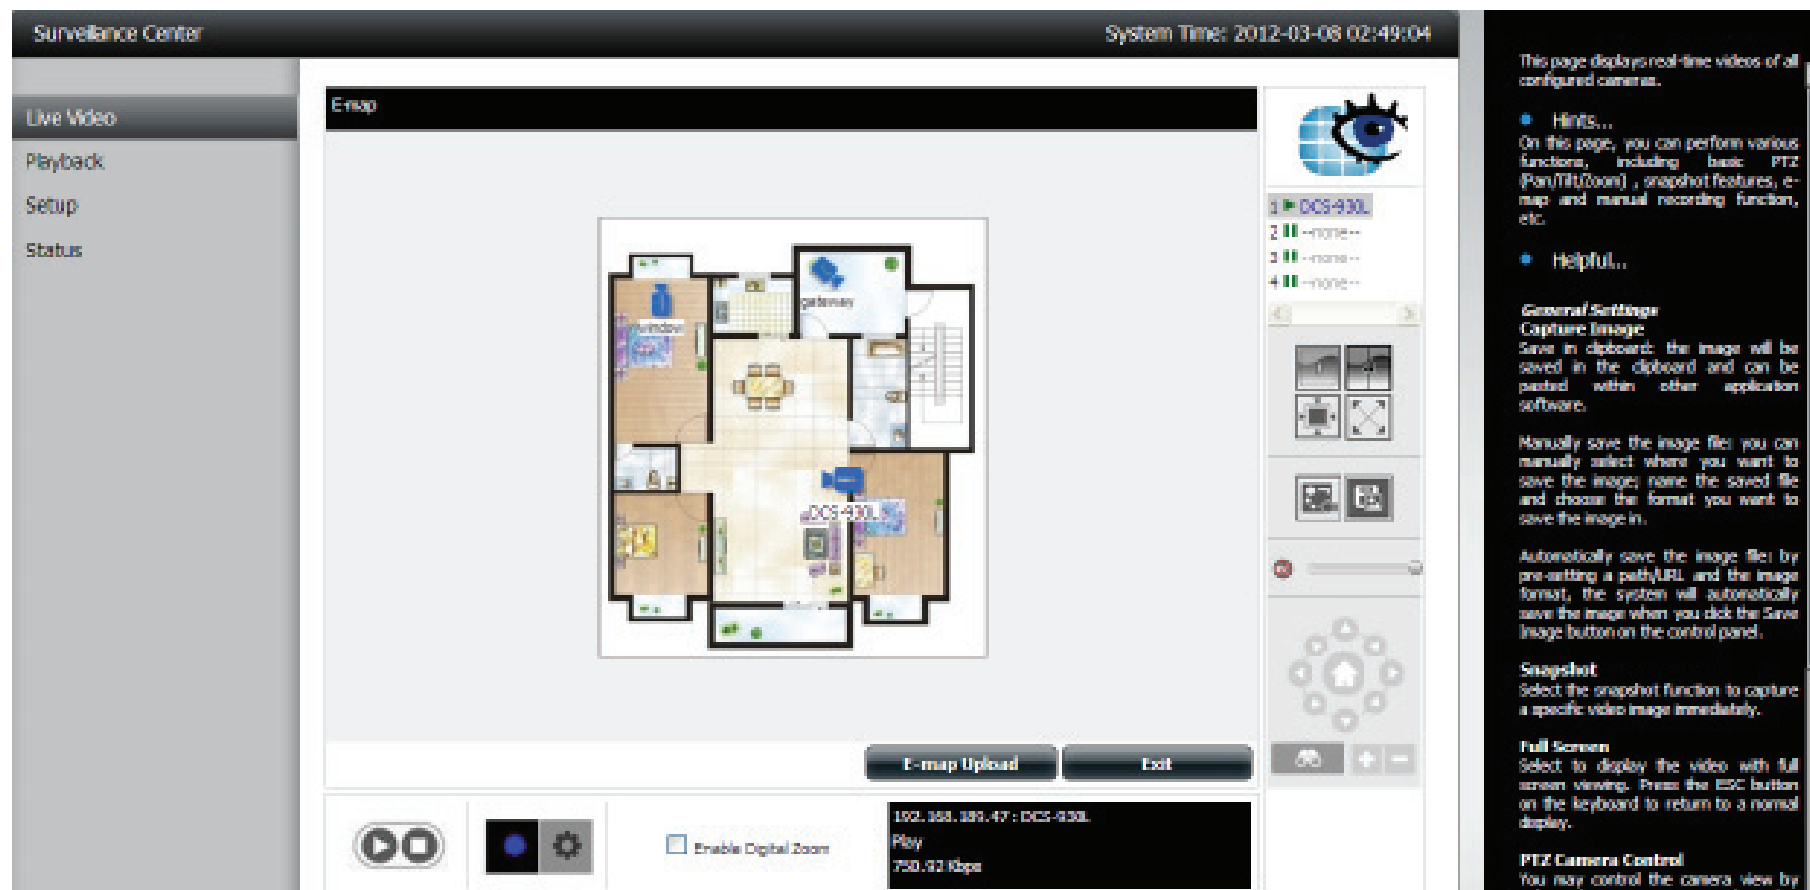
you are directed to the E-map Upload window.



The screenshot displays the 'Surveillance Center' interface in 'E-map' view. The top status bar indicates the system time as 2012-03-08 02:49:04. The left sidebar shows navigation options: 'Live Video' (selected), 'Playback', 'Setup', and 'Status'. The main display area shows a floor plan with camera icons and labels, including 'window', 'garage', and 'DCS-930L'. The right sidebar contains a camera list with four entries, all set to 'none--', and a set of control buttons including 'E-map Upload' and 'Exit'. The bottom status bar shows the IP address '192.168.189.47 : DCS-930L', the status 'Play', and the bitrate '730.92 Kbps'. A help panel on the far right provides instructions for various functions like 'Hints...', 'Helpful...', 'General Settings', 'Capture Image', 'Manually save the image files', 'Automatically save the image files', 'Snapshot', 'Full Screen', and 'PTZ Camera Control'.


My Surveillance - Snapshot View

You can access **Snapshot** from the Live Video screen by clicking the  button. This takes a snapshot of your current live screen. You can copy this image to the clipboard by clicking the **Copy to Clipboard** button  or you can save the image to disk by clicking the **Save Image** button.  Click the **Close** button to exit this mode.

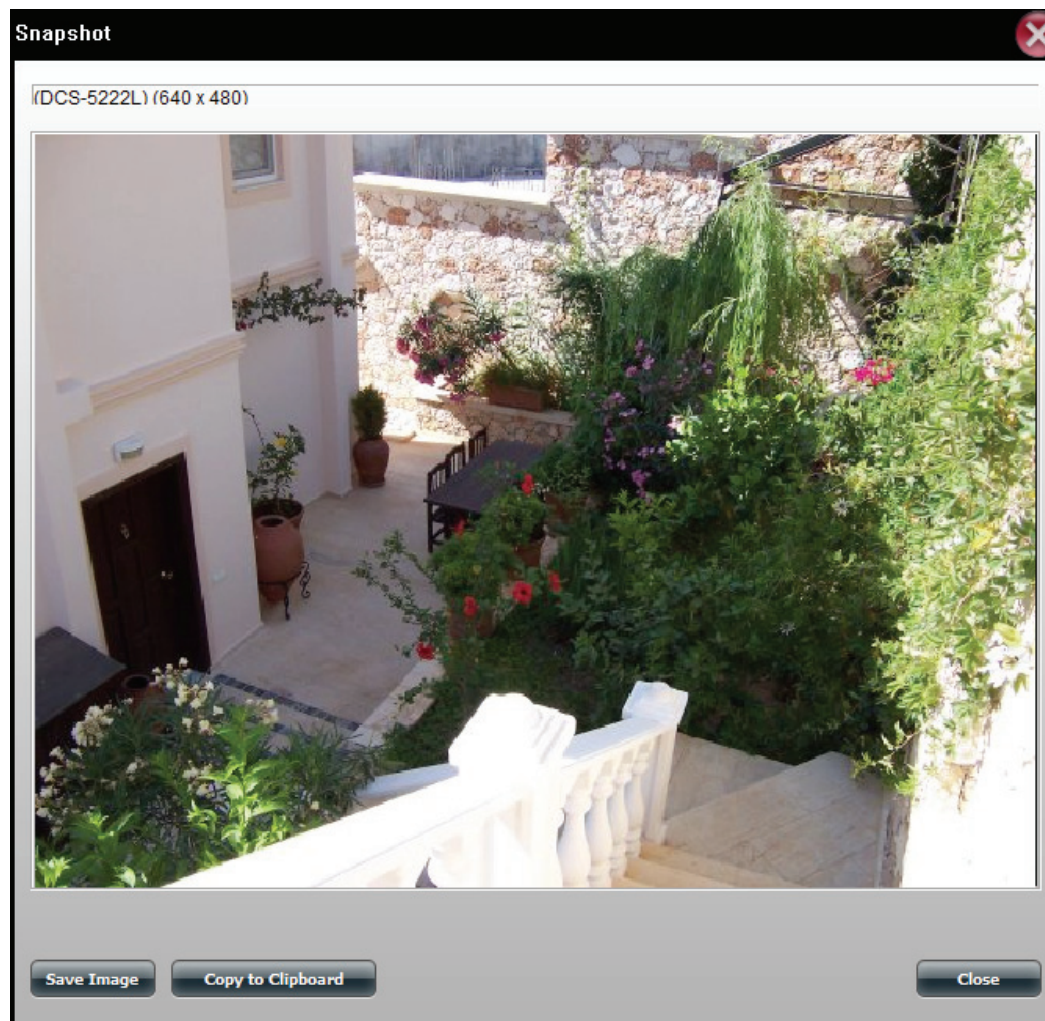


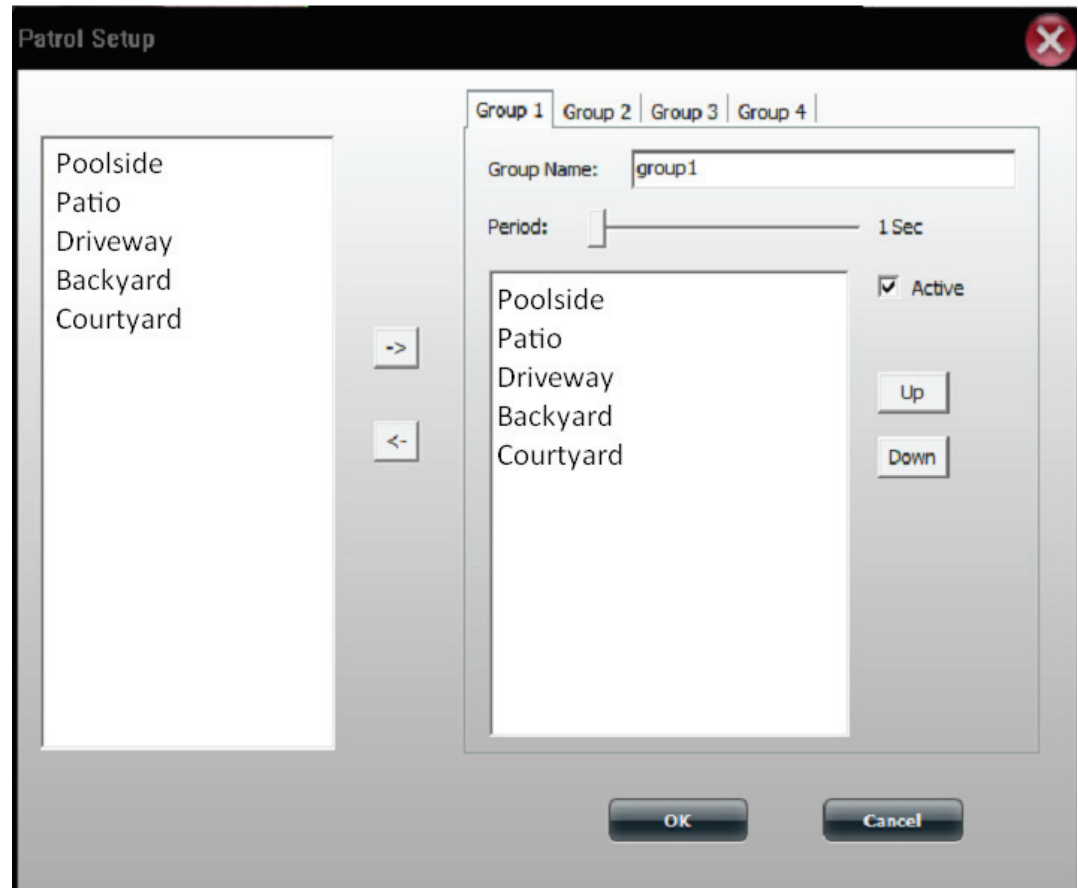
My Surveillance - Motion Detection Camera Mode

If the camera is configured to record when motion is detected, the camera icon on the E-map will change to red when an alarm is sounded or motion is detected, as shown below. When motion is detected or an alarm is triggered, click on the red camera icon on the e-map to play the recorded event.

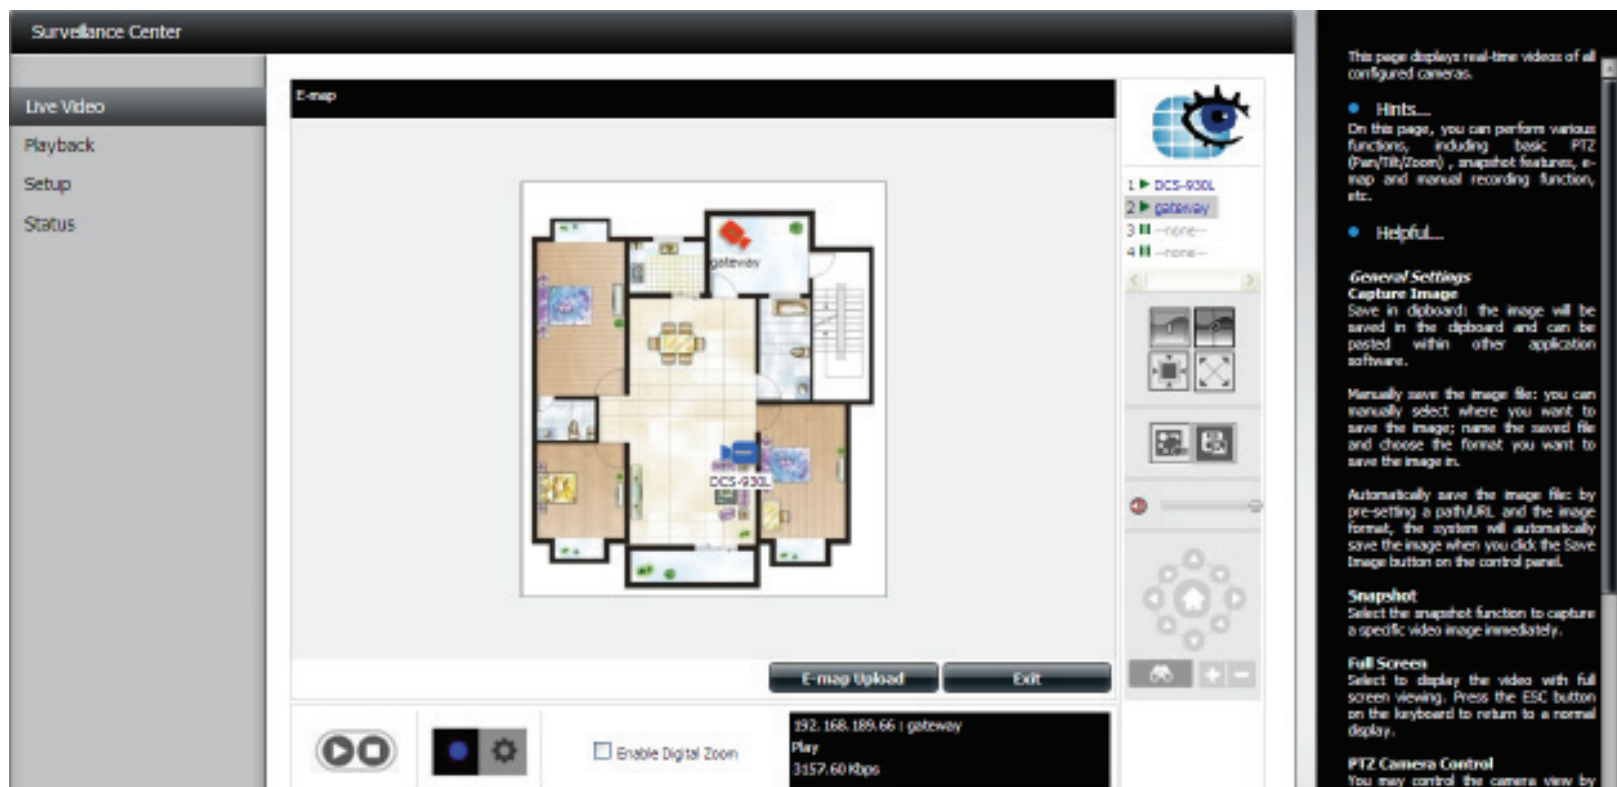

My Surveillance - Configuring Patrol Settings

Patrol Settings are dependable upon the camera you are using. The Surveillance Center works with the following D-Link PTZ cameras: • DCS-5230/5230L, and DCS-5222L/5211L (Patrol Once). Click the Patrol icon  to configure the Patrol settings. Scroll down and click **Set Patrol**. The **Patrol Setup** window pops up.



My Surveillance - Configuring Patrol Preset Points


Click the **Preset Point** icon, create a new **Preset Point**, click **OK**.



A drop-down list appears. Select **Clear All** to clear the list or select **Add Preset Point** to This brings up the **PTZ Preset Point** box. Enter a **Preset Name** and


A screenshot of a dialog box titled 'PTZ Preset Point'. It has a close button (X) in the top right corner. Inside the dialog, there is a text field labeled 'Preset Name:' with the placeholder text 'Please enter presetname'. Below the text field is a checkbox labeled 'Delete Preset Point'. At the bottom right of the dialog are two buttons: 'OK' and 'Cancel'.

To edit the **Presets** click the **Preset Point** icon and select whichever preset you wish to delete.

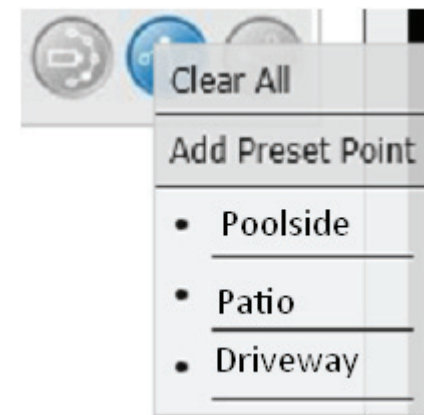

My Surveillance - Viewing Preset Points

Click the **Go to Preset Point** icon.  This icon directs the camera to the designated points.

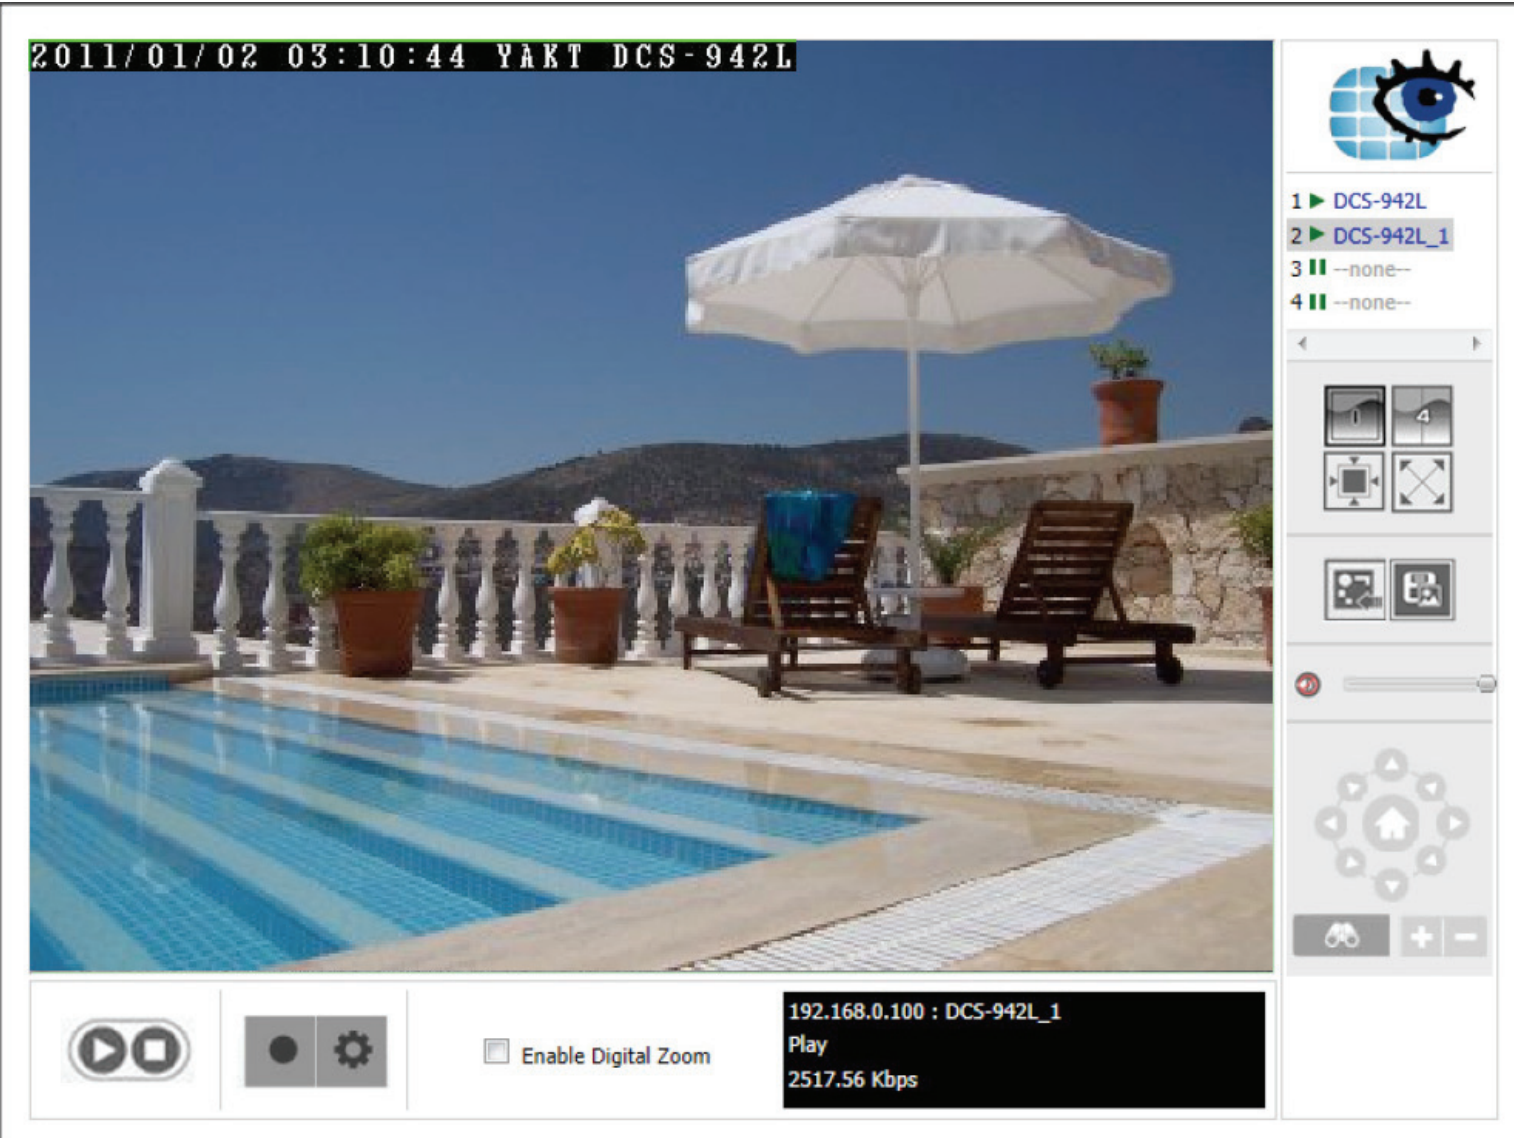

2011/01/02 03:10:44 YAKT DCS-942L

1 ► DCS-942L
2 ► DCS-942L_1
3 || --none--
4 || --none--

192.168.0.100 : DCS-942L_1
Play
2517.56 Kbps

Enable Digital Zoom

My Surveillance - Live Video/Playback Settings

You can access this window from the Live Video window by clicking the Settings (cog) button.

Record Display

The **Record Display** function is only available when accessed from the Playback screen. The Record Display options allow you to modify what is displayed when using the Open Recording button on the Playback screen, a calendar month highlighting dates with recordings or a simple list of folders with recordings.

Capture Image

This allows you to select where to save the snapshots taken using the snapshot button on the live video screen and the format they are stored in.

Click **OK** when you are done to ensure settings are saved.



My Surveillance - OSD Settings

You can access this window from the Live Video window by clicking the Settings button and then selecting the OSD tab at the top. The On Screen Display Settings window allows you to adjust settings for the display of an overlay of information on the video.

If you want to enable this overlay, click **Enable camera OSD**.


You can adjust the font type, size and color in the Foreground box. There are also options to make the text bold and choosing the edge option will apply the selected color to the text.

In the background section you can select a color and the level of transparency.

The information box allows you to select the information to display. You may display the camera name, camera number, the date and time. There are several date and time formats to select on and this may be done by using the drop down menus.

If you have made changes and want to revert back to the default settings, click the **Default** button at the bottom.

Click **OK** when you are done to save your settings.

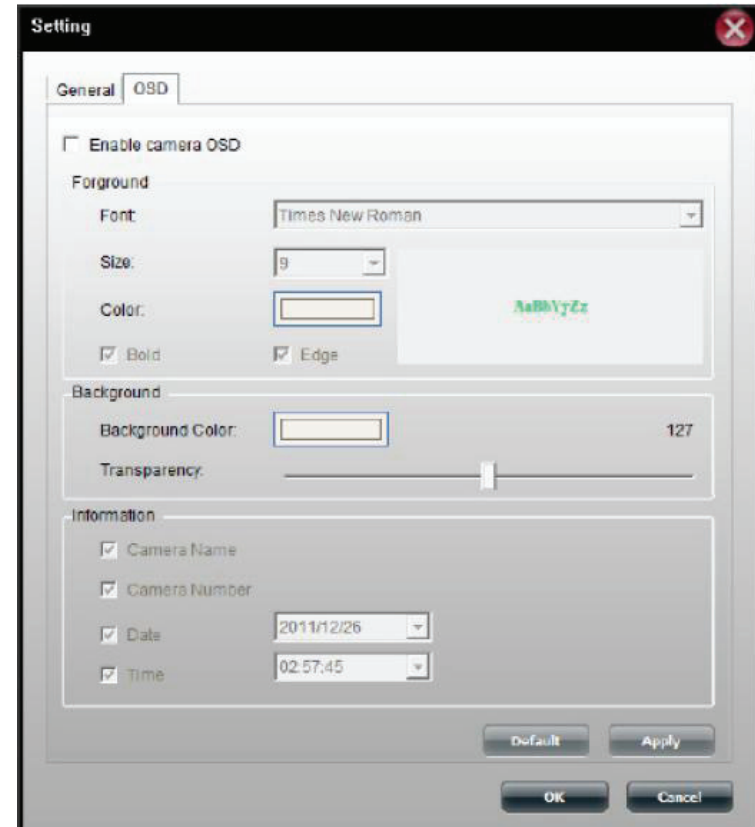

My Surveillance - Playback



Note: See descriptions later in this Manual.

My Surveillance - Playback

COMPONENT	DESCRIPTION
Recorded Video Playback	View the recorded video here
Recording Controls	Control the playback video from here (clockwise): Play/Stop/Pause/ Previous Second/Previous Minute/Next Minute/ Next Second / Speed Up/Speed Down / Zoom In/Zoom Out
Camera Details	This area displays the time and date of the recording, the playback speed and the current state of playback.
Enable Digital Zoom	Enable this on individual cameras
Mute and Volume Slider	The mute button can be used to mute the sound from the recorded video and the slider bar to adjust the volume
Settings	This configures general setting
Snapshot	Take a live snapshot of the recorded video
Synchronous Playback	This syncs four video channels to playback at the same time
View as 1x1	View one screen at a time
View as 2x2	View four cameras at a time
Actual Size	The bottom lets you view cameras with the actual size
Full Screen	View a live video stream of any camera in full scream mode and press Escape to return to the user interface.
Open Record	Open the recorded video information

My Surveillance - Playback

The Playback screen is where you can view recordings from the cameras.



Use this button to open a video recording. See next page for more information.



These icons allow you to switch the camera view to display a single camera view or up to 4 network cameras. The bottom two icons let you display the actual image size and make the image full screen on your monitor. In full screen mode, press Escape to return to the user interface.




The Settings button takes you to the previously described Settings screen allowing you to adjust display and image capture settings. The snapshot button can be used to take a snapshot of the current frame on the selected camera.



The mute button can be used to mute the sound from the camera and the slider bar to adjust the volume.



Enables digital zoom on the selected camera.

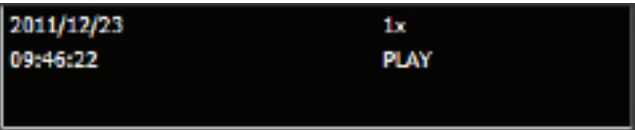

The playback controls are used to play, stop, pause or skip through video recordings. You can also adjust the playback speed and zoom levels.


This area displays the time and date of the recording, the playback speed and the current state of playback.



My Surveillance - Recording Information

When you click the Open Recording button on the Playback screen, you are presented with this screen. This screen allows you to see at a glance, the recordings that have been made with the connected cameras.

Depending on your settings, you may see a calendar month or list of recordings by date at the top left of the screen. Use this calendar or list to select a recording. In calendar view, days highlighted in green are ones which have a recording.

In calendar view, clicking the  icon selects the current date, allowing you to browse through calendar months and quickly return to the current date.

The **Playback List** drop down menu provides various options:

Current Recording: This shows camera videos recorded by the Surveillance Center module.


Historic Recording: This shows camera recordings backed up by the user. The number of entries below this will depend on how many recordings you have backed up.

The Date Time Period section allows you to narrow down the time and date for which to show recordings.

The timeline at the bottom of the window plots the selected day and displays the different types of recordings and the times they were recorded. The recordings are all color-coded to differentiate between the types. You can play any of these recordings by simply clicking on the point on the timeline that you want to play. Use the two checkboxes at the bottom of the window to toggle whether to show events and motion detection on the graph.

Click the **Backup** button at the bottom of the window to go to the **Backup Setup** screen described on page 15 where you can backup the selected recording. Click the **Play** button at the bottom of the window to play the selected recording on the main playback screen.

Note: You can backup or play up to 4 selected recordings at the same time.

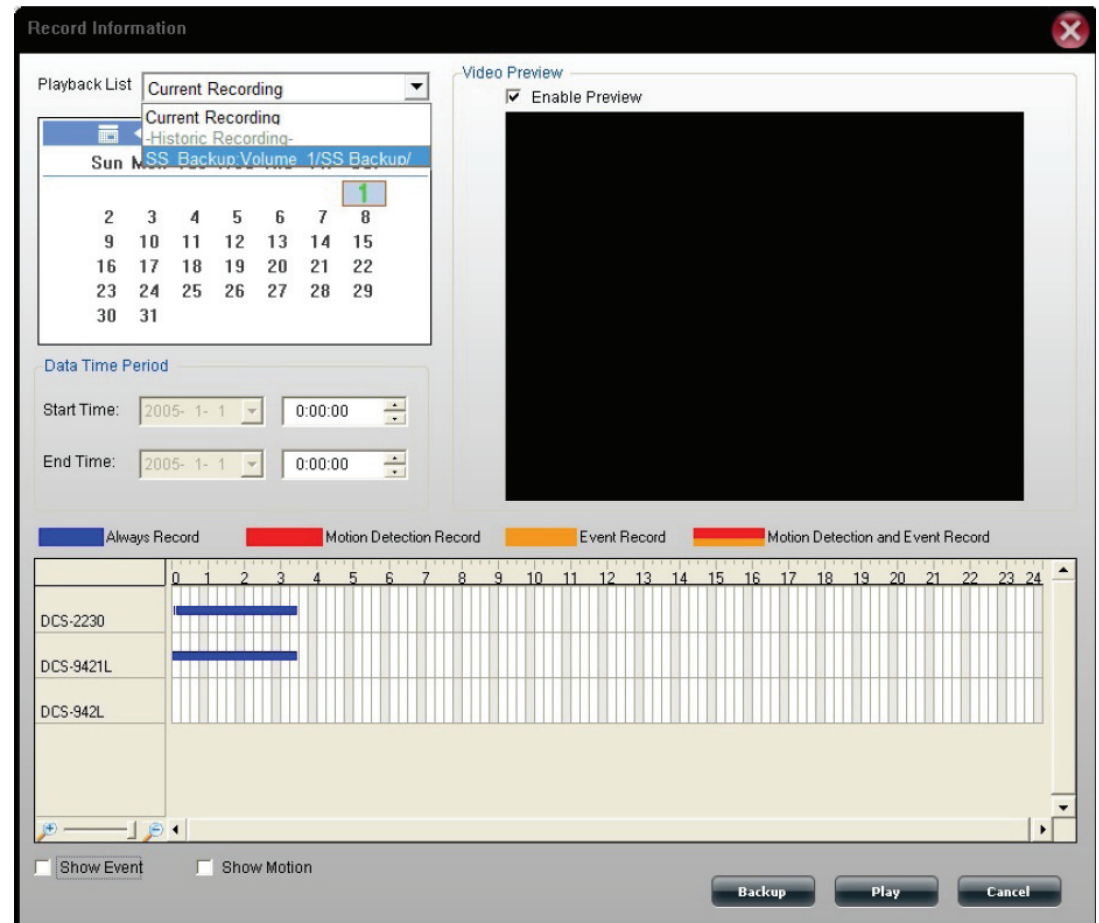

My Surveillance - Setup



Note: See descriptions later in this Manual.

My Surveillance - Setup - Camera Setup

Once you click Setup, Camera Setup is the first screen to configure. On the left side are the sub-menus while on the right are the configurable options. Camera Setup is divided into four sections. Wizard, Camera List, Camera Search, and Auto Install. Let's take a look at Wizard first.

My Surveillance System Time : 2012-11-28 15:04:12

CAMERA SETUP

Wizard

Add a camera with wizard.

[Run Wizard](#)

Camera List

index	name	address	port	vendor	model	delete
1	--none--		80	none	none	
2	--none--		80	none	none	
3	--none--		80	none	none	
4	--none--		80	none	none	

[Save Settings](#) [Don't Save Settings](#)

Camera Search

[Search](#)

Select	IP Addr	Vendor	Model	MAC
--------	---------	--------	-------	-----

Auto Install

☐ Enable Auto Install


[Save Settings](#) [Don't Save Settings](#)

Activat Go to PC

Click **Run Wizard**.


The **Camera Setup Wizard** introduction configuration box appears.

Click **Next** to continue.

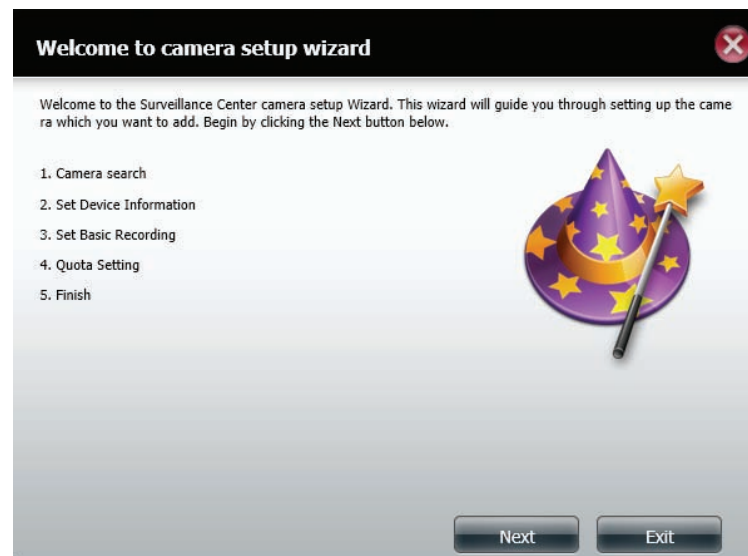

The **Wizard** searches for your camera. Make sure you have connected your camera to the router or you have enabled **DHCP** on your router to detect your camera.

You may attempt to skip this process using the **Skip** button. However, once you do this, you will be unable to detect your camera.

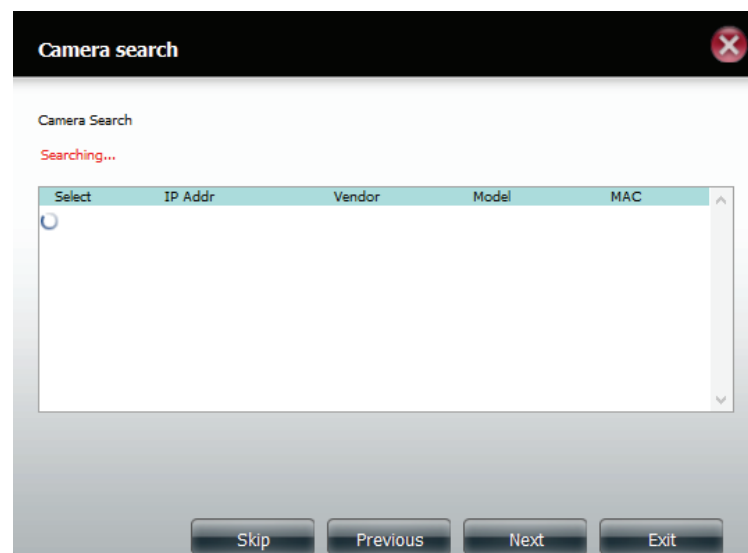

Section 4 - Configuration

The next screen appears blank if the **camera wizard** was unable to find your camera.

Device information

Name

Address

port

Username

Password

Vendor

Video Format

Model

admin

D-Link

MJPEG

--none--

Clear

Test Camera

Previous

Next

Exit

If you have setup your camera properly, the **camera wizard** should have detected your camera. The camera then appears in the **Search** box.

Camera search

Camera Search

Search complete

Select	IP Addr	Vendor	Model	MAC
<input type="radio"/>	192.168.0.101	D-Link	DCS-930L	00-FF-FF-09-30-02


Skip

Previous

Next

Exit

Select the camera and click **Next**.

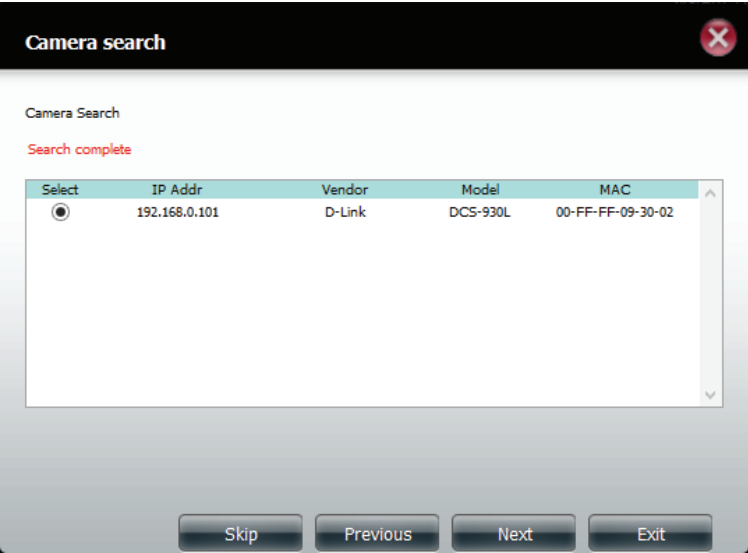

As previously indicated, if you haven't setup your camera on the network then the **Camera Wizard** will not be able to detect your **IP Camera**. However, if you have, the **Device Information** window is automatically populated with your device information.


Click the **Test Camera** button to view streaming video from the connected camera.



Section 4 - Configuration

Under **Basic Recording**, select your recording method. In this instance, we have chosen, **Record By Schedule**. **Drag and Drop** your mouse over the selected area you wish to record. The recorded area is highlighted in blue. Click Motion Detection Record if you wish.

Click **Next** to continue.

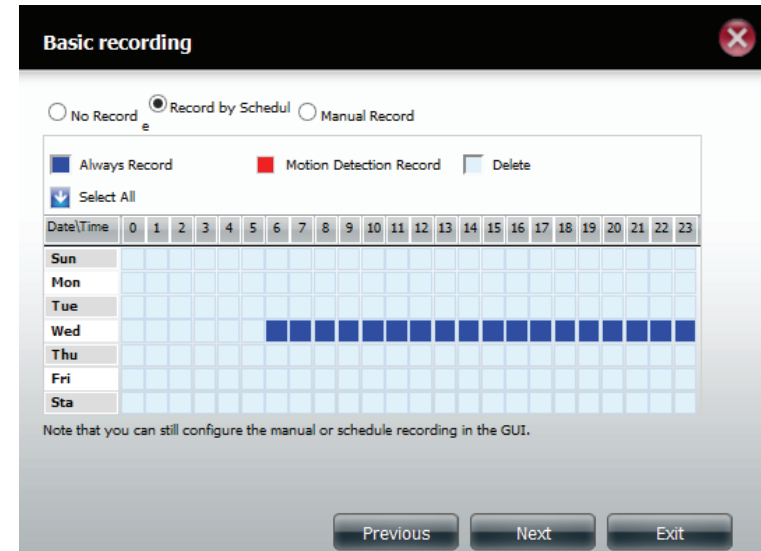

The 'Basic recording' window shows three radio buttons: 'No Record', 'Record by Schedule' (selected), and 'Manual Record'. Below are three checkboxes: 'Always Record' (checked), 'Motion Detection Record' (unchecked), and 'Delete' (unchecked). A 'Select All' button is present. A calendar grid shows days of the week (Sun to Sat) and hours (0 to 23). Blue squares indicate the recording schedule, covering Wednesday from 6:00 to 23:00. A note at the bottom states: 'Note that you can still configure the manual or schedule recording in the GUI.' Navigation buttons 'Previous', 'Next', and 'Exit' are at the bottom right.

Set your **Quota Information**.


By default, the NAS will keep the last 7 days of recordings and automatically overwrite them

Automatic Overwrite, overwrite the earliest recorded video with the latest video if it reaches the quota limitation or if the disk space is full.

Select the **Quota** disk size based on your available disk space.


Check **Keep the File within** the specified duration. Click the **Estimate Required Space** button to see how much space you have available.

Click **Finish** to complete the Wizard.

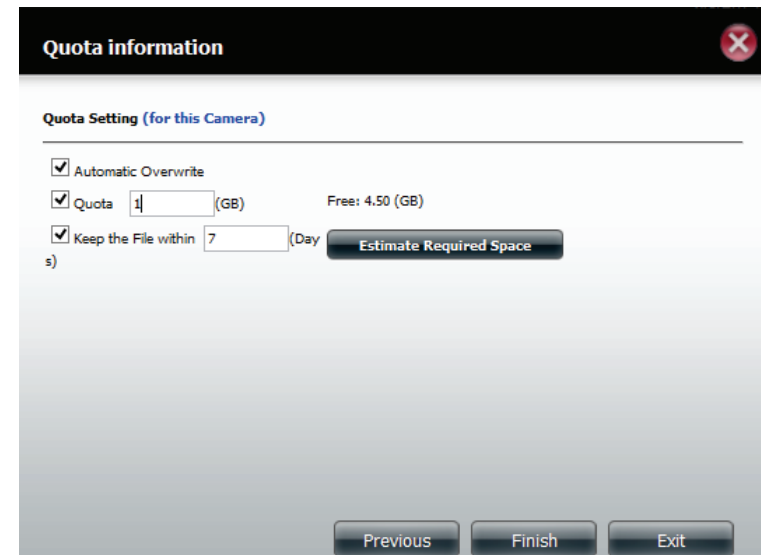


The 'Quota information' window shows 'Quota Setting (for this Camera)' with three checked options: 'Automatic Overwrite', 'Quota' (set to 1 GB), and 'Keep the File within' (set to 7 Days). A 'Free: 4.50 (GB)' indicator is shown. An 'Estimate Required Space' button is present. Navigation buttons 'Previous', 'Finish', and 'Exit' are at the bottom right.

The **Camera List** now shows your configured camera.

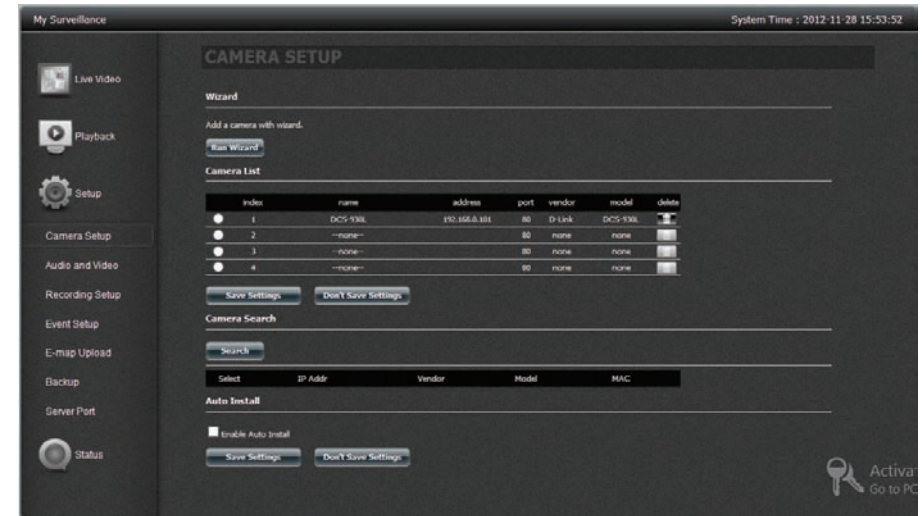

If you want to modify the camera settings, select a camera from the camera list. The camera appears in the chosen slot in the section above and you are able to adjust some settings. You can modify the **Name**, **IP Address** and **Port** if they are incorrect. You can also use the **Auto Detection** button to detect the port the camera is operating on and the supported video formats. Enter the username and password for the camera if there is one. Select the desired **Video Format** (dependent on your camera). Finally, confirm if the **Vendor and Model** are correct for your chosen camera.


Click **Modify** to confirm the changes.

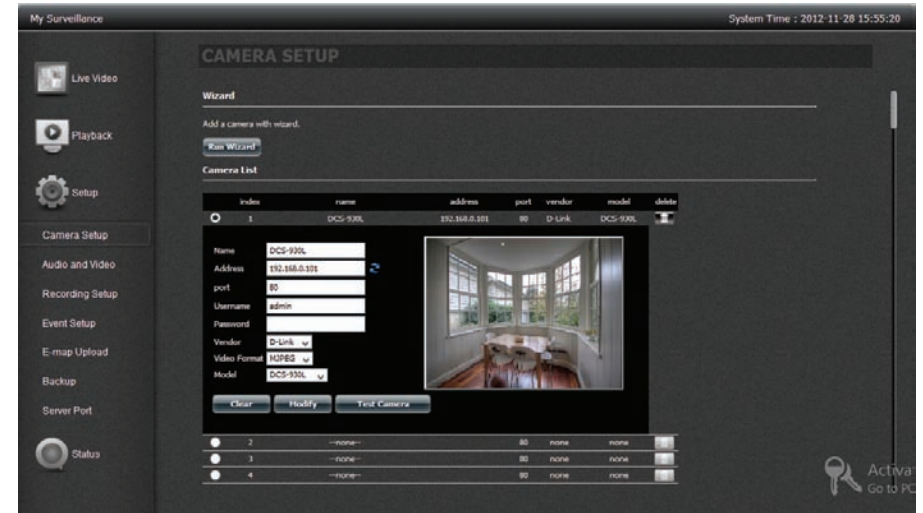

Section 4 - Configuration

Click **Save Settings** to continue.


Click **Yes** to exit.

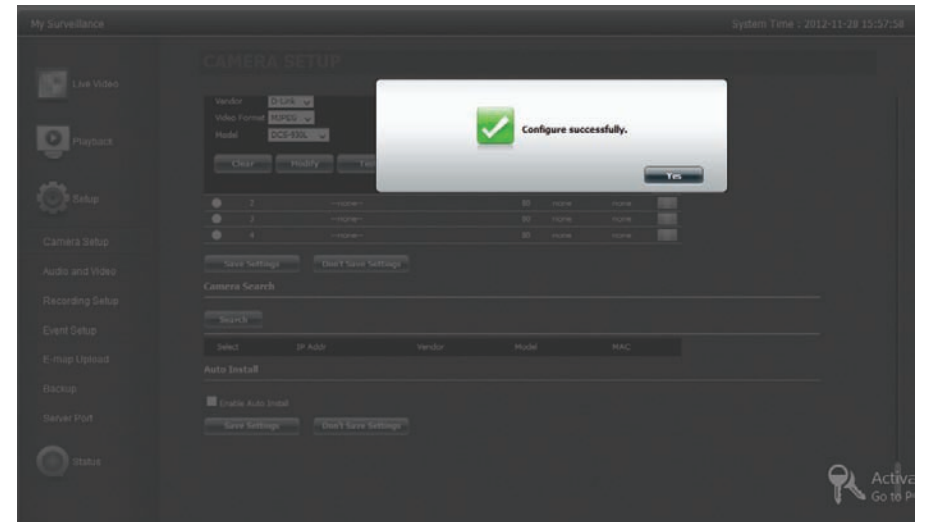


You can also delete the camera from the list.

Select a camera from the camera list, click the Trash Button. A message pops up.

Click **Yes** to remove the camera from the list.

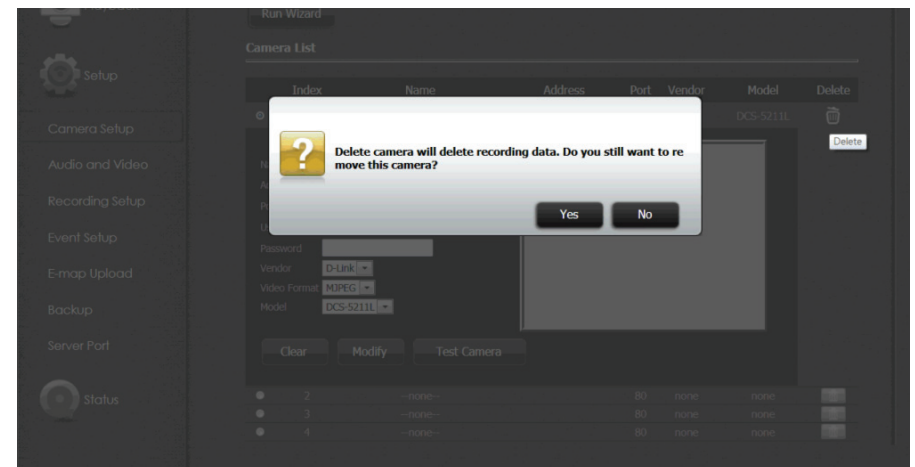


A message pops up to confirm the changes. Click **Yes** to exit.

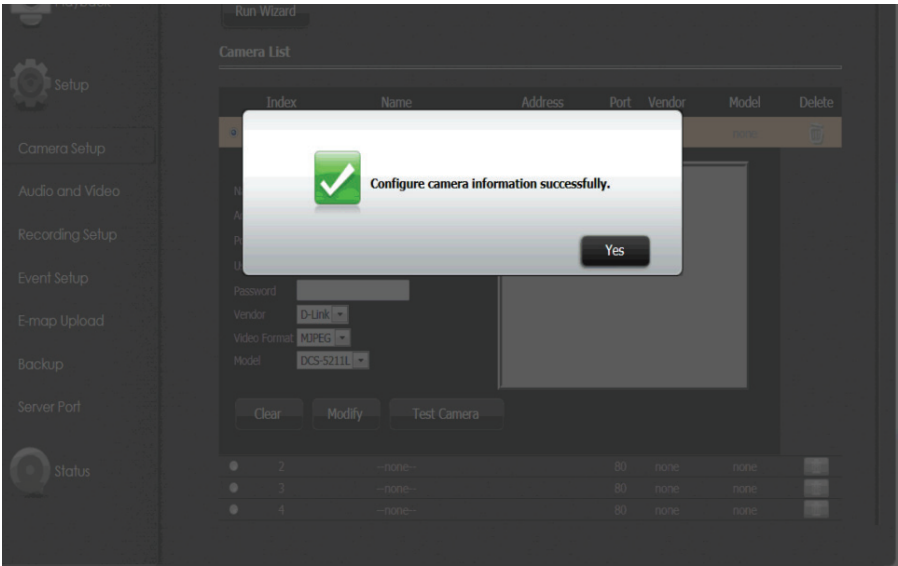


My Surveillance -Search and Add Camera

Click the Search Button to search all available cameras on the LAN

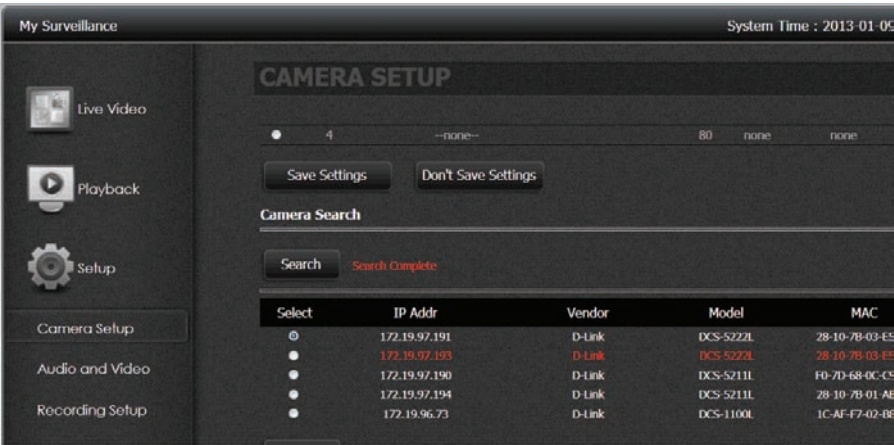


Select one camera and click Add To to add the camera to the list (Camera2)

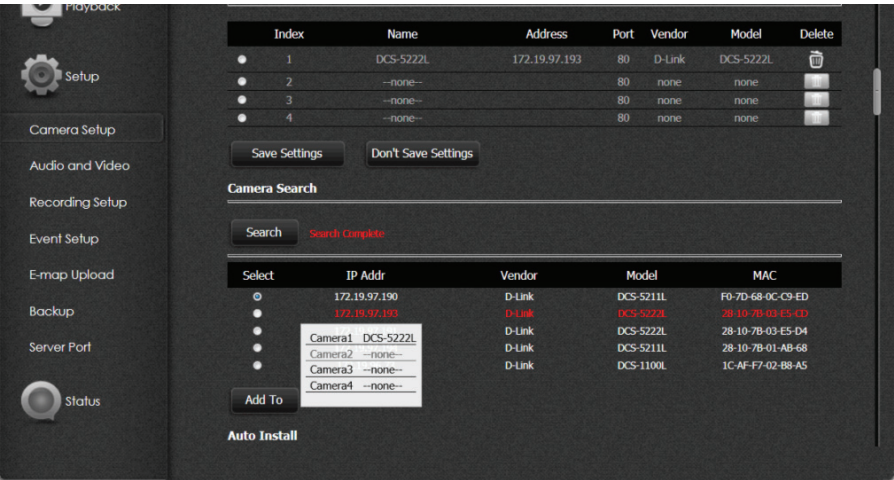


Section 4 - Configuration

Click the **Test Camera** button to view streaming video from the connected camera.

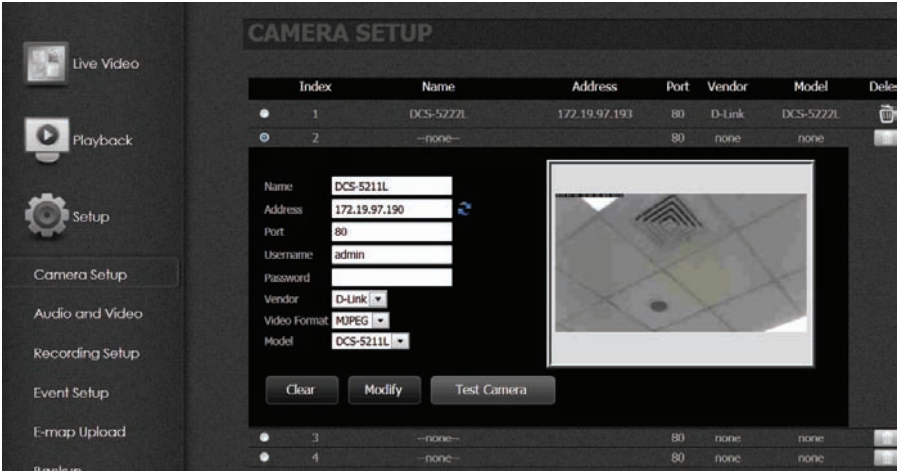


Click **Modify** to add the camera to the **Camera list** then **Click Save Settings** to continue.

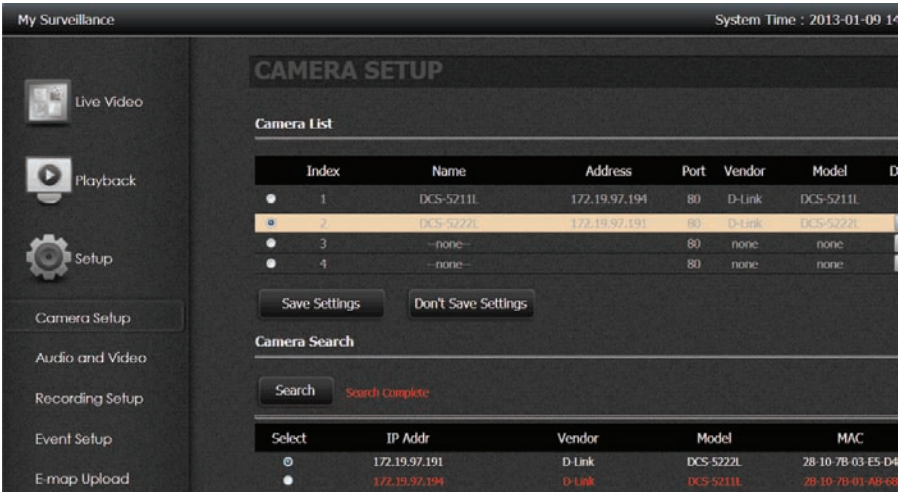


Section 4 - Configuration

A message pops up to confirm the changes. Click **Yes** to exit.

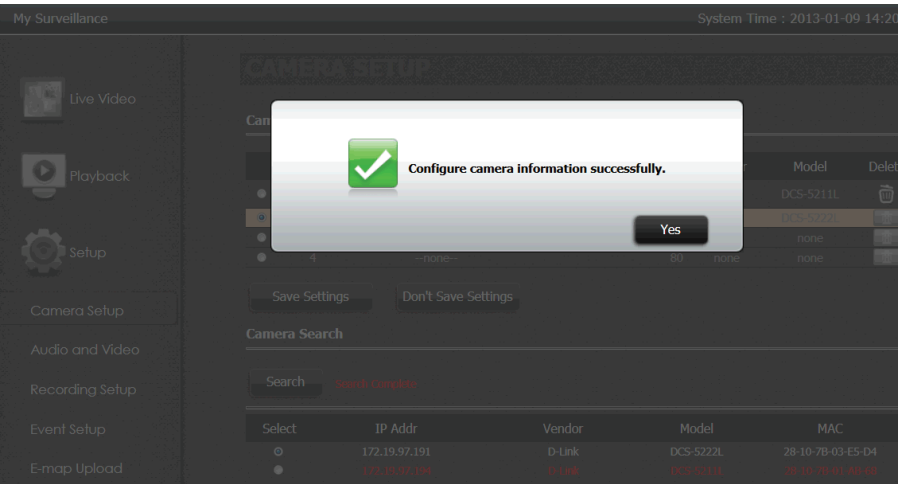


Under **Auto Install**, click **Enable Auto Install** to detect other IP Cameras next time you access the **Live Video Page**.

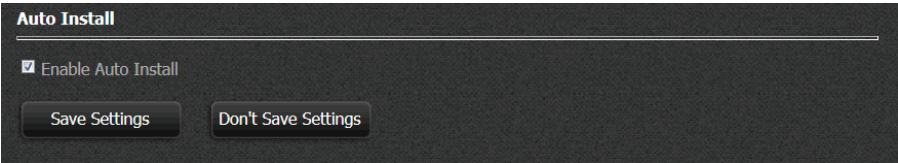


My Surveillance -Setup - Audio and Video

Audio and Video configures all your audio and video settings on each camera. Let's take a look at a single camera configuration.

Click **Audio and Video**. Here you can view all camera audio and video settings.

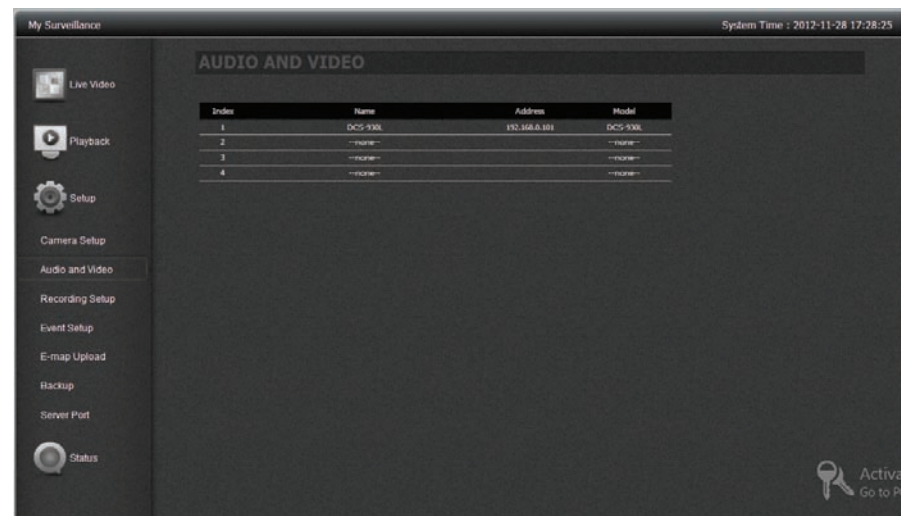

Click on the **device** to see the configuration options.

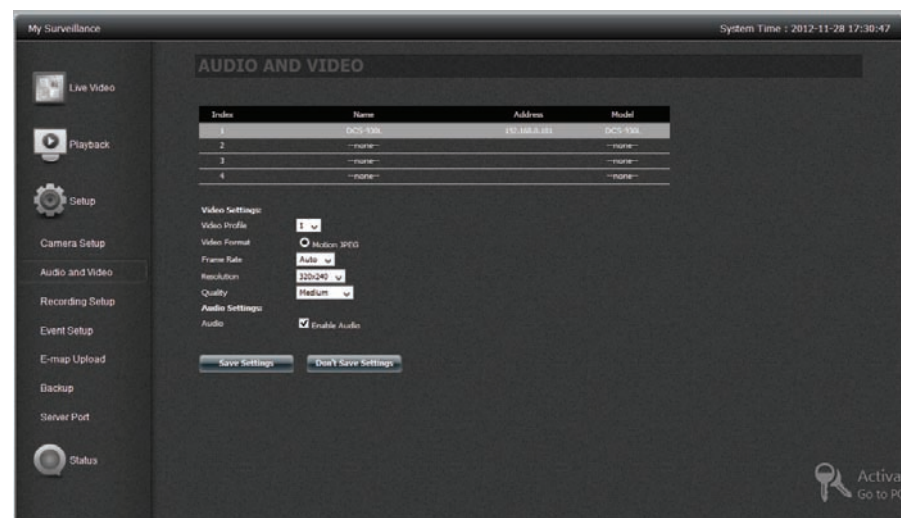

Video Profile: Select a profile to use or edit.

Video Format: Choose the video format to use for your recordings. Each format has different size and quality characteristics.

Frame Rate: This is the number of frames per second recorded. A higher number of frames per second means smoother video and results in a larger file size.



Resolution: The resolution is the number of pixels that the video will include. This varies according to your camera video quality.

Quality: Select between **Very Low**, **Low**, **Medium**, **High**, and **Very High**. Selecting Fixed Quality will give you this setting and is a rough guide to determine the output video quality.

Bitrate: This is the number of kilobits per second the video recording will contain. A higher bitrate means a larger output file.

Audio Settings: Click the checkbox to enable **Audio**.

Click **Save Settings** to continue.

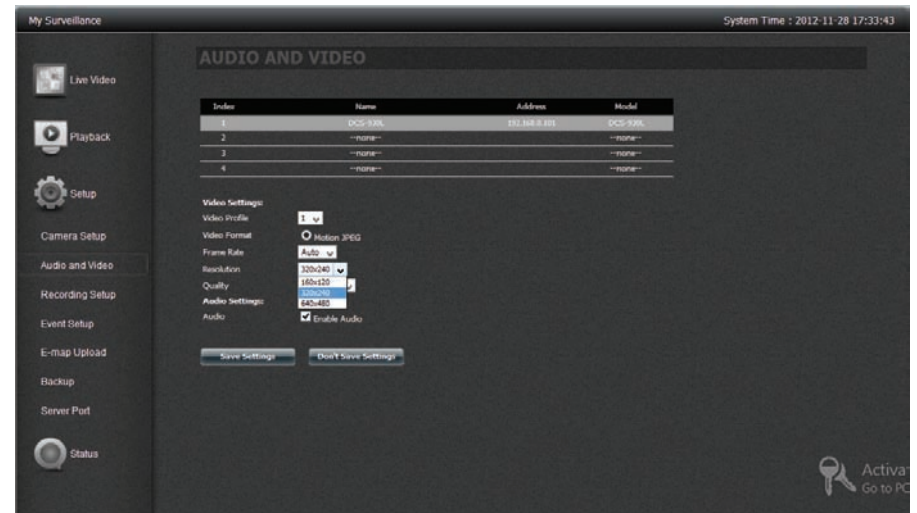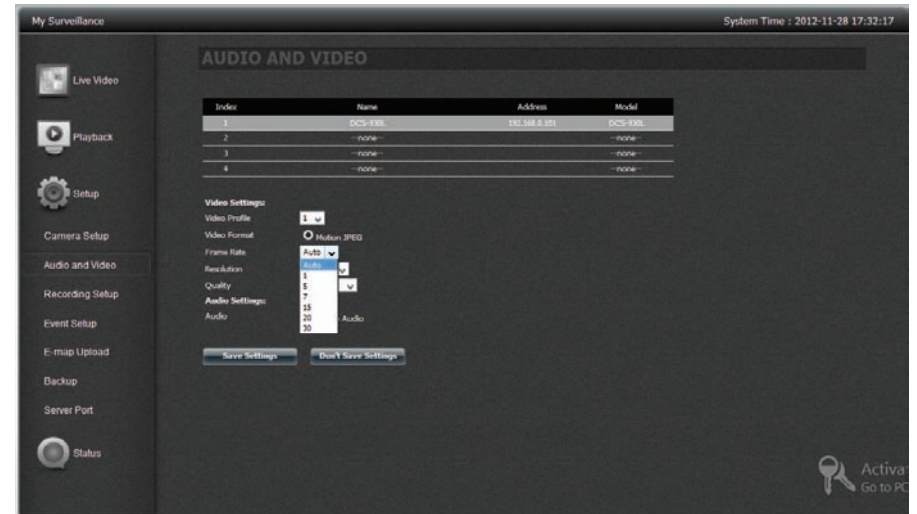

My Surveillance - Setup - Recording Setup

The Recording Setup configuration tool displays options for each camera. The settings including Quota Setting, Event Record and Recording mode.

My Surveillance

System Time : 2013-01-09 16:44:31

Live Video

Playback

Setup

Camera Setup

Audio and Video

Recording Setup

Event Setup

E-map Upload

Backup

RECORDING SETUP

Index	Name	Address	Used/Quota	Motion Detection	Copy
1	DCS-5211L	172.19.97.190	2.09 / Unlimited (GB)	Go to Web	
2	DCS-5222L	172.19.97.193	1.33 / Unlimited (GB)	Go to Web	
3	DCS-5222L_1	172.19.97.191	1.69 / Unlimited (GB)	Go to Web	
4	DCS-5211L_1	172.19.97.194	1.46 / Unlimited (GB)	Go to Web	

D-Link ShareCenter DNS-327L User Manual

375

Double-click the camera to expand the configuration options.

Live Video

Playback

Setup

Camera Setup

Audio and Video

Recording Setup

Event Setup

E-map Upload

Backup

Server Port

Status

RECORDING SETUP

Index	Name	Address	Used/Quota	Motion Detection	Copy
1	DCS-5211L	172.19.97.190	2.09 / Unlimited (GB)	Go to Web	
2	DCS-5222L	172.19.97.193	1.33 / Unlimited (GB)	Go to Web	
3	DCS-5222L_1	172.19.97.191	1.69 / Unlimited (GB)	Go to Web	
4	DCS-5211L_1	172.19.97.194	1.46 / Unlimited (GB)	Go to Web	

Quota Setting (for this Camera):

☒ Automatic Overwrite

☐ Quota (GB) Free: 904.59 (GB)

☒ Keep the File within (Days)

Estimate Required Space

Event Record:

Pre-Record Sec. (1~180) Post-Record Sec. (1~180)

Recording Mode:

☐ No Record ☐ Record by Schedule ☒ Manual Record

☐ Always Record

☐ Motion Detection and Event Record

☐ Motion Detection Record

☐ Delete

☐ Event Record

☒ Select All

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

COMPONENT	DESCRIPTION
Motion Detection	When using the Record by Schedule mode together with the Motion Detection function, you must first click the Go to Web link and log in to the camera's web interface and enable the motion detection function on that camera. Please refer to the manual of your camera for more information on enabling motion detection.
Copy	Copy the camera Recording Setup to other similar cameras
Quota Settings	Configurable per camera
Automatic Overwrite	Click this checkbox if you wish to overwrite the earliest recorded video with the latest video if reaches the quota limitation or disk space is full.
Quota	Click this checkbox to set the amount of storage you want to allocate to each camera. Next to it, the NAS shows the remaining free Disk space
Keep the File within	This indicates how long you want to keep the recorded camera video files before it is overwritten.
Estimate Required Space	Click this button to find out how much Disk space is required each day
Event Record: Pre-record	This option records data, on Event Record, before the event is triggered - within a range of 1-180 seconds
Event Record: Post Record	This option records data, on Event Record, after the event is triggered - within a range of 1-180 seconds
Record Mode	No Record - no recording is made
Record Mode	Record by Schedule - Drag and Drop on the weekly map below <ul style="list-style-type: none"> Always Record means that the camera will always record for the specified period. Motion Detection Record will wait for motion on the camera to be detected before it begins recording Event Record will wait for event on the camera to be triggered before it begins recording
Record Mode	Manual Record - requires you to manually click a record button to begin recording.

Motion Detection and Copy

RECORDING SETUP					
Index	Name	Address	Used/Quota	Motion Detection	Copy
1	DCS-5211L	172.19.97.190	1.86 / Unlimited (GB)	Go to Web	
2	DCS-5222L	172.19.97.193	1.18 / Unlimited (GB)	Go to Web	Copy
3	DCS-5222L_1	172.19.97.191	1.49 / Unlimited (GB)	Go to Web	
4	DCS-5211L_1	172.19.97.194	1.30 / Unlimited (GB)	Go to Web	

Here is an example of a camera’s motion detection configuration page

MOTION DETECTION

This section will allow you to enable or disable motion detection function, draw or erase motion area, as well as configure the sensitivity setting of your camera to detect movement. You must select the checkbox of 'Enable Video Motion' to turn on the feature.

Save Settings

Don't Save Settings

LIVE VIDEO

☒ Enable PIR

☒ Enable Video Motion

Sensitivity

900~100%


Drawing Mode

☒ Draw motion area

☐ Erase motion area

Clear

Click the **Copy** button, you can copy the camera **Recording Setup** to similar cameras. Click **Save** to continue.

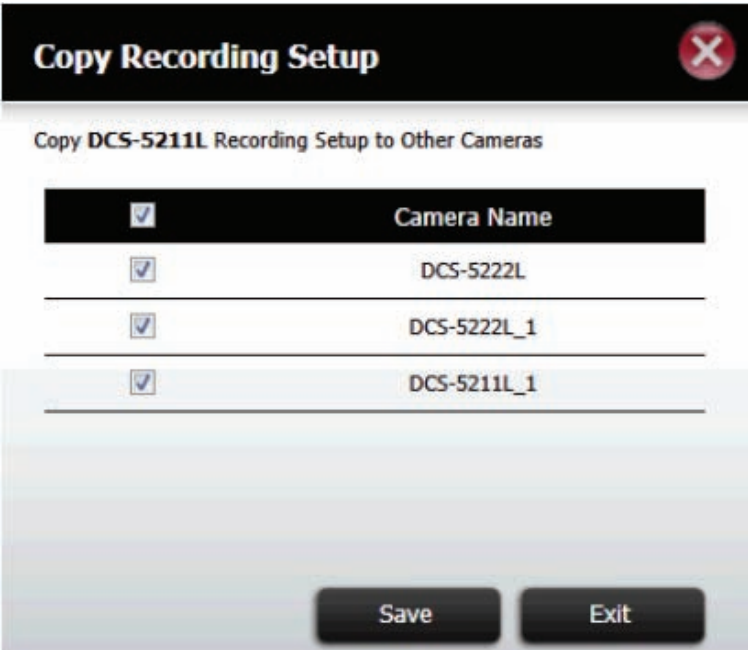

Click **Yes** to continue.



Select your **Recording Mode**

Record by Schedule

Click the **blue** to set normal recording mode 

Record Mode:

☐ No Record ☐ Record by Schedule ☐ Manual Record

☒ Always Record ☐ Motion Detection Record ☐ Delete

☒ Select All

Date\Time	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Drag your mouse over the time frame you want to set the recording. The selected frames turn to blue to indicate the recording duration.

Click **Save Settings** to finish

Record Mode:

☐ No Record ☐ Record by Schedule ☐ Manual Record

☒ Always Record ☐ Motion Detection Record ☐ Delete

☒ Select All

Date\Time	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Section 4 - Configuration

To record by Motion Detection, click the **red** box.

Record Mode:

☐ No Record ☐ Record by Schedule ☐ Manual Record

☐ Always Record ☒ Motion Detection Record ☐ Delete

Date\Time	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Drag the mouse over the time frame you want to set the recording. The selected frames turn to red to indicate the recording duration.

Click **Save Settings** to finish

Record Mode:


☐ No Record ☐ Record by Schedule ☐ Manual Record

☐ Always Record ☒ Motion Detection Record ☐ Delete

Date\Time	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								



Section 4 - Configuration

To delete recorded frames, click the light blue **Delete** box

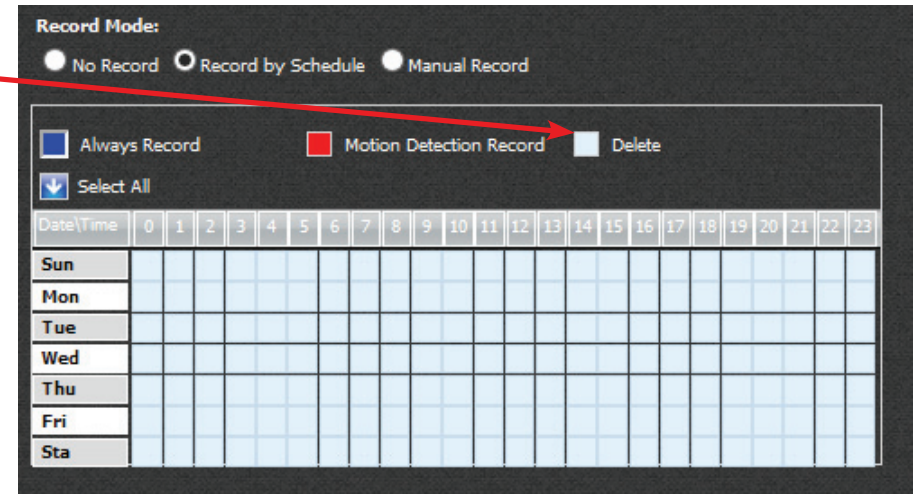

Drag the mouse over the time frame you want to delete. The selected frames turn to red to indicate the recording duration.

Click **Save Settings** to finish

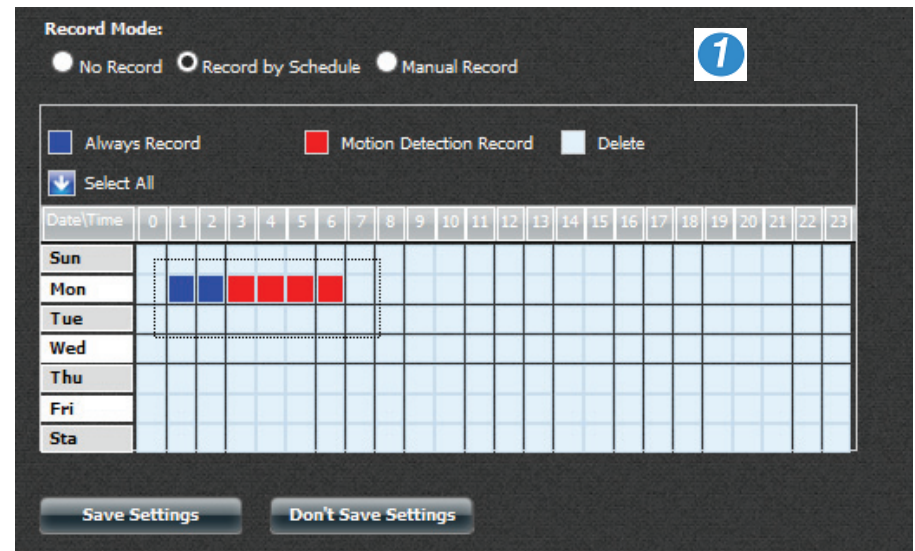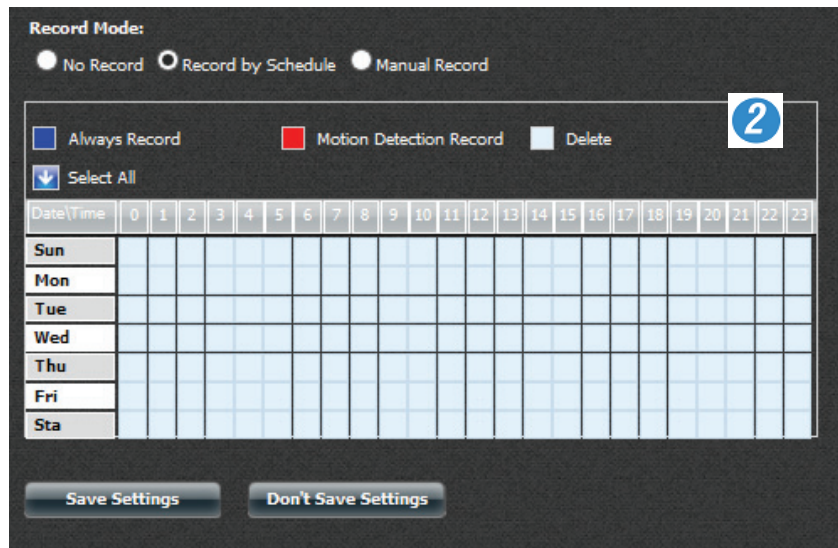

Click **Select All** to fill in all time Frames with selected Record mode.

Recording Mode:

☐ No Record ☒ Record by Schedule ☐ Manual Record

☒ Always Record

☐ Motion Detection and Event Record

☐ Motion Detection Record

☐ Event Record


☐ Delete

☒ Select All

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

My Surveillance -Setup - Event Setup

The Event Setup configuration tool displays options for each camera. The basic settings relate to how you want the notifications sent. The **advanced** notification settings help you to configure **Email** and **SMS** notifications.

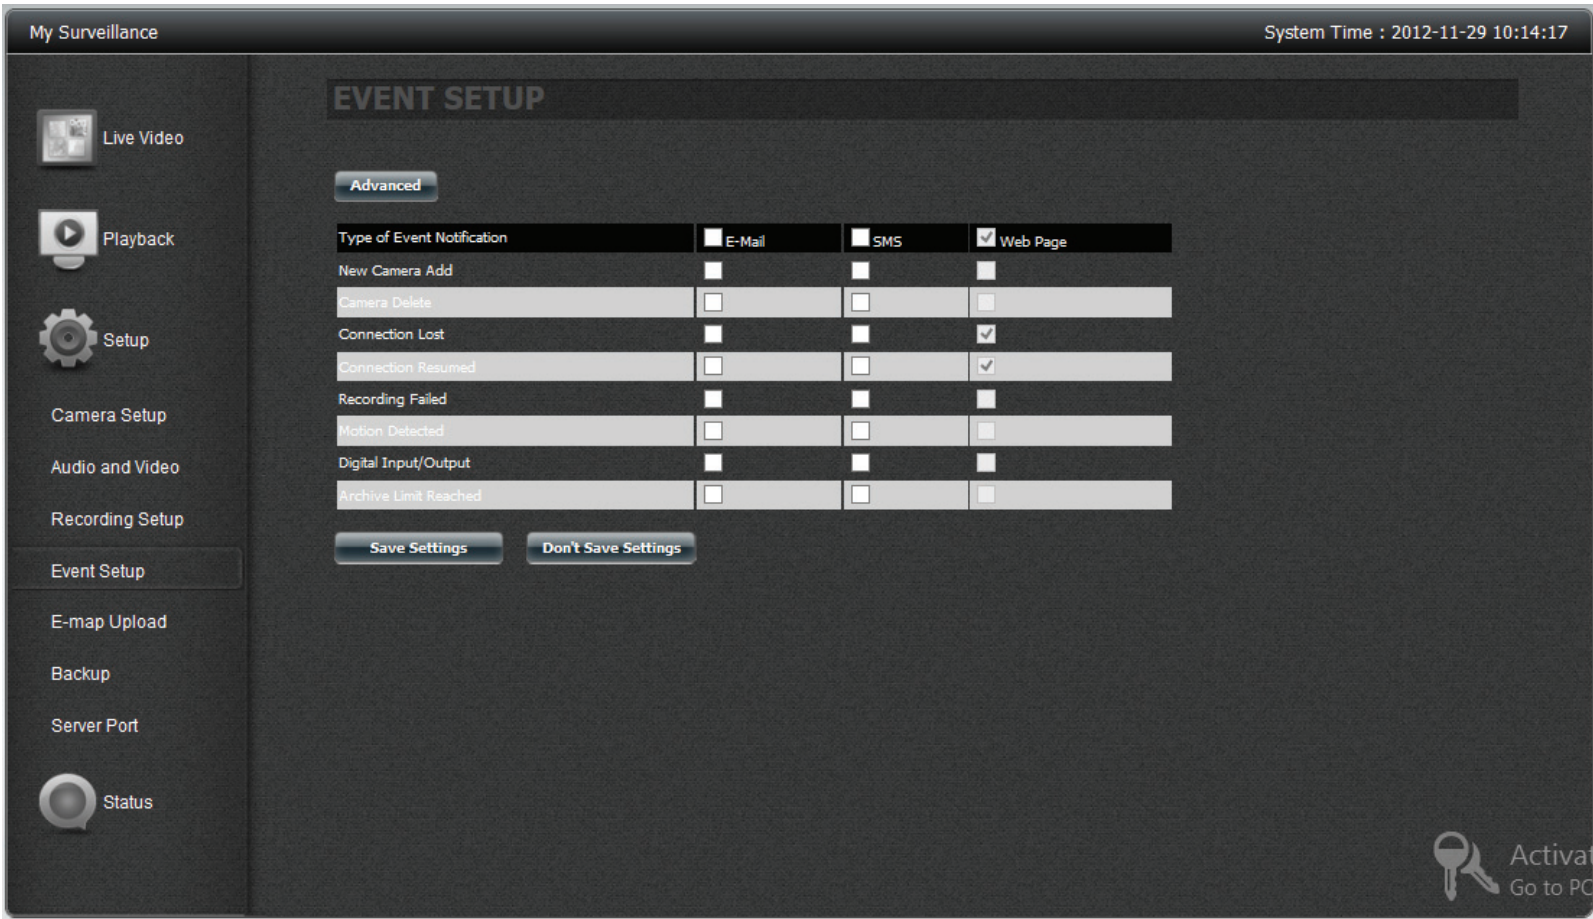

Section 4 - Configuration

COMPONENT	DESCRIPTION
Add New Camera	Notifies you when a new camera is connected
Delete Camera	Notifies you when a camera is deleted from the connected cameras
Connection Loss	Notifies you when there is a network error
Resumed Connection	Notifies you when the network is back online
Failed Recording	Notifies you when there has been an error in the recording
Motion Detection	Notifies you when motion detection has started or ended
Digital Input/Output	When an event is triggered from the D/I port of the camera, the D/O port of the camera will begin sending a signal to My Surveillance. Then My Surveillance will notifies you accordingly.
Archived Limit Reached	Notifies you when your history (archive) material has reached or exceeded the disk space allocated to it


These settings are activated by using the Email, SMS, or Web Page notification settings.

Click **Save Settings** to finish

Type of Event Notification	<input type="checkbox"/> E-Mail	<input type="checkbox"/> SMS	<input checked="" type="checkbox"/> Web Page
New Camera Add	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Camera Delete	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Connection Lost	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Connection Resumed	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Recording Failed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Motion Detected	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Digital Input/Output	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Archive Limit Reached	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Section 4 - Configuration

 To activate advanced features, click the **Advanced** button

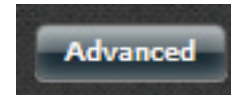

By default, the Advanced configuration window pops up. However, if you wish to return to it later, click the Advanced button.

These settings were originally covered earlier in this manual.

Click **Save Settings** when done and click **Exit**.

A screenshot of the "Notification Setup" window, specifically the "Email settings" tab. The window has a black title bar with a red "X" icon. The "Email settings" section is expanded, showing fields for Login Method (Account selected), User Name (10008078), Password (masked with dots), Port (25), SMTP Server (hmail3.alphanetworks.com), Sender E-mail (garth_naude@alphanetworks.), and Receiver E-mail (garth_naude@alphanetworks.). There is a "Secure Connection" dropdown set to "NONE". Below these fields are buttons for "Test E-Mail", "Save Settings", "Don't Save Settings", and "Clear Settings". At the bottom right, there is a "No Longer Display" checkbox and an "Exit" button.

Click the blue arrow next to SMS Settings to extend the SMS configuration options.

Click the Enable SMS Notifications. Follow the instructions provided onscreen


Click **Save Settings** when done and click **Exit**.

Note: Make sure your Carrier provides you with the correct information otherwise this feature will not work properly

A screenshot of the "Notification Setup" window, specifically the "SMS settings" tab. The window has a black title bar with a red "X" icon. The "SMS settings" section is expanded, showing a checkbox for "Enable SMS Notifications" which is checked. Below this are fields for "SMS service provider" (a dropdown), "URL", "Replace space character with" (radio buttons for "None replace" and another empty option), "Phone number1()", and "Phone number2()". There are buttons for "Add", "Delete", and "Test SMS". At the bottom, there are buttons for "Save Settings" and "Don't Save Settings". A note at the bottom states: "(Note: Please press 'Save Settings' to decide which SMS service provider to sent SMS.)". At the bottom right, there is a "No Longer Display" checkbox and an "Exit" button.


My Surveillance - Setup - E-map Upload

The E-map Upload configuration panel allows you to import a schematic illustration of the area/office space you want to monitor using your IP cameras. The E-map, in JPEG, BMP, GIF and PNG format is uploaded to the DNS-327L and configured to work with the camera installed.

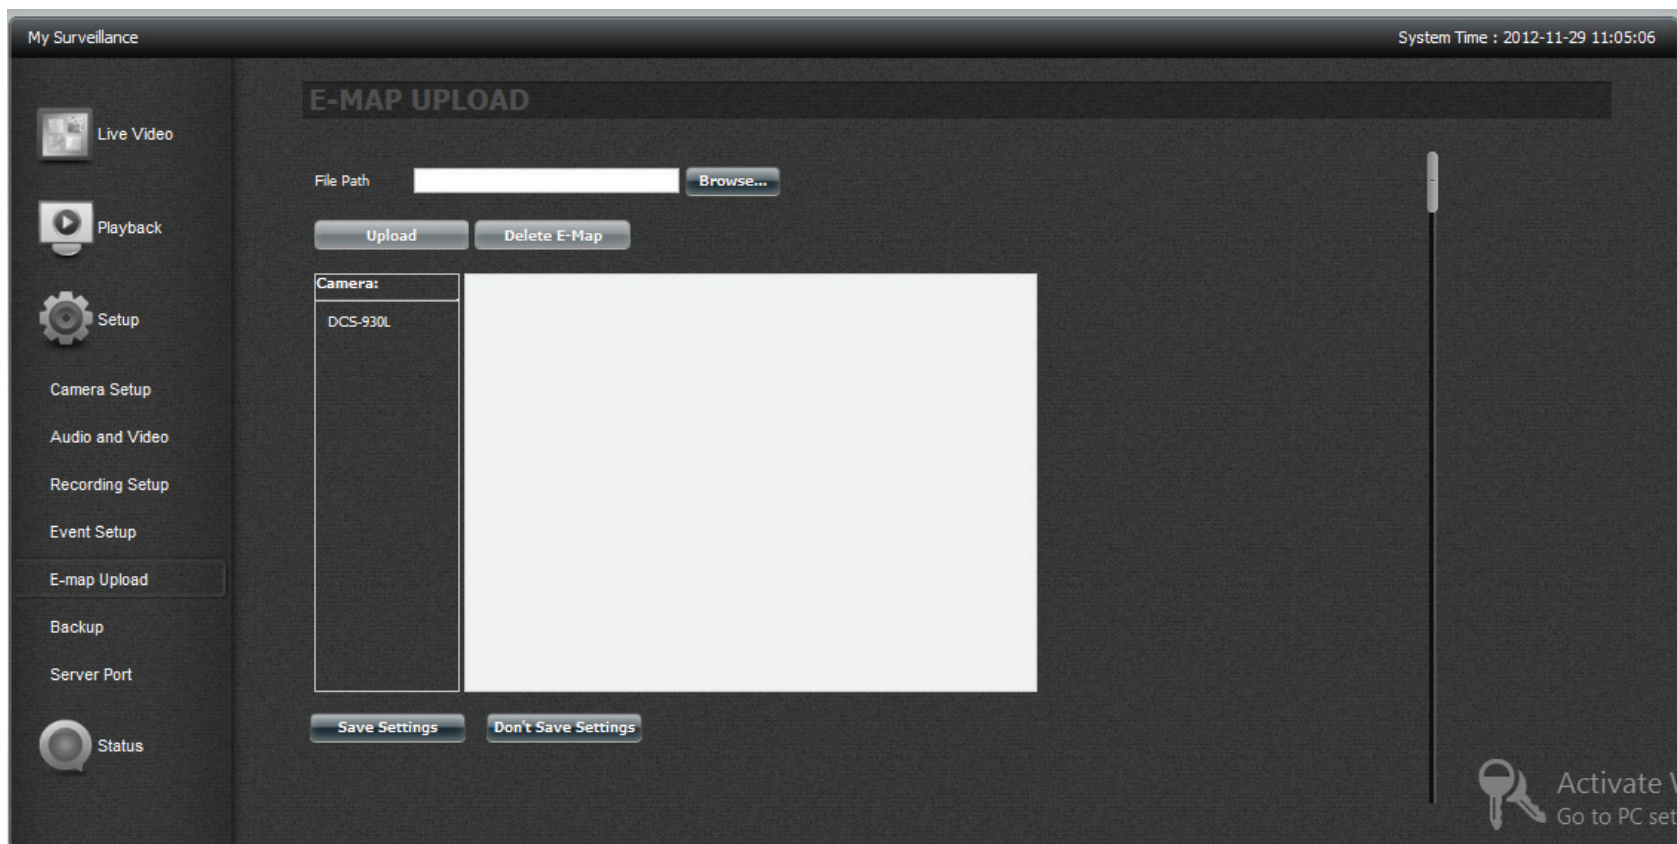


Section 4 - Configuration

Click the **Browse** button to find the **E-map** you want to use.

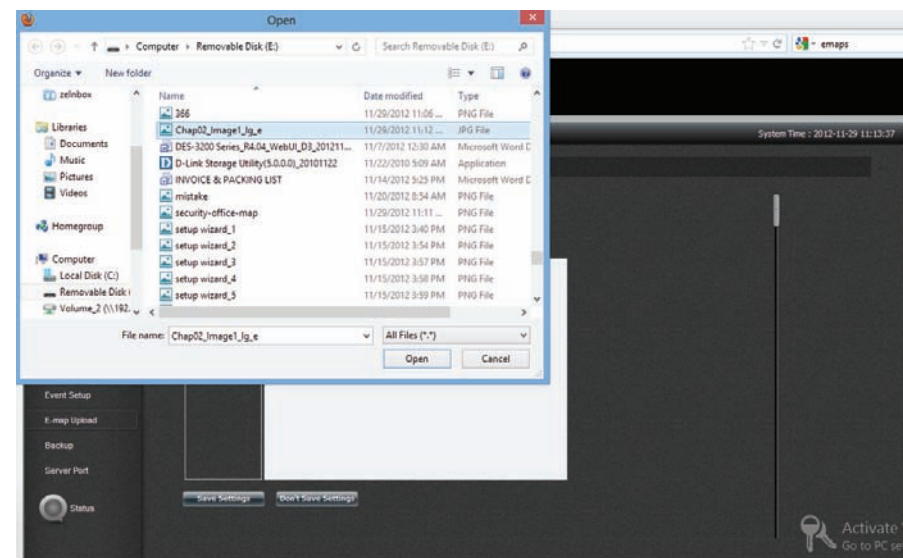


Select the **E-map** and click **Upload**

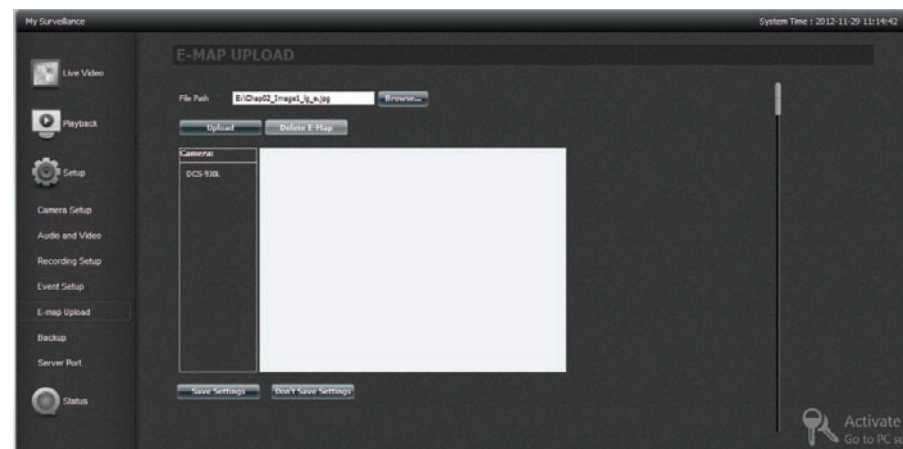


Section 4 - Configuration

The file is now displayed on right side of the camera.

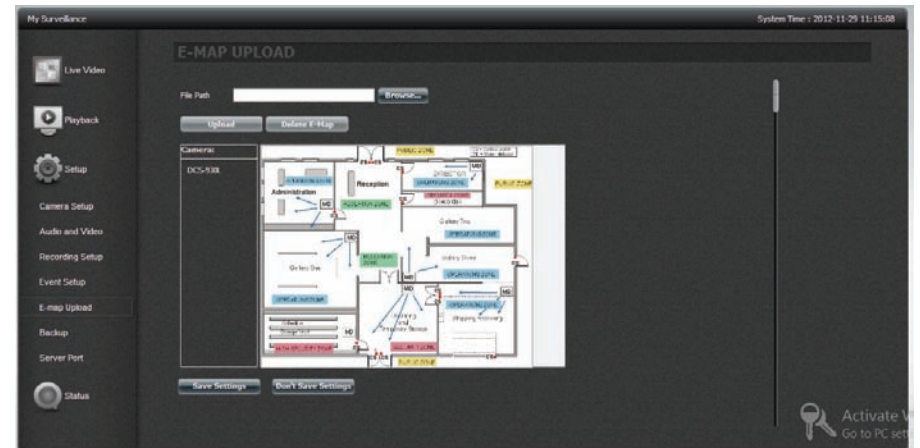


Click and drag a camera from the camera list on the left of the image. When you have placed the camera in the correct location, double-click the icon to change the orientation of the camera.

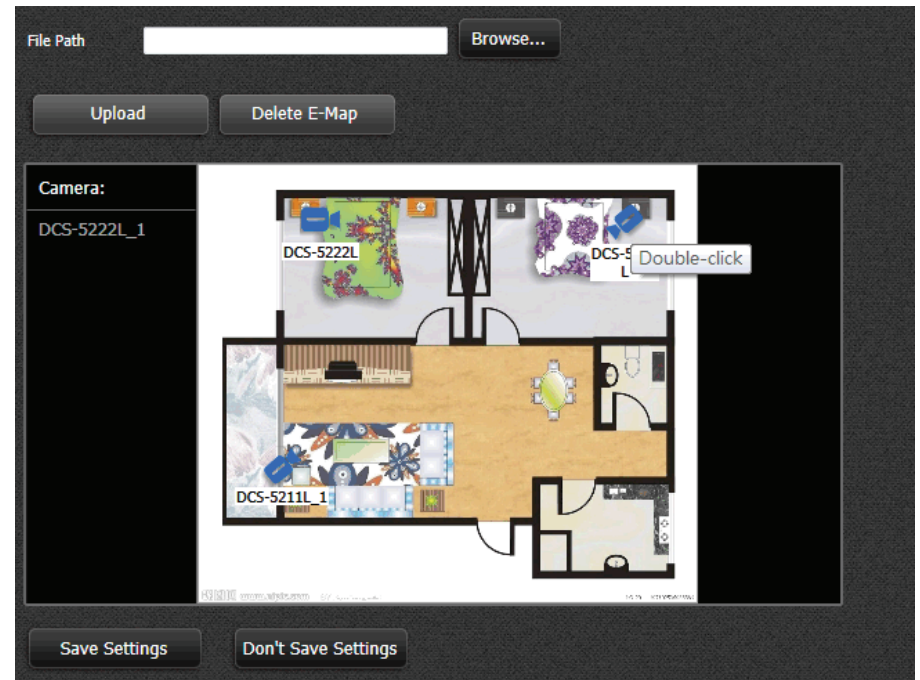


Click **Save Settings**

The file is ready to use. Click **Yes** to continue.

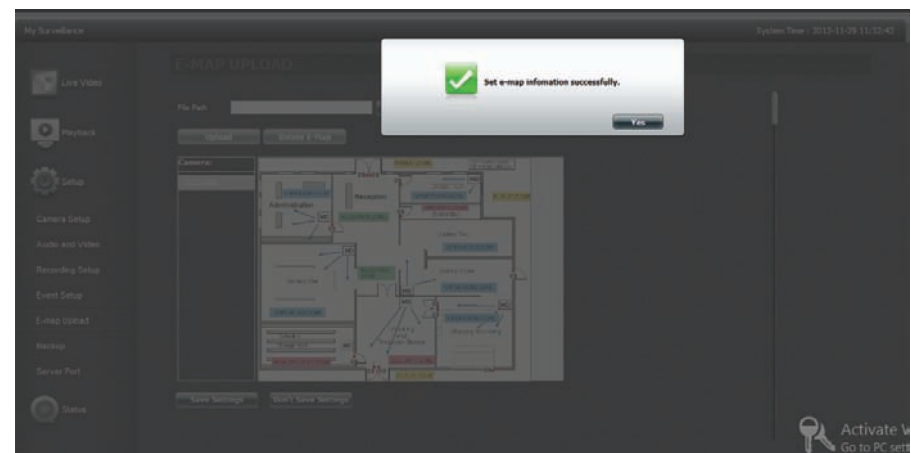


My Surveillance - Setup - Backup

The **Backup Setup** page allows you to configure the ShareCenter™ NAS to backup and restore the IP Camera recordings.

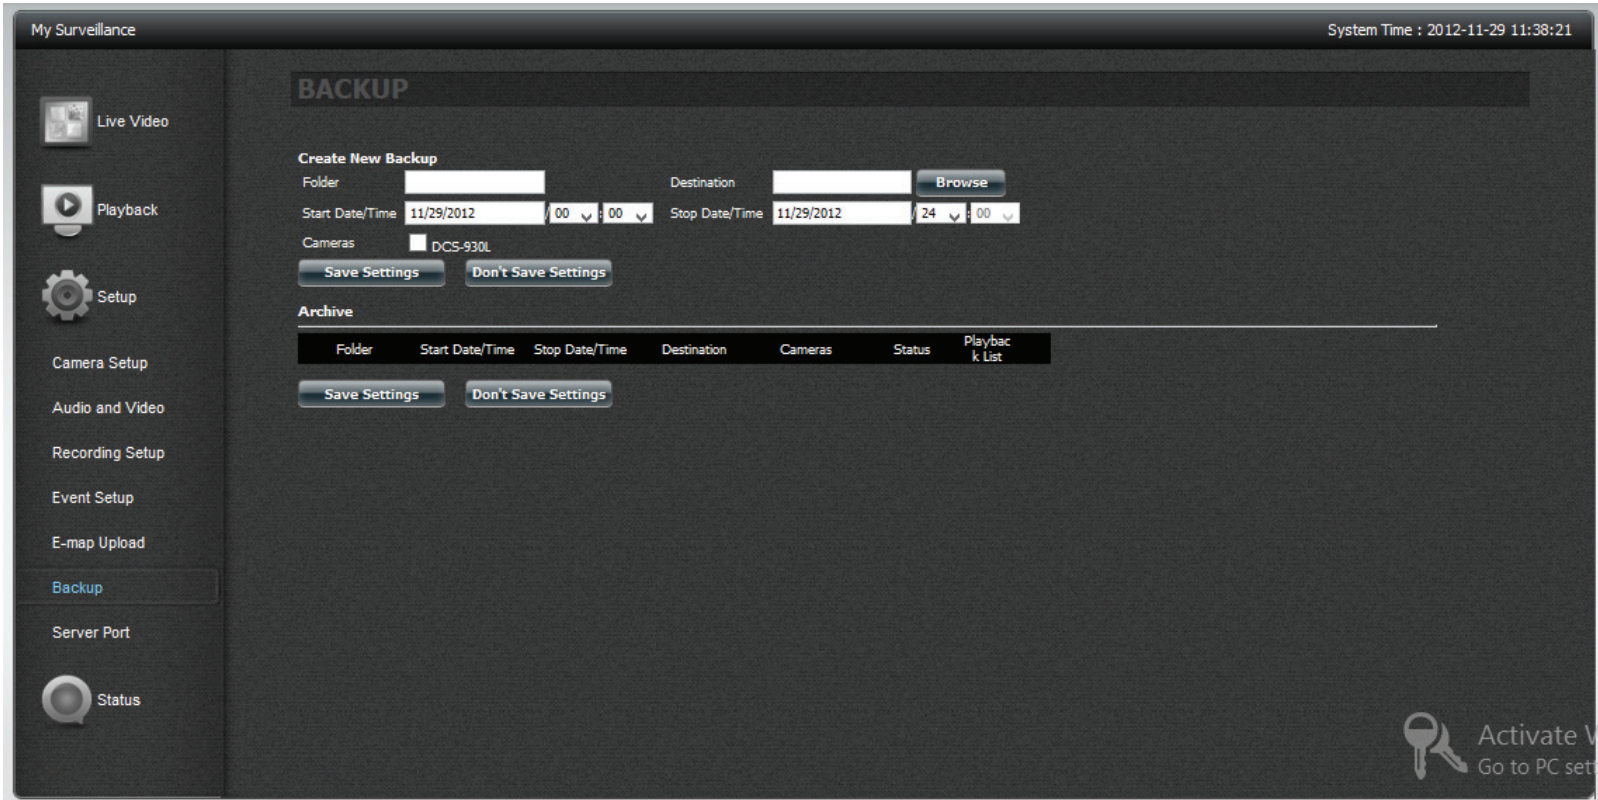


Under **Create New Backup**, start creating your new backup **folder** and **destination**.


Enter a **Folder** name in the field provided. Click **Browse** to select **Destination** path. If you do not have a folder, click the + sign to create a new folder. Type a new folder name then click **OK** to continue.

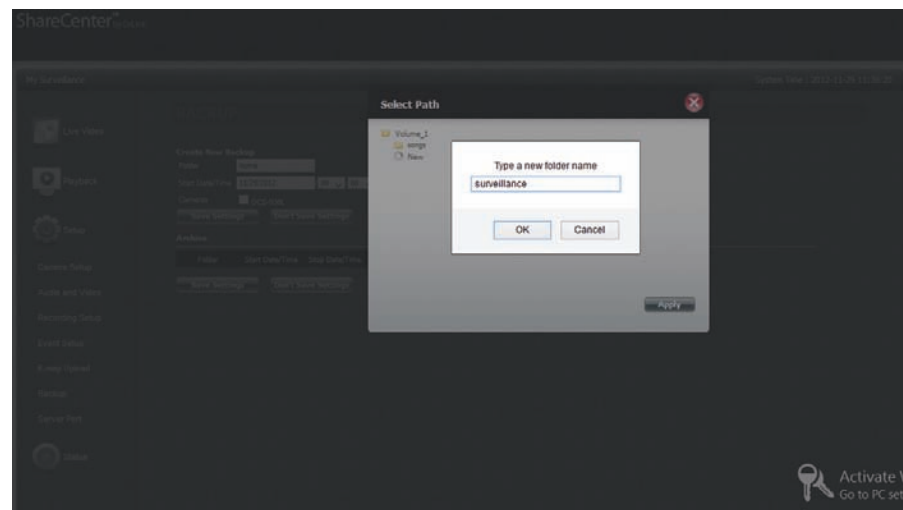


Select the path, on the NAS, where you want the backup to reside.

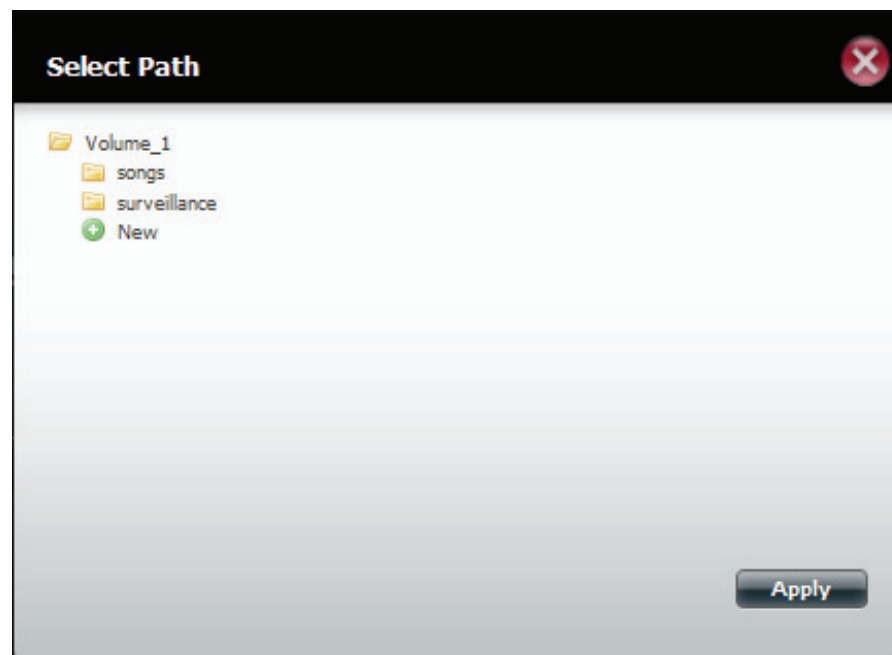

You should have the **Folder** name and the **Destination** configured.

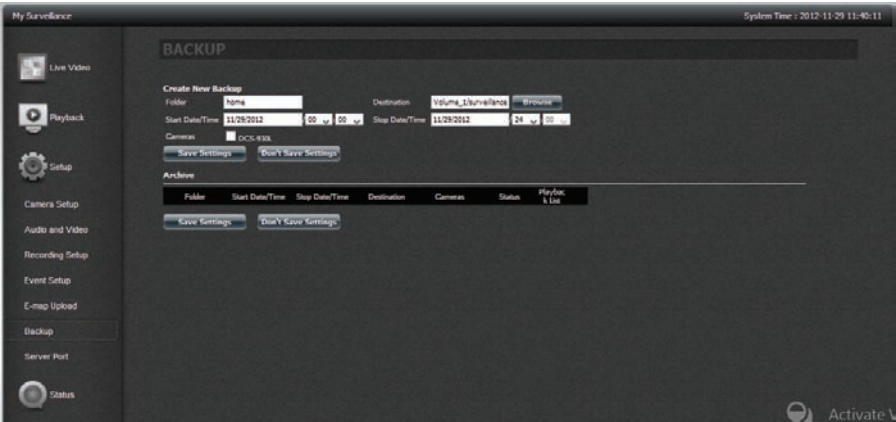

Configure a **Start Date/Time** and a **Stop Date/Time**.

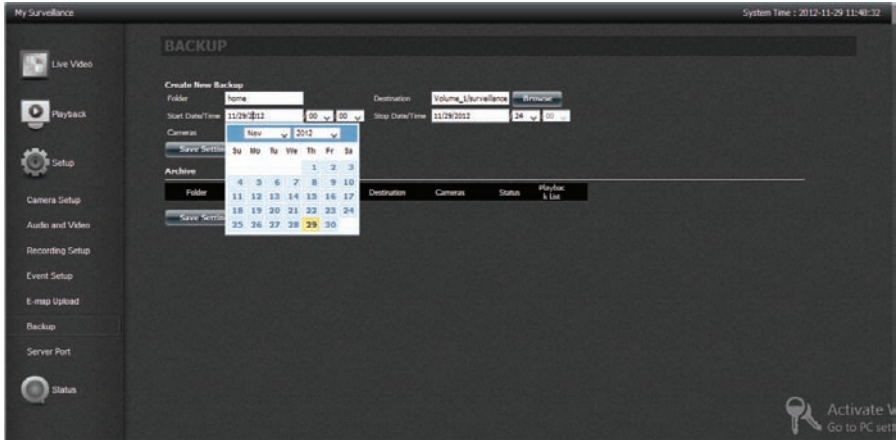

Section 4 - Configuration


Click the **Camera** checkbox, next to the camera's name, to activate the camera you want to use as backup.

Click **Save Settings** to finish.


The archive table at the bottom populates as you collect data.




A message pops up to confirm the configuration. Click **Yes** to continue and the DNS-327L starts to backup the IP camera recordings.

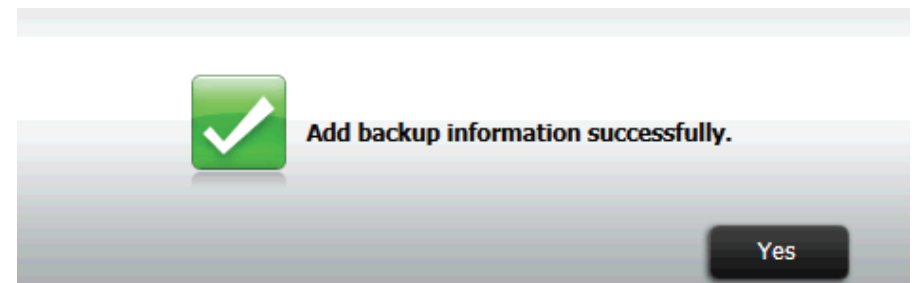

The list is now displayed in the table.

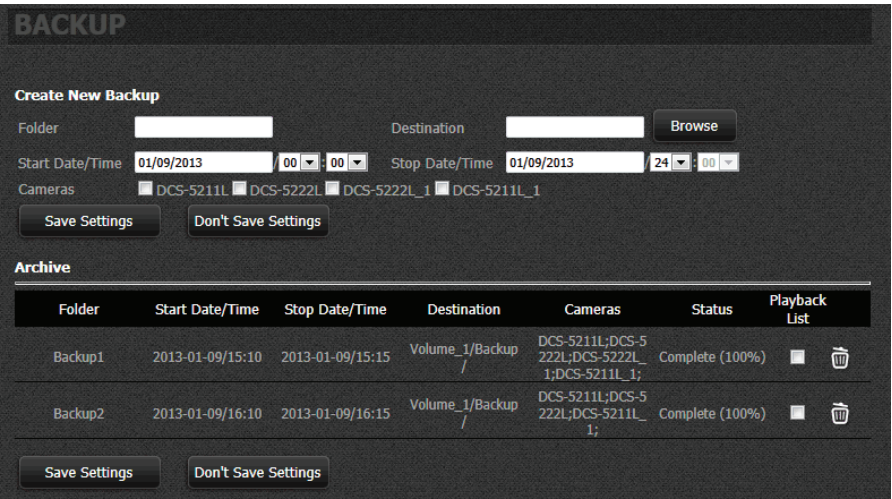


When you have created a new backup, it will appear in the Archive section. From here you can check which archives to include in the playback list on the playback screen by adding or removing a check from the Playback List column. If you want to delete the archive, click the trash can icon for the folder you want to delete.

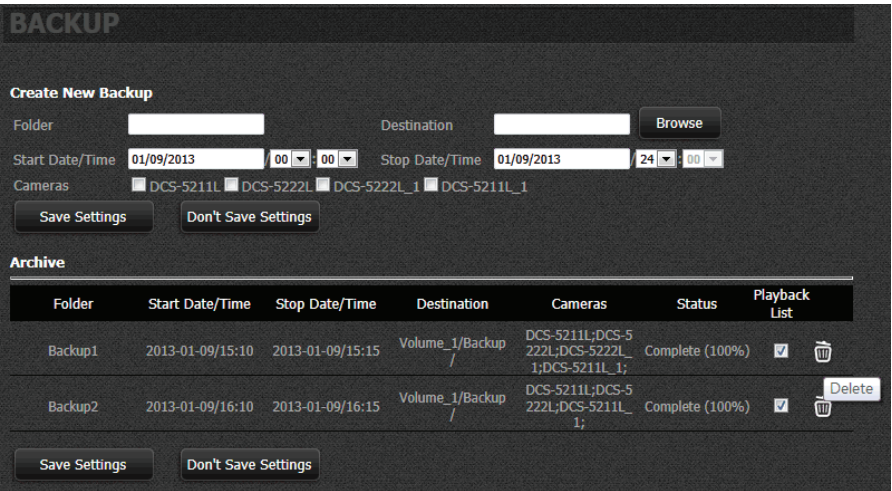


My Surveillance - Setup - Server Port

This page allows you to modify the ports that the Live Video Server, Playback Server and Config Server operate on. You may wish to do this if you have port restrictions on your local network. To change the port numbers, use the provided fields and click Save Settings.

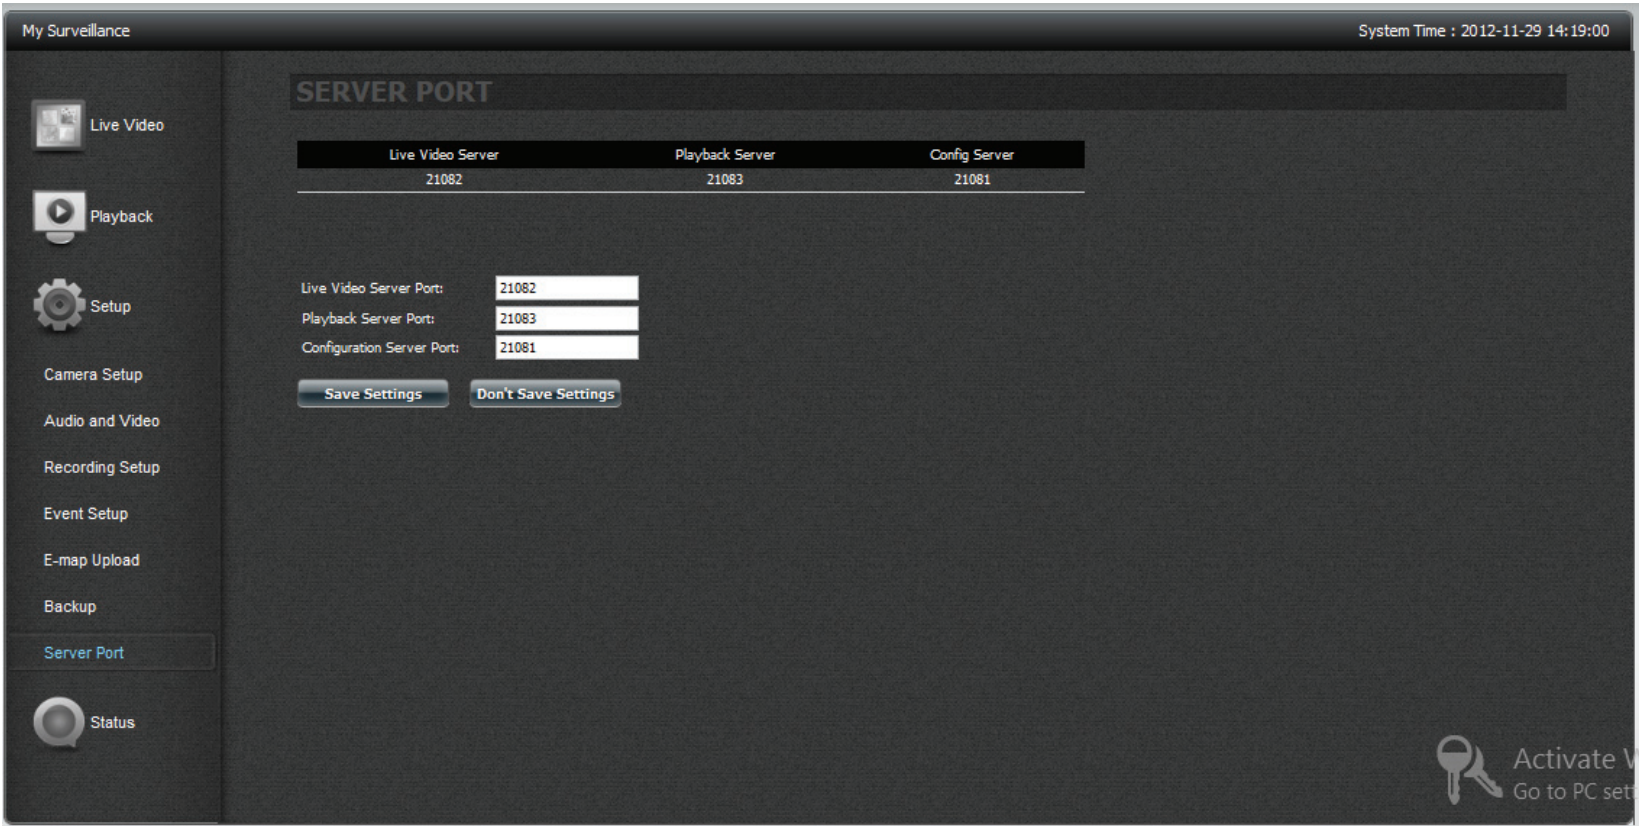

My Surveillance - Status

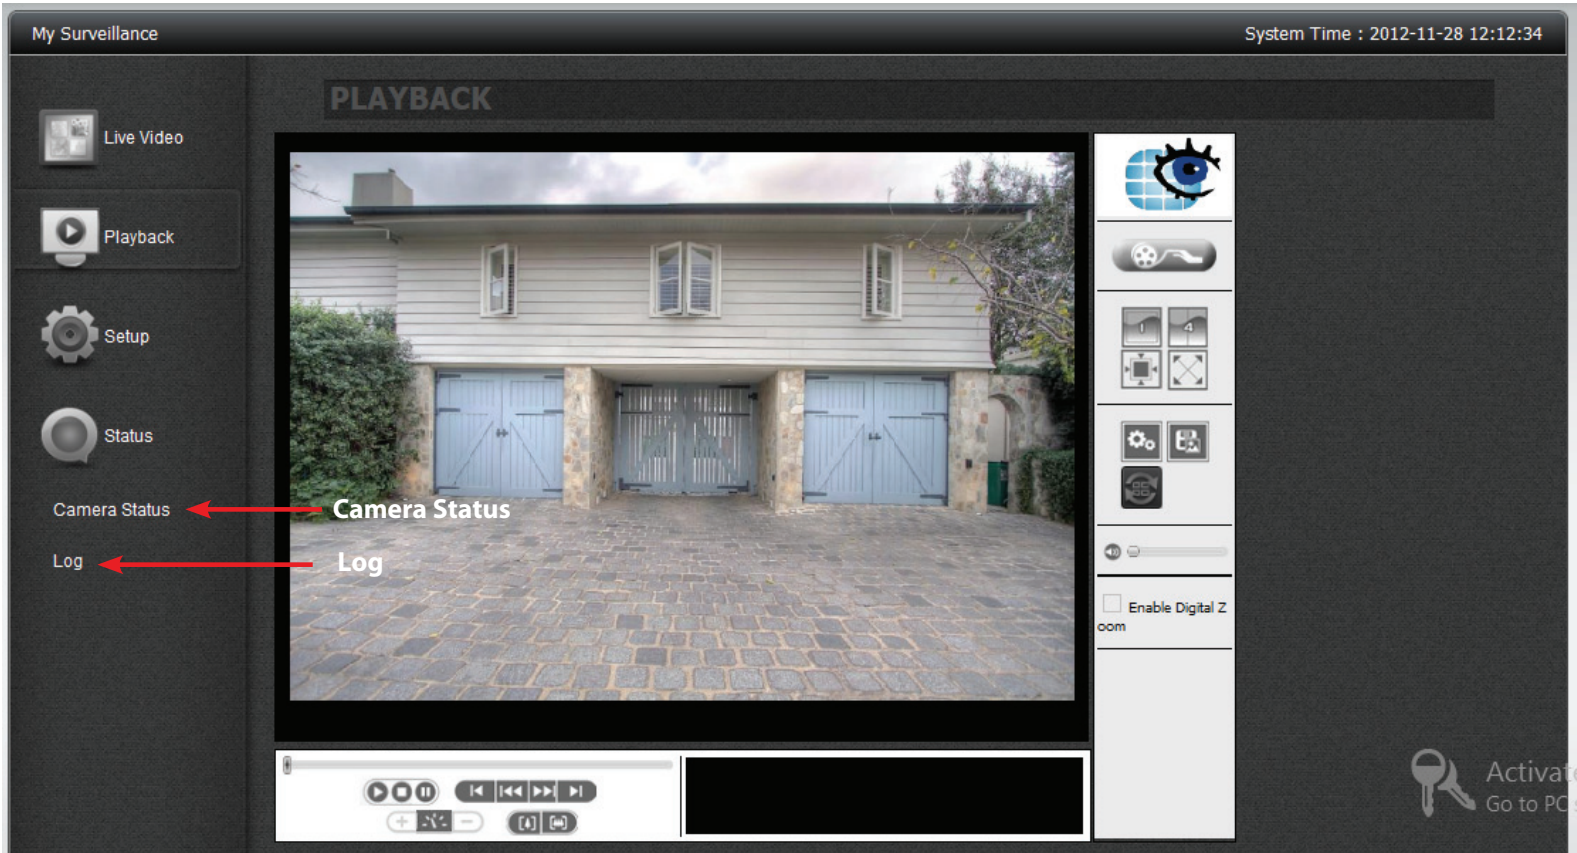

My Surveillance - Status

The Status configuration window reports on two pieces of material - Camera Status and Log. The Camera Status shows the current status of all the cameras connected to the network, and Log shows a history of all significant events of the Surveillance Center software. You can filter the events shown in the log by checking the checkbox for Type, Camera or Date. You also have the option to backup the log to a text file and clear the log.

The screenshot displays the 'My Surveillance' application interface. The top bar shows 'System Time : 2012-11-29 14:35:35'. The left sidebar contains navigation icons for Live Video, Playback, Setup, Status, Camera Status, and Log. The main content area is divided into two sections: 'CAMERA STATUS' and 'LOG'.

CAMERA STATUS

Index	Name	Address	Connection Status	Recording Status	Frame Rate	Bit Rate
1	DCS-930L	192.168.0.101	Disconnected	No Record	0 fps	0 Kbps
2	--none--		Disconnected	No Record	0 fps	0 Kbps
3	--none--		Disconnected	No Record	0 fps	0 Kbps
4	--none--		Disconnected	No Record	0 fps	0 Kbps
Total:					0 Kbps	

LOG

Buttons: Clear Log, Backup Log

Filter: ☐ Type ☐ Information ☐ Camera ☐ DCS-930L ☐ Date 2012/11/29 - 2012/11/29


Type	Date & Time	Info
Information	2012/11/29 14:42:23	Configure schedule of camera [DCS-930L].
Information	2012/11/29 14:42:23	Configure record basic information of camera [DCS-930L].
Information	2012/11/29 14:42:22	Configure record basic information of camera [DCS-930L].
Information	2012/11/29 14:42:22	Change camera [DCS-930L].
Information	2012/11/29 14:40:32	Delete camera [DCS-930L].
Information	2012/11/29 14:00:01	Stop schedule record for camera [DCS-930L].
Information	2012/11/29 11:52:50	Start schedule record for camera [DCS-930L].
Information	2012/11/29 11:52:49	Configure schedule of camera [DCS-930L].
Information	2012/11/29 11:52:49	Configure record basic information of camera [DCS-930L].
Error	2012/11/29 11:50:20	Backup added of home failed.
Information	2012/11/29 11:32:22	Emap set of default.
Information	2012/11/29 11:15:10	Emap uploaded.
Information	2012/11/29 11:15:10	Emap uploaded.
Information	2012/11/29 08:04:54	Surveillance station package started.

Page 1 of 2 | Displaying 1 to 15 of 22 items


Activate Windows
Go to PC settings

Section 4 - Configuration

 
To backup your files, click the **Backup Log** button.

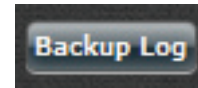

Select the **Save As** folder location and click **Save**.

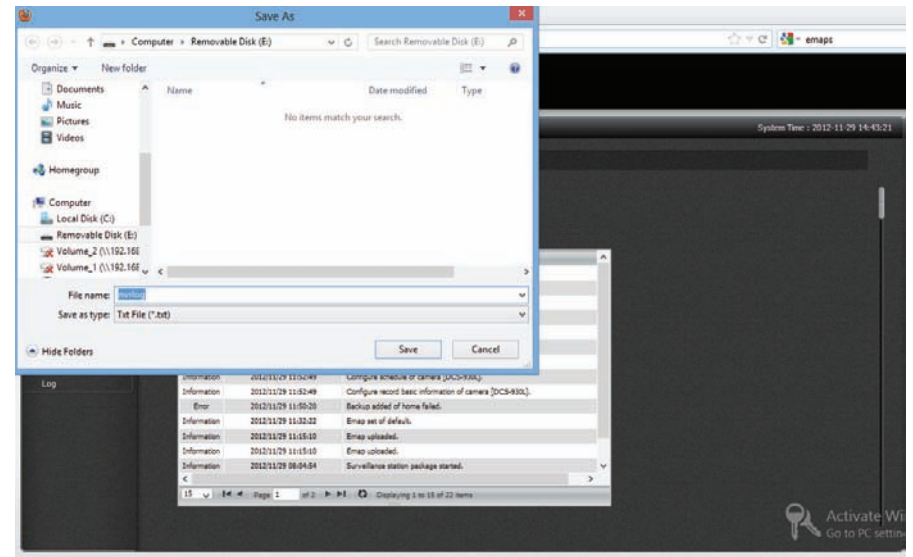


The Log is successfully saved.

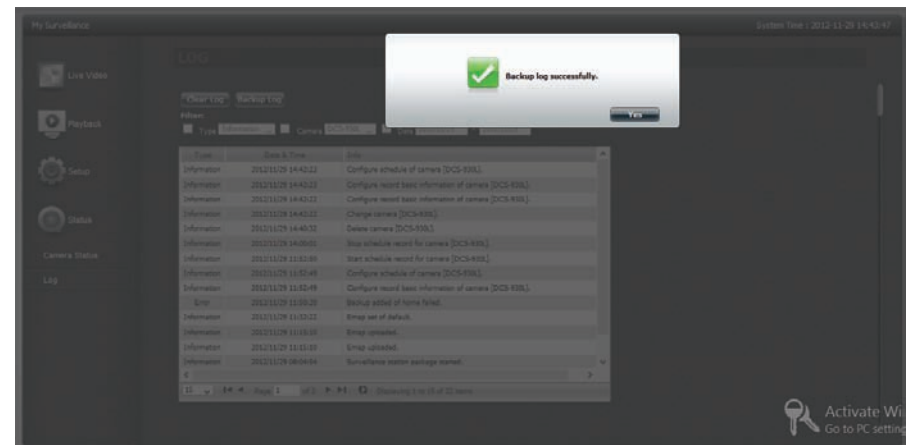


Section 4 - Configuration

 
To clear your files, click the **Clear Log** button.

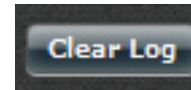

You are prompted to verify if you want to clear the log. Click Yes, to continue.

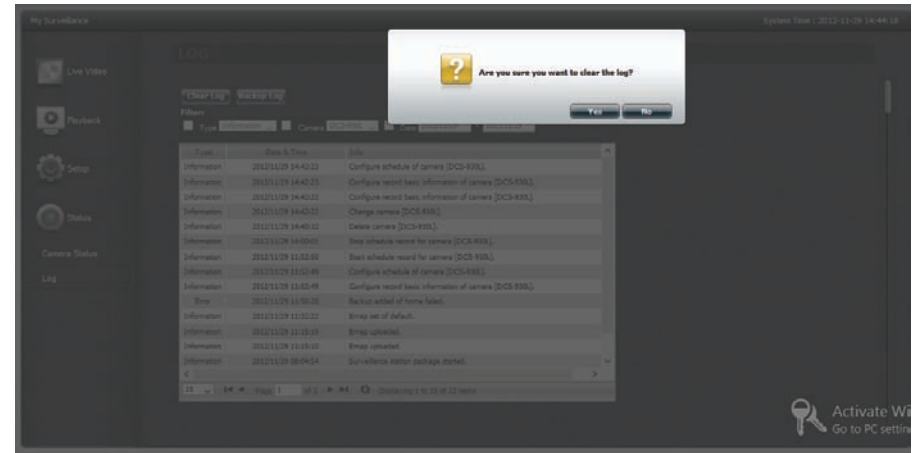


Now you can see that your previous log disappears.

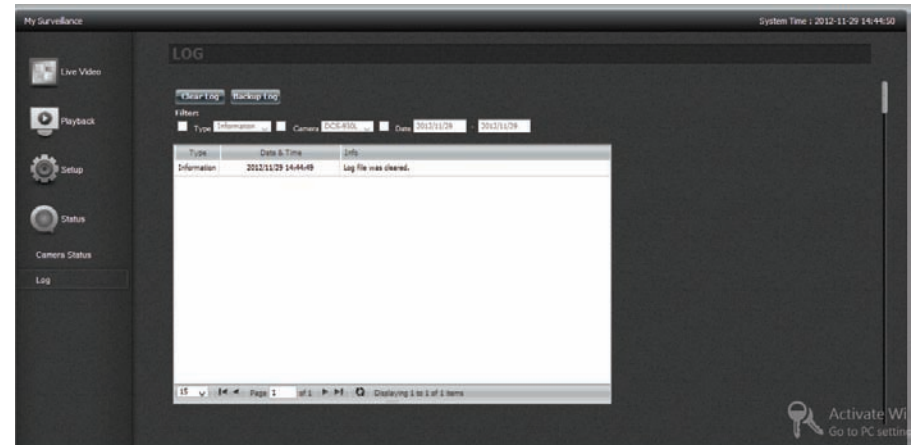

My Favorites Application

The My Favorites Application section allows users to add applications to the Home section so users can easily access these applications. Follow these easy steps to setup Favorite Applications on the Home screen.

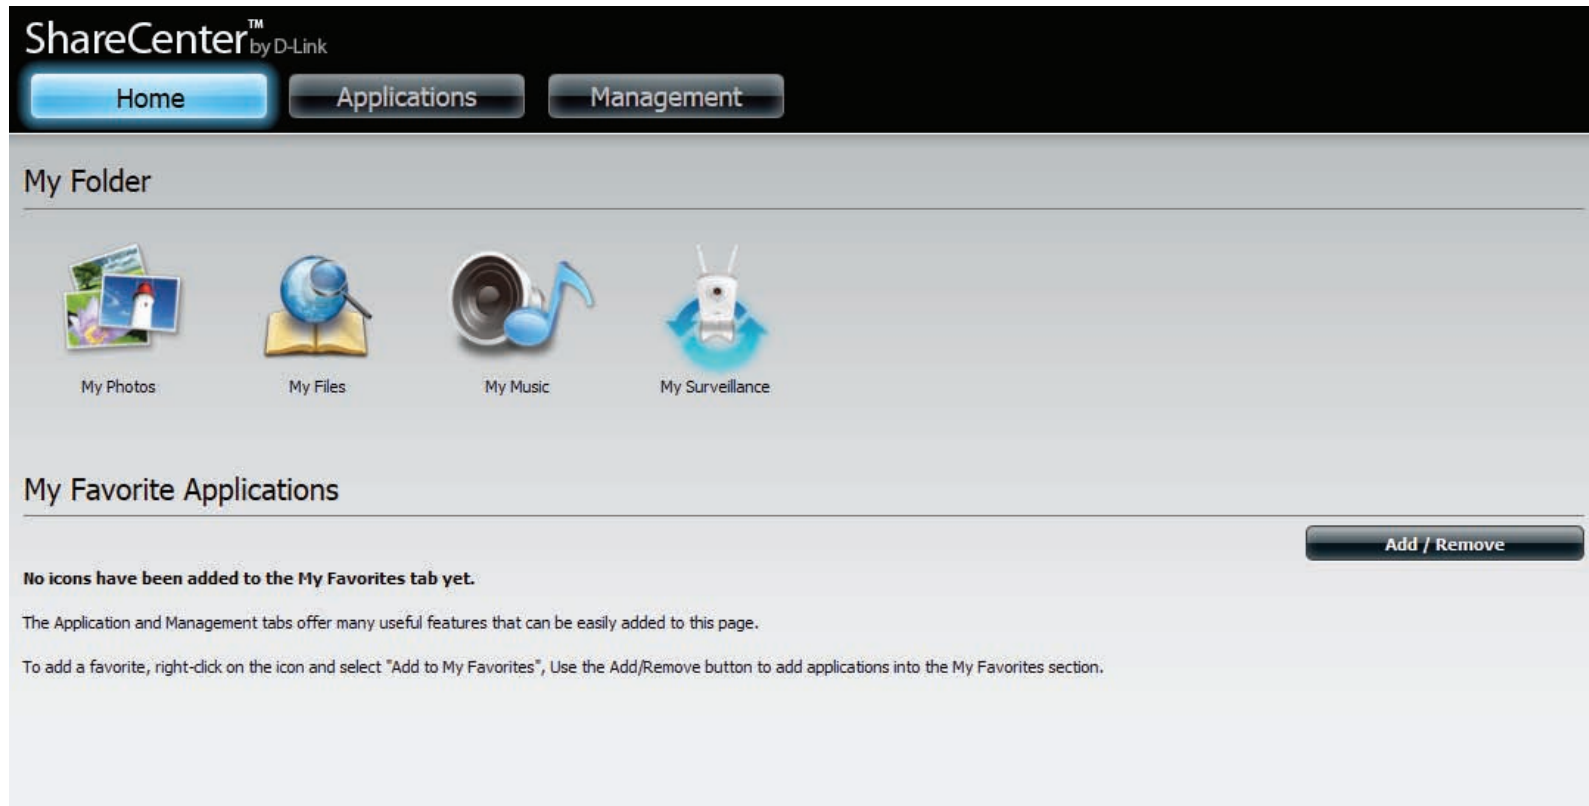


Adding Applications

Click the **Add/Remove** button to add **Applications**. Click the **checkbox** under each application you wish to add to the Home screen. Click **Apply** to continue.



The **shortcut** is now created on the Home screen. Click the **shortcut** to access the application.

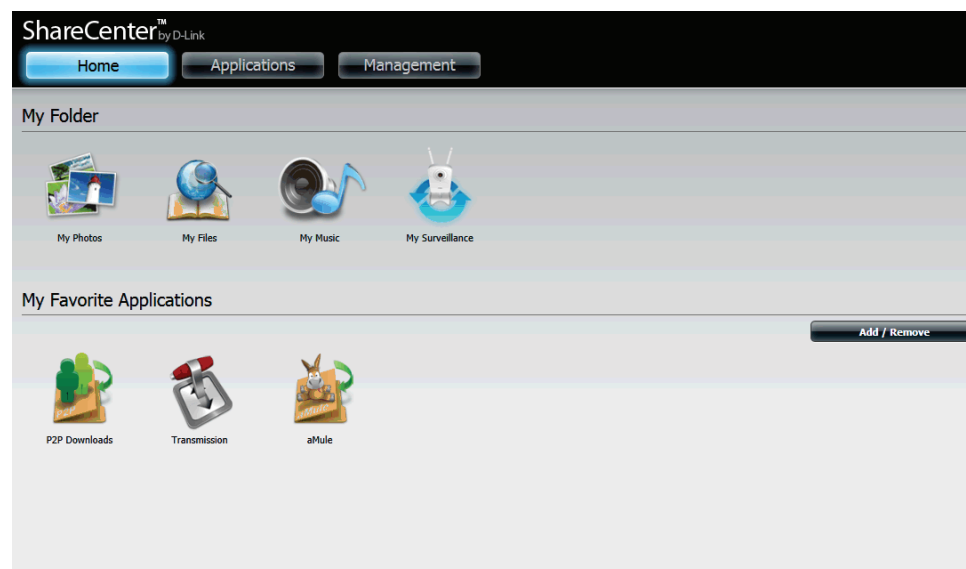

Applications

FTP/HTTP Downloads

Schedule file and folder backups from an FTP server, web server, or local network share. Always test the URL before applying changes. This will help to ensure a successful download.

Category: Use the radio buttons to select the type of server that the source files/folders for the Schedule Downloads are located on. Click the **HTTP** radio button to specify that the source files are located on a web server or click the **FTP** radio button to specify that the source files/folders are located on an FTP server.


Login Method: Enter the login information for the site that contains the files that you want to schedule for downloading. If no password is required, choose **Anonymous**. If a password is required, choose **Account** and enter the user name and password.

Username: Enter the user name here.

Password: Enter the password here.


Type: Select either **File** or **Folder** from the drop-down list depending on whether you wish to download a file or a folder.

URL: Enter the FTP/HTTP site address for the scheduled download. Click on **Test** to verify access to the site address and file/folder. If you selected **File** from the above drop-down list, you must specify the exact file in the URL path, including the file extension. (e.g. http://example.com/test/testfile.txt).

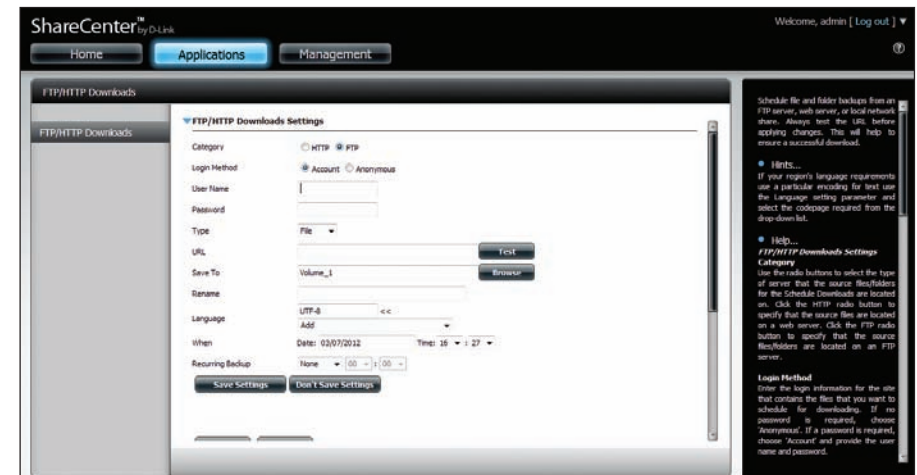

Category	<input checked="" type="radio"/> HTTP <input type="radio"/> FTP	
URL	<input type="text"/>	<input type="button" value="Test"/>
Save To	<input type="text"/>	<input type="button" value="Browse"/>
Rename	<input type="text"/>	
When	Date: <input type="text" value="10/26/2010"/>	Time: <input type="text" value="08"/> : <input type="text" value="35"/>
Recurring Backup	<input type="text" value="None"/> : <input type="text" value="00"/> : <input type="text" value="00"/>	
<input type="button" value="Save Settings"/>		<input type="button" value="Don't Save Settings"/>

- Save To:** Enter the specific destination on the internal drives for the downloaded files or folders to be saved to. Click **Browse** to browse the internal drives.
- Rename:** If you would like to rename a file after it has been downloaded from the specified HTTP/FTP server, enter the name you would like the file to be renamed to in this field.
- Language:** Use the drop-down menu to select the language used in the file or folder that you are trying to download.
- When:** Select the date and time for the download to occur.
- Recurring Backup:** If you wish to schedule a recurring backup, select the desired interval (daily, weekly, or monthly) and the time you want the backup to start.
- Schedule Download List:** Pending and completed download events will be listed here. The current status for each event is displayed here. In addition, there is an option to delete a download event at any time. Current download statistics, such as % completed and download speed, are displayed for each event. A refresh button is also provided to produce updated listings at any time.

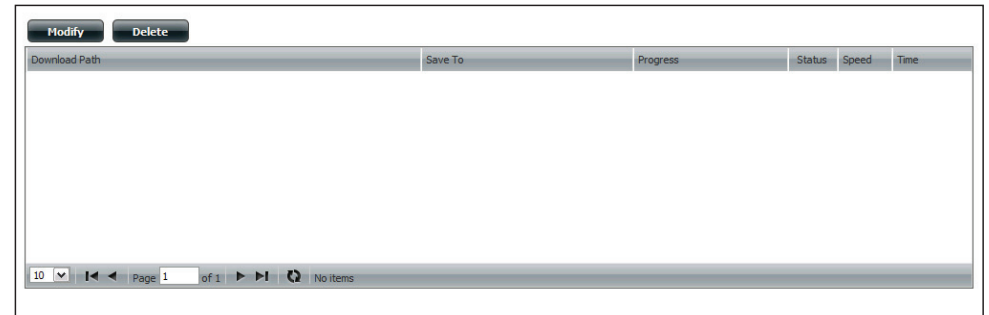

Remote Backups

The Remote Backups section allows you to back up your ShareCenter™ to another ShareCenter™, Linux Server or vice versa from a remote ShareCenter™ or Linux Server to your ShareCenter™. Use the **Create** button in the remote backups list to start a wizard where you can configure the remote backup.

Enable remote backup service: Check this box to enable the remote backup server functionality to allow a remote NAS or Linux server to backup from/to your ShareCenter™.

Note: *If you are not using the Remote Backup functionality of your ShareCenter™ leave this box unchecked so that your ShareCenter's™ performance will not be affected by the additional overhead used by this process.*

Password: Enter a password that the remote client will use to access your NAS for backup.

Remote Backups list: This is the list of remote backup jobs.

Create: Click the **Create** button to build a new remote backup job on your ShareCenter™.

Modify: Click this button to make changes to your existing Remote Backup jobs in the Remote Backup list. You must select the remote backup job first and then click the **Modify** button.

Delete: To remove a Remote Backup job select the job in the list and then click the **Delete** button.


The screenshot shows the 'Remote Backups' configuration window. On the left is a sidebar with 'Server' and 'Remote Backups' options. The main area is titled 'Remote Backup Server' and contains a checkbox labeled 'Enable remote backup service' which is checked. Below the checkbox is a password field with a masked password '.....'. At the bottom are two buttons: 'Save Settings' and 'Don't Save Settings'.

The screenshot shows the 'Remote Backups' list window. At the top are three buttons: 'Create', 'Modify', and 'Delete'. Below them is a table with columns: 'Task', 'Schedule', 'Status', 'Enable / Disable', 'Backup Now', and 'Recovery'. The table is currently empty. At the bottom is a pagination bar showing 'Page 1 of 1' and 'No items'.

Create Wizard

When you click the **Create** button above the Remote Backup list a wizard will start, guiding you to configure a new Remote Backup job.

Welcome: Displays the steps of the wizard.

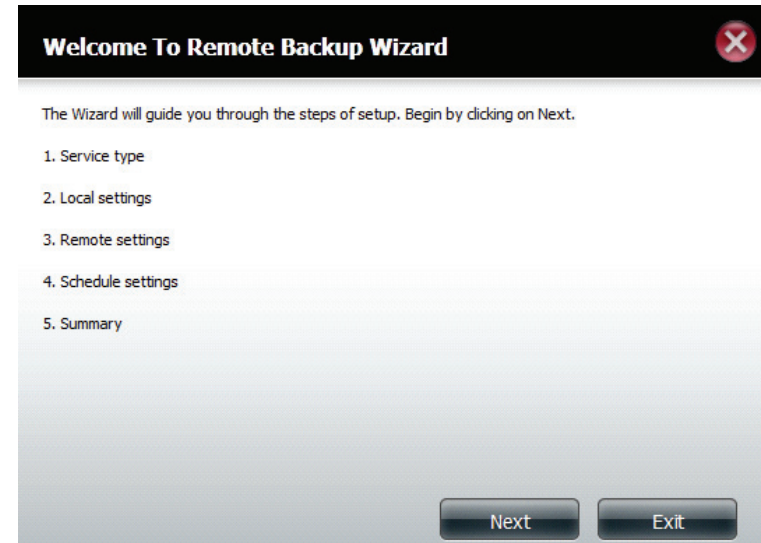


Service Type: **NAS to NAS:** backup from the local NAS to a remote NAS or vice versa.

NAS to Linux backup from the local NAS to a Linux file system or vice versa.

Local to Remote: sets the backup source as the local NAS and the target destination for the backup files as the remote NAS or Linux file system.

Remote To Local: sets the backup source as the remote NAS or Linux file system and the target destination for the backup files as the local NAS.

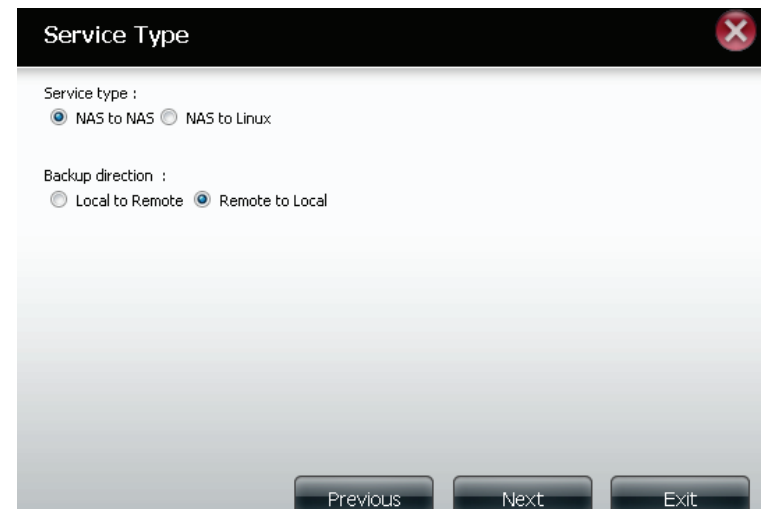

Local Settings: **Task (Name):** the name used to refer to the backup job which will be listed later in the Remote Backup list.

Folder Path: select a local network share folder or file as the target or source for the backup job.


Remote Settings: **Remote IP:** The backup process uses Rsync protocol and needs to know the IP address of the destination source or target device for the backup. Input the IP of the remote NAS or Linux file system.

Password: Enter the password that is used by the remote backup server on the remote NAS or Linux file system.


Enable Encryption: Checking this box will enable SSH encryption of the files that are transferred (backed up) over the network between the local and remote devices.

Ignore existing file(s): Checking this box prevents the backup process from writing over any files in the target file system that are not part of the backup files or folders. Therefore any existing files in the target system are preserved.

Incremental backup support Num (#): Checking this box provides multiple backup-capability at scheduled times. The first backup in an incremental series captures all the files for backup. Subsequent backups are incremental in that only the files and the folders that have changed in the backup source since the last incremental backup will need to be backed up. Each incremental backup builds a complete snapshot of the backup source however only the initial backup contains all the original files and folders. The subsequent backups in the incremental series contain new files and folders plus the links to the first incremental backup.

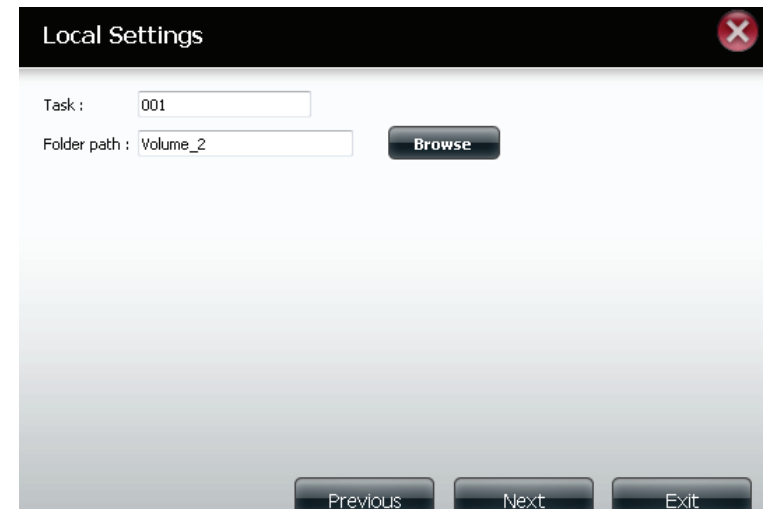

The 'Local Settings' dialog box has a title bar with a close button. It contains two text input fields: 'Task :' with the value '001' and 'Folder path :' with the value 'Volume_2'. A 'Browse' button is to the right of the 'Folder path' field. At the bottom, there are three buttons: 'Previous', 'Next', and 'Exit'.

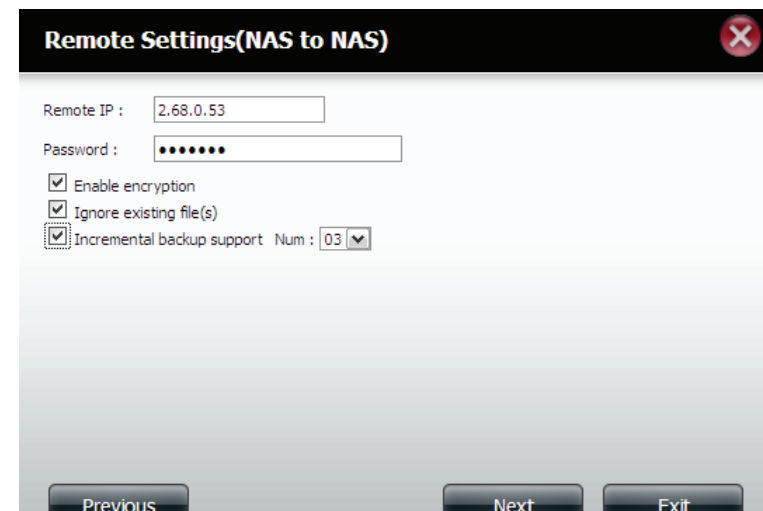


The 'Remote Settings(NAS to NAS)' dialog box has a title bar with a close button. It contains a 'Remote IP :' field with the value '2.68.0.53' and a 'Password :' field with masked characters. Below these are three checked checkboxes: 'Enable encryption', 'Ignore existing file(s)', and 'Incremental backup support'. The 'Incremental backup support' checkbox has a 'Num :' dropdown menu set to '03'. At the bottom, there are three buttons: 'Previous', 'Next', and 'Exit'.

Remote Settings: **Remote Path:** Using the **Browse** button, select the file system (folder) path to the remote target or source system for backup.


Schedule Settings: **Scheduled Mode:** **Manual:** Check either **Yes** or **No** selection below to start the backup (yes) immediately on completion of the wizard or (no) manually start the backup from the Remote Backup list.

Once - Select this option to run the Remote Backup once at a specific date and time set here.

Scheduled: Select this option to set the backup to occur daily, weekly, monthly per a specific schedule.

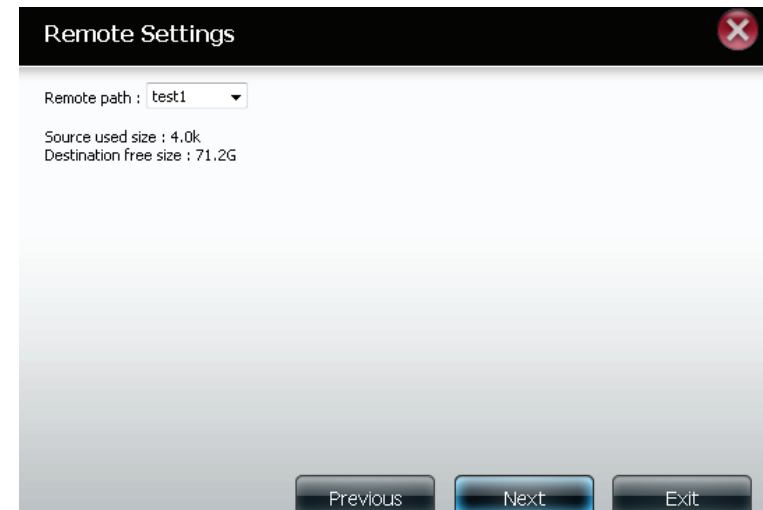

The 'Remote Settings' dialog box has a black title bar with a red close button. The main area is light gray. It contains a 'Remote path' dropdown menu with 'test1' selected. Below it, it shows 'Source used size : 4.0k' and 'Destination free size : 71.2G'. At the bottom, there are three buttons: 'Previous', 'Next' (highlighted with a blue border), and 'Exit'.

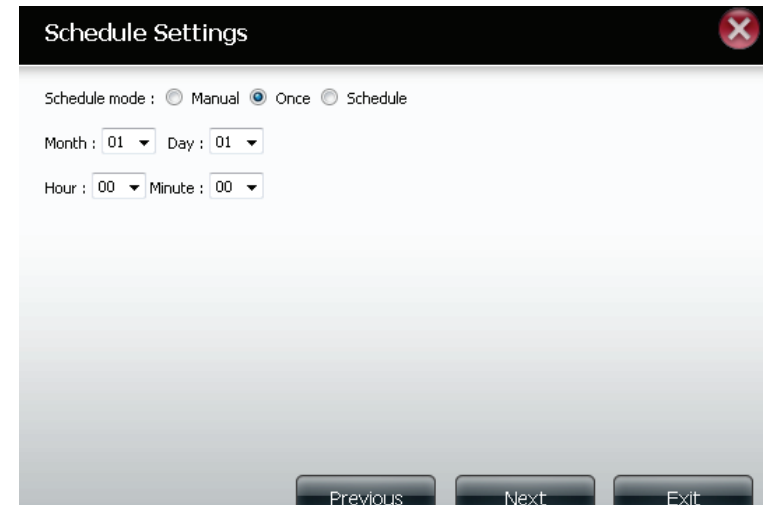

The 'Schedule Settings' dialog box has a black title bar with a red close button. The main area is light gray. It contains a 'Schedule mode' section with three radio buttons: 'Manual', 'Once' (selected), and 'Schedule'. Below this, there are dropdown menus for 'Month' (01), 'Day' (01), 'Hour' (00), and 'Minute' (00). At the bottom, there are three buttons: 'Previous', 'Next' (highlighted with a blue border), and 'Exit'.

Finished: Click on the **Finish** button if you are satisfied with all the settings of the Backup job created. Otherwise click on the **Previous** button to go back and make changes. Alternatively click on **Exit** to end the configuration without adding a Remote Backup job.

Remote Backups list: **Task:** The name of the Remote Backup job.
Schedule: When the Remote Backup job will execute.
Status: Current status which can be

- **Ready:** The remote backup job is ready to be executed.
- **Finished:** the remote backup job has executed completely and successfully.
- **Failed:** the Remote backup job was unsuccessful during execution.



Enable/Disable: If the button shows a red circle the remote backup job is enabled. Clicking the red button will disable the remote backup job and the button will change to a green right pointing triangle. Clicking the green triangle will enable the job again.

Backup now: Clicking this button will execute the backup job immediately as long as the job is enabled.

Recovery: Clicking this button will write the backup files and folders back into the source file system from the backup target system (reverse the file direction).

Navigation buttons: Use these buttons to move up and down in the list when there are multiple jobs configured.

Refresh Button: Click this button during a backup or recovery process to monitor the progress by updating the progress completed bar.

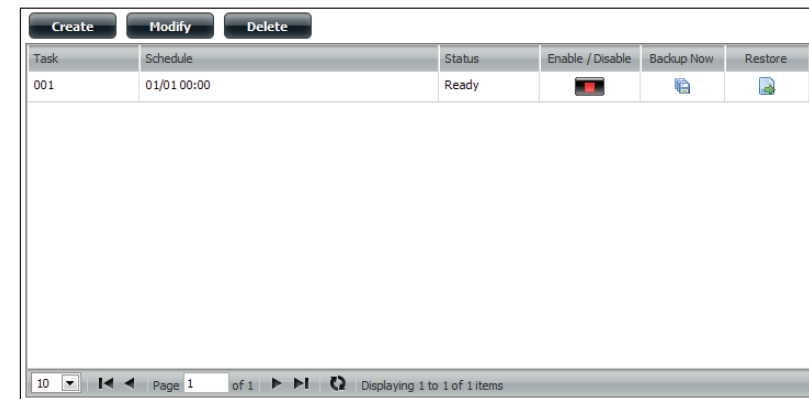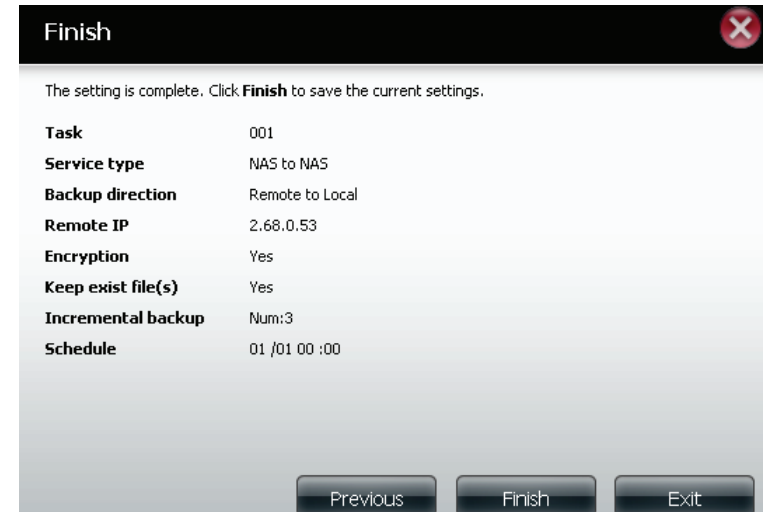

Local Backups

Schedule local file and folder backups from the local network share of the device or from the local computer. Always test the URL before applying changes. This will help to ensure a successful backup.

Category: Use the radio buttons to select the backup method. If your NAS device has two volumes you can click the **Internal Backup** radio button to backup the data from the first volume to the second volume and vice-versa. The Internal Backup feature also allows you to backup an existing folder on a volume to another folder on the same volume but nested folders in the same volume are not allowed. If you want to backup the data from your PC or another NAS device to your NAS device, click the LAN Backup radio button.


Login Method: Enter the login information for the site that contains the files that you want to schedule backups from. If no password is required choose **Anonymous**. If a password is required choose **Account** and provide the user name and password. This option is only available for LAN Backups.

Username: Enter the user name here.

Password: Enter the password here.

Type: Select **File** or **Folder**, depending on what you want to download or backup.

URL: Enter the path of the site or server you are initiating a transfer from. (e.g. **Volume_1/Test** or **\\192.168.0.32\Volume_1\Test\test.txt**).

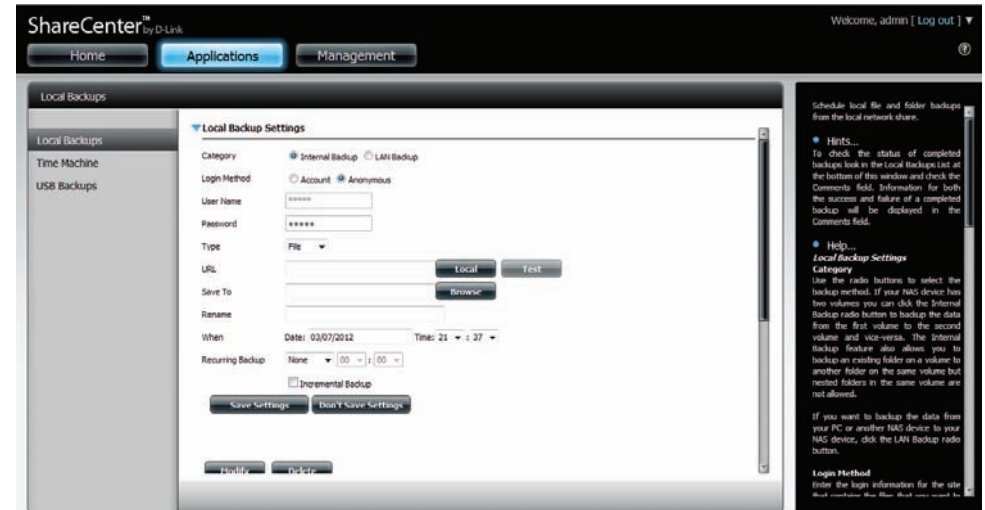

Save To: Enter a valid destination drive on the ShareCenter™, or click **Browse** to select the destination.

Rename: Enter the renamed file name here.

When: Enter the date and time you want the scheduled backup or download to initiate.

Recurring Backup: Designate the interval and time you want the backup or download to run unattended.

Incremental Backup: By default all local backups and file/folder downloads are in Overwrite mode, meaning that identical files in the destination folder will be overwritten by the source files. Checking Incremental Backup will have the ShareCenter™ compare identical file names at the source and destination. Files will only be overwritten if the source file is more recent.

Time Machine

This section allows the user to configure the ShareCenter™ so that it becomes a backup destination in the Mac OS® X Time Machine. In order to use this function, the AFP service is required. The AFP service will start automatically as soon as this function is enabled.



Enable Time Machine: Click this to enable the Time Machine function to work with a Mac OS® X Time Machine. The Time Machine Settings list will appear when this checkbox is checked.

Time Machine Settings list: A list of destination folders on the Network Shares associated with the Time Machine backup.

New: Adds a NAS folder as a Time Machine destination.

Delete: Deletes a NAS folder setup as a Time Machine destination.

Remove all Network Shares: Delete all the NAS folders in the list configured as Time Machine Destinations.

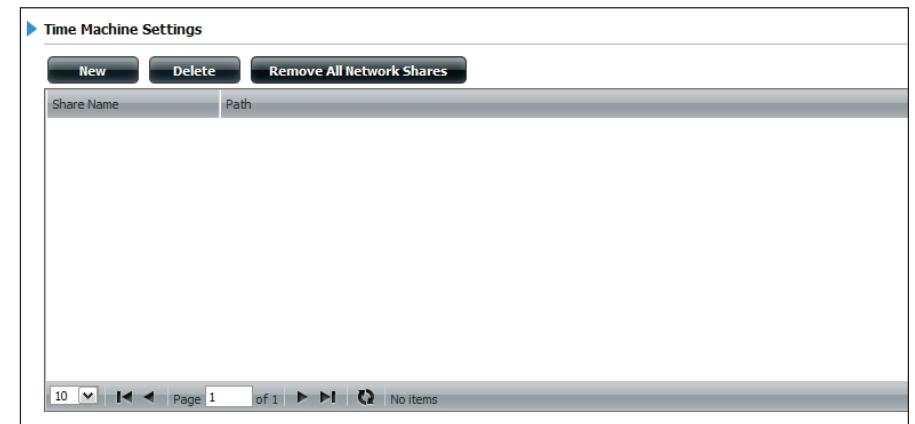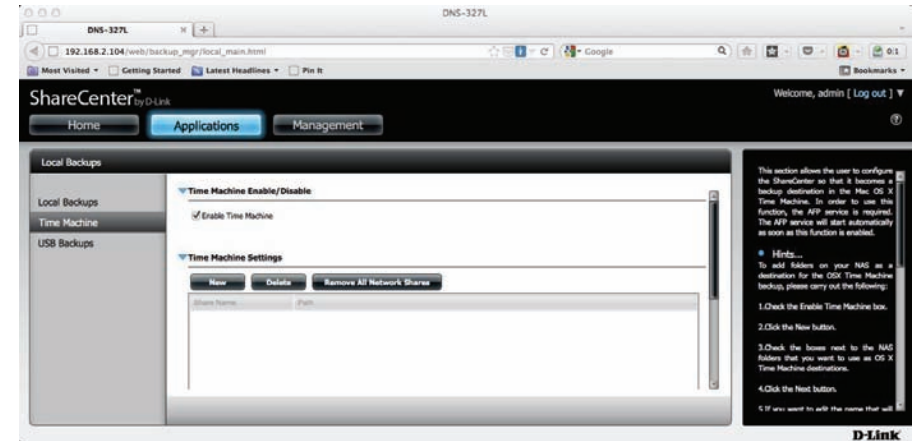

Time Machine - On the Mac



This section allows the user to configure the ShareCenter so that it becomes a backup destination in the Mac OS® X Time Machine. In order to use this function, the AFP service is required. The AFP service will start automatically as soon as this function is enabled.

Go to **Applications, Local Backups, Time Machine**. Under **Time Machine Enable/Disable** click the **Enable Time Machine** checkbox.

Click the blue arrow next to **Time Machine Settings** to see the configuration options.


Click **New** under **Time Machine Settings** to access the **Setup Wizard for Time Machine**.

Click **Next** to continue.

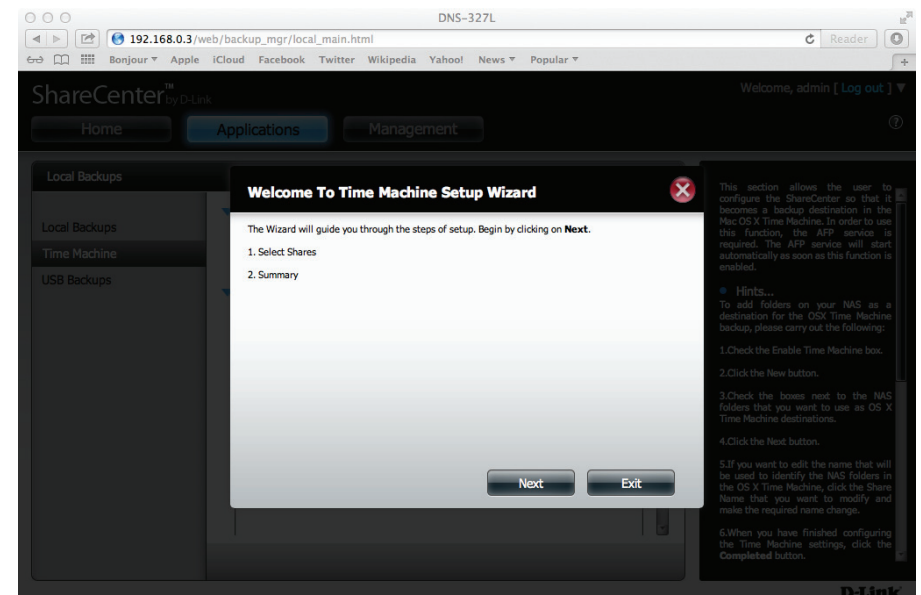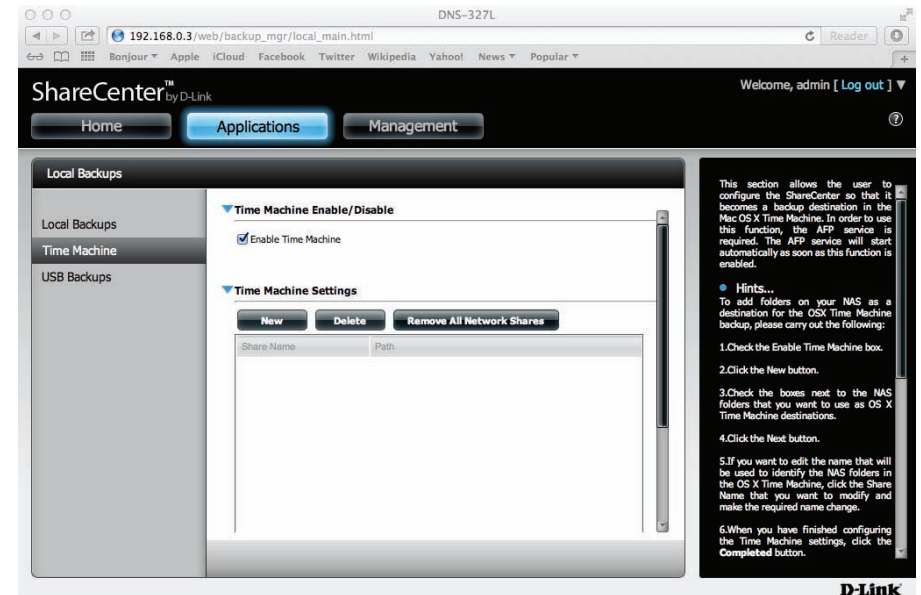


Section 4 - Configuration

Select the **Volume** you want to use for **Time Machine** and click **Next**

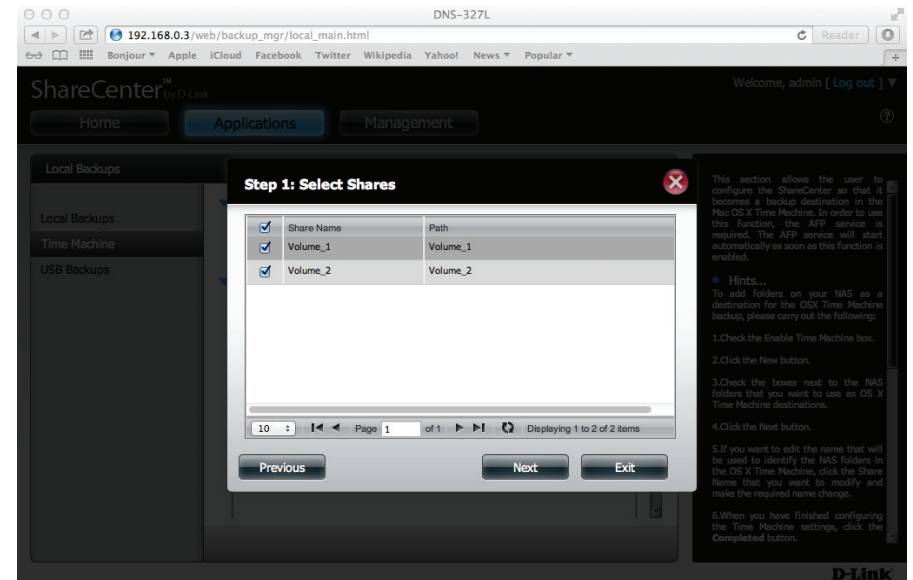


A summary displays your backup options. Click Finish.

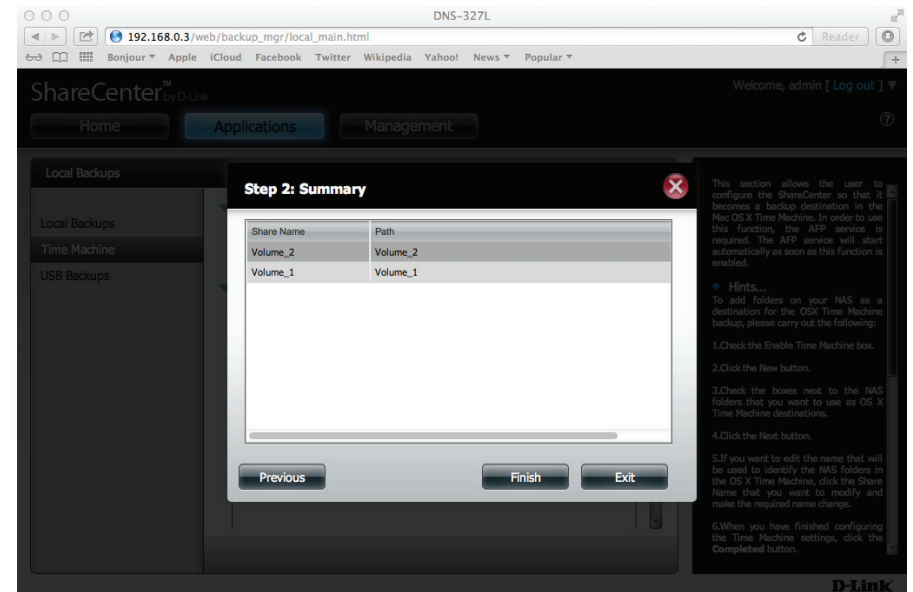


Section 4 - Configuration


The wizard returns to the Time Machine table. It displays the Volumes you just selected for the backup process.

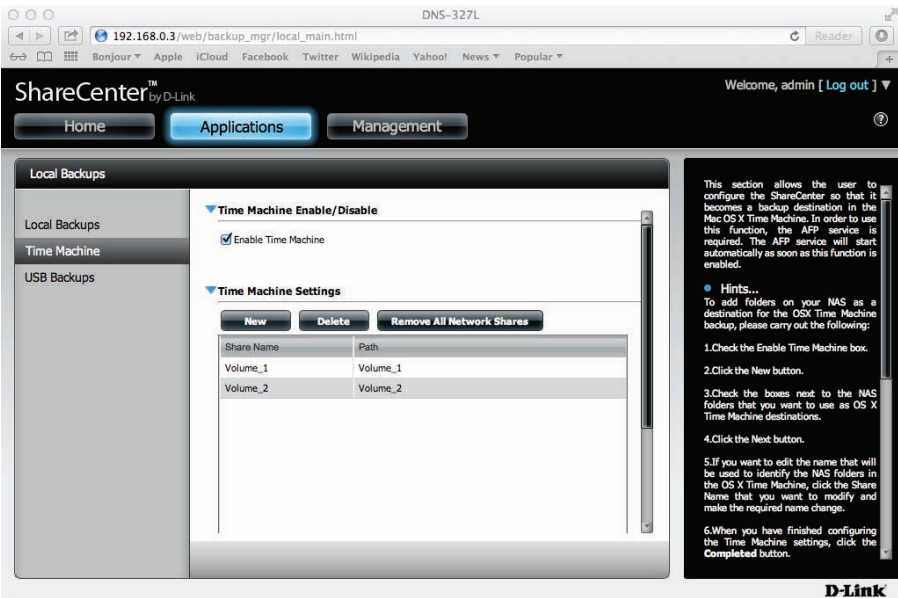


The **Volumes** are also viewable in the **Finder**.

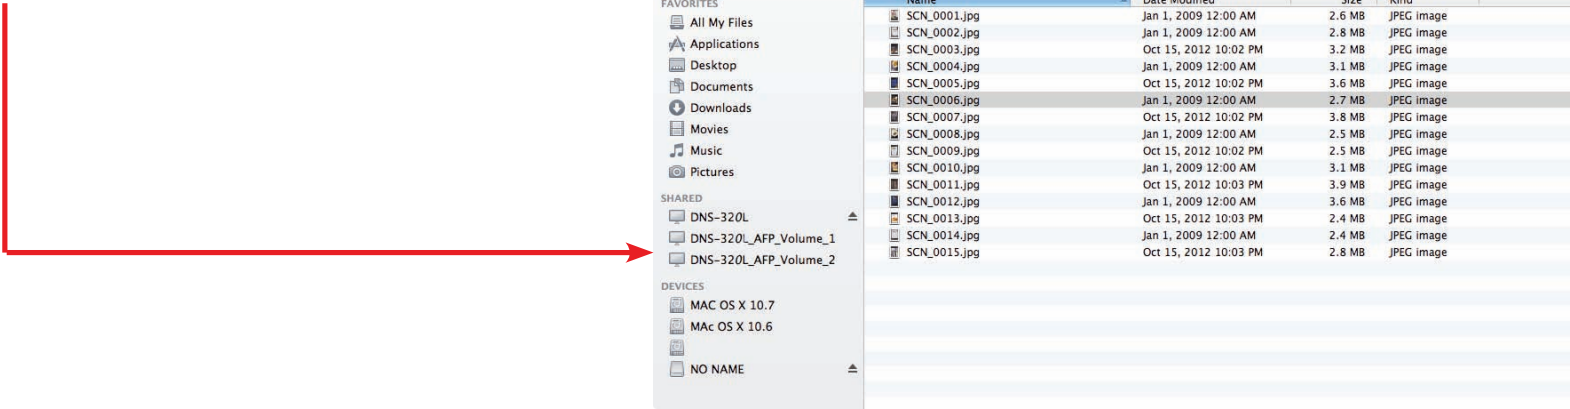


You can also browse the Volume in **Finder**.

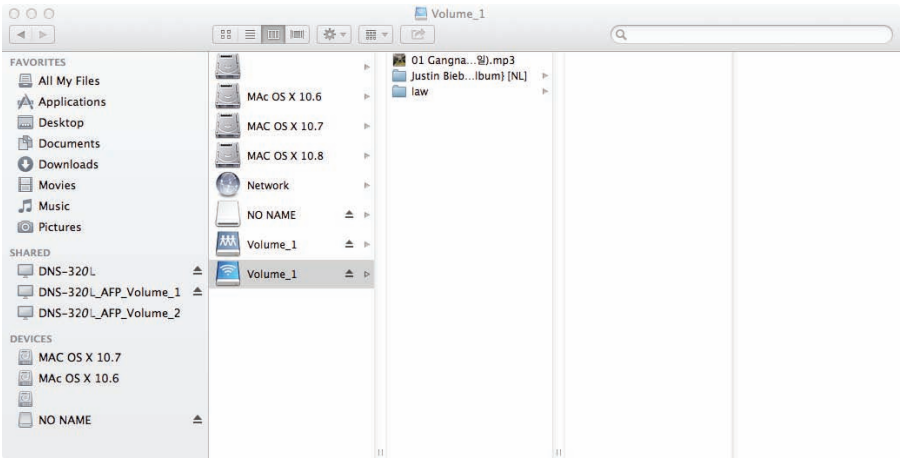


Go to **System Preferences**, click **Time Machine**.

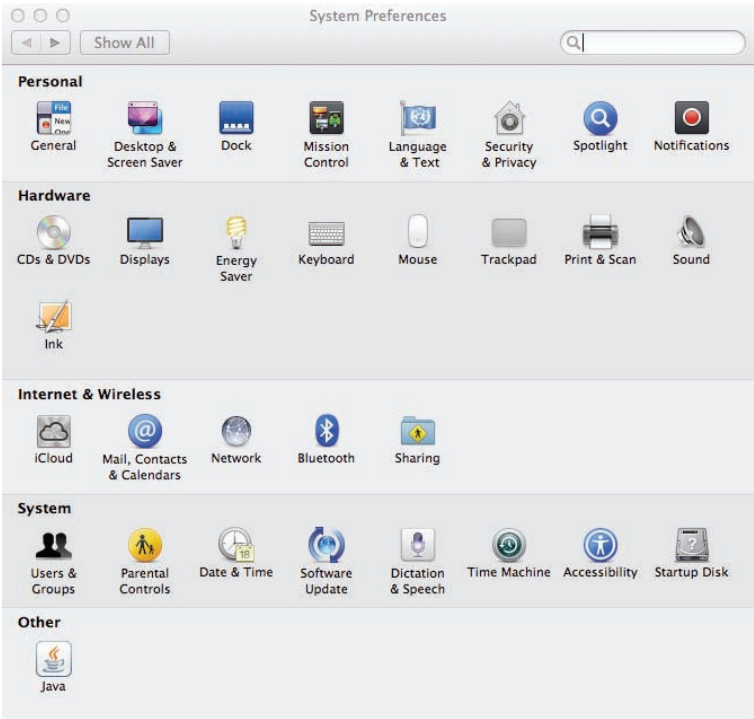


In Time Machine, click Select Backup Disk.

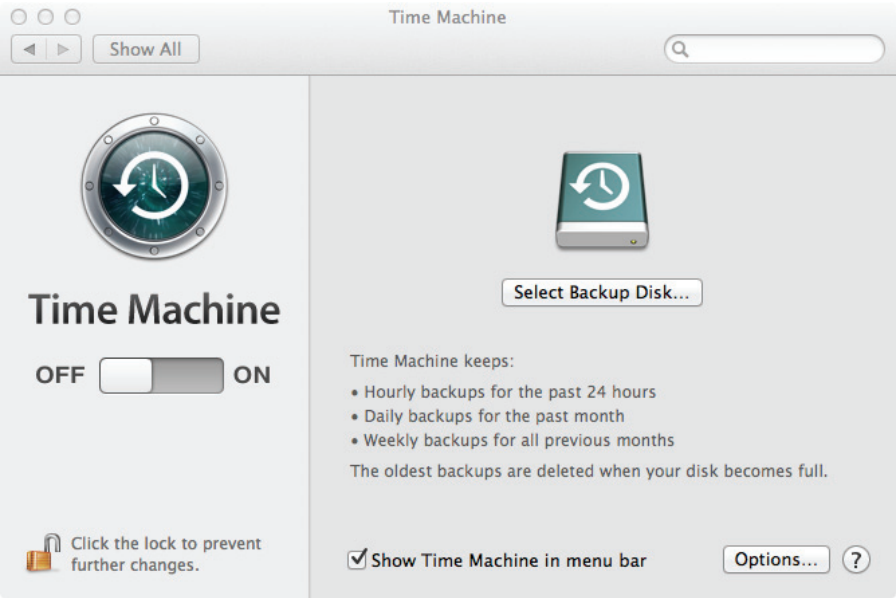


View the DNS-327L Volumes.

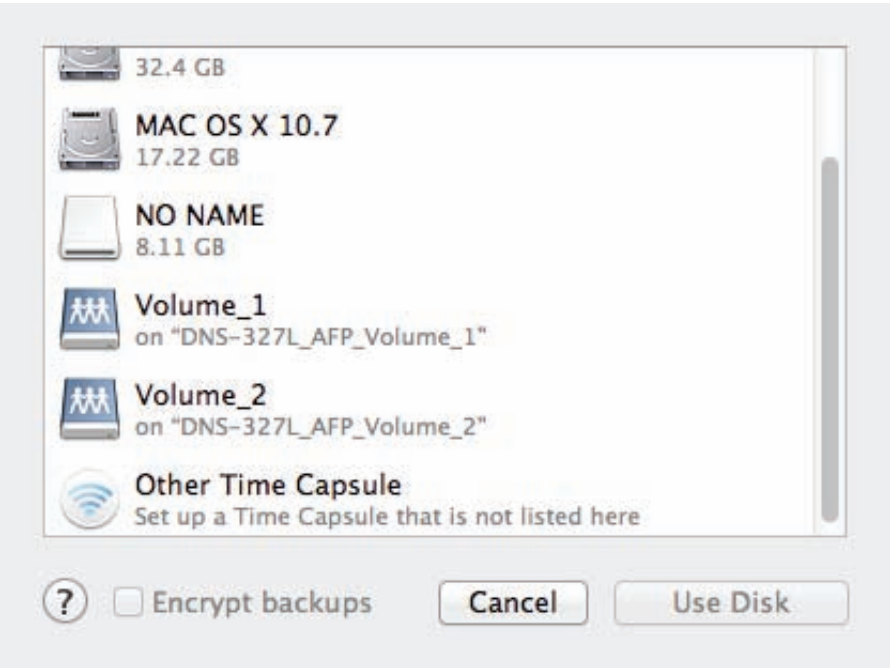

Select the **Volume** you want to use for the backup and click **Use Disk**.

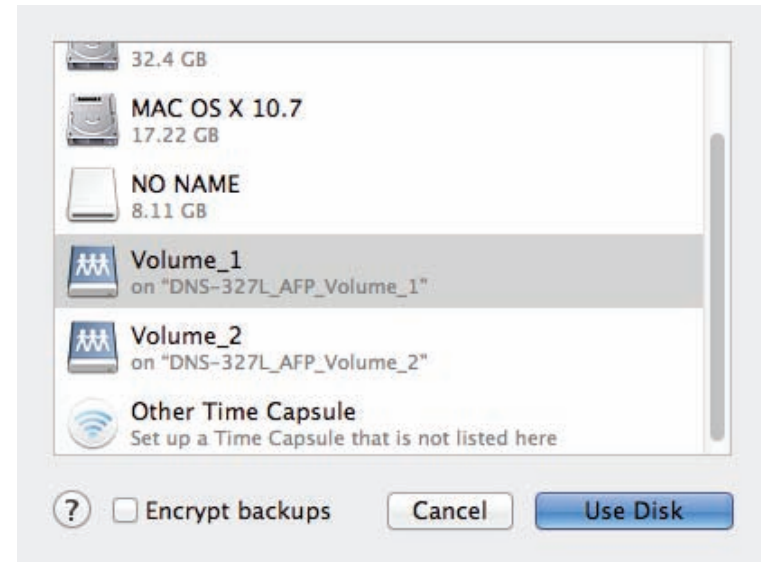

Log in to the server. Enter a **Name** and a **Password** and click **Connect**.

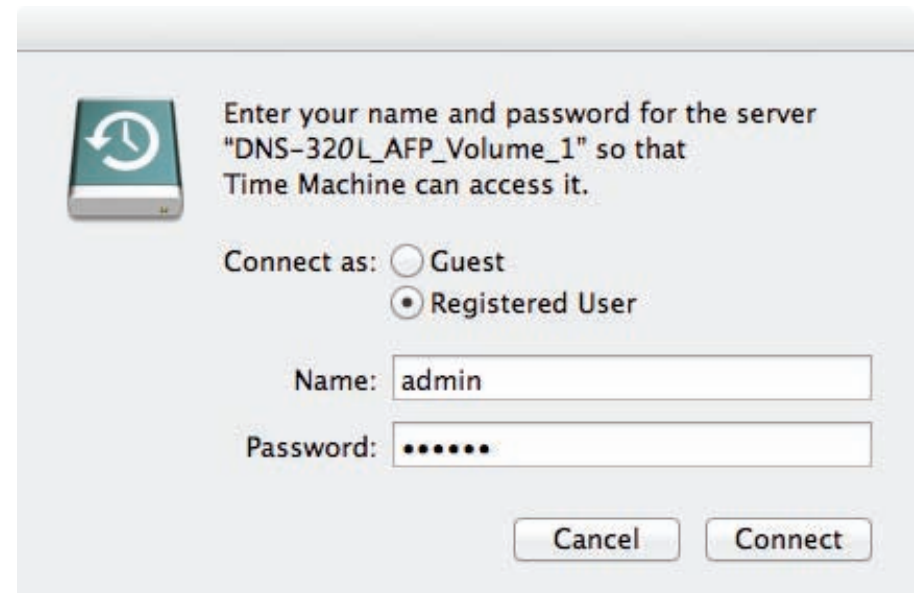

Section 4 - Configuration


The Time Machine backup process is now complete. View your settings once you have set your disk.

To deactivate **Time Machine**, move the slider to **OFF**. This, however, doesn't delete the **Volumes** from the **DNS-327L** settings.




Time Machine - Delete a Volume


To delete a **Volume** under **Time Machine Settings**, select the **Volume** you want to delete - it turns red. Click the **Delete** button.

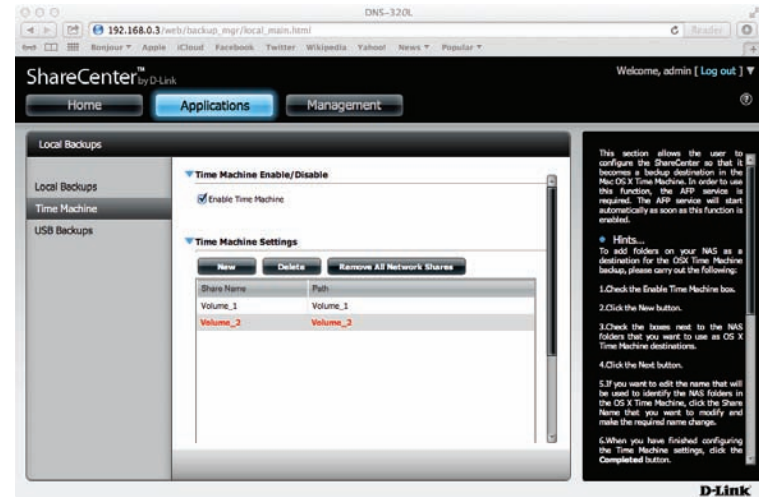


A warning message prompts you to verify if you want to delete the Volume. Click **Yes**.

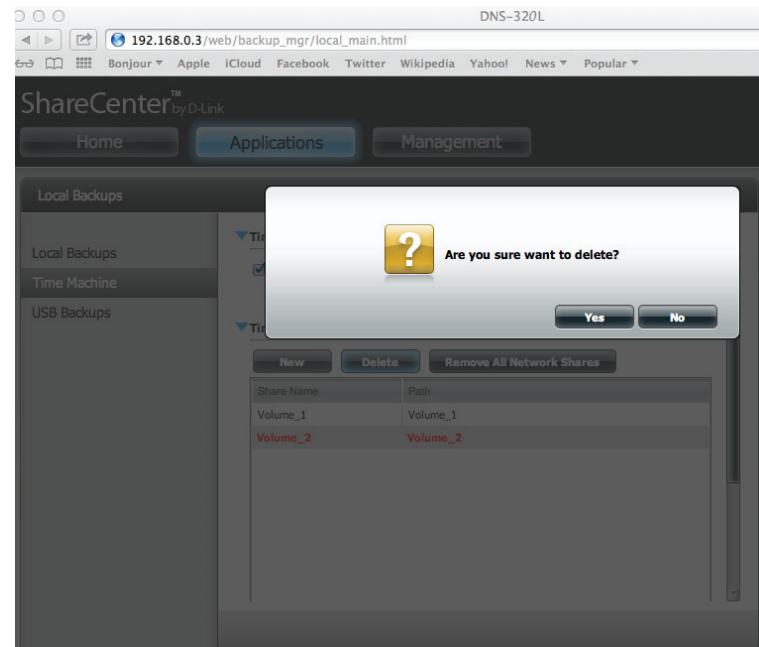


The **Volume** is no longer visible in **Finder**.

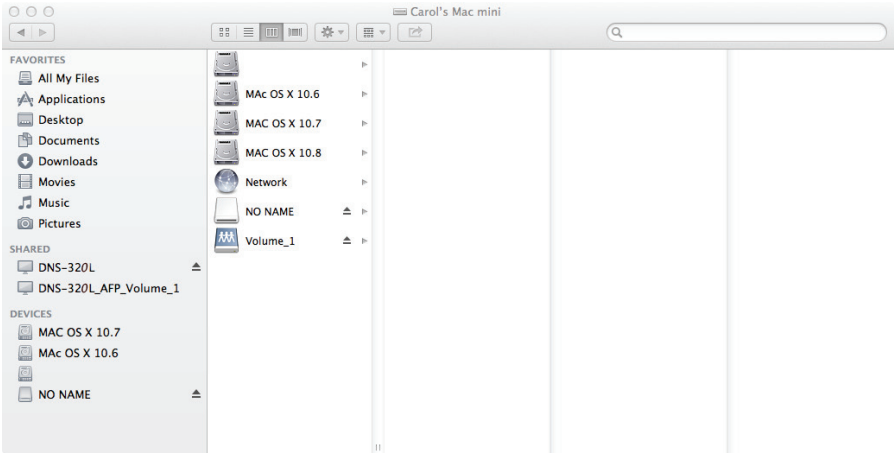

To Remove all network shares, click the **Remove All Network Shares** button. A warning message appears asking you to confirm your selection. Click **Yes** to continue.

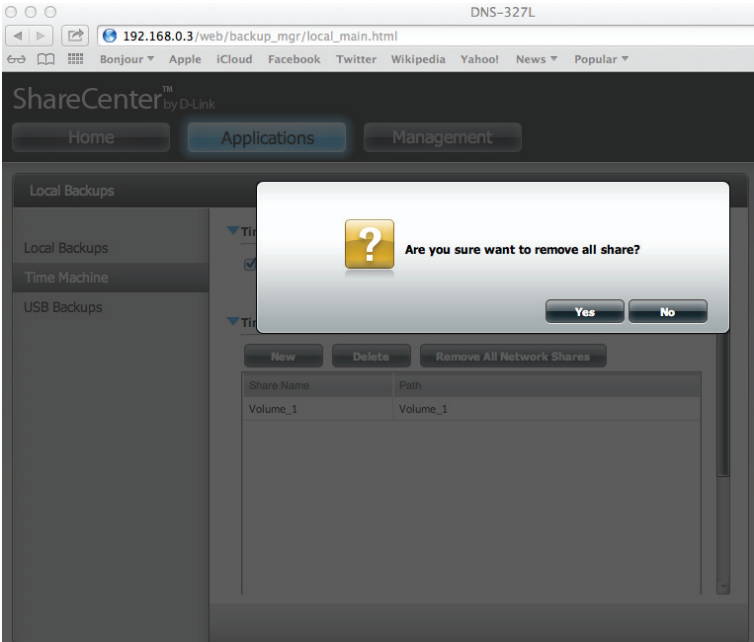

The **Time Machine** wizard shows an empty **Time Machine Settings** window.

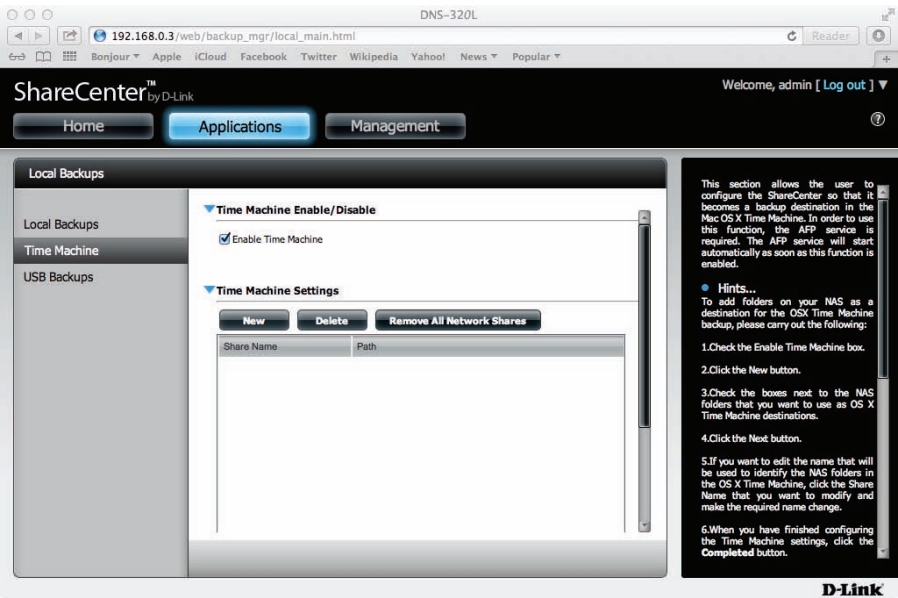

USB Backups

This section allows the user to configure the ShareCenter™ so that it becomes a backup destination for a USB device that is connected to your DNS-327L.

MTP Backups (Media Transfer Protocol) basically backup digital media content from a MTP compatible USB device such as digital cameras, MP3 players, and smartphones to your ShareCenter™. USB Backups allows you to backup data from a USB storage device to the ShareCenter™ or from the ShareCenter™ to a USB storage device.

The screenshot shows a web-based configuration interface for USB Backups. On the left is a sidebar with three menu items: 'Local Backups', 'Time Machine', and 'USB Backups', which is currently selected and highlighted. The main content area is titled 'USB Backups' and is divided into two sections. The first section, 'MTP Backups', is expanded and contains the following controls: a toggle for 'MTP Backups' set to 'Disable' (with 'Enable' as an option), a 'Destination' field containing 'Volume_1' with a 'Browse' button next to it, a 'Status' field showing '--', and two buttons at the bottom: 'Save Settings' and 'Don't Save Settings'. The second section, 'USB Backups', is collapsed and currently empty.


MTP Backups

MTP Backups: Click **Enable** to allow your ShareCenter™ to copy digital media content from a MTP USB device.

Destination: Click **Browse** to select a folder on your ShareCenter™ for the backup data to be saved to.

Status: Displays the current MTP backup status.

Click on the **Save Settings** button to save the MTP Backups settings.

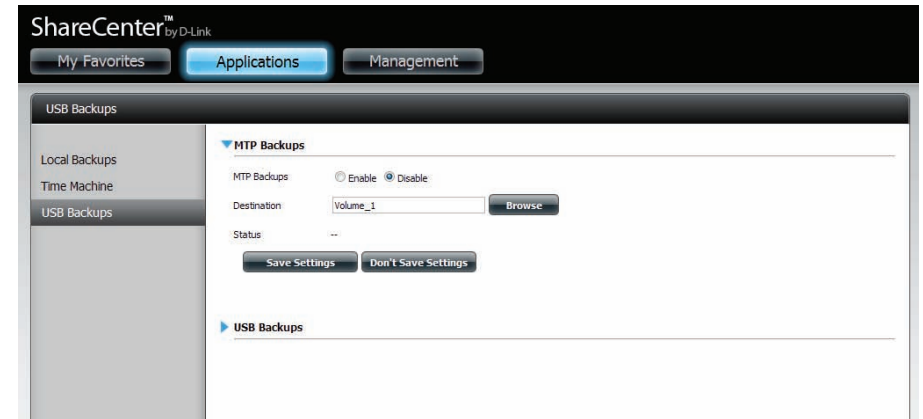

USB Backups

USB Backups: Click **Enable** to allow your ShareCenter™ to copy data from/to a USB storage device.

Category: Select either **USB to NAS** (backup from the USB storage device to the ShareCenter™) or **NAS to USB** (backup from the ShareCenter™ to the USB storage device).


Source: Click **Browse** to select a folder as the source folder for the backups.

Destination: Click **Browse** to select a folder as the destination folder for the backups.

Type: Select **Copy** to create a new folder in the destination folder. Select **Synchronize** to overwrite all the files in the existing USB folder named USBDisk1_1.

Status: Displays the current USB backup status.

Click on the **Save Settings** button to save the USB Backups settings.

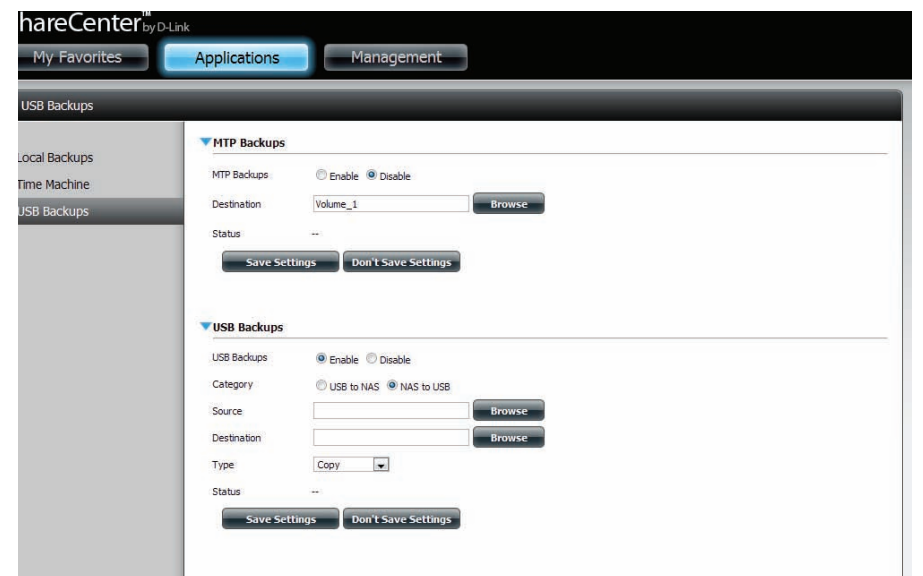


MTP Backup Process


1. Connect a MTP USB device to the USB port on the back panel of the device. The DNS-327L will enter backup mode if MTP Backups has been enabled in the MTP backup settings.



2. Press the **USB** button to start the backup process. The white USB LED flashes briefly to display that the backup is in the process. The ShareCenter™ will create a new folder in the destination folder that you selected in the MTP backups settings and will copy all the media files from the MTP USB device to this folder. At this time the USB LED remains white until the device is disconnected.

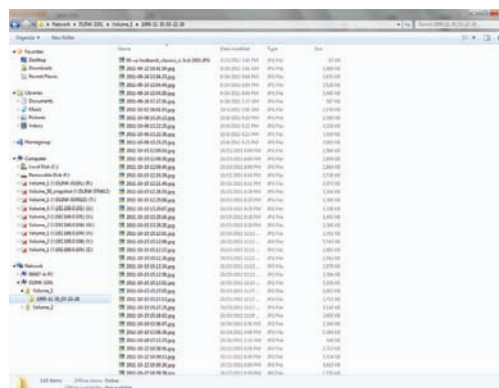

3. Go to System Management, USB Devices. Under USB Storage Information, you will see detailed information on the device you plugged into the DNS-327L. You can connect an Android device but enable USB debugging.

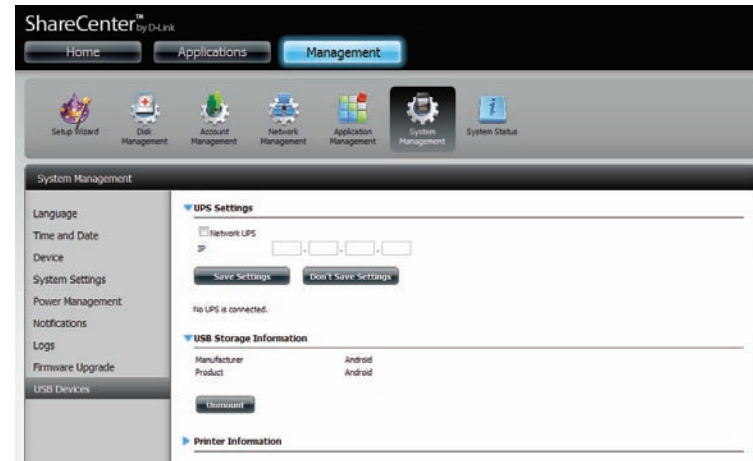

4. When the backup is complete, the flashing white LED will become solid white. Click and hold the USB button at the front for over 5 seconds and the DNS-327L unmounts the device.



USB Backup Process

1. Connect a USB storage device to the USB port on the back panel of the device. The LED will blink then become solid once it is ready for backup, if USB Backups has been enabled in the USB backup settings.



2. Press the **USB** button to start the backup process. The LED starts to blink that the backup is in the process. The ShareCenter™ will copy or sync all the files from the source folder to the destination folder. **Please Note: No warning message will appear to indicate that all data on the destination folder will be deleted automatically.**

3. When the backup is complete, the flashing white LED will become solid white. To unmount the USB storage device, you can click and hold the USB button at the front of the DNS-327L for over 5 seconds or you can go to the **USB devices** menu of the **System Management** icon in the **Management Tab** of the Web GUI of the device. Click the blue arrow to reveal the **USB Storage** information. Click the **Unmount** button to eject the **USB device**.



P2P Downloads Settings

In this menu you can configure the P2P download management settings.

P2P: Select **Enable** or **Disable**.

Download Schedule: In the block provided the user can configure the running schedule for P2P downloads. Simply select the **Start** and **Stop** block for the appropriate Time and Date.

Auto Download: Here the user can enable or disable the automatic download option.

Port Settings: The user can choose whether to allow the device to automatically choose an incoming connections port or configure the incoming connections port manually.

Seeding: Select one of the three seeding options.

Torrent Save Path: Displays the volume where the Torrent will be saved.

Encryption: Here the user can choose to enable or disable the encryption.

Bandwidth Control: You can manually configure the maximum download rate and maximum upload rate. Enter the value **-1** to set the respective field to **unlimited**.

Downloads

Here the user can add torrents and view P2P download lists.

Add Torrent from URL: In the field provided you can copy and paste a link to a torrent file hosted on the internet. The P2P download manager will add the torrent file to the download manager and begin downloading your files.

Add Torrent from File: Browse for a torrent file you have downloaded onto your PC.


P2P Downloads list: This window will display all the running tasks.

Remove Completed: The user can click on the **Remove Completed** button to remove finished downloads. Sometimes identifying finished jobs, when multiple downloads exist, can be difficult. This option makes it is easier for the user to remove finished downloads from the list with a single click.

Detail: The **Details** button allows the user to view the files that are being downloaded for each torrent.

Top,Up, Down,Bottom: The **Top, Up, Down** and **Bottom** buttons allow you to move the selected P2P download in the task list. The downloads at the top of the list have a higher priority than the one listed below them.

Delete: The **Delete** button allows the user to remove a selected download. This will remove not only the torrent file, but also the partially downloaded files too.

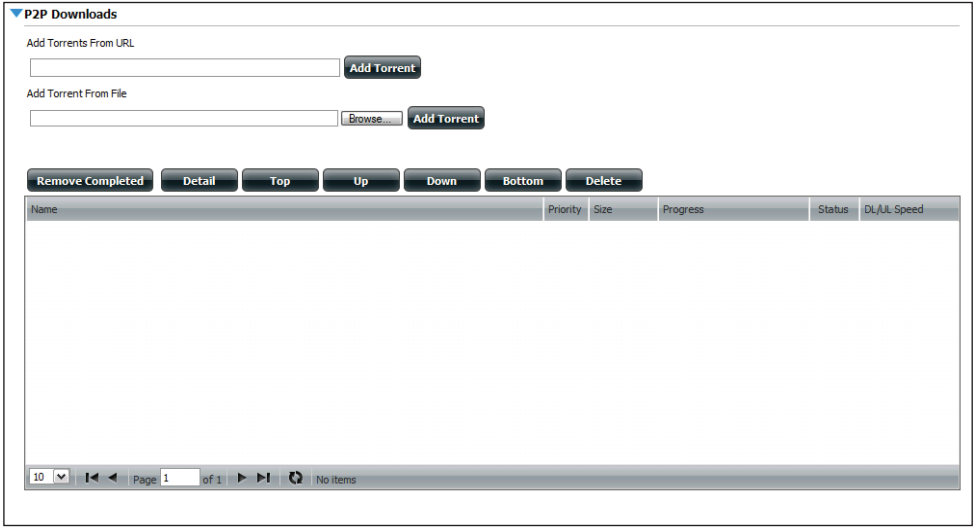


Start / Stop: The **Start** and **Stop** buttons allow users to start and stop selected P2P downloads in the task list.

Navigation: At the bottom of the P2P Task window there are a couple of navigation controls. When multiple tasks exist, the user can select how many tasks will be displayed by using the drop-down menu. The user can also navigate to other pages when more than one page exist.

Refresh: The **Refresh** button allows the user to refresh the P2P task list so it displays the most updated statistics.

Amazon S3

Amazon S3 (Simple Storage Service) is an online storage web service offered by AWS (Amazon Web Services). It provides a simple web services interface that can be used to store and retrieve any amount of data at any time from anywhere on the web. With Amazon S3 support, it is possible to upload the data from your DNS-327L to Amazon S3 or download the data from Amazon S3 to your DNS-327L.

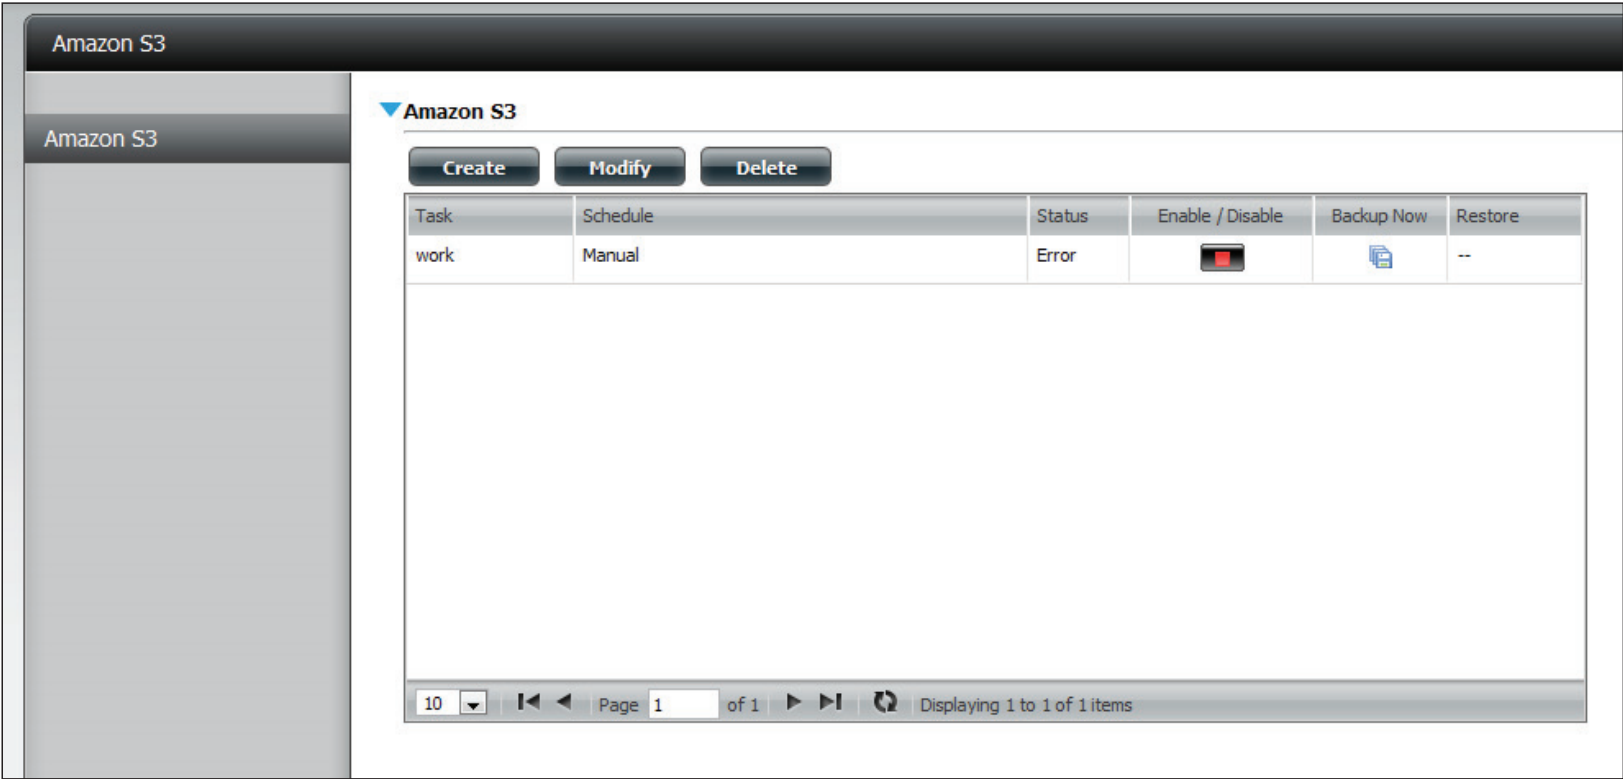

Creating an AWS Account

Open your web browser and type the following link for the Amazon Web Services: <http://www.aws.amazon.com/s3>. Then, click on the link at the top named **“Sign Up Now”**. Follow the instructions to create your AWS account.

The screenshot shows the Amazon Simple Storage Service (Amazon S3) page. At the top, there is the Amazon Web Services logo and navigation links for "Sign Up", "My Account / Console", and "English". Below the logo, there is a search bar and links for "AWS Products & Solutions", "AWS Product Information", "Developers", and "Support".

The main content area is titled "Amazon Simple Storage Service (Amazon S3)". It includes a description of Amazon S3 as storage for the Internet, designed to make web-scale computing easier for developers. It also mentions that Amazon S3 provides a simple web services interface that can be used to store and retrieve any amount of data, at any time, from anywhere on the web.

On the left side, there is a sidebar with "Amazon S3" and "Developer Resources" sections. The "Amazon S3" section includes links for "Amazon S3 Overview", "FAQs", "Pricing", and "Amazon S3 SLA". The "Developer Resources" section includes links for "Getting Started Guide", "AWS Management Console", "Documentation", "Release Notes", "Sample Code & Libraries", "Developer Tools", "Articles & Tutorials", and "Community Forum".

On the right side, there is a "Get Started with AWS for Free" section with a "Sign Up Now »" button. Below this, it states that the AWS Free Tier includes 5GB storage, 20,000 Get Requests, and 2,000 Put Requests with Amazon S3. There is also a link to "View AWS Free Tier Details »".

At the bottom, there is a section titled "This page contains the following categories of information. Click to jump down:" with a list of links: "Amazon S3 Functionality", "Protecting Your Data", "Managing Your Data", "Pricing", "Getting Started with Amazon S3", "Transferring Large Amounts of Data", "Common Use Cases", "Resources", "Amazon S3 Design Requirements", and "Intended Usage and Restrictions".

At the bottom left, there is a link for "Amazon S3 Data Management and..." and at the bottom right, there is a link for "Amazon S3 Functionality".


Section 4 - Configuration

Enter your e-mail address and check the I am a New User radio button and follow the instructions to select the amount of desired storage and create your Amazon S3 account.

You will be issued the following keys as credentials to give you access to the account:

1. Access Key ID
2. Secret Access Key

Save these keys in a secure location as your ShareCenter will need them to create the backup and recovery jobs to and from the Amazon S3 Cloud Storage.

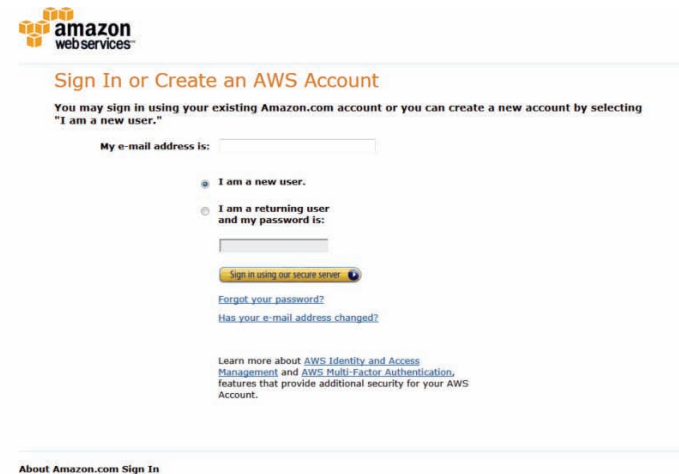



The screenshot shows the Amazon Web Services sign-in page. At the top is the Amazon Web Services logo. Below it is the heading "Sign In or Create an AWS Account". A sub-header states: "You may sign in using your existing Amazon.com account or you can create a new account by selecting 'I am a new user.'". There is a text input field for "My e-mail address is:". Below this are two radio buttons: "I am a new user." (which is selected) and "I am a returning user and my password is:". Under the second radio button is a password input field. A yellow button labeled "Sign in using our secure server" is present. Below the button are two links: "Forgot your password?" and "Has your e-mail address changed?". At the bottom, there is a link to "Learn more about AWS Identity and Access Management and AWS Multi-Factor Authentication, features that provide additional security for your AWS Account." and a footer link "About Amazon.com Sign In".

Create Button

When you click the **Create** button, the wizard will appear and you will be able to create either a ShareCenter™ backup or a restore job to the Amazon S3 Cloud Storage. You can schedule the job to run once, scheduled, or manually. You will need the following configuration data to create a backup/restore job:

Step 1: Job Name Settings

Enter a 16 character name to identify the name of the backup or the restore job.

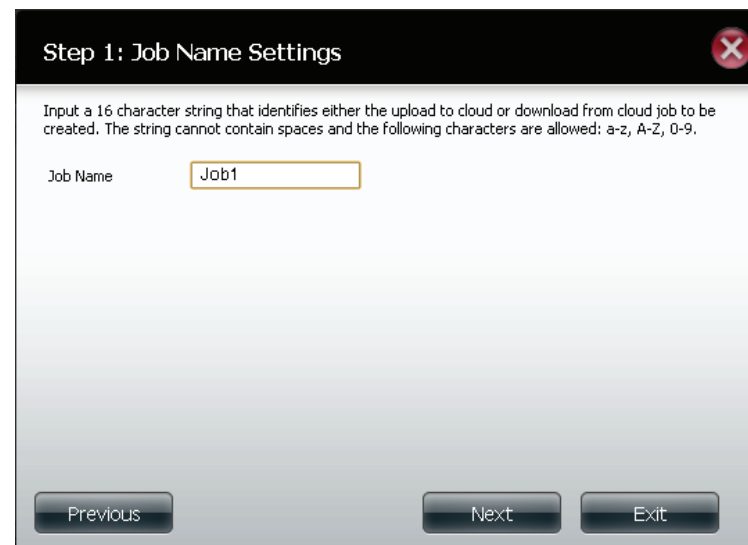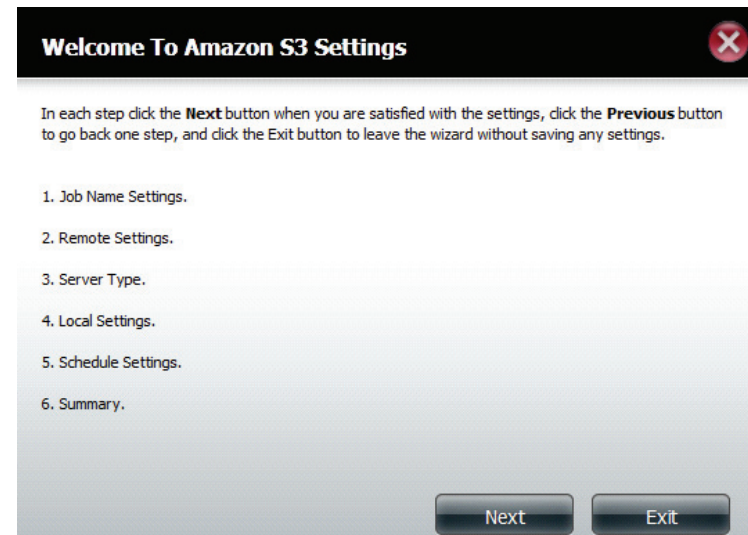


Step 2: Remote Settings

Access Key ID: Enter your Amazon S3 assigned Access Key ID which allows your ShareCenter™ to access your Amazon S3 Cloud Storage.

Secret Access Key: Enter your Secret Access Key to access your Amazon S3 Cloud Storage.

Remote Path: Input a new or already existing Amazon bucket name.

Region: Select your Region from the drop-down menu.

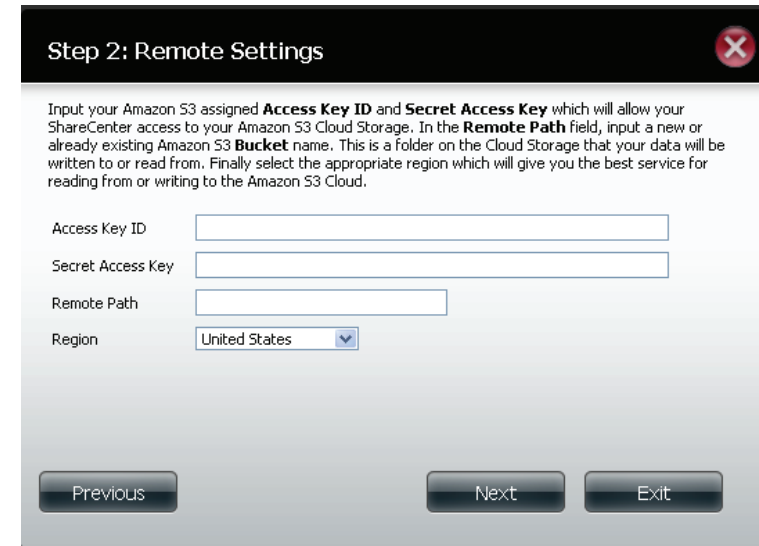

The screenshot shows a configuration window titled "Step 2: Remote Settings" with a close button (X) in the top right corner. The window contains the following text and fields:

Input your Amazon S3 assigned **Access Key ID** and **Secret Access Key** which will allow your ShareCenter access to your Amazon S3 Cloud Storage. In the **Remote Path** field, input a new or already existing Amazon S3 **Bucket** name. This is a folder on the Cloud Storage that your data will be written to or read from. Finally select the appropriate region which will give you the best service for reading from or writing to the Amazon S3 Cloud.

Access Key ID

Secret Access Key

Remote Path


Region

At the bottom, there are three buttons: "Previous", "Next", and "Exit".

Step 3: Server Type

Type: Select **Upload** or **Download** from the drop-down menu.

Backup Type: Use the drop-down menu and select **Overwrite Existing Files**, **Full Backup** or **Incremental Backup**.

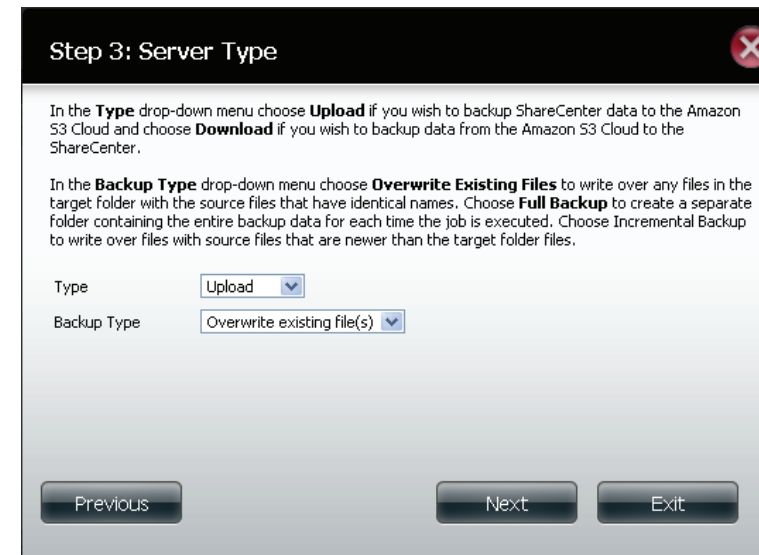

The screenshot shows a configuration window titled "Step 3: Server Type" with a close button (X) in the top right corner. The window contains the following text and fields:

In the **Type** drop-down menu choose **Upload** if you wish to backup ShareCenter data to the Amazon S3 Cloud and choose **Download** if you wish to backup data from the Amazon S3 Cloud to the ShareCenter.

In the **Backup Type** drop-down menu choose **Overwrite Existing Files** to write over any files in the target folder with the source files that have identical names. Choose **Full Backup** to create a separate folder containing the entire backup data for each time the job is executed. Choose **Incremental Backup** to write over files with source files that are newer than the target folder files.


Type

Backup Type

At the bottom, there are three buttons: "Previous", "Next", and "Exit".

Step 4: Local Settings


Use the **Browser** button to locate the path to the ShareCenter™ file location to be either backed up or restored to/from the AmazonS3 Cloud.

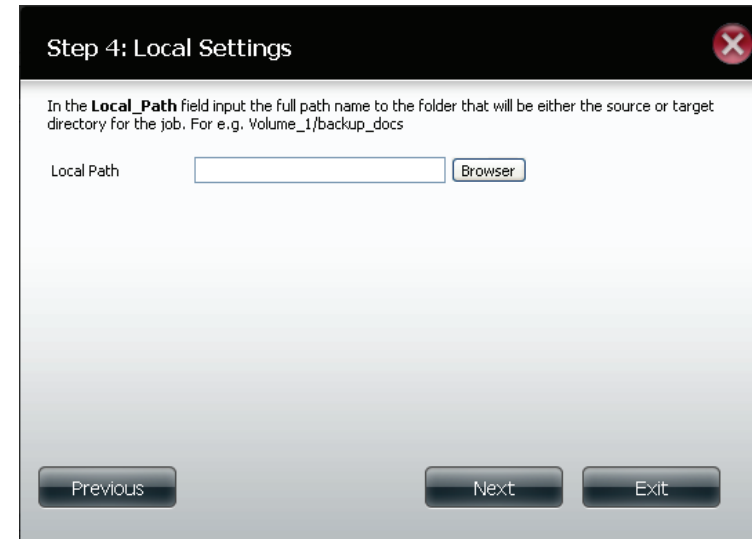

The screenshot shows a dialog box titled "Step 4: Local Settings" with a close button (X) in the top right corner. Below the title bar, there is instructional text: "In the **Local_Path** field input the full path name to the folder that will be either the source or target directory for the job. For e.g. Volume_1/backup_docs". Below this text is a label "Local Path" followed by a text input field and a "Browser" button. At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Exit".

Step 5: Schedule Settings

Select the **Schedule Mode** for the job to be executed. You may select **Manual** (now or later from the job list), **Once** (at a predetermined time and day), or **Scheduled** (a predetermined time on a daily basis).

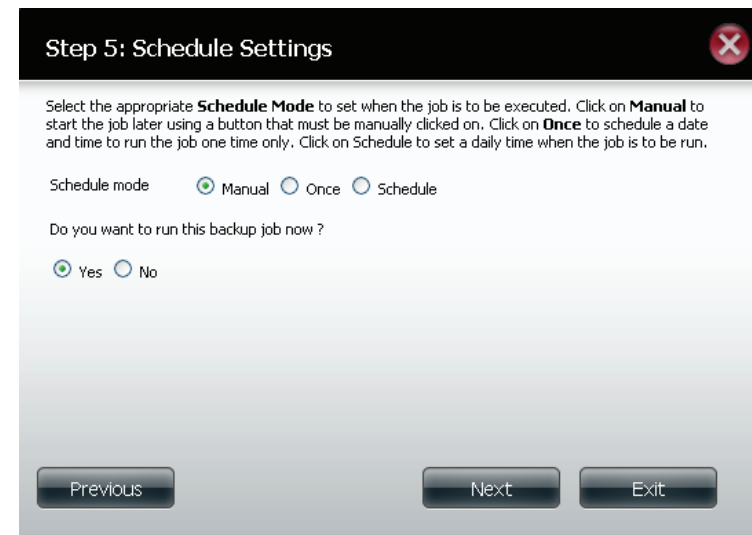

The screenshot shows a dialog box titled "Step 5: Schedule Settings" with a close button (X) in the top right corner. Below the title bar, there is instructional text: "Select the appropriate **Schedule Mode** to set when the job is to be executed. Click on **Manual** to start the job later using a button that must be manually clicked on. Click on **Once** to schedule a date and time to run the job one time only. Click on **Schedule** to set a daily time when the job is to be run." Below this text is a label "Schedule mode" followed by three radio buttons: "Manual" (selected), "Once", and "Schedule". Below the radio buttons is a question: "Do you want to run this backup job now ?" followed by two radio buttons: "Yes" (selected) and "No". At the bottom of the dialog, there are three buttons: "Previous", "Next", and "Exit".

Modify Button

Once a job is created, the **Modify** button is used to change any of the settings described in the **Create Button** section. Click on a created job in the Amazon S3 table so that its text turns red. Then click the **Modify** button to edit the job settings in a wizard that appears.

Note: The Job Name cannot be modified.

Delete Button

The **Delete** button is used to delete any backed up or restored job listed in the Amazon S3 table. Click on a created job in the Amazon S3 table so that its text turns red. Then click the **Delete** button to remove the job from your ShareCenter™ configuration.

Enable/Disable Column

This field of the jobs controls whether the job will execute or not. If the button shows a green triangle, clicking it enables the job to function. If the button shows the red square, clicking it disables the job from executing.




mydlink

The mydlink service offers a cloud service to DNS-327L users. Connect to the mydlink service from any location and using any operating system. If you are not connecting to the service directly from the DNS-327L, open your browser and type in www.mydlink.com. Sign into your account on the home page.




mydlink Verification

Check your e-mail box and click the weblink to activate mydlink account.

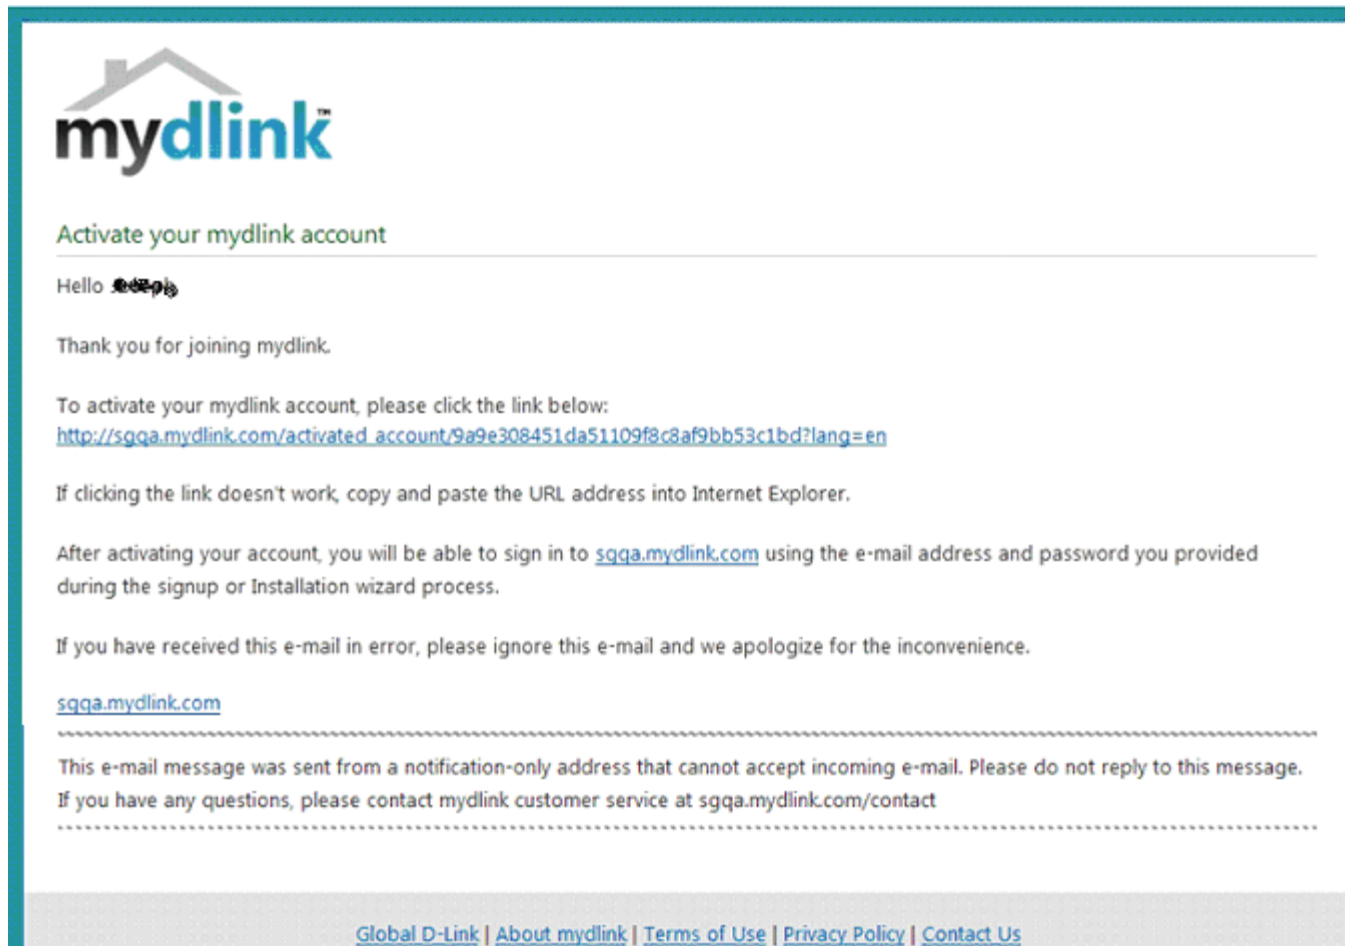

mydlink is verified



FAQ | Support | Language: English ▼

Welcome, **J. Doe** | Sign out

My Devices

My Profile

Your e-mail address has been verified.

Please check and update your profile information below.

Sign-in information

E-mail Address

john.doe@mydlink.com.tw

Verified

*Current Password

change password

Required if making changes to profile.

Profile information

First Name

John

Last Name

Doe

Gender

☐ Male

☐ Female

Date Of Birth

1900

January

01

Language

English

Country

United States

Address

News

Support

Setup wizard

User manual


Firmware

Quick Installation Guide

GO

mydlink

mydlink on mobile...



D-Link ShareCenter DNS-327L User Manual

439

mydlink Java Runtime Machine

Once you log into your account, you will need the Java Runtime machine. The screen provides directions in order for you to download it.

The screenshot displays the mydlink user interface. At the top left is the mydlink logo. To its right are links for 'FAQ | Support | Language: English'. Further right, it says 'Welcome, garth naude | Sign out'. Below the logo, there are two tabs: 'My Devices' and 'My Profile'. The 'My Devices' tab is active, showing a device icon and the ID 'dlink-010009 44441519'. The main content area displays a red error message: 'The Java Runtime Environment cannot be found.' Below this, it explains that the user needs to download and install the Java Runtime Environment. It also provides a link to 'How to enable the Java Runtime Environment?'. A blue button labeled 'Download JRE' is visible. On the right side, there is a 'News' section and a 'Support' section with links to 'Setup wizard', 'User manual', 'Firmware', and 'Quick Installation Guide'. At the bottom, there is a footer with links for 'Global D-Link | About mydlink | Terms of Use | Privacy Policy | Contact Us' and a copyright notice for 2008-2012 D-Link Corp.

mydlink™

FAQ | Support | Language: English ▼

Welcome, **garth naude** | Sign out

My Devices My Profile

dlink-010009
44441519

The Java Runtime Environment cannot be found.

You will need to download and install the Java Runtime Environment in order to view from your .
If you ever installed the Java Runtime Environment, you may need to check the Java status in Java Preference setting.

[How to enable the Java Runtime Environment?](#)

[Download JRE](#)

News

Support

- [Setup wizard](#)
- [User manual](#)
- [Firmware](#)
- [Quick Installation Guide](#)

[GO](#)

mydlink

mydlink on mobile...

Global D-Link | [About mydlink](#) | [Terms of Use](#) | [Privacy Policy](#) | [Contact Us](#)
Copyright©2008-2012 D-Link Corp. All rights reserved.



Section 4 - Configuration

The Java Runtime machine takes a few steps. Follow the instructions:



Section 4 - Configuration

After the Java Runtime machine is installed, run the mydlink application and enter the password.

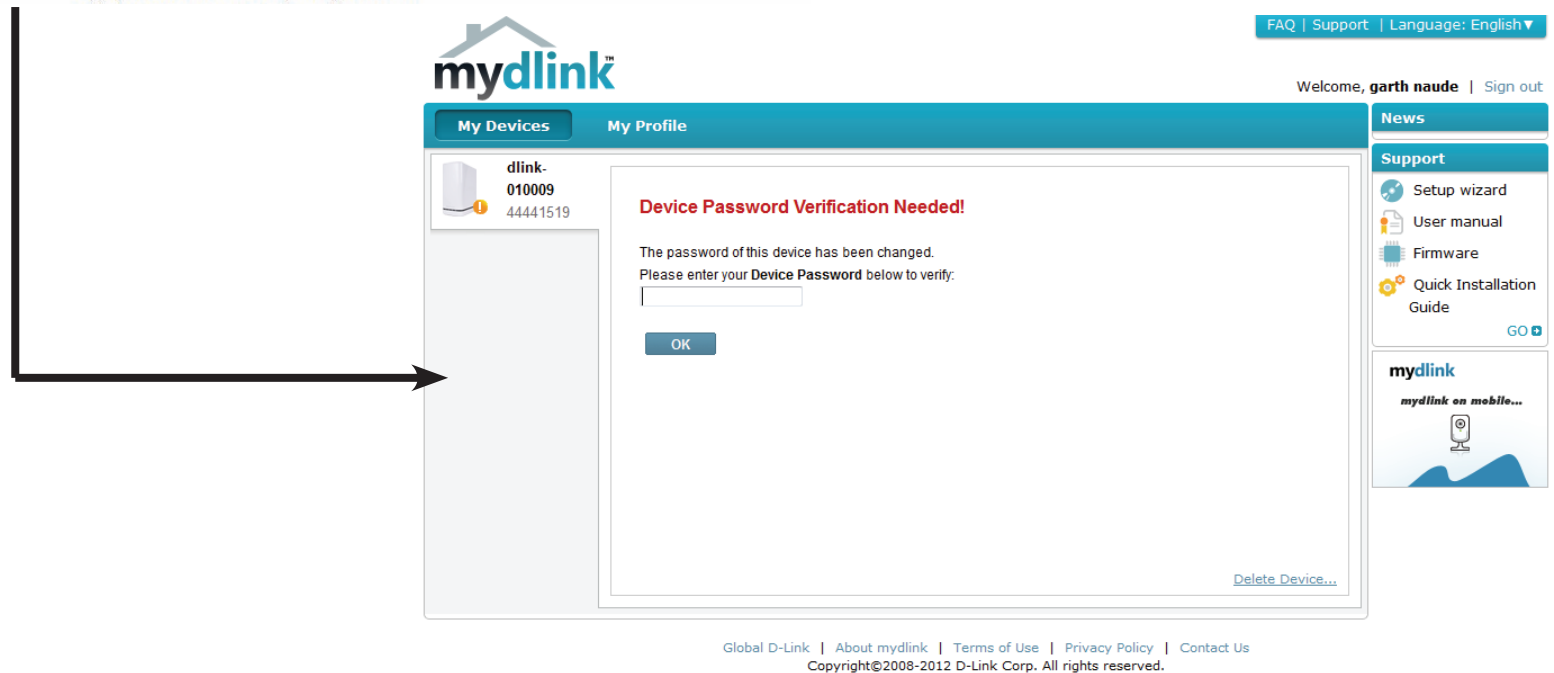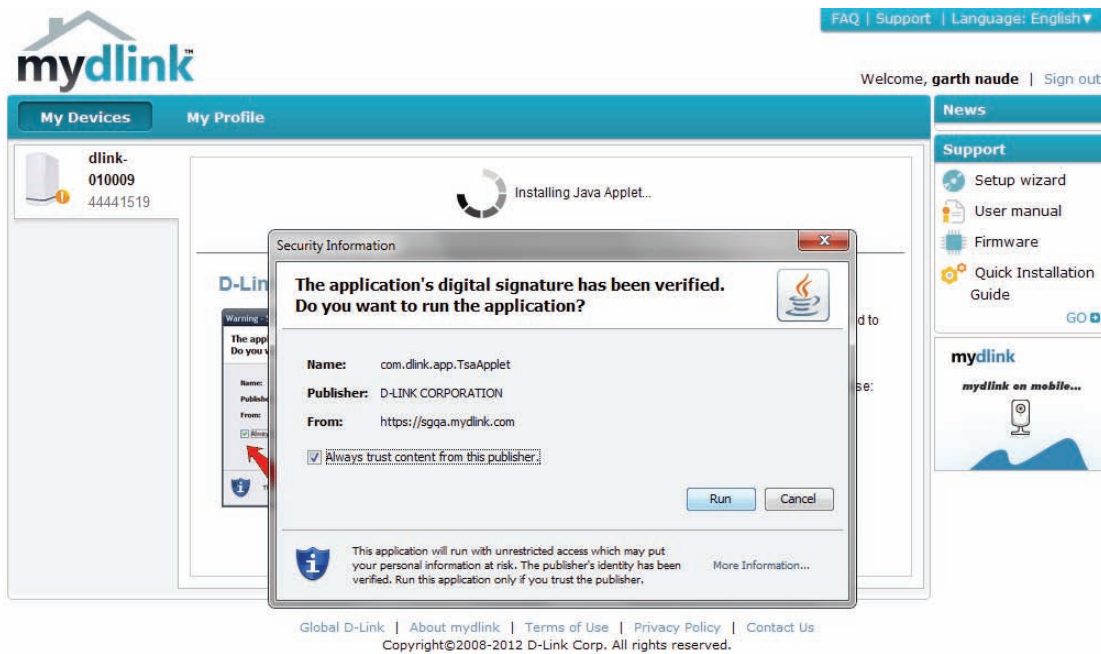

Once you are connected you can view your existing storage on the cloud and the DNS-327L. You can also upload, download files using your browser, create new folders, rename folders and delete folders.

The screenshot displays the mydlink web interface. At the top, there's a navigation bar with 'FAQ | Support | Language: English' and a user greeting 'Welcome, edison chou | Sign out'. Below this, the main interface is divided into sections. On the left, under 'My Devices', two devices are listed: 'DIR-905L 44443144' and 'dlink-00B6 ... 44442414'. The central area shows 'File' and 'Settings' tabs, with 'Home' selected. It displays storage usage for 'Volume_1' (16% used, 74GB of 455GB) and 'Volume_2' (28% used, 128GB of 455GB). A 'Channel' button is visible. On the right, a sidebar promotes 'D-Link Access Anywhere' with a large 'D' logo and text about mobile app access. At the bottom, there's a 'News' section, a 'Top 5 FAQs' list, and a product advertisement for the 'DIR-826L Wireless N600 Dual-band Gigabit Cloud Router'.

FAQ | Support | Language: English ▼

Welcome, edison chou | Sign out

mydlink™

My Devices **My Profile**

DIR-905L 44443144

dlink-00B6 ... 44442414

File Settings

Home

Channel

Volume_1

16% used (74GB of 455GB)

Volume_2

28% used (128GB of 455GB)

D-Link

Access Anywhere

D

With iOS and Android mobile apps, you can check your devices on-the-go

News

Top 5 FAQs

- How do I update my device's firmware manually?
- Which device does the mydlink website support?
- How do I install the mydlink lite app on my Android device?
- Which web browsers can I use with mydlink?
- How do I sign up for a mydlink account?


D-Link

DIR-826L

Wireless N600 Dual-band Gigabit Cloud Router

cloud

Click **Volume 1** to see its contents. Here you can create a **New Folder**, **Upload and Download files**, **Delete** and **Rename** files.

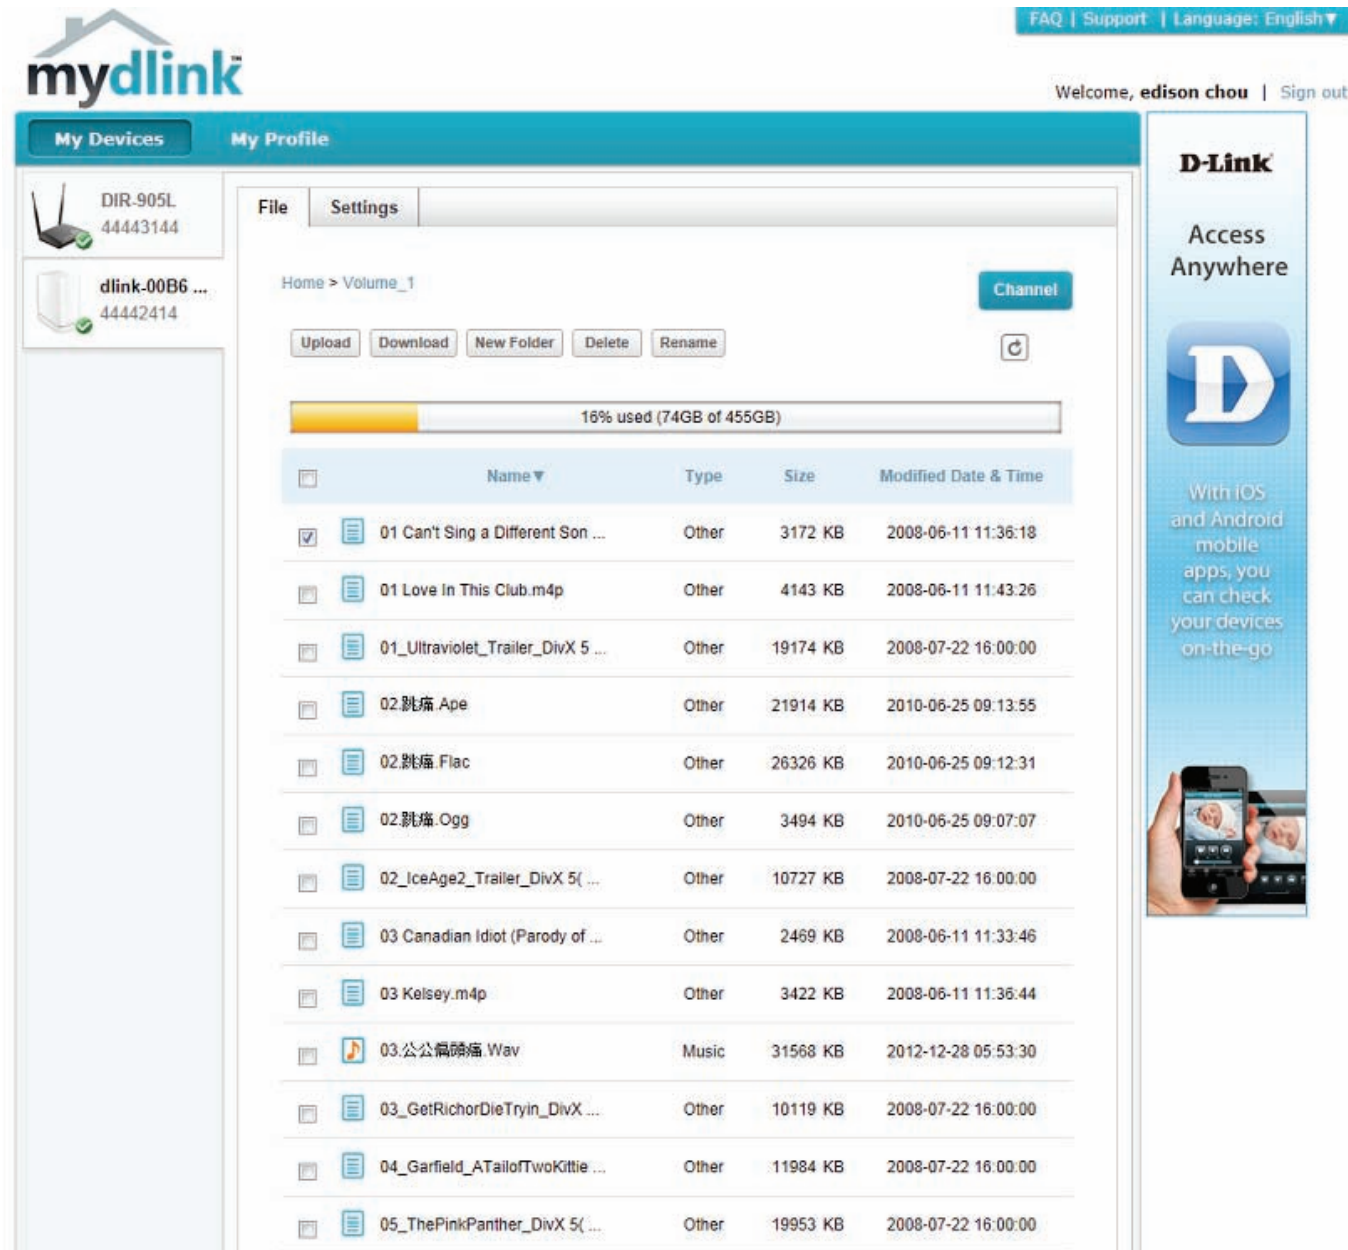

mydlink

FAQ | Support | Language: English ▼

Welcome, **edison chou** | Sign out

My Devices **My Profile**

DIR-905L
44443144

dlink-00B6 ...
44442414

File **Settings**

Home > Volume_1

Channel

Upload Download New Folder Delete Rename

16% used (74GB of 455GB)

	Name ▼	Type	Size	Modified Date & Time
<input checked="" type="checkbox"/>	01 Can't Sing a Different Son ...	Other	3172 KB	2008-06-11 11:36:18
<input type="checkbox"/>	01 Love In This Club.m4p	Other	4143 KB	2008-06-11 11:43:26
<input type="checkbox"/>	01_Ultraviolet_Trailer_DivX 5 ...	Other	19174 KB	2008-07-22 16:00:00
<input type="checkbox"/>	02 跳痛 Ape	Other	21914 KB	2010-06-25 09:13:55
<input type="checkbox"/>	02 跳痛 Flac	Other	26326 KB	2010-06-25 09:12:31
<input type="checkbox"/>	02 跳痛 Ogg	Other	3494 KB	2010-06-25 09:07:07
<input type="checkbox"/>	02_IceAge2_Trailer_DivX 5(...	Other	10727 KB	2008-07-22 16:00:00
<input type="checkbox"/>	03 Canadian Idiot (Parody of ...	Other	2469 KB	2008-06-11 11:33:46
<input type="checkbox"/>	03 Kelsey.m4p	Other	3422 KB	2008-06-11 11:36:44
<input type="checkbox"/>	03_公公偏头痛.Wav	Music	31568 KB	2012-12-28 05:53:30
<input type="checkbox"/>	03_GetRichorDieTryin_DivX ...	Other	10119 KB	2008-07-22 16:00:00
<input type="checkbox"/>	04_Garfield_ATailofTwoKittie ...	Other	11984 KB	2008-07-22 16:00:00
<input type="checkbox"/>	05_ThePinkPanther_DivX 5(...	Other	19953 KB	2008-07-22 16:00:00


D-Link

Access Anywhere

With iOS and Android mobile apps, you can check your devices on-the-go


Creating a New Folder

Click the **New Folder** button to create a new folder. Enter a name for the folder and click **Create**.

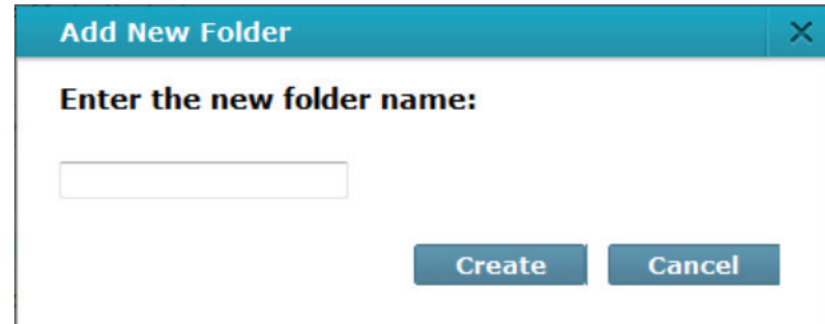


The 'Add New Folder' dialog box has a teal header with the title 'Add New Folder' and a close button (X). The main area is white and contains the text 'Enter the new folder name:' followed by a text input field. At the bottom right, there are two buttons: 'Create' and 'Cancel'.

To delete a folder, click the checkbox next to the file you wish to delete. Click the Delete button. A confirmation window will appear for you to confirm the deletion. Click Delete to proceed.

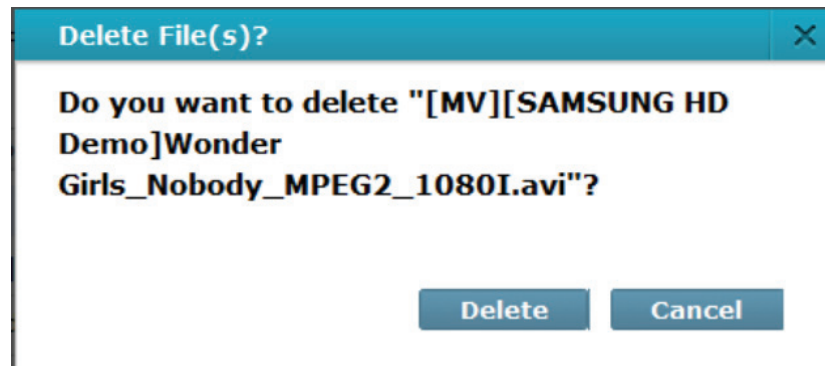

The 'Delete File(s)?' dialog box has a teal header with the title 'Delete File(s)?' and a close button (X). The main area is white and contains the text 'Do you want to delete "[MV][SAMSUNG HD Demo]Wonder Girls_Nobody_MPEG2_1080I.avi"?' followed by two buttons: 'Delete' and 'Cancel'.

To rename a file or folder, click the checkbox next to the file/folder you wish to rename. Click the Rename button. A confirmation window will appear for you to rename the file. Enter a new name and click Rename.

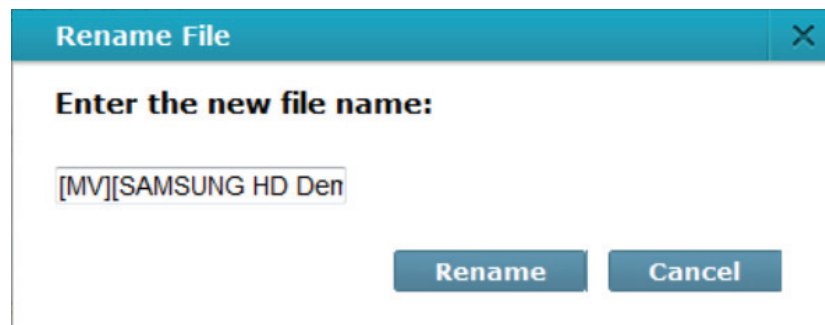

The 'Rename File' dialog box has a teal header with the title 'Rename File' and a close button (X). The main area is white and contains the text 'Enter the new file name:' followed by a text input field containing '[MV][SAMSUNG HD Den'. At the bottom right, there are two buttons: 'Rename' and 'Cancel'.

mydlink Settings Details

Under General Information you can view the properties of your NAS. On display is the Device Name, mydlink Number, Model Name, MAC address (which is associated with your account and NAS), and Activation time and date. Also viewable is the router you are using and file settings.

The screenshot displays the mydlink web interface. At the top left is the mydlink logo. To the right, there are links for 'FAQ', 'Support', and 'Language: English'. Below these, a welcome message reads 'Welcome, Neo Chen | Sign out'. The main navigation bar includes 'My Devices' and 'My Profile'. On the left sidebar, under 'My Devices', two devices are listed: 'dlink-00B6 ... 44442428' and 'DIR-605L 20315122'. The main content area is titled 'Settings' and has tabs for 'File' and 'Settings'. The 'Settings' tab is active, showing 'General Information' for the device 'dlink-00B6D8'. The information includes: Device Name (dlink-00B6D8), mydlink No. (a masked number), Model Name (DNS-327L), MAC (a masked address), and Device activated on (a masked date). Below this is a 'More Settings' section. A light blue box contains the text: 'You can remove your dlink-00B6D8 from your account by clicking the Remove Device button.' and a 'Remove Device' button. On the right side of the interface, there is a vertical banner for 'D-Link Access Anywhere' featuring a large 'D' logo and text stating: 'With iOS and Android mobile apps, you can check your devices on-the-go'. At the bottom of the banner is an image of a smartphone displaying the mydlink app interface.

ShareCenter™ NAS Status

Here you can see the online status of your ShareCenter™ NAS when connected to mydlink. Your online status might be one of the following:



A green checkmark indicates that your ShareCenter™ NAS is online and ready for use.



A yellow exclamation point indicates that your ShareCenter™ NAS is online, but the mydlink password has changed. You will need to enter your new mydlink password to access your ShareCenter NAS again.



A red x indicates that your ShareCenter™ NAS is offline and currently cannot be accessed remotely.

If your ShareCenter™ is offline, try the following:

- Check to make sure that the internet connection to your ShareCenter™ NAS is working properly.
- Try restarting your internet router.
- Check your ShareCenter™ NAS cable connections and make sure they are secure.
- Check to make sure that the LED on your ShareCenter™ NAS is lit solid blue.

If you still cannot access your ShareCenter™ NAS, reset your ShareCenter™ NAS and run the DNS-327L Setup Wizard again from the CD-ROM included in your package.

Deleting a mydlink device

Select the device you wish to delete. A warning message appears for you to verify your deletion.

Delete Device

The following device will be deleted from your account:

Device name: DNS-320L

mydlink No.: 44441518

Device model: DNS-320L

Warning!

- Remove the device will also remove any mydlink functions related to the device.

Please enter your password to proceed:

Password

[Cancel](#)

[Delete Device](#)

Enter your admin password to delete the device. Click **Delete Device** to proceed. An acknowledgement message appears to confirm the deletion.

Delete Device

The following device has been successfully deleted from your mydlink account:

Device name: DNS-320L

mydlink No.: 44441518


Device model: DNS-320L

To add the device to mydlink account and enable remote access to it, please run the device's Setup Wizard again. You can download the Setup Wizard from the [Support](#) page.

[Done](#)


Deleting a mydlink account

Under **Profile Information**, click the **Delete account** link at the bottom.

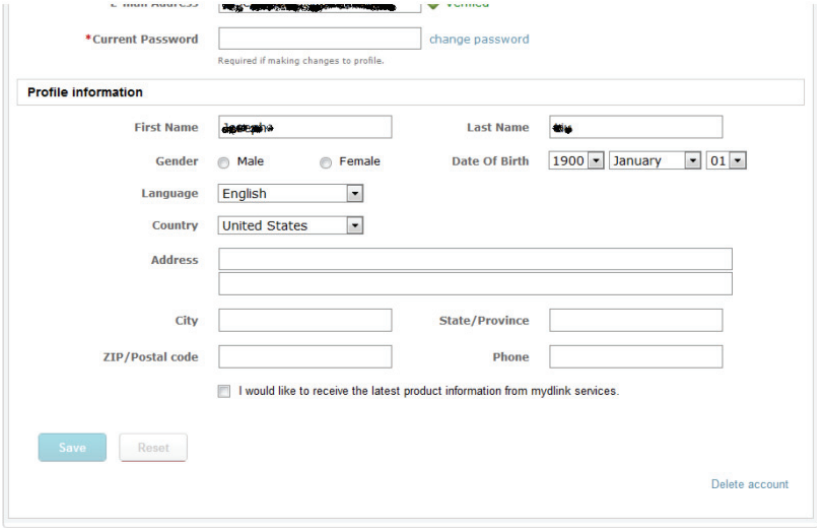

The screenshot shows the 'Profile information' section of a mydlink account page. At the top, there is a 'Current Password' field with a 'change password' link. Below this is the 'Profile information' header. The form includes fields for 'First Name', 'Last Name', 'Gender' (Male/Female), 'Date Of Birth' (year, month, day), 'Language', 'Country', 'Address', 'City', 'State/Province', 'ZIP/Postal code', and 'Phone'. There is a checkbox for 'I would like to receive the latest product information from mydlink services.' At the bottom left are 'Save' and 'Reset' buttons. At the bottom right is a 'Delete account' link.

A warning message appears to ask you if you want to delete the account. Select **No, keep it** to do nothing or click **Yes, delete it** to delete the account.

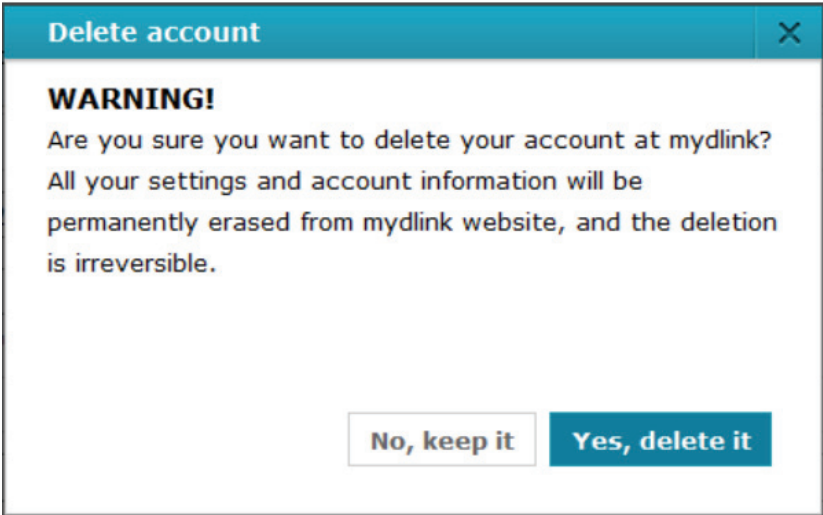


The screenshot shows a 'Delete account' warning dialog box. The title bar is blue with the text 'Delete account' and a close button. The main content area has a 'WARNING!' heading followed by the text: 'Are you sure you want to delete your account at mydlink? All your settings and account information will be permanently erased from mydlink website, and the deletion is irreversible.' At the bottom right are two buttons: 'No, keep it' and 'Yes, delete it'.

Section 4 - Configuration


In order to delete the mydlink account you need to enter your password details. Enter your details and then click Confirm Delete.

Click Cancel to revert back and keep your account in tact.

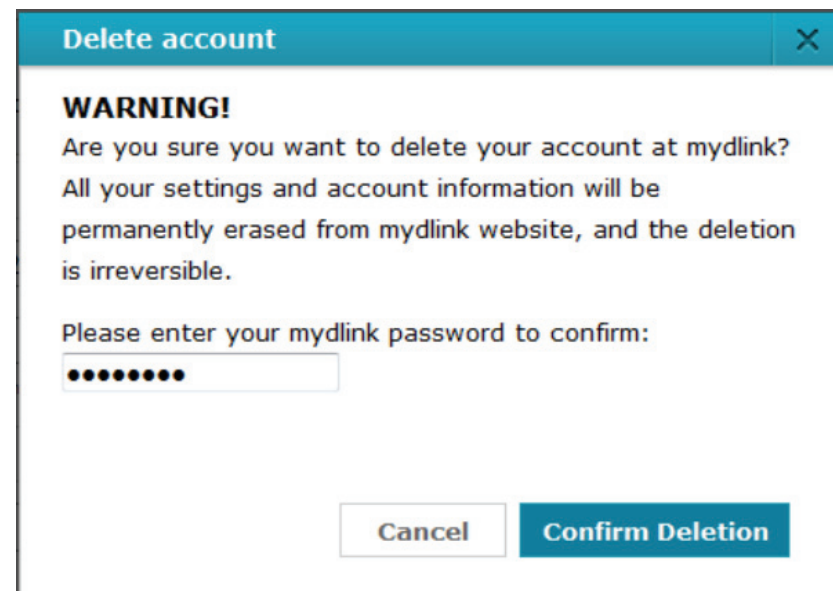

A dialog box titled "Delete account" with a close button (X) in the top right corner. The main text reads: **WARNING!** Are you sure you want to delete your account at mydlink? All your settings and account information will be permanently erased from mydlink website, and the deletion is irreversible. Below this, it says: Please enter your mydlink password to confirm: followed by a password input field with ten dots. At the bottom, there are two buttons: "Cancel" and "Confirm Deletion".

The Account is deleted.

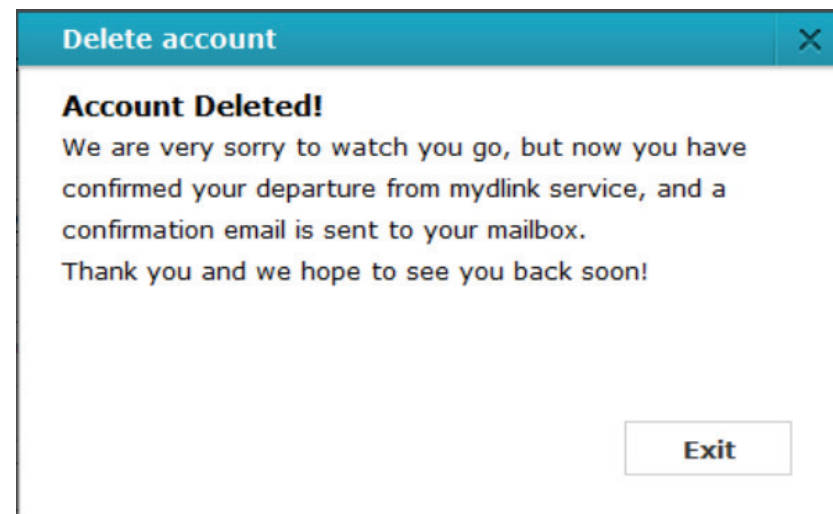

A dialog box titled "Delete account" with a close button (X) in the top right corner. The main text reads: **Account Deleted!** We are very sorry to watch you go, but now you have confirmed your departure from mydlink service, and a confirmation email is sent to your mailbox. Thank you and we hope to see you back soon! At the bottom right, there is an "Exit" button.

The mydlink Access NAS App

Access your files anytime, anywhere with your ShareCenter Cloud NAS and the mydlink Access-NAS app. Stream your stored photos, documents, music, and movies directly to your iOS and Android devices over 3G or Wi-Fi.



The mydlink Access NAS App - Features

The mydlink Access-NAS app enables you to remotely connect to your ShareCenter Cloud NAS over the Internet to open your documents, browse your photo albums, listen to your music collection, or watch your favorite shows at home or on the road. Download files directly to your mobile device for offline access, or back up your photos and videos to your ShareCenter Cloud NAS. The mydlink Access-NAS app makes it easy to access and manage your files no matter where you are!

iOS Features:

- Access files stored on your ShareCenter Cloud NAS through the Internet
- Stream music and movie files to your iOS device
- Browse through your photos, or view a slideshow of all your images
- Open documents such as Microsoft Office files and PDFs
- Save files to your mobile device for offline playback
- Back up photos and images from your Camera Roll to your ShareCenter Cloud NAS
- Search for specific files on your ShareCenter Cloud NAS or on your iOS device
- Rename and delete your files
- Supports "Open in" option to open your files with different apps
- Supports AirPlay for playback of your media on other devices
- Supports AirPrint to print out your documents
- Monitor disk usage and status

Android Features:

- Access files stored on your ShareCenter Cloud NAS
- Stream music and movie files
- Browse through your photos, or view slideshows
- Open Office files and PDFs
- Save files to your Android device for offline playback
- Back up photos and images to your ShareCenter Cloud NAS
- Search your ShareCenter Cloud NAS or Android device for files
- Rename and delete files
- Open files in different apps
- Monitor disk usage and status

The mydlink Access NAS App - Compatibility

mydlink Access-NAS is compatible with the following models:

- DNS-320L ShareCenter 2-Bay Cloud Network Storage Enclosure
- DNS-320LW ShareCenter 2-Bay Cloud Network Storage Enclosure
- DNS-327L ShareCenter 2-Bay Cloud Network Storage Enclosure
- More coming soon!

Note: If you are using a DNS-325 or DNS-345, please use the mydlink Cloud app.




Section 4 - Configuration

You can download the app from below link:

iOS (iTunes App Store)

<https://itunes.apple.com/us/app/mydlink-access-nas/id531078699?l=zh&mt=8>

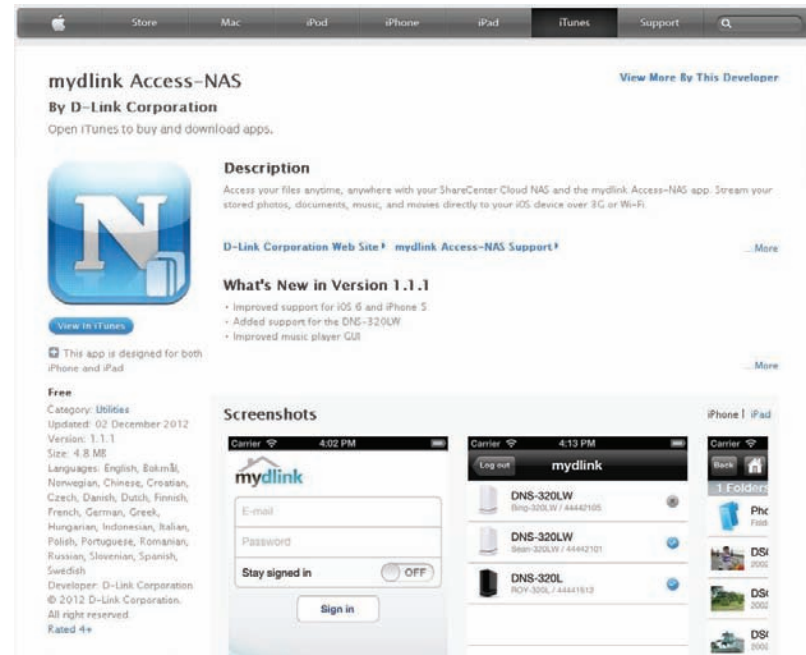

Android (Google Play)

<https://play.google.com/store/apps/details?id=com.dlink.nas&hl=en>



Knowledge Base

What is RAID?

RAID, short for Redundant Array of Independent Disks, is a combination of two or more disks with the aim of providing fault tolerance and performance improvement. There are several different levels of RAID, with each one providing a different method of sharing or distributing data amongst the drives. The DNS-327L supports Standard, JBOD, RAID 0, and RAID 1.

Standard Standard provides a single volume for each drive.


Although performance is improved, the lack of any RAID or mirroring means that if one drive fails, all data on the volume will be lost.

JBOD JBOD allows you to create a large virtual disk drive by concatenating two or more smaller drives together.

It offers no redundancy and limited data protection..


RAID 0 RAID 0 provides data striping, which spreads out blocks of data over all the drives, but does not provide data redundancy.

Although performance is improved, the lack of fault tolerance means that if one drive fails, all data in the array will be lost.

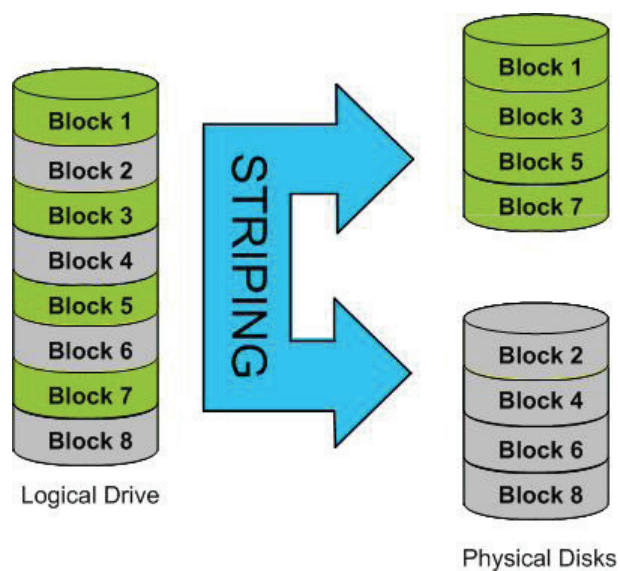

RAID 1 RAID 1 provides mirroring over multiple disks, with the same read/write speed of a single disk. A RAID 1 array can only be as large as it's smallest member disk.

Because the data is stored on multiple disks, RAID 1 provides fault tolerance and protection, in addition to performance advantages.

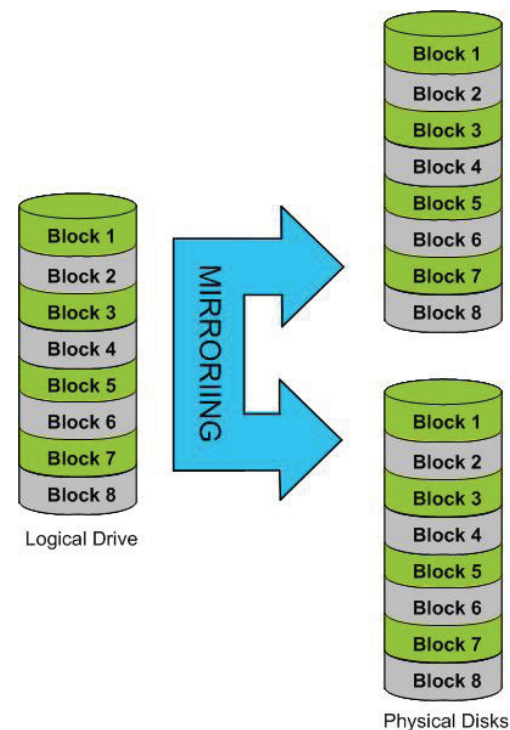

RAID Options

Here is a list of the RAID options available on the ShareCenter™ DNS-327L.

Standard RAID - creates a single volume for one drive or more drives.

Standard

Creates separate volumes (or one volume if only one hard drive is present). Each hard drive is its own volume.

JBOD - allows you to create a large virtual disk drive by concatenating two or more smaller drives together. The individual hard drives that makes up a JBOD RAID can be different sizes and manufacturers. The total size of the JBOD RAID is the combined total of all the individual drives in the set.

JBOD

Combines 2 hard drives in a linear fashion to create one large volume thereby maximizing available disk space.

RAID 0 - allows you to assign two or more disks as a striped set. Once you create the striped set, you will see it as a single disk drive. But when you write data to the RAID 0 striped set, the data will be distributed across all of the drives that make up the set. Because each disk has less to do, it takes less time to write the data. The same is true when reading data; instead of a single disk having to seek out and then send a large block of data, multiple disks each stream their part of the data stream. As a result, RAID 0 striped sets can provide a dynamic increase in disk performance.

RAID 0

Stripes data across 2 or more drives increasing performance.

RAID 1 - allows you to assign two disks as a mirrored set. Once you create the mirrored set, you will see it as a single disk drive. But when you write data to the mirrored set, it will duplicate the data across all members of the set. This ensures that your data is protected against loss if any hard drive in the RAID 1 set fails. In fact, as long as any single member of the set remains functional, you will continue to operate normally, with complete access to your data.


RAID 1
Copies exactly one of the data disks and produces a mirrored copy on another disk.

UPS Connectivity

The DNS-327L supports USB UPS, giving users the ability to share the UPS on their local network and protect from an abnormal shutdown due to a power failure. Connect a UPS to the USB port on the back of the ShareCenter™.


Standalone and Network Master Mode:

Log into the DNS-327L.

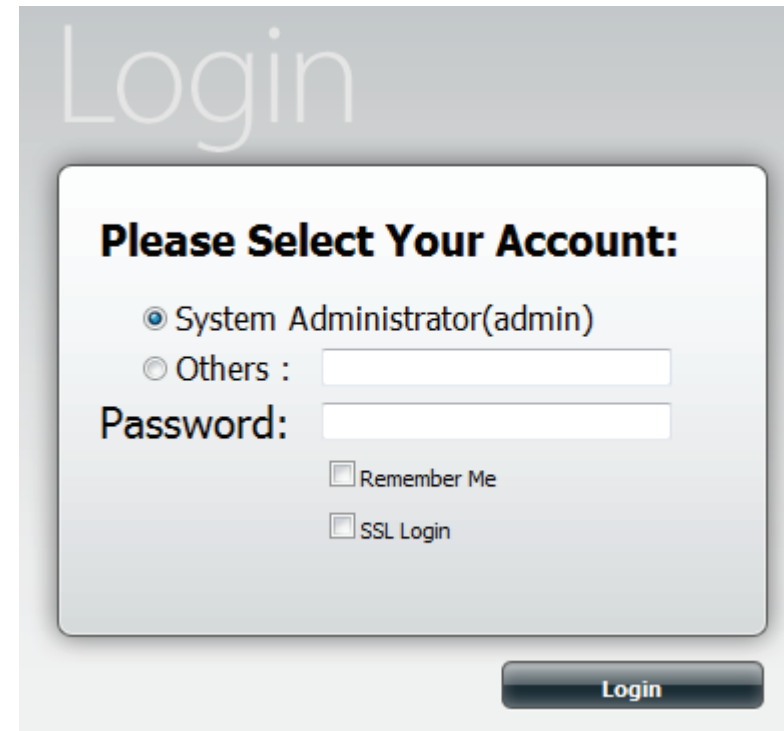

The image shows a web-based login interface. At the top, the word "Login" is displayed in a large, light gray font. Below it, a white box with a gray border contains the following elements: the heading "Please Select Your Account:" in bold; two radio button options, "System Administrator(admin)" (which is selected) and "Others :"; a text input field for the password; a "Password:" label; and two checkboxes, "Remember Me" and "SSL Login". At the bottom right of the white box is a dark gray button with the word "Login" in white text.

Click **Management**.

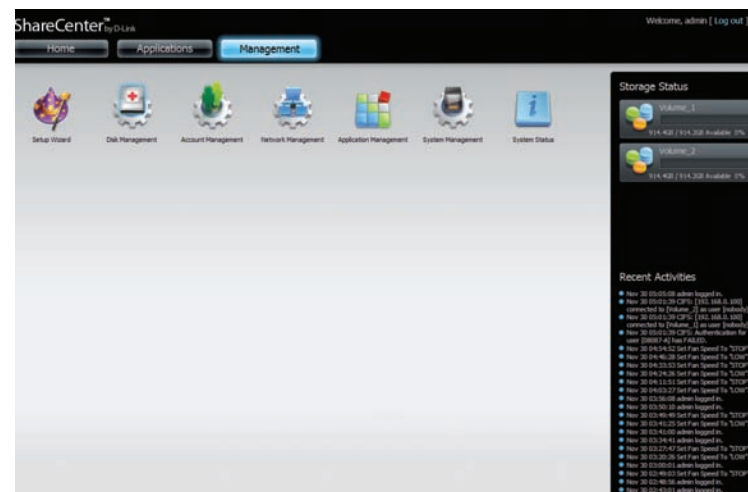


Click **System Management** and then **USB Devices**.


Click the blue arrow next to UPS Settings. There are two modes - **Standalone** and **Master**.

Select **Standalone** to use the UPS only on the DNS-327L or select **Master** to share the UPS with the network UPS slaves.

The UPS Status screen shows the mode, manufacturer, product type, battery charge meter, and status.

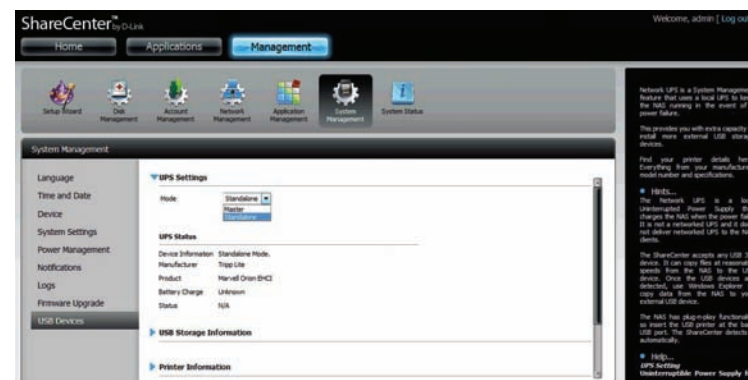


Under **Mode**, select **Master** from the drop-down list and then click **Add**.

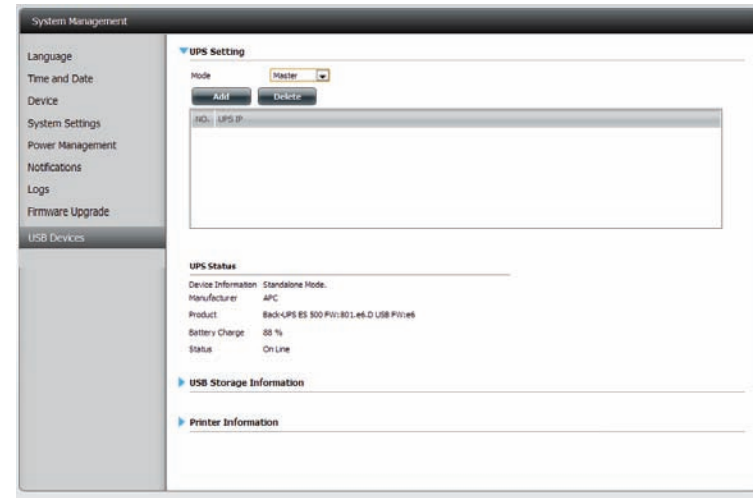


Enter the IP address of the other UPS slave on the network.

Click the + button to add more IP addresses.

Make sure the DNS-327L and the UPS slaves are on the same physical network.

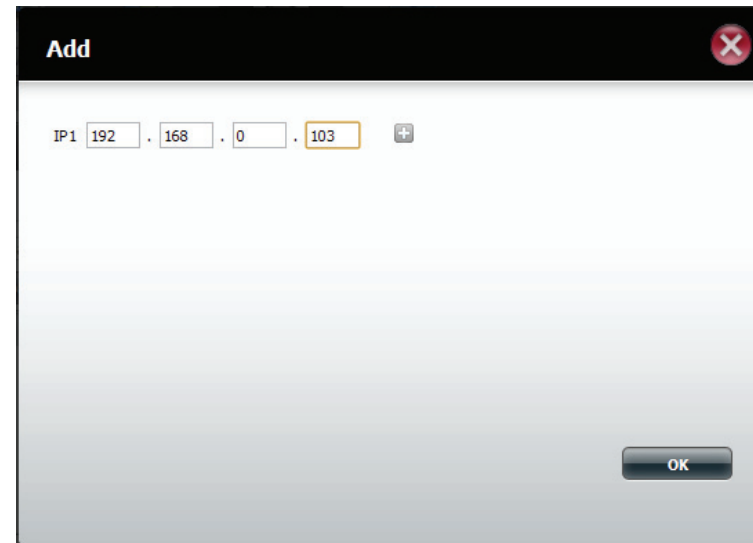


Once you have entered an IP address, the system will check its database for IP address records.

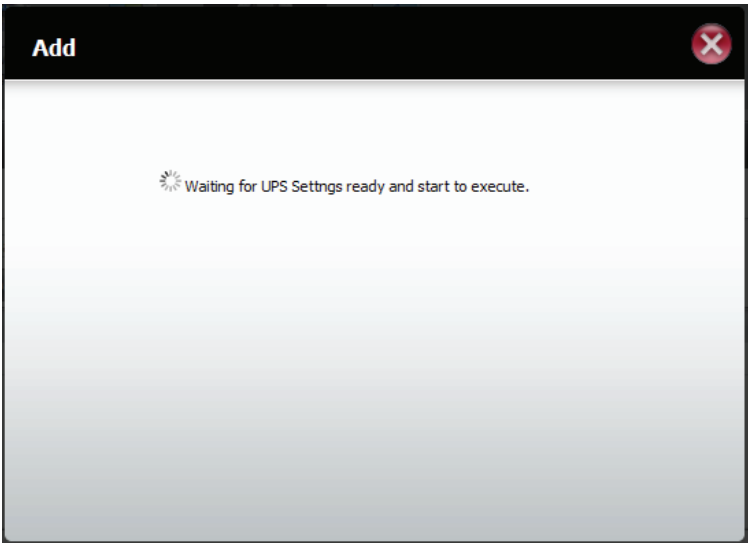

The UPS Settings table will display the IP address(es) you added.


Your DNS-327L is now setup as the network master to notify the network slaves about critical power status.

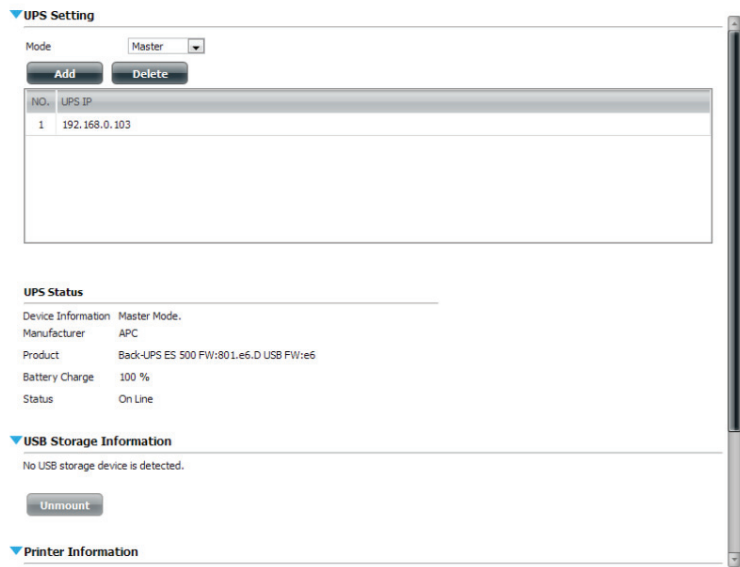


Deleting a UPS Slave

Under **Management > System Management > USB Devices > UPS Setting**, select the IP address. Your selection will turn red.

Click **Delete**.

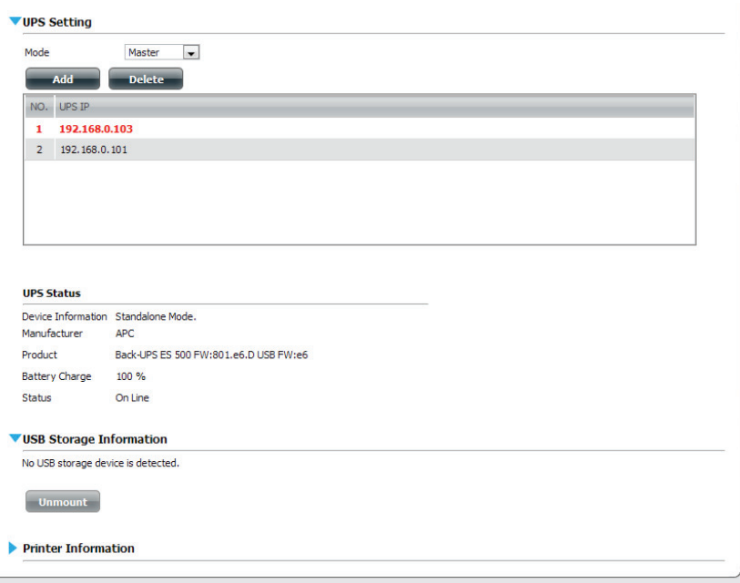

The DNS-327L will process your request.

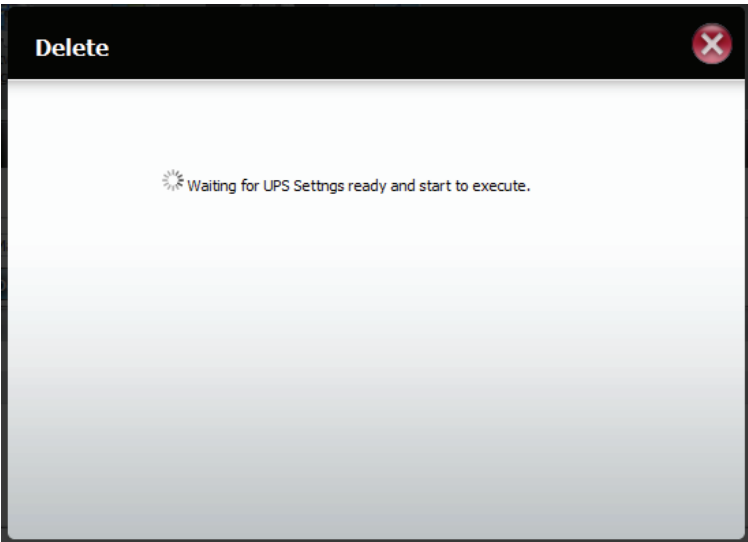

The IP address will no longer be listed in the table.

▼ UPS Setting

Mode

Master

Add

Delete

NO.	UPS IP
1	192.168.0.101

UPS Status

Device Information

Master Mode.

Manufacturer

APC

Product

Back-UPS ES 500 FW:801.e6.D USB FW:e6

Battery Charge

100 %

Status

On Line

▼ USB Storage Information

No USB storage device is detected.

Unmount


▶ Printer Information

USB Print Server

The device features a built-in USB print server, giving users the ability to share a printer on their local network. Connect a USB printer to the USB port on the back of the device. It is important to ensure that any of the printer manufacturer's drivers are already installed or available on any computer you want to print from.


Note: Only the print function is supported. The device does not support the copy and scan functions of Multi-Function Printers.

To add a printer, connect your printer via USB cable to the USB port of your device:

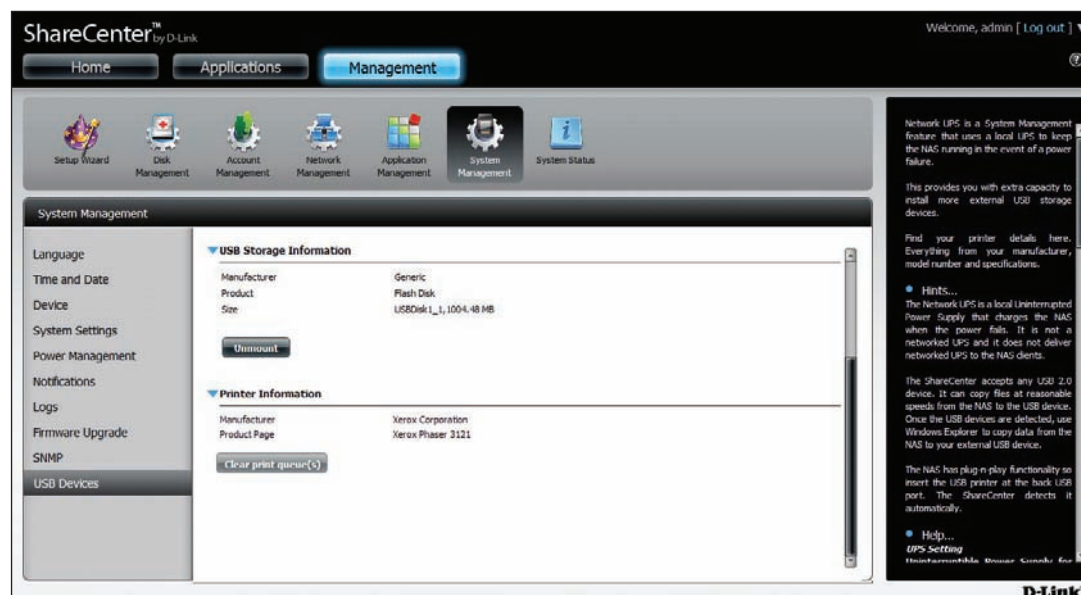


The printer should appear in the USB Devices menu of the System Management icon.

Connect to your device with Samba and then double-click the lp icon.

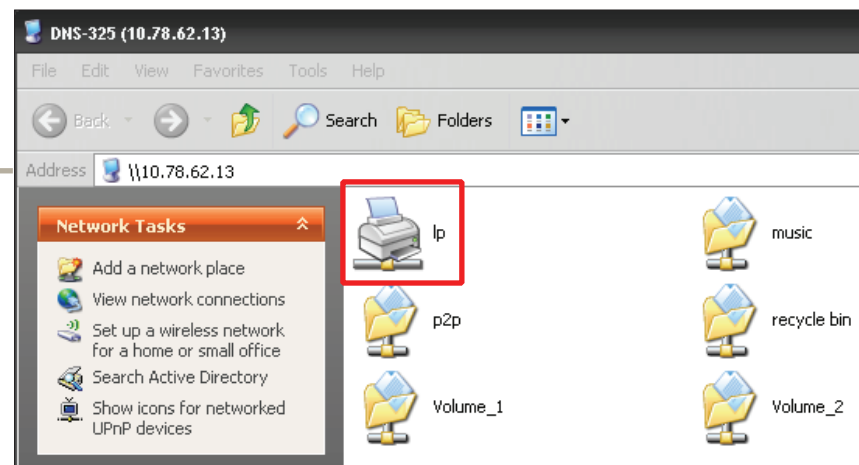


The Windows® Add Printer Wizard will launch:

Select the printer driver from the installed Manufacturer list or use the **Have Disk** button to browse for the printer driver file.

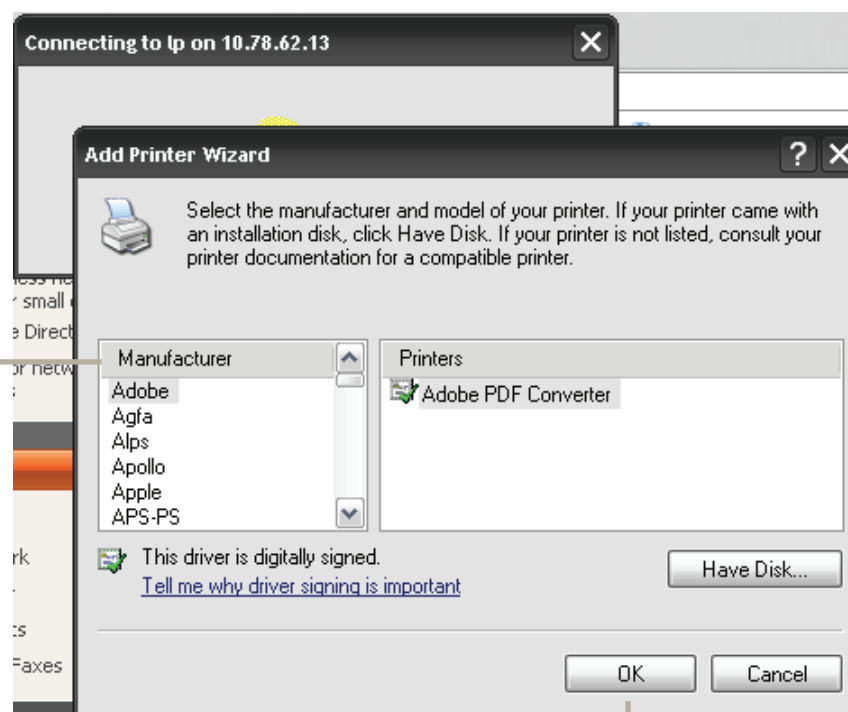


Click **OK** to continue.

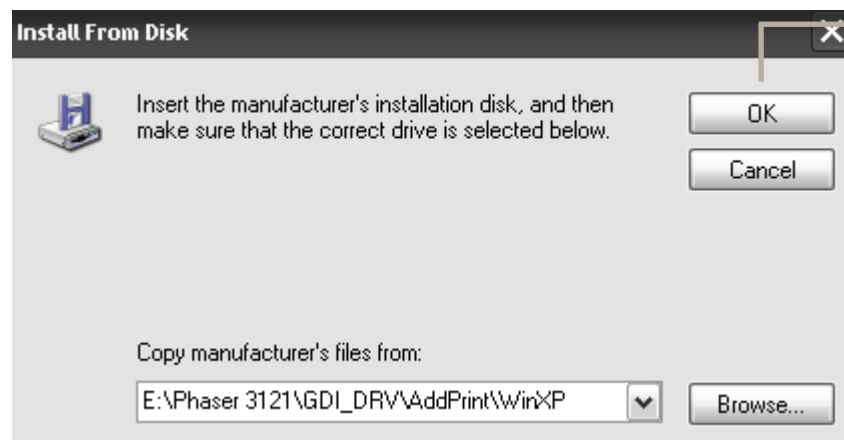


Once you have selected the proper driver as shown in the browse list then click **OK** to install the printer.

The printer is now installed and the printer queue will appear.

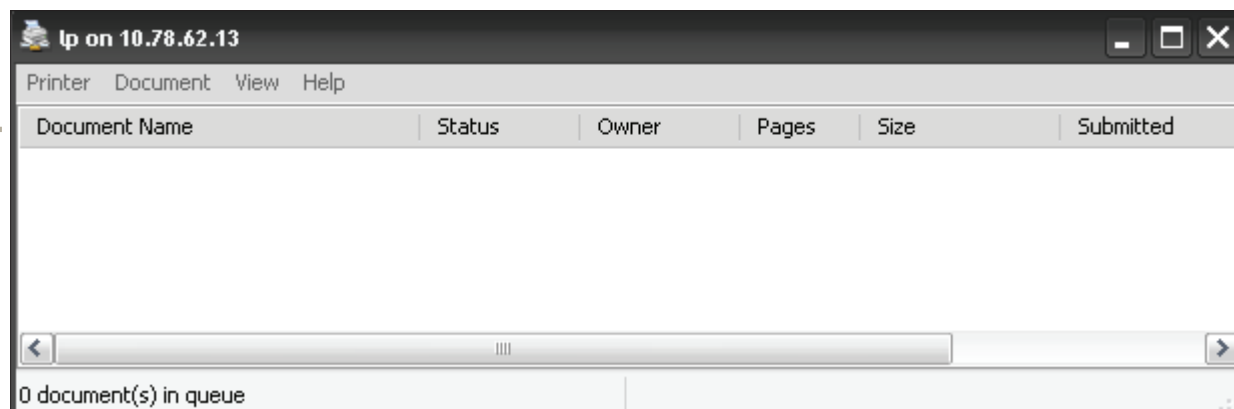


Setting up a printer using Mac OS 10.8

Go to Management, System Management, USB Devices to view the printer attached to your NAS.

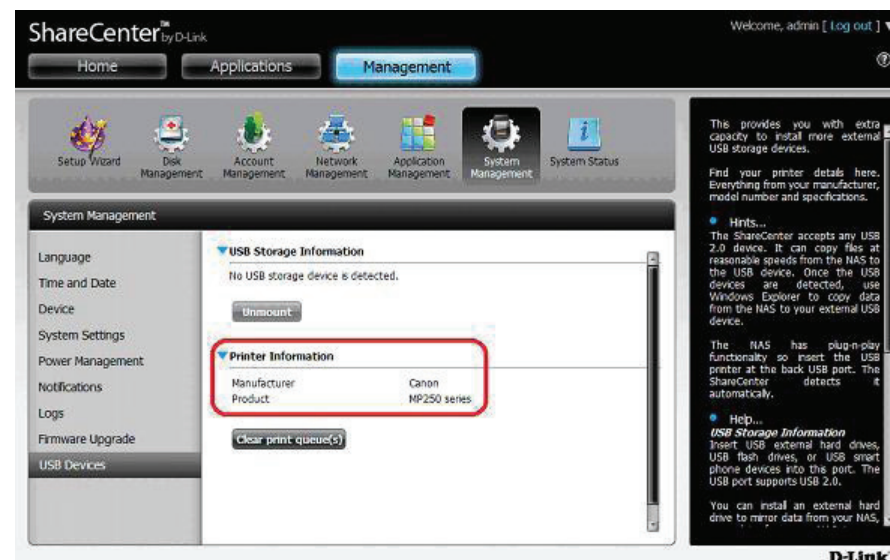


Check the device settings, under System Management, Device, Device Settings.

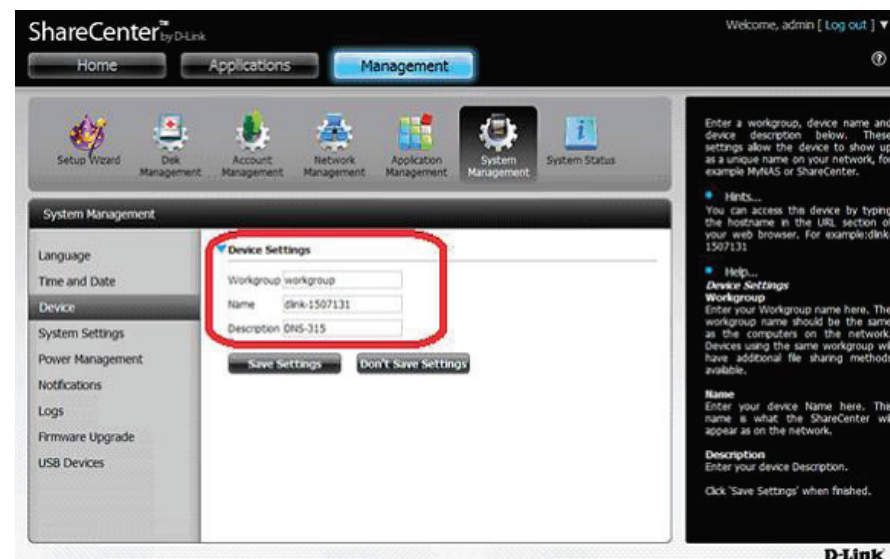


Setting up a printer using Mac OS 10.8

Download the drivers from the respective Printer manufacturers and install it on your Mac. (You need to select the proper firmware for Mac OS 10.8)


Go to System Preferences, Print & Scan.

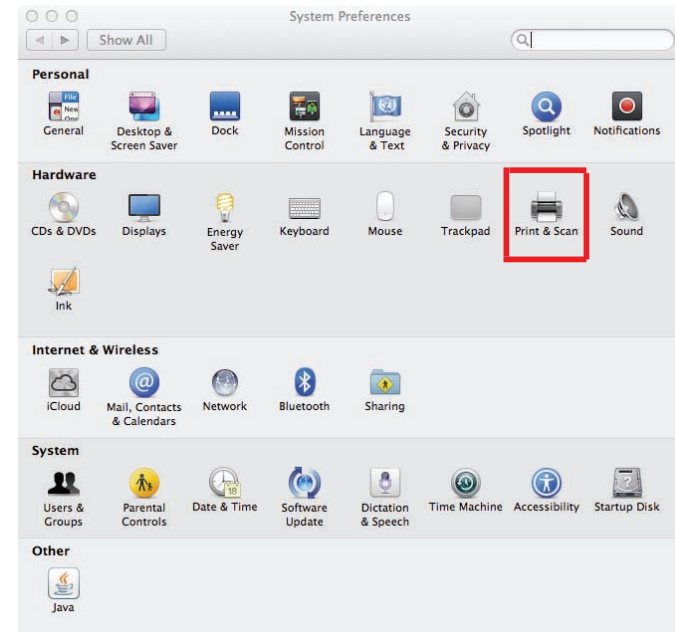

Under **Print & Scan**, click the plus sign.

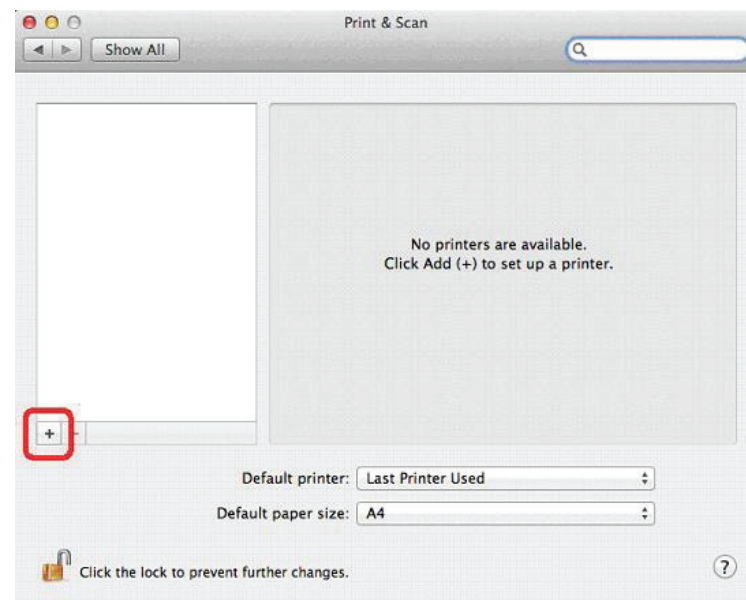


Under **Add Printer**, click the **IP** tab to add the shared printer which is connected to the NAS.

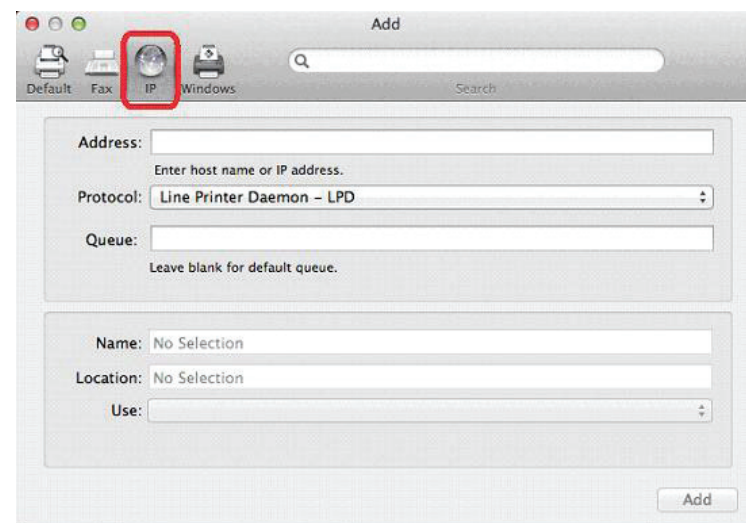


Enter the IP address and the Queue configuration.

Note: Under the Queue section, enter "lp", (where "lp" stands for Line Printer).

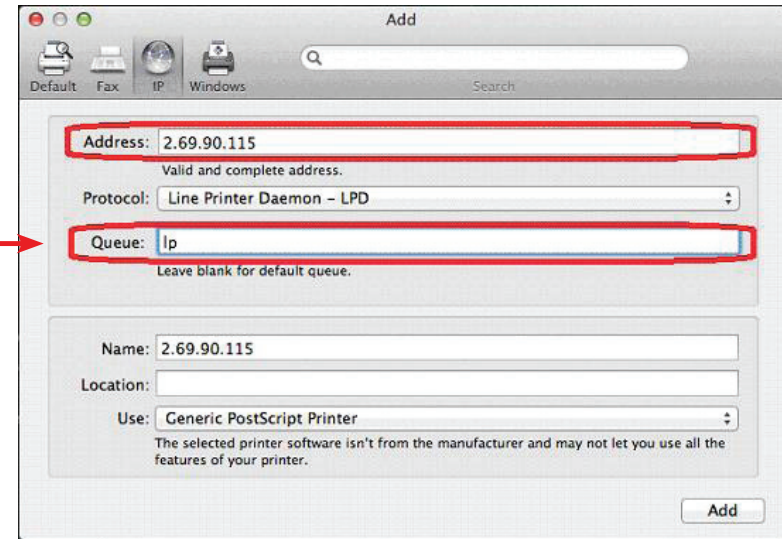


The screenshot shows the 'Add' printer window in macOS. The 'Address' field is set to '2.69.90.115' and the 'Queue' field is set to 'lp'. A red box highlights the 'Address' and 'Queue' fields, with a red arrow pointing from the note to the 'Queue' field.

Under **Location**, select Printer Software.

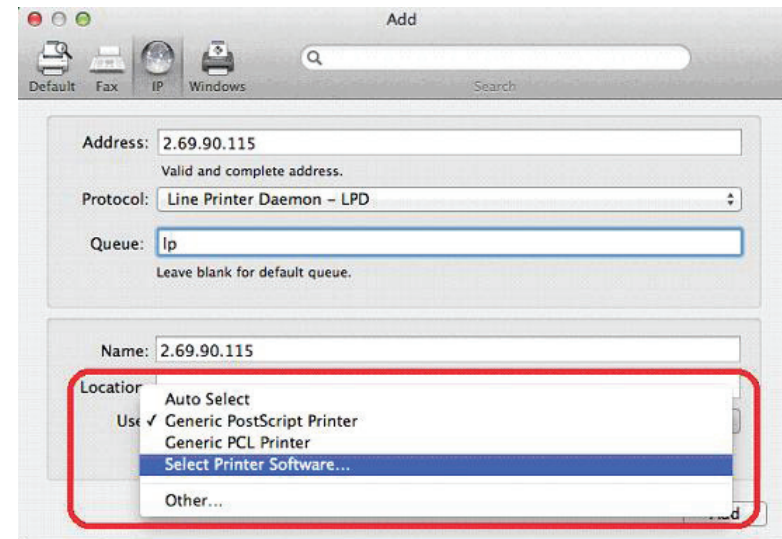

The screenshot shows the 'Add' printer window in macOS. The 'Location' dropdown menu is open, showing options: 'Auto Select', 'Generic PostScript Printer', 'Generic PCL Printer', 'Select Printer Software...', and 'Other...'. A red box highlights the 'Location' dropdown menu.

Select your specific printer. (If you cannot find a driver for your printer, please download the driver from the manufacturer's web site and install it.)

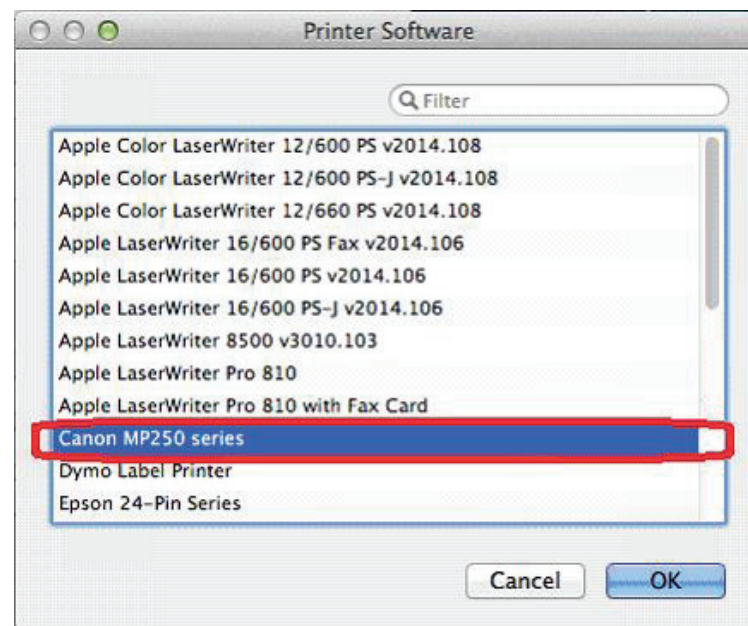

The IP printer now appears under Print & Scan. The IP address is clearly visible in the configuration settings.

