



User Manual

4G LTE+ AX600 Wi-Fi 6 Mobile Hotspot

DWR-933W

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Revision	Date	Description
1.00	05/28/2026	Initial Version

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other companies or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. AppStoreSM is a service mark of Apple Inc.

Chrome™ browser, Google Play™ and Android™ are trademarks of Google Inc. Google, Nest Hub, and Google Home are trademarks of Google LLC.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies. Copyright © 2026 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview	3	Wizard	20
Package Contents	3	Home.....	23
System Requirements	4	My Wi-Fi	26
Safety Warnings.....	5	Mobile	28
Introduction	6	LAN	33
Hardware Overview	7	Clients.....	34
Hardware Overview	9	More.....	35
LCD Screen.....	9	Connect a Wireless Client to Your Network	38
Hardware Installation	11	WPS Button	38
Initial Setup	11	Battery Removal	39
Wireless Installation Considerations	14	Troubleshooting.....	40
Configuration	15	Technical Specifications	42
Initial Connection to the Hotspot.....	15	Regulatory Information.....	44
Connect via USB.....	15	European Community Declaration of Conformity:.....	47
Connect via Wi-Fi.....	16		
Web-based Configuration	18		

Product Overview

Package Contents

	4G LTE+ AX600 Wi-Fi 6 Mobile Hotspot
	Rechargeable Battery
	USB Type-C Cable
	Quick Installation Guide
If any of the above items are missing or damaged, please contact your reseller.	

EU Battery & WEEE Directives Disposal and Recycling

This product contains a battery. Recycle or dispose of batteries in accordance with the battery manufacturer's instructions and local/national disposal and recycling regulations. For more information, please refer to the warranty guide.

System Requirements

Network Requirements	A compatible nano SIM/UICC card with mobile data service*
Web-based Configuration Requirements	Computer with the following: Windows®, Macintosh, or Linux-based operating system An installed Wi-Fi interface Browser Requirements: Microsoft Edge Mozilla Firefox 28 or higher Safari 6 or higher Chrome 28 or higher

* Subject to services and service terms available from your carrier.

Safety Warnings

- Do not disassemble the product, strike it, crush it, or expose it to fire, water, or ice.
- Do not use or store the product outside the specified safe operating or storage temperature range.
- Do not use the product if the battery swells or becomes deformed.
- Do not puncture, crush, short-circuit, or heat lithium batteries. It may cause fire or explosion.
- Only trained personnel with ESD protection and fire safety equipment may perform repairs.
- Damaged batteries must not be reused or resoldered.
- Do not replace the battery with an incorrect type, as this may compromise safety protections and cause explosion; use only the battery that comes with the product package.
- Do not store the battery in environments subject to extremely high temperatures or low air pressure, which may result in explosion or leakage of flammable liquid or gas.

Introduction

The DWR-933W is a high-speed 4G LTE+ mobile broadband router that functions as a portable Wi-Fi hotspot. It allows you to share your mobile connection by setting up a Wi-Fi network wherever you go. Its compact and lightweight design, featuring a convenient carrying handle, makes it ideal for on-the-go use.

Share Your Internet On the Go

The DWR-933W makes staying connected on the go easy; just use one mobile connection to get your laptop, phone, tablet, or other wireless devices online. Ideal for travel, it delivers fast Wi-Fi 6 (Wireless AX) speeds of up to 600 Mbps*. Whether you're on a business trip or vacationing with family and friends, everyone can enjoy fast, convenient Internet anytime.

Easy Setup for Instant, Safer Access


Getting online with the DWR-933W is quick and convenient since the device is truly plug-and-play. Simply insert your 4G LTE nano SIM card to set up your instant mobile Wi-Fi hotspot. The DWR-933W delivers reliable connectivity in a powerful yet portable device.

Designed for Travel Convenience


The DWR-933W weighs about 114 g (4.02 oz) to fit in your purse, bag, or pocket. Its built-in 3000 mAh rechargeable battery provides up to 8 hours of operation.

* All references to speed are for comparison purposes only. Actual speeds will vary depending on a range of factors including mobile network coverage, signal strength, network activity, and environmental conditions.


Hardware Overview

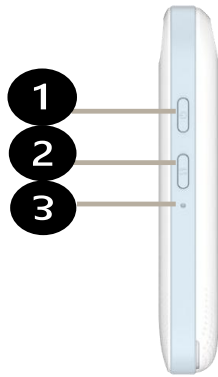

Side View

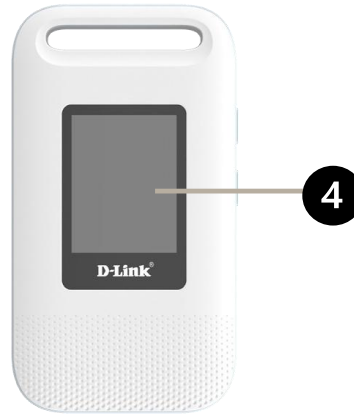

Front View

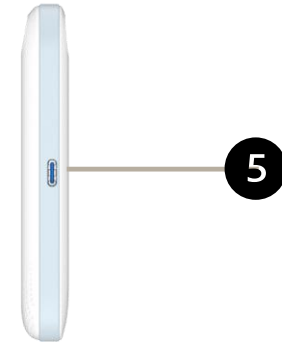


Bottom View

Number	Name	Description
1	Power Button	Press and hold this button for about 5 seconds to turn the device on or off. Short press this button to wake the device from sleep mode.
2	WPS Button	Press and hold this button for about 3 seconds to add new wireless devices using Wi-Fi Protected Setup (WPS). Short press the button to display the Wi-Fi settings in full screen (refer to LCD Screen next page).

3	Reset Button	To reset the device to its factory default settings, use a pointed object to press and hold the reset button for 3 seconds.
4	LCD Screen	Displays real-time information such as connection speed, battery level, and the number of connected devices (refer to LCD Screen next page).
5	USB Type-C Connector	Use the included cable to connect to a powered USB port to charge the device, or connect it to a computer to access the web-based configuration.

Hardware Overview

LCD Screen

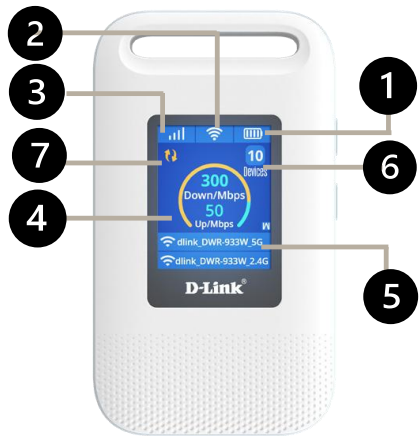

Number	Name	Description
1	Battery Level	The battery level is shown by the number of white bars. The device must be powered by a battery. When the device is charging, a green lightning sign appears. When the device is charging and battery level is low (below 10%), a red lightning sign appears.
2	Cellular Signal Strength	The white bars represent cellular signal strength; a higher number of bars indicates a stronger connection.

3	Wi-Fi Signal Strength	The white bars represent Wi-Fi signal strength; a higher number of bars indicates a stronger connection.
4	Download/Upload Speeds	The number shows the current download and upload speeds.
5	Wi-Fi	Displays the Wi-Fi network name. Short press the button to display the Wi-Fi settings on a full screen.
6	Connected Clients	Displays number of clients currently connected.
7	WPS Status	Flashing Orange Indicates that the WPS process has been initiated and is attempting to connect. Solid Green Indicates that WPS is in an idle/standby state (no active connection process). Solid Red Indicates that the WPS connection attempt has failed.


Hardware Installation

This section will guide you through the installation process.


Initial Setup

Install a SIM Card

1. Lift up the back cover through the opening at the corner of the device to open it.

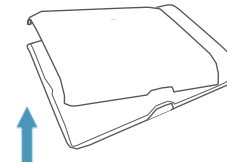


2. Use the notch on the battery socket to gently lift and remove the battery.

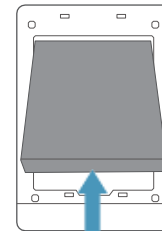


3. Take note of the SSID (Wi-Fi name) and password printed on the product label beneath the battery. If you want to set up the DWR-933W wirelessly, you will need to enter this SSID and Wi-Fi Key (password). You will also need the admin password when signing in to the web-based configuration.

-
- Slide the card holder to unlock it, then lift it open. Insert the nano SIM card (4FF), ensuring it is properly aligned with the notch in one corner. Close the card holder and slide it back into the locked position. If the SIM card is inserted incorrectly, the device will not be able to connect to the Internet.

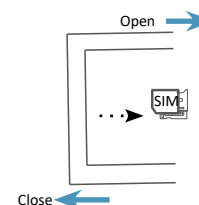

- Reinsert the battery by aligning its bottom edge with the battery socket.
- Close the back cover.

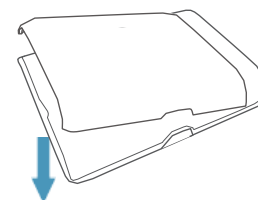

Note: Always unplug and turn off the device before installing or removing the SIM card. Never insert or remove the SIM card while the device is in use.


Charge the DWR-933W

Connect to the device's USB port with a power bank or your laptop using a USB Type-C cable.



Power on the DWR-933W

Press and hold the Power button for 5 seconds to turn on the device. Wait until the screen displays device status information, then you can proceed with configuration (refer to the below sections).

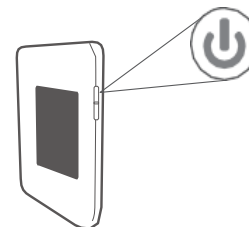

Wireless Installation Considerations

The DWR-933W can be accessed using a wireless connection from anywhere within the operating range of its wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may adversely affect wireless signals. Ranges vary depending on the types of materials and background RF (Radio Frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:

1. Minimize the number of walls and ceilings between the hotspot and other network devices. Each wall or ceiling can reduce your adapter's range from 1 to 30 meters (3 to 90 feet).
2. Be aware of the direct line between network devices. A wall that is 0.5 meters (1.5 feet thick) appears to be almost 1 meter (3 feet) thick at a 45-degree angle. At a 2-degree angle it appears over 14 meters (42 feet) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using a 2.4 GHz cordless phone, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even when the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

Configuration

This section will show you how to configure your DWR-933W using the web-based configuration that can be accessed via your web browser.

Initial Connection to the Hotspot

By default, the DWR-933W comes configured to work with most 4G/3G SIM cards. Simply connect to it via Wi-Fi or use the included USB cable to access the Internet connection through your mobile data plan. If you wish to configure the hotspot, you will need to establish a connection with the hotspot in order to access the web-based configuration. For more information, please refer to the below sections. Once you have configured your hotspot, you will be able to connect to the Internet using the Wi-Fi settings that you specified in the configuration process. Please ensure that the hotspot is powered on and has sufficient battery power before commencing the setup process.


Connect via USB

To connect to the hotspot via USB, plug the provided USB Type-C cable into the USB port on the side of the device, and plug the other end into an available USB port on your computer.


Connect via Wi-Fi

Note: Please refer to the documentation that came with your operating system or wireless client for further information on how to connect to a wireless network.

To connect to DWR-933W using Wi-Fi, open your operating system's wireless networking utility and scan for available networks to connect to. The default SSID and password can also be found on the product label beneath the battery.

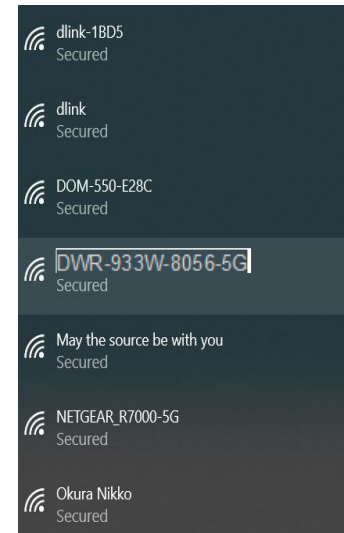


Once you have located your DWR-933W's wireless network, select it and click **Connect**.

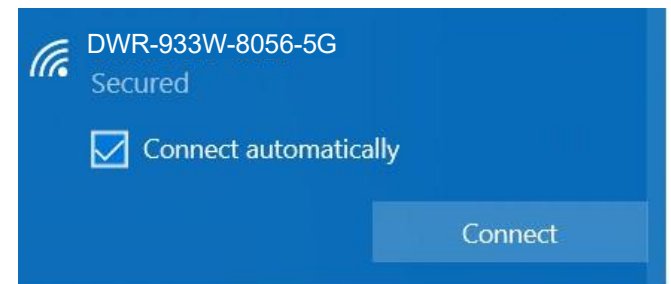

You will then be prompted to enter the network security key for your device. Enter the security key in the box provided and click **OK**. Your wireless connection utility will confirm that the connection is successful, and you can move to the next step to continue to the configuration process.

You can also set up a connection using the Windows built-in WPS feature. Please see **Connect a Wireless Client to Your Network on page 38**.

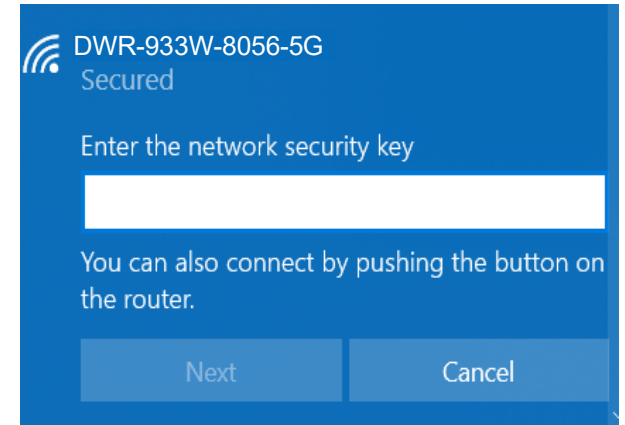



Web-based Configuration

To access the web-based configuration, open a web browser and enter the IP address of the hotspot, which is **192.168.0.1** by default in the address bar.


When your browser displays a security warning stating, “Your connection isn’t private.” You will also see Not Secure in the address bar, along with HTTPS crossed out with red lines. This is because the device’s default management URL is not an actual Internet website with valid certificates. You can proceed with the setup by following these steps:

1. Click the **Advanced** button.
2. Click Proceed to **https://192.168.0.1**.

Now you will be able to sign in to your device.

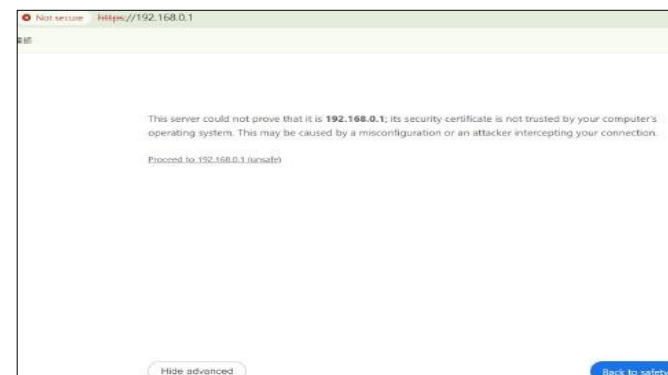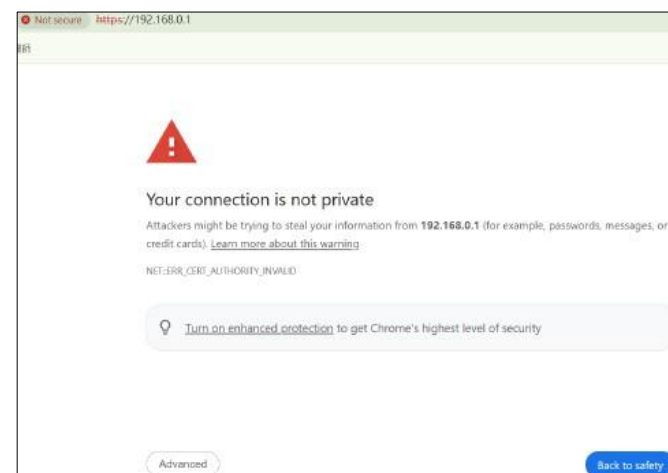

3. Once you have reached the configuration page through your web browser, you will need to sign in. Enter 'admin' as the username and use the admin password printed on the product label beneath the battery.
4. Click **Login** to continue.

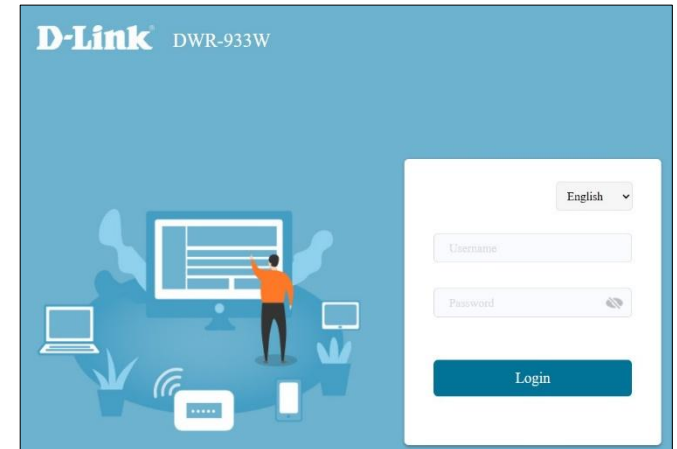

Note: We strongly recommend that you change the admin password to enhance security by clicking Wizard at the top right. Please follow the instructions to set a password that meets the required security strength.

Wizard

The Wizard is designed to guide you through a step-by-step process to configure your new DWR-933W for Internet connection. To access the wizard, click **Wizard** at the top right.

Step 1: Configure the User Settings for Login

On the **User** screen in Wizard, enter a new username and password for the admin account. Changing the default admin password is highly recommended to enhance security and ensure proper device functionality. Click **Continue** to proceed with the setup.

Please follow the rules below when creating your credentials:

The username must contain between 4 and 20 characters and is case-sensitive.

The password must be at least 10 characters long and include:

Uppercase letters (A-Z)

Lowercase letters (a-z)

Numbers (0–9)


Special characters are not allowed.

The screenshot shows the D-Link DWR-933W Wizard interface. At the top, there's a blue header with the D-Link logo and 'DWR-933W'. On the right of the header are icons for a battery, a globe, a 'Wizard' button, and a 'Log out' button. Below the header is a progress bar with five steps: 'User' (active), 'Network', 'Wi-Fi', 'Guide', and 'Finish'. The main content area is titled 'User' and contains three input fields: 'New Router Username' with the value '11', 'New Router Password' with four dots, and 'Re-enter Password' with four dots. At the bottom of the form are two buttons: 'Exit' and 'Continue'.

Step 2: Configure the Cellular Settings for Internet Connection

Configure the following Internet connection settings:

Mobile Data	Enable or disable mobile data service.
Roaming Data	Enable or disable data roaming service when being outside your carrier's network.
Network Mode	Select standards for mobile data service.

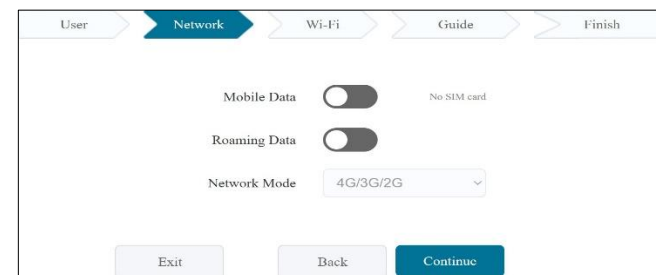


The screenshot shows the 'Network' settings screen. At the top, there is a progress bar with five steps: User, Network (highlighted), Wi-Fi, Guide, and Finish. Below the progress bar, there are three settings: 'Mobile Data' with a toggle switch, 'Roaming Data' with a toggle switch, and 'Network Mode' with a dropdown menu set to '4G/3G/2G'. At the bottom, there are three buttons: 'Exit', 'Back', and 'Continue'.

Step 3: Configure the Wireless Settings for Wireless Connectivity

Configure the following Wi-Fi settings for 2.4 GHz and 5 GHz bands individually:

Network Name (SSID)	Enter a name for your wireless network.
Security	Select None, WPA-PSK, WPA2-PSK, or WPA3-SAE.
Password	Enter the Wi-Fi password. Please adhere to the on-screen password length requirements: The password must be at least 10 characters long and include: Uppercase letters (A-Z) Lowercase letters (a-z) Numbers (0–9)

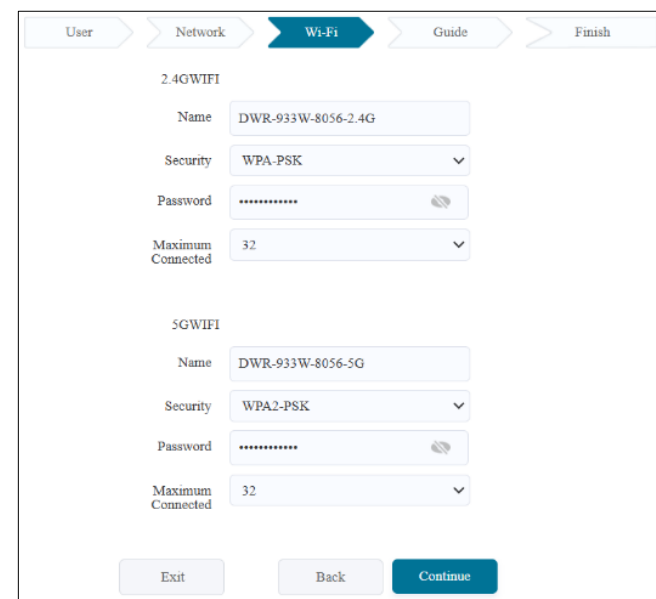

The screenshot shows the 'Wi-Fi' settings screen. At the top, there is a progress bar with five steps: User, Network, Wi-Fi (highlighted), Guide, and Finish. Below the progress bar, there are two sections for configuring Wi-Fi networks. The first section is for '2.4GWIFI' and the second is for '5GWIFI'. Each section has four settings: 'Name' (text input), 'Security' (dropdown menu), 'Password' (password input with a strength indicator), and 'Maximum Connected' (dropdown menu). At the bottom, there are three buttons: 'Exit', 'Back', and 'Continue'.

	Special characters are not allowed.
Maximum Connected	Enter the maximum number of concurrent connections allowed. The limit is 32.

Click **Continue** to continue with the setup process.

Step 4: Device Placement Guidelines

These guidelines provide recommendations for optimizing your device's signal strength. Please take note of this information and click **Continue** to continue with the setup process.

Click **Confirm** to complete the setup process. You will then be logged out. Please log in with the configured admin password.



Home

The Home page displays the status of the hotspot. It displays information about the device's mobile connection settings, such as WAN IP and network type, system uptime, and signal strength. It also displays the hotspot's wireless SSID. The menu bar at the top of the page allows you to quickly navigate to **Home**, **My Wi-Fi**, **Mobile**, **LAN**, **Clients**, and **More** for system administration functions.

Home	
System Roaming	Displays the length of time that the device
IP Address	
My Internet	Click the Internet icon to display the mobile connection settings page.
My Wi-Fi	Click the My Wi-Fi icon to display the Wi-Fi settings page.
Devices	Click Devices to display the Clients list page.
Note: For each of the above configured settings, click on it to go to its configuration page.	



Internet Information

Click the Globe icon at the top right to access the Internet connection information. The following will be displayed:

Operator Name: The mobile carrier's name

Network Type: The mobile network technology

Band: The frequency band used by the mobile network

EARFCN: The E-UTRA Absolute Radio Frequency Channel Number indicates the exact LTE channel number within the band.

RSRP: The Reference Signal Received Power measures the main LTE signal strength.

RSSI: The Received Signal Strength Indicator measures the total received signal power.

RSRQ: The Reference Signal Received Quality measures the signal quality.

CellID: The Cellular Identification Number is a unique ID identifying the connected cell tower sector.

PCI: The Physical Cell Identifier is used for radio coordination between towers.

MCC: The Mobile Country Code identifies the country of the mobile operator.

MNC: The Mobile Network Code identifies the mobile operator.



Internet Information	
Operator Name Chunghwa	Network Type 4G
BAND 7	Earfcn 3050
RSRP -98 dBm	RSSI -42 dBm
RSRQ -11 dB	CellID 54674702
PCI 460	MCC 466
MNC 92	ICCID 89886920042052754814
IMEI 357748929014705	

ICCID: The Integrated Circuit Card Identifier is a unique ID of the SIM card.

IMEI: The International Mobile Equipment Identity is a unique identifier of the mobile device.

Battery Level



The battery icon indicates the percentage of battery level.

System Running

The System Running indicator at the bottom center of the Home page displays how long the system has been continuously operating since the last restart.

System running
00:55:38

IP Address

The IP address at the bottom of the Home page shows the WAN Interface's IP address.

IP Address
10.202.200.52


My Wi-Fi

The Wireless page allows you to configure Wi-Fi connection parameters and manage the accessibility of the wireless network.

Basic

Configure the following to set up the security method to protect your wireless network:

1. Enable the wireless network.
2. Enter a name (SSID) for the wireless network.
3. Select **None**, **WPA-PSK**, **WPA2-PSK (default)**, **WPA3-SAE** for Security. Note that enabling WPA3-SAE will disable WPS.
4. Enter a Password for your wireless network. Please adhere to the on-screen password length requirements. You can click  to hide or show the password.
5. Select the maximum number of concurrent connections. The limit is 32.
6. Click **Save**.

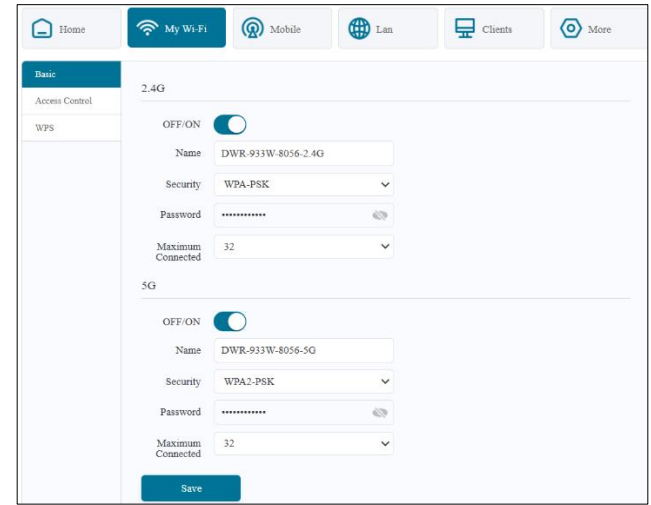

The screenshot displays the 'My Wi-Fi' configuration interface. At the top, there is a navigation bar with tabs for Home, My Wi-Fi (selected), Mobile, Lan, Clients, and More. Below this, the 'Basic' tab is active, showing settings for 2.4G and 5G networks. For the 2.4G network, the 'OFF/ON' toggle is turned on. The 'Name' field contains 'DWR-933W-8056-2.4G', 'Security' is set to 'WPA-PSK', 'Password' is masked with dots, and 'Maximum Connected' is set to 32. The 5G network settings are identical, with 'Name' as 'DWR-933W-8056-5G' and 'Security' as 'WPA2-PSK'. A 'Save' button is located at the bottom right of the configuration area.

Access Control

Allow or disallow Wi-Fi connections by configuring Wi-Fi MAC address filtering. To configure a MAC filter:

1. Select Disable or Enable MAC Filters. If enabled, choose the filter type:
2. **Open Whitelist:** Only the specified MAC addresses are allowed to connect.
3. **Open Blacklist:** The specified MAC addresses are denied access.
4. Click a field below to add MAC addresses to the filter list, for example, 40:4d:8e:6d:80:7d. You can enter up to 8 MAC addresses.
5. Click **Apply**.

The screenshot shows the 'Access Control' configuration page. On the left, a sidebar has tabs for 'Basic', 'Access Control' (selected), and 'WPS'. The main content area is titled 'Access Control' and contains a paragraph explaining MAC address filtering. Below this, there is a 'MAC filtering' section with a dropdown menu currently set to 'Disable'. There are two columns of input fields for MAC addresses, each with four empty boxes. At the bottom right of the main area is an 'Apply' button.

WPS

This page allows you to enable or disable WPS (Wi-Fi Protected Setup). WPS enables wireless devices to quickly and securely connect to the DWR-933W without requiring manual network configuration. After you enable WPS, select either 2.4G or 5G Wi-Fi band for WPS connection. The default is enabled on the 2.4G.

Note: WPS cannot work with WPA3-SAE.

The screenshot shows the 'WPS' configuration page. On the left, a sidebar has tabs for 'Basic', 'Access Control', and 'WPS' (selected). The main content area is titled 'WPS' and contains a paragraph explaining the feature. Below this, there is an 'Enable WPS' section with a toggle switch currently turned off. Underneath the toggle, there are two radio buttons for selecting the Wi-Fi band: '2.4G' (selected) and '5G'. At the bottom right of the main area is a 'Save' button.

Mobile


The Mobile page allows you to configure mobile connection parameters.

Basic Setup

Configure your Internet connection according to the details of your mobile service plan.

To configure your Internet Connection:

1. Select whether to enable **Mobile Data** service. Turning off mobile data will disconnect your device from the Internet.
2. Select whether to enable **Roaming Data** service. Service charges may apply depending on your mobile plan.
3. Select the mobile standard used for **Network Mode**.
4. Click **Save**.

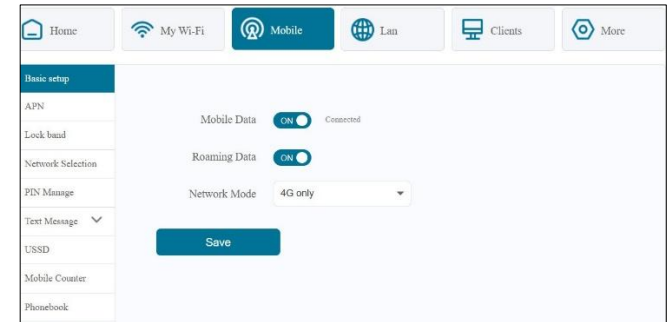


APN Settings

APN (Access Point Name) settings are detailed configurations used for Internet connection.

To configure your APN manually:

5. Enter the Access Point Name (APN), which sets up a network connection to enable Internet access through cellular communication.
6. Enter the Proxy Server and Port number for APN.
7. Enter the Username and Password for APN connection.
8. Select the Authentication Type: None, CHAP, PAP, or PAP/CHAP. Enter the APN Type.
9. Select IPv4, IPv6, or both for APN IP addressing and Roaming Protocol.
10. Click **Save**.

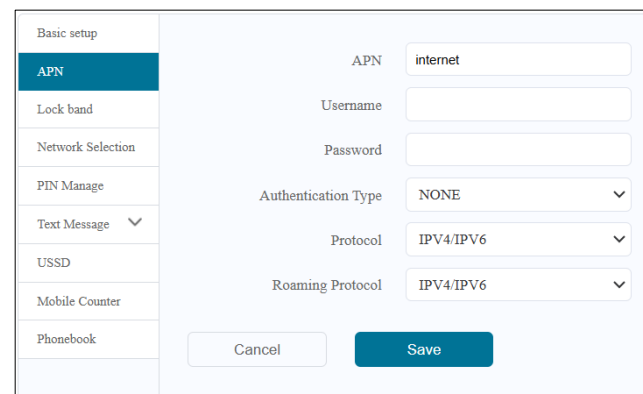


The screenshot shows a web interface for configuring APN settings. On the left is a sidebar menu with options: Basic setup, APN (highlighted), Lock band, Network Selection, PIN Manage, Text Message, USSD, Mobile Counter, and Phonebook. The main area contains the following fields: APN (text input with 'internet'), Username (text input), Password (text input), Authentication Type (dropdown menu with 'NONE' selected), Protocol (dropdown menu with 'IPv4/IPv6' selected), and Roaming Protocol (dropdown menu with 'IPv4/IPv6' selected). At the bottom right are 'Cancel' and 'Save' buttons.

Lock Band

The band lock feature allows users to manually select and fix the router to specific cellular frequency bands instead of automatically switching between available bands. This can help improve connection stability or performance in certain environments.

To configure lock band:

1. Enable the **Lock Band** function.
2. **4G Band:** Check the corresponding boxes to define the frequency bands on which the device will operate.

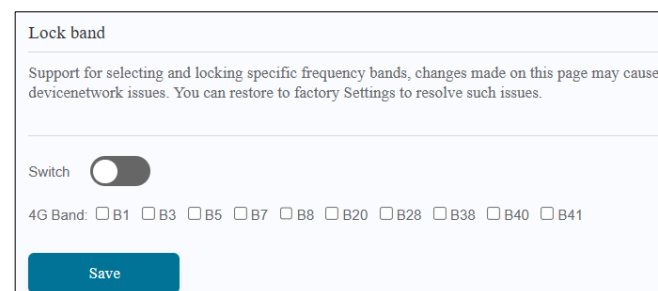


The screenshot shows the 'Lock band' configuration page. It has a title 'Lock band' and a warning message: 'Support for selecting and locking specific frequency bands, changes made on this page may cause devicenetwork issues. You can restore to factory Settings to resolve such issues.' Below this is a 'Switch' control, which is currently turned off. Under the switch, there is a section for '4G Band' with checkboxes for B1, B3, B5, B7, B8, B20, B28, B38, B40, and B41. A 'Save' button is located at the bottom right.

3. Click **Save**.

Network Selection

Consult your Internet service provider for the appropriate configuration method: **Manual** or **Automatic**. If Automatic is selected, click **Search** to scan for mobile networks offered by your mobile carrier only. If Manual is selected, click **Search** to scan for all available mobile networks in range. Then register your Internet connection with the desired network.

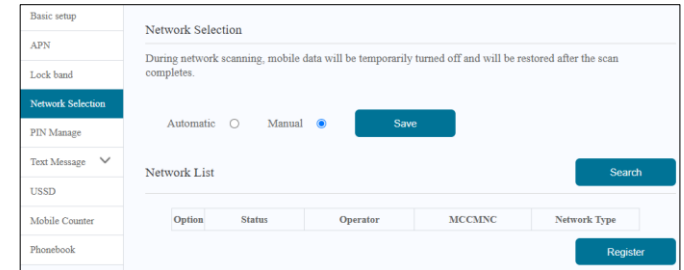


Text Message

Write and send text messages.

Texting


To send a text message:

1. Enter the recipient's phone number. For international numbers, prefix the number with the country code, e.g. *886*.
2. Type your message in the field below.
3. Click **Send** to send your messages.

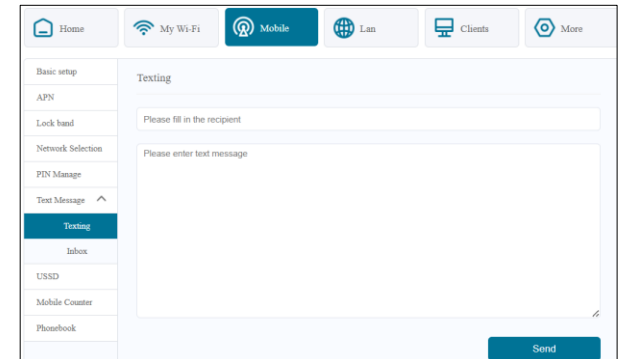

Inbox

The Inbox allows you to view SMS messages associated with your mobile account. The sender's phone number and message content are displayed in the list. To view the message's full details, click on a message and the down

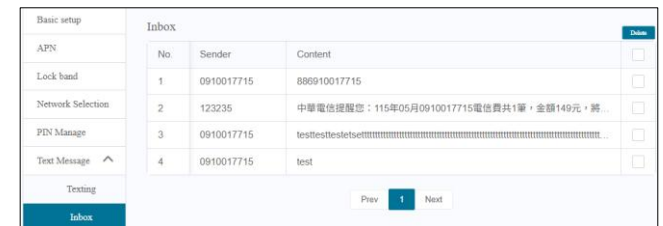

arrow sign will appear, then click on it.


To remove a message, select it and click **Delete**.

USSD

Unstructured Supplementary Service Data (USSD) allows ISP-specific applications to be activated with an SMS message. It allows you to check account information such as data usage or balance.

USSD Code

Enter a predefined code or symbols and click **Send**.

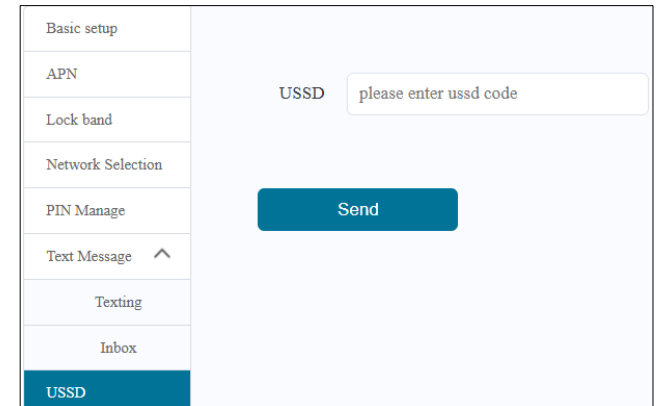


The screenshot shows the USSD interface. On the left is a sidebar menu with options: Basic setup, APN, Lock band, Network Selection, PIN Manage, Text Message (with an upward arrow), Texting, Inbox, and USSD (which is highlighted in blue). The main area on the right is titled 'USSD' and contains a text input field with the placeholder text 'please enter ussd code'. Below the input field is a blue button labeled 'Send'.

Mobile Counter

Mobile Counter helps you monitor and manage your mobile data to avoid extra charges from excessive use. Once the configured data limit is reached, the mobile connection will be disconnected to prevent further data usage.

To limit the amount of data traffic:

Enable **Flow Limit**, enter the maximum amount of data allowed in **Traffic Limit**, then click **Save**. The **Used Traffic** section shows the total cumulated data usage. To reset the counter, click **Clean**. The displayed value will then be reset to 0.

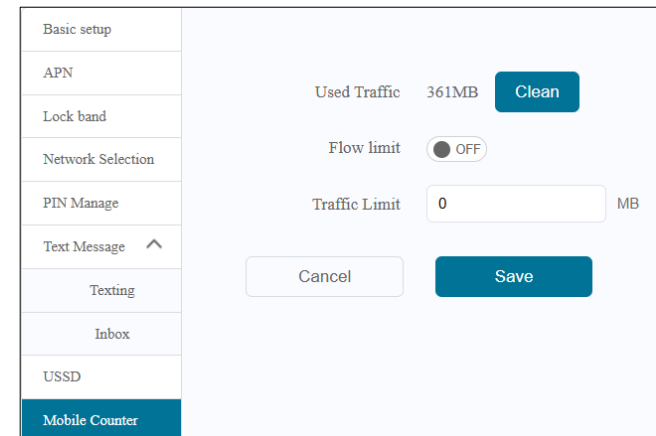

The screenshot shows the Mobile Counter interface. On the left is a sidebar menu with options: Basic setup, APN, Lock band, Network Selection, PIN Manage, Text Message (with an upward arrow), Texting, Inbox, USSD, and Mobile Counter (which is highlighted in blue). The main area on the right displays 'Used Traffic' as '361MB' with a blue 'Clean' button next to it. Below this, 'Flow limit' is shown with a toggle switch set to 'OFF'. 'Traffic Limit' is shown as '0' with a unit 'MB' and a text input field. At the bottom are 'Cancel' and 'Save' buttons.

Phonebook

The Phone Book allows you to manage your contacts.

To add a new contact, click **Add**, then enter the contact’s name and phone number. Click **Save** to confirm. You can edit or delete existing contacts at any time by clicking the corresponding icons in the Action column.

Basic setup

APN

Lock band

Network Selection

PIN Manage

Text Message

USSD

Mobile Counter

Phonebook

Phonebook

Add

order	name	number	action
1	chen	0910017715	 

Prev1/1Next

LAN

The Network Setting page allows you to configure the device's DHCP configuration.

DHCP Settings

The DHCP server provides IP addresses along with other information such as DNS server addresses to LAN hosts to allow them to connect to the Internet.

You can modify the LAN IP address: 192.168.x.1.

To enable the DHCP function for your local network, specify the DHCP server IP assignment range from **Start:** 192.168.0.x to **End:** 192.168.0.x.

Click **Save**.



The screenshot shows a web interface for configuring the LAN settings. At the top, there is a navigation bar with tabs: Home, My Wi-Fi, Mobile, Lan (selected), Clients, and More. Below the navigation bar, the 'LAN' section is active. It contains a warning message: 'After the LAN IP address is modified, the devices connected to the router will reassign the IP address. When two routers in the same network segment are networking, modifying the LAN IP address can effectively avoid IP address conflict.' Below this, there are three input fields: 'LAN IP Address' with the value '192.168.0.1', 'Start address' with the value '192.168.0.2', and 'End address' with the value '192.168.0.254'. At the bottom of the form, there are two buttons: 'Cancel' and 'Save'.

Clients

The Client page displays the connected devices.

Clients Information

The table lists the client devices' IP and MAC addresses.

Home

My Wi-Fi

Mobile

Lan

Clients

More

Order	Device Status	IP Address	MAC address
1	REACHABLE	192.168.0.2	c0:a8:10:9d:73:e9

Prev1/1Next

More

The More menu allows you to restart and reset the device, set the management password, and upgrade the system.

About

Basic Information

Device Model: The model name of the device.

Serial Number: The unique number assigned to the device.

MAC Address: A unique hardware identifier for the device's network interface.

IMEI: The International Mobile Equipment Identity, which is a unique number identifying the device on mobile networks.

Software Version: The currently installed firmware version on the device.

Hardware version: The specific version of the device's physical components.

IPv4 Information

IP address: The IPv4 address of the WAN interface.

NetMask: The network mask of the IP address.


IPv6 Information

Link-local address: The IPv6 address for local networks.

IP address: The IPv6 address for public networks.

System info

System running time: The length of time that the system has been up and

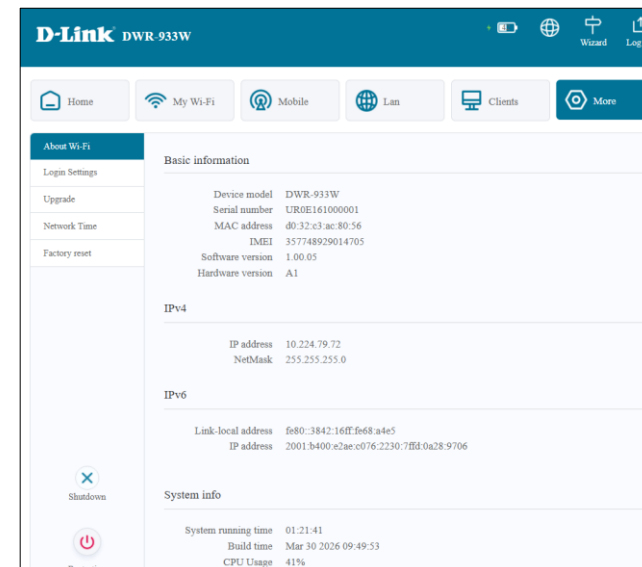

running.

Build time: The device firmware's creation time.

CPU Usage: The percentage of the device's processor currently being utilized.

Reboot Router

Click **Restart** to turn off and turn on the device.

Shutdown

Click **Shutdown** to turn off the device.

Login Settings


The username and password can be modified. It is highly recommended that you modify the default login username and password to prevent unauthorized access to the device.

To modify the device's administration information:

New Router Username: Enter the new username

New Router Password: Enter the new password

Re-enter Password: Enter the password again to confirm it.

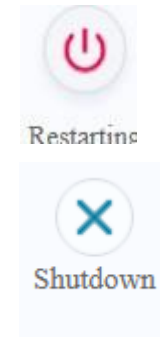

About Wi-Fi	Login username and password To access the router web configuration interface, you need to enter the correct password. Frequently changing the login password can reduce the risk of being attacked and cracked by hackers. After modifying the login password, the page will automatically exit to the login page. New Router Username New Router Password Re-enter Password Save
Login Settings	
Upgrade	
Network Time	
Factory reset	

Upgrade

This page allows you to upgrade the device's software. You will first need to download the firmware from the support site.

To upgrade the software:

Click the text field to locate the software file in your hard drive, then click **Local Upgrade** to start upgrading the device's software.

The screenshot shows the 'Local upgrade' section of the web interface. On the left is a sidebar menu with options: 'About Wi-Fi', 'Login Settings', 'Upgrade' (highlighted), 'Network Time', and 'Factory reset'. The main content area has the title 'Local upgrade'. Below it is a text input field with the placeholder text 'Please add upgrade package file'. To the right of the input field is a blue button labeled 'Local upgrade'.

Network Time

Network time is used to synchronize the router's system clock with an external time server on the Internet. This ensures that the router always maintains accurate and consistent time.

System Time: Displays the current system time

Time Zone: Select the device's time zone. Setting the correct time zone ensures the system time is displayed accurately and aligns with your local region.

The screenshot shows the 'Network Time' section. The sidebar menu is the same as in the previous screenshot. The main content area has the title 'Network Time' and a descriptive paragraph: 'Network time is mainly used to synchronize the system time of the router with the network time to ensure the accuracy of the system time.' Below this, there are two fields: 'System Time' showing '2026-05-31 15:48:48' and 'Time zone' showing 'GMT+8 Shanghai Hongkong Kuala'. A blue 'Save' button is at the bottom.

Factory Reset

Use this feature to reset your DWR-933W to factory default settings.


The screenshot shows the 'Factory reset' section. At the top, there is a navigation bar with icons for 'Home', 'My Wi-Fi', 'Mobile', 'Lan', 'Clients', and 'More'. The sidebar menu on the left has 'Factory reset' highlighted. The main content area has the title 'Factory reset' and a warning message: 'After reset, the configuration of the router will be restored to the factory state, so use it with caution!'. A blue button labeled 'Confirm factory reset' is at the bottom.

Connect a Wireless Client to Your Network

WPS Button

The easiest way to connect your wireless devices to the hotspot is with WPS (Wi-Fi Protected Setup). Most wireless devices such as wireless adapters, media players, Blu-ray DVD players, wireless printers and cameras have a WPS button (or a software utility with WPS) that you can press to connect to the DWR-933W. Please refer to your user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you know, follow the steps below:

Step 1 - Press and hold the WPS button for about 3 seconds on the device. The WPS LED on the front panel will begin blinking blue.

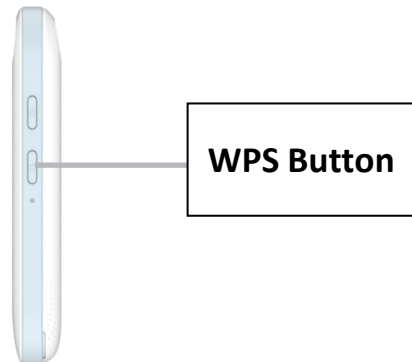

Step 2 - Within 2 minutes, press the WPS button on your wireless device (or launch the software or Wi-Fi connection utility and start the WPS process).

Step 3 - Allow up to 1 minute for your connection to be configured. Once the WPS icon stops flashing, you will be connected using WPA2 encryption.


Battery Removal

Important:


1. Risk of explosion if the battery is damaged or exposed to fire.
2. Discarded batteries should be insulated and handed to licensed recycling agents.

Remove the Battery


1. Lift up the back cover through the opening at the corner of the device to open it.

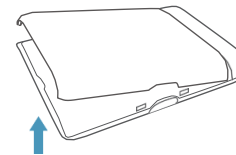

2. Use the notch on the battery socket to gently lift and remove the battery.

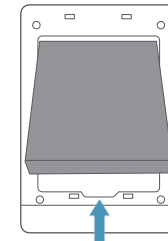

3. Close the back cover.

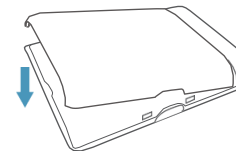

Note: Always unplug and turn off the device before removing the battery. Never insert or remove the battery while the device is in use.

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWR-933W.

Read the following descriptions if you are having problems.

Why can't I access the web-based configuration?

When entering the IP address of your hotspot (192.168.0.1 for example), you are not connecting to a website on the Internet nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based configuration.

Make sure you have an updated Java-enabled web browser. We recommend the following:

- Microsoft® Edge, Google™ Chrome 28.0, Mozilla® Firefox 28.0, or Apple® Safari 6.

If attempting to connect wirelessly, ensure that the Wi-Fi indicator on the LED indicator is lit. Also, ensure that you are connected to the correct SSID for your mobile hotspot.

Make sure that the computer you are using is not connected to any other devices (such as routers or switches) which might have the same IP address as the DWR-933W, as this may cause an IP address conflict. If you have a conflict, temporarily unplug any other devices from your computer while you configure the DWR-933W.

Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® Firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

What can I do if I forgot my password?

If you forgot your password, you must reset your device. Please note that this process will change all your settings back to the factory defaults. To reset the device, press and hold the reset button for 5 seconds (refer to Hardware Overview). The DWR-933W will restore the

factory default settings. The default IP address is 192.168. 0.1, and the default admin password is printed on the product label beneath the battery.

Technical Specifications

Device Interfaces

1 x Nano SIM card slot (4FF)

1 x USB 2.0 Type-C

Radio Frequency Bands¹

LTE-FDD: B1/B3/B5/B7/B8/B20/B28 AB

LTE-TDD: B38/B40/B41

WCDMA: B1/B5/B8

Cellular Access²

LTE Cat 6:

Downlink: 300 Mbps

Uplink: 50 Mbps

Wi-Fi Access Point¹

2.4 GHz: IEEE 802.11ax/n/g/b

5 GHz: IEEE 802.11ax/ac/n/a

Battery Capacity³

3000 mAh

LCD Screen

1.77" LCD

Wireless Encryption

WPA™/WPA2™/WPA3™/Wi-Fi Protected Setup (WPS)

Antenna

2 x cellular internal antennas

2 x Wi-Fi internal antennas

Dimensions (L x W x H)

108 x 63 x 15.5 mm (4.25 x 2.48 x 0.61 in)

Weight

114 g (4.02 oz)

Power Input

USB 2.0 Type-C (5V/1A)

Storage Temperature

-40 to 70 °C (-40 to 158 °F)

Operating Temperature

-10 to 40 °C (14 to 104 °F)

Operating Humidity

10% to 95% non-condensing

Storage Humidity

10% to 95% non-condensing

Storage Humidity

10% to 95% non-condensing

Regulatory Information

CE EMI Class A Warning

This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.



	Frequency Band(s) Frequenzband Bandes de fréquence Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Puissance max en sortie (PIRE) Potencia máxima de Salida Potenza max. Output Max. Output Power
2.4 G	2.4 – 2.4835 GHz	100 mW

FCC Regulations:

This mobile router complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile router has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Information (SAR)

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body. Although the SAR is determined at the highest certified power level, the actual SAR level of the while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. For this device, the highest reported SAR value for usage near the body is 1.266 W/kg.

SAR compliance for body operation is based on a separation distance of mm between the unit and the human body to ensure RF exposure level compliant or lower to the reported level.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/ EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery) and 2011/65/EU & (EU)2015/863 (RoHS) entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/ EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), (EU) 2023/1542 (Battery) and 2011/65/EU & (EU)2015/863 (RoHS). The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com

Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Le texte complet de la déclaration de conformité de l'UE et le microprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com.
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com.
Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com.
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com.
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com.
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Tista' tnizzel it-test

	shih tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com.
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). sz. rendeletek rendelkezéseinek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com.

Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programnska oprema skladni z direktivami 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www. dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS) vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink. com .
Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .
Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Sækja má ESB-samræmisyfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .

Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU (RED), 2009/125/EC (ErP), (EU) 2019/882 (EAA), 2011/65/EU & (EU)2015/863 (RoHS). Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .
-------------------	---

Warning Statement:

The power outlet should be near the device and easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.

Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.

Bitte schlagen Sie im Handbuch oder Datenblatt nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE , BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT , MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.

Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.

Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.

Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEBRUIK IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.

Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.

Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.

Do not spill food or liquid on your product and never push any objects into the openings of your product.

Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.

Keep the product away from radiators and other heat sources.

Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab,

(z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.

Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.

Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.

Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.

Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.

Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les

consignes d'utilisation du produit pour plus de détails.

L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.

N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.

Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.

N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.

Éloignez le produit des radiateurs et autres sources de chaleur.

Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.

No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.

No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.

No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.

Mantenga el producto alejado de los radiadores y de otras fuentes de calor.

Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.

Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale

dell'utente.

Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.

Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.

Tenere il prodotto lontano da caloriferi e altre fonti di calore.

Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSINFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.

U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.

Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.

Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.


Houd het product uit de buurt van radiators en andere warmtebronnen.

U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing of and Recycling Your Product

English

EN

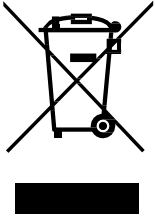

This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den formalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO₂-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.




Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

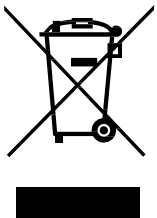

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO2.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.




La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

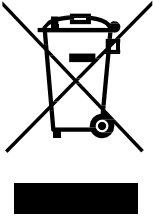

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO2-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.



Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową **www.dlinkgreen.com**.



Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odneste jej prosím na sběrné místo určené místními úřady k tomuto účelu. Některá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.



Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.



Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.




Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO2-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

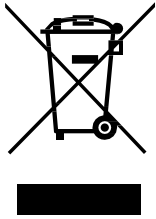

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.



Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.



Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.